

HANDY MOBILE PHONE

ENGLISH

Ref.: W60
- MANUAL -

Please read this operation instruction carefully before use. Please keep this operation instruction with care for future use.

SAFETY PRECAUTIONS

When using this unit, basic Safety Precautions should always be followed to reduce the risk of fire, electric shock, or personal injury.

1. Read and understand all instructions.
2. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
3. Do not use this unit near water such as bathtub, shower or pool. Immersion of this unit in water could cause an electrical shock.
4. Place the unit securely on a stable surface. Serious damage and/or injury may result if the unit falls.
5. Do not cover slots and openings on the unit. They are provided for ventilation and protection against overheating.
6. Install the unit in a place where nobody can walk on.
7. Never push any objects through slots in this unit. This may result in the risk of fire or electric shock. Never spill any liquid on the unit.
8. To reduce the risk of electric shock, do not disassemble this unit. Take the unit to authorized service center or qualified technician when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the unit is subsequently used.
9. Do not expose the unit to extreme temperatures such as areas near a hot radiator or stove or in a hot car.
10. Do not place lighted objects such as candles, cigarettes on the unit.
11. Do not use this unit to report a gas leak in the vicinity of the leak.

WARNING:

To prevent the risk of fire or electrical shock, do not expose this unit to rain or any type of moisture.






MAIN FUNCTIONS



- Works with all operators (subscription or prepaid card)
- Big characters displayed on a backlit screen for a good readability
- Large keys with readable figures
- "SOS" button at the back of the phone = as soon as you press the key "SOS", the telephone will alarm and call the 5 recorded numbers in sequence and send already set SOS messages

- SMS function
- Speaking: announces number when you press key
- TF card memory support max. **4GB**
- Phone book : 300 numbers
- FM radio/Bluetooth
- Audio format support : MP3
- Calendar, calculator and clock with alarm
- Multi-languages
- Autonomy: 150-200 hours (depend on network) standby / 3-4 hours talk
- Flashlight function

Call functions	Hands free Function	YES
	Speed Dialing	YES
	Call History	YES
	Call waiting	YES
	Call Restriction	YES
	Call Forward	YES
Phone Book	Capacity	300
	Quick Search	YES
	Copy/Move between SIM & Phone	YES
SMS	Capability	150
	Multiple Broadcast	YES
MMS	Optional	
GPRS	Optional	
Settings	Phone Language	Multi-Language support
	Security PIN	YES
Sound	Ring tone	polyphonic melodies
Others	Calculator	YES
	FM Radio/BT	YES
	GPS	NO
	Torch	YES
	MP3	YES
	Vibration alert	YES
	Camera	YES

 
KEY DEFINITION

Key	Function
 <p>Green Button (top left)</p>	<p>Displays recent calls (from main menu) Use as “ok” button to advance in menu options Answers and connects calls.</p>
 <p>Red Button (Top Right)</p>	<p>Powers phone on / off As Back button to quit menu options Ends Calls</p>
 <p>Arrow keys (Top Middle)</p>	<p>Used for menu options by scrolling through (up, down). Press the volume keys "up" can make the volume louder Press the volume keys "down" can make the volume softer Press up key to open FM</p>
<p>Number Keys</p>	<p>Used for inputting numbers and characters.</p> <p>Keys 2 - 9 and ,  can be used as speed dials for quick calling.</p> <p><u>Speed Dial setting:</u></p> <p>a) To Add new contact Hold the desired number key and Set Number option will be shown. Press Green Button to edit/choose the contact person. It has a condition that the contact person should have already been input in your Phonebook.</p> <p>b) To Edit/delete key for speed dials Scroll the Arrow key to Settings, press Green Button, and then scroll the Arrow key to Call setup option and choose Speed dial option to update the Set number. Scroll the Arrow key & select number keys to edit.</p>
<p>Number Key “1”</p>	<p>Number 1 for choosing, in the meanwhile, can be used for punctuation options by scrolling when messaging,</p>


 <p>Flashlight</p>	<p>Push up to turn on the flashlight Push down to turn off the flashlight</p>
 <p>SOS key</p>	<p><u>It can be set in advance and make four emergency calls and text messages.</u></p> <p><u>Emergency situations:</u> When the SOS button is pressed, the phone will issue a loud warning sound and automatically send messages to the setting SOS phone numbers.</p> <p><u>Emergency call Number setting:</u> Scroll the Arrow key to phone book, press Green Button, and then scroll the Arrow key to SOS number option to update the emergency call numbers. Enter the call number & it can be up to 5 numbers.</p> <p><u>Emergency call Text message setting:</u> Scroll the Arrow key to Messages, press Green Button, and then scroll the Arrow key to Emergency SMS option to update the emergency call text message.</p>

START TO USE YOUR PHONE


1. Insert the SIM card: remove the battery-cover, then put your SIM card in.
2. Insert the memory card (**max. 4GB**) : remove the battery-cover, place the memory card.

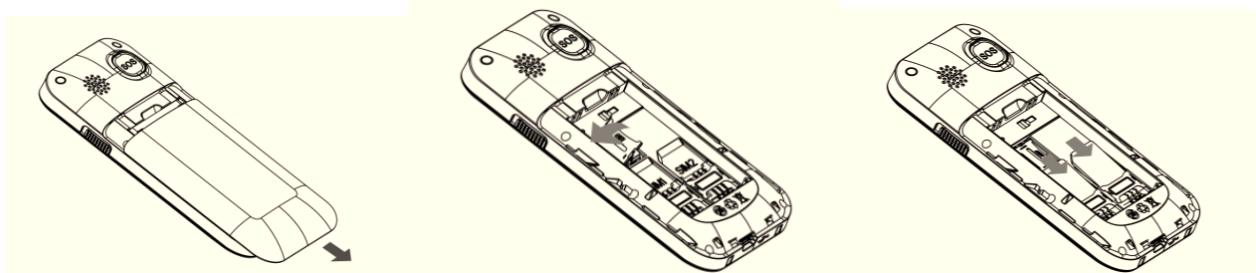

 3. Then install the battery correctly (see illustration)

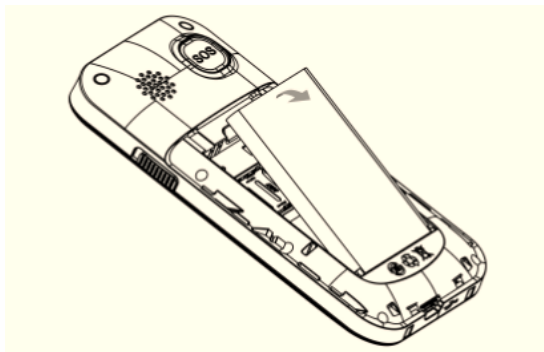

 4. Charger

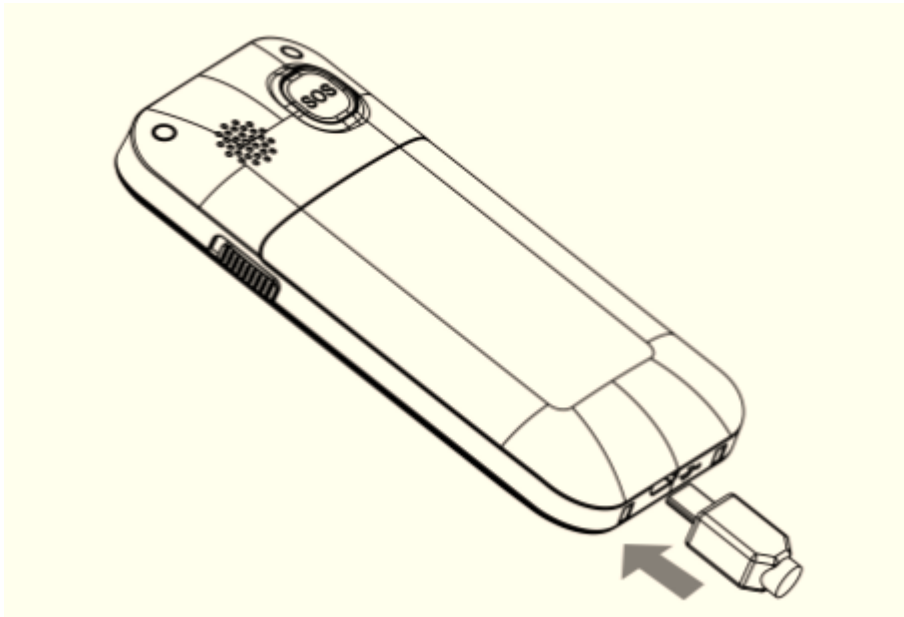

Add new contact to Phonebook

Follow phone menu

Call center:

Enter into this menu to read the dialled calls, received calls, and Missed calls' list.\

Messages:

Enter into this menu to read inbox's messages, Write new messages, Outbox messages.

Number Key Speech

Press the number key, the number can be read as dialing (settings—silent model is off)

Key Sound Mode is ON(settings—phone setup—key sound)

Time and date

Scroll the Arrow key to Settings, then to Phone setup option: you can set the time and date.

Language and Input method

To choose language display and message input method

Multimedia

Support MP3, FM,Bluetooth function. Share the music after insert external T-flash card

Scroll the Arrow key to Settings, you can see **multimedia**, and enter into for listening and watching.

Alarm, Calculator

Scroll the Arrow key to Settings & then to Alarm option: you can set time for Alarm

Scroll the arrow key to settings, then calculator option: you can use calculator.

Change Ring tone

Scroll the Arrow Key to Settings, choose Phone Setup and find "User profiles" ---"General"---"Customize"---"Tone setup"---"Incoming call" to choose the tone. Once you select the tone, e.g. ring 1, press the Green Button to

confirm done.

Restore factory settings

Press password 1122 to restore the default setting.

TECHNICAL SPECIFICATIONS

Band	GSM900/1800 MHz
Dimension	109x50x14.5mm
Weight	≈75g (with battery)
LCD	1.77"
Standby Time	180-200 hours depend on network
Talk Time	3-5 hrs
Battery	800mAH Li-ion / Voltage: 3.7V / Limited charge voltage : 4.2V

ACCESSORIES

Battery	YES
Charger	YES
Cable	NO
Earphone	Optional
USB cable	NO
Wall charger	Optional
Manual	YES



**WITH FULL POWER, THE PROLONGED LISTENING
CAN DAMAGE THE EAR OF THE USER.**



The symbol opposite indicates that the electric and electronic components are the subject of a selective collection; it represents a dustbin on wheels barred of a cross. The electric and electronic products can contain substances having negative effects on the environment and health. Worn, they should not be thrown with domestic waste but to be imperatively recovered in the selective collections: dump, associations of social economy and interdependent.

The selection of waste decreases the potential effects on the environment and human health due to the substances dangerous which can compose certain components electric and electronic.

Take an active part: to remove you not from the apparatuses with domestic waste!



FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: W60(FCC ID:ZHN-W60) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.293W/kg and when properly worn on the body is 0.118W/kg. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.