

Instruction manual - English	Size: A4 size: 210mm x 297mm
Name: Hide and Seek Friends	Item#: 5F5E9BC/#5F5E9BE/#5F5E9BF
Version : You & Me	
Color : K	
SUNRISE DESIGN LTD	Date : 08 Jun, 2011

English for Caucasian doll

Troubleshooting

	Issue	Cause	Correction
1	The FRIENDS do not speak simultaneously	Default	OK - dialog is set to be Helke
2	The FRIENDS are speaking slowly	Low battery	Replace batteries
3	The MAGICAL FORK/JUICE BOX is not triggering speech	Wrong position near mouth	Make sure MAGICAL FORK/JUICE BOX is put directly between lips
4	The FRIENDS head and arms are moving slowly	Low battery	Replace batteries
5	The FRIENDS do not talk with each other	Too Far Apart	Move Dolls within 5 feet of each other
6	The FRIENDS head and arms are not moving	The arms are not positioned right	Reposition the arms to face forward as per the diagram on the front page of this sheet
7	New batteries, doll turned on and they don't function	Programming needs to be reset	Reload with new batteries and switch the power button to ON

CLEANING THE DOLLS

Use a damp cloth to wipe off the dolls.

Do not put dolls in washing machines.

Please keep this package as it contains important product information. Specifications and colors may vary from photos & illustrations shown. Specifications are subject to change without notice.

Hide and Seek Friends

Hide and Seek Friends talk, sing, rhyme, joke and giggle together! Just like real friends, these Friends share a special bond - they know and respond to what each other is saying! You will experience hours of entertainment and double the fun with the Hide and Seek Friends and their magical accessories!

Please keep these instructions for future reference as they contain important information.

TRY ME FEATURE:
The Friends are connected with a Try me wire in the package. This wire must be removed and batteries placed in BOTH dolls for proper play.

REMOVAL OF TRY ME FEATURE:
NOTE: Try me wire is for in-store demonstration only. Please unplug the try me wire from both dolls, and discard before normal play (note that once the try-me wire is unplugged, it will never plug back in to the original position).

Try Me Wire

PART NO.	DESCRIPTION	NO. OF PIECE
A	DOLL	2
B	JUICE BOX	1
C	MAGICAL FORK	1
D	COMB	1
E	BOWL	1

NOTE: 6 AAA batteries included in this product are designed for in-store demonstration. For best performance, we suggest replacing installed batteries with (6) new alkaline batteries for full function playing (3 AAA batteries for Blondie friend & 3 AAA batteries for Brunette friend).

WARNING: CHOKING HAZARD Small parts Not for children under 3 years.

CAUTION: All ties or fasteners are not part of this toy and should be removed before giving it to your child. Color and product may vary from photo. Conforms to the safety requirements of ASTM-F963-08.

CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963

YOU & ME is a mark of Goodfey, LLC, a subsidiary of Toys "R" Us, Inc. © 2011 Goodfey, LLC. Made in China. Distributed in the United States by Toys "R" Us, Inc., Wayne, NJ 07093. Distributed in Australia by Toys "R" Us Australia Pty. Ltd., Regent Park NSW 2143 www.toysrus.com

P4

P1

English for Hispanic doll

Troubleshooting

	Issue	Cause	Correction
1	The FRIENDS do not speak simultaneously	Default	OK - dialog is set to be Helke
2	The FRIENDS are speaking slowly	Low battery	Replace batteries
3	The MAGICAL FORK/JUICE BOX is not triggering speech	Wrong position near mouth	Make sure MAGICAL FORK/JUICE BOX is put directly between lips
4	The FRIENDS head and arms are moving slowly	Low battery	Replace batteries
5	The FRIENDS do not talk with each other	Too Far Apart	Move Dolls within 5 feet of each other
6	The FRIENDS head and arms are not moving	The arms are not positioned right	Reposition the arms to face forward as per the diagram on the front page of this sheet
7	New batteries, doll turned on and they don't function	Programming needs to be reset	Reload with new batteries and switch the power button to ON

CLEANING THE DOLLS

Use a damp cloth to wipe off the dolls.

Do not put dolls in washing machines.

Please keep this package as it contains important product information. Specifications and colors may vary from photos & illustrations shown. Specifications are subject to change without notice.

P4

Troubleshooting

	Issue	Cause	Correction
1	The FRIENDS do not speak simultaneously	Default	OK - dialog is set to be Helke
2	The FRIENDS are speaking slowly	Low battery	Replace batteries
3	The MAGICAL FORK/JUICE BOX is not triggering speech	Wrong position near mouth	Make sure MAGICAL FORK/JUICE BOX is put directly between lips
4	The FRIENDS head and arms are moving slowly	Low battery	Replace batteries
5	The FRIENDS do not talk with each other	Too Far Apart	Move Dolls within 5 feet of each other
6	The FRIENDS head and arms are not moving	The arms are not positioned right	Reposition the arms to face forward as per the diagram on the front page of this sheet
7	New batteries, doll turned on and they don't function	Programming needs to be reset	Reload with new batteries and switch the power button to ON

CLEANING THE DOLLS

Use a damp cloth to wipe off the dolls.

Do not put dolls in washing machines.

Please keep this package as it contains important product information. Specifications and colors may vary from photos & illustrations shown. Specifications are subject to change without notice.

P4

Troubleshooting

	Issue	Cause	Correction
1	The FRIENDS do not speak simultaneously	Default	OK - dialog is set to be Helke
2	The FRIENDS are speaking slowly	Low battery	Replace batteries
3	The MAGICAL FORK/JUICE BOX is not triggering speech	Wrong position near mouth	Make sure MAGICAL FORK/JUICE BOX is put directly between lips
4	The FRIENDS head and arms are moving slowly	Low battery	Replace batteries
5	The FRIENDS do not talk with each other	Too Far Apart	Move Dolls within 5 feet of each other
6	The FRIENDS head and arms are not moving	The arms are not positioned right	Reposition the arms to face forward as per the diagram on the front page of this sheet
7	New batteries, doll turned on and they don't function	Programming needs to be reset	Reload with new batteries and switch the power button to ON

CLEANING THE DOLLS

Use a damp cloth to wipe off the dolls.

Do not put dolls in washing machines.

Please keep this package as it contains important product information. Specifications and colors may vary from photos & illustrations shown. Specifications are subject to change without notice.

P1

PLAYING WITH THE HIDE AND SEEK FRIENDS

- To begin playing with the Hide and Seek Friends, turn the On/Off switch on the battery box to the ON position. (Refer to Battery Instructions)
- Place the Blondie FRIEND next to the Brunette FRIEND. The FRIENDS are now ready for their afternoon and will share a fun rhyme to begin their adventure.
- The FRIENDS are so smart, that if you place either FRIEND too far away, they will tell you!
- The Hide and Seek Friends talk and answer each other.
- When the FRIENDS tell you that they are hungry or want a snack, it is important to feed them with their MAGICAL FORK/JUICE BOX. The MAGICAL FORK/JUICE BOX can be used at any time during play and will interrupt the FRIENDS conversation in order to begin the feeding playtime.
- For best performance, keep dolls within 5 feet of each other.
- The Hide and Seek Friends need lots of love and hugs!
- Each FRIEND doll has a HUG button on their chest. When you HUG them, a special response occurs!
- Each doll has the ability of independent play.
- The Hide and Seek Friends will be tired at the end of the activities and will ask to take a nap. When they say "Time for a nap", the dolls will power down. To re-activate EACH doll, either press the HUG button on each of their chests or turn the On/Off switch on each of their battery boxes to OFF then back to ON or put the MAGICAL FORK/JUICE BOX to their mouths. This will restart the dialog and actions of each doll.
- If there is no communication between the FRIENDS they will power down. This will save on battery life. To re-activate EACH doll, either press the HUG button on each of their chests or turn the On/Off switch on each of their battery boxes to OFF then back to ON, or put the MAGICAL FORK/JUICE BOX to their mouths. This will restart the dialog and actions of each doll.

BATTERY INSTRUCTIONS: ADULT SUPERVISION IS RECOMMENDED WHEN INSERTING OR CHANGING BATTERIES.

- Hide and Seek Friends have one screw-down battery box door for safety and require 3 "AAA" batteries per doll.
- Remove the outfit of the friends half-way.
- Make sure the On/Off switch is in the OFF position. Remove the battery box door with a Phillips' screwdriver.
- Insert 3 "AAA" (alkaline) batteries, matching the polarity direction of the batteries as indicated on the inside of the battery box.
- Replace the battery box cover and screw them closed. Turn the On/Off switch to ON and re-attach the dolls' outfit.
- The friends can start communicating when they are placed together.
- The friends will turn to sleep mode if there no action.
- You can re-start the play by pushing the chest button or place the MAGICAL FORK/JUICE BOX into the dolls' mouth. This is necessary with both dolls.

NOTE: 6 AAA batteries included in this product are designed for in-store demonstration. For best performance, we suggest replacing installed batteries with (6) new alkaline batteries for full function playing (3 AAA batteries for Blondie friend & 3 AAA batteries for Brunette friend).

BATTERY CAUTIONS: IMPORTANT: ONLY ADULTS SHOULD REPLACE BATTERIES.

- Batteries are not to be recharged.
- Be sure to insert batteries correctly and always follow the toy and manufacturer's instructions.
- Only same or equivalent batteries are recommended for use.
- The supply terminals are not to be short circuited.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always remove exhausted or dead batteries from product.
- Remove batteries from the product before extended storage.
- Do not use rechargeable batteries.
- Do not dispose batteries in fire. Batteries may explode or leak.

FCC Statement:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

P2

P3

PLAYING WITH THE HIDE AND SEEK FRIENDS

- To begin playing with the Hide and Seek Friends, turn the On/Off switch on the battery box to the ON position. (Refer to Battery Instructions)
- Place the Blondie FRIEND next to the Brunette FRIEND. The FRIENDS are now ready for their afternoon and will share a fun rhyme to begin their adventure.
- The FRIENDS are so smart, that if you place either FRIEND too far away, they will tell you!
- The Hide and Seek Friends talk and answer each other.
- When the FRIENDS tell you that they are hungry or want a snack, it is important to feed them with their MAGICAL FORK/JUICE BOX. The MAGICAL FORK/JUICE BOX can be used at any time during play and will interrupt the FRIENDS conversation in order to begin the feeding playtime.
- For best performance, keep dolls within 5 feet of each other.
- The Hide and Seek Friends need lots of love and hugs!
- Each FRIEND doll has a HUG button on their chest. When you HUG them, a special response occurs!
- Each doll has the ability of independent play.
- The Hide and Seek Friends will be tired at the end of the activities and will ask to take a nap. When they say "Time for a nap", the dolls will power down. To re-activate EACH doll, either press the HUG button on each of their chests or turn the On/Off switch on each of their battery boxes to OFF then back to ON or put the MAGICAL FORK/JUICE BOX to their mouths. This will restart the dialog and actions of each doll.
- If there is no communication between the FRIENDS they will power down. This will save on battery life. To re-activate EACH doll, either press the HUG button on each of their chests or turn the On/Off switch on each of their battery boxes to OFF then back to ON, or put the MAGICAL FORK/JUICE BOX to their mouths. This will restart the dialog and actions of each doll.

P2

BATTERY INSTRUCTIONS: ADULT SUPERVISION IS RECOMMENDED WHEN INSERTING OR CHANGING BATTERIES.

- Hide and Seek Friends have one screw-down battery box door for safety and require 3 "AAA" batteries per doll.
- Remove the outfit of the friends half-way.
- Make sure the On/Off switch is in the OFF position. Remove the battery box door with a Phillips' screwdriver.
- Insert 3 "AAA" (alkaline) batteries, matching the polarity direction of the batteries as indicated on the inside of the battery box.
- Replace the battery box cover and screw them closed. Turn the On/Off switch to ON and re-attach the dolls' outfit.
- The friends can start communicating when they are placed together.
- The friends will turn to sleep mode if there no action.
- You can re-start the play by pushing the chest button or place the MAGICAL FORK/JUICE BOX into the dolls' mouth. This is necessary with both dolls.

NOTE: 6 AAA batteries included in this product are designed for in-store demonstration. For best performance, we suggest replacing installed batteries with (6) new alkaline batteries for full function playing (3 AAA batteries for Blondie friend & 3 AAA batteries for Brunette friend).

BATTERY CAUTIONS: IMPORTANT: ONLY ADULTS SHOULD REPLACE BATTERIES.

- Batteries are not to be recharged.
- Be sure to insert batteries correctly and always follow the toy and manufacturer's instructions.
- Only same or equivalent batteries are recommended for use.
- The supply terminals are not to be short circuited.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always remove exhausted or dead batteries from product.
- Remove batteries from the product before extended storage.
- Do not use rechargeable batteries.
- Do not dispose batteries in fire. Batteries may explode or leak.

FCC Statement:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

P3

PLAYING WITH THE HIDE AND SEEK FRIENDS

- To begin playing with the Hide and Seek Friends, turn the On/Off switch on the battery box to the ON position. (Refer to Battery Instructions)
- Place the Blondie FRIEND next to the Brunette FRIEND. The FRIENDS are now ready for their afternoon and will share a fun rhyme to begin their adventure.
- The FRIENDS are so smart, that if you place either FRIEND too far away, they will tell you!
- The Hide and Seek Friends talk and answer each other.
- When the FRIENDS tell you that they are hungry or want a snack, it is important to feed them with their MAGICAL FORK/JUICE BOX. The MAGICAL FORK/JUICE BOX can be used at any time during play and will interrupt the FRIENDS conversation in order to begin the feeding playtime.
- For best performance, keep dolls within 5 feet of each other.
- The Hide and Seek Friends need lots of love and hugs!
- Each FRIEND doll has a HUG button on their chest. When you HUG them, a special response occurs!
- Each doll has the ability of independent play.
- The Hide and Seek Friends will be tired at the end of the activities and will ask to take a nap. When they say "Time for a nap", the dolls will power down. To re-activate EACH doll, either press the HUG button on each of their chests or turn the On/Off switch on each of their battery boxes to OFF then back to ON or put the MAGICAL FORK/JUICE BOX to their mouths. This will restart the dialog and actions of each doll.
- If there is no communication between the FRIENDS they will power down. This will save on battery life. To re-activate EACH doll, either press the HUG button on each of their chests or turn the On/Off switch on each of their battery boxes to OFF then back to ON, or put the MAGICAL FORK/JUICE BOX to their mouths. This will restart the dialog and actions of each doll.

P2

BATTERY INSTRUCTIONS: ADULT SUPERVISION IS RECOMMENDED WHEN INSERTING OR CHANGING BATTERIES.

- Hide and Seek Friends have one screw-down battery box door for safety and require 3 "AAA" batteries per doll.
- Remove the outfit of the friends half-way.
- Make sure the On/Off switch is in the OFF position. Remove the battery box door with a Phillips' screwdriver.
- Insert 3 "AAA" (alkaline) batteries, matching the polarity direction of the batteries as indicated on the inside of the battery box.
- Replace the battery box cover and screw them closed. Turn the On/Off switch to ON and re-attach the dolls' outfit.
- The friends can start communicating when they are placed together.
- The friends will turn to sleep mode if there no action.
- You can re-start the play by pushing the chest button or place the MAGICAL FORK/JUICE BOX into the dolls' mouth. This is necessary with both dolls.

NOTE: 6 AAA batteries included in this product are designed for in-store demonstration. For best performance, we suggest replacing installed batteries with (6) new alkaline batteries for full function playing (3 AAA batteries for Blondie friend & 3 AAA batteries for Brunette friend).

BATTERY CAUTIONS: IMPORTANT: ONLY ADULTS SHOULD REPLACE BATTERIES.

- Batteries are not to be recharged.
- Be sure to insert batteries correctly and always follow the toy and manufacturer's instructions.
- Only same or equivalent batteries are recommended for use.
- The supply terminals are not to be short circuited.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always remove exhausted or dead batteries from product.
- Remove batteries from the product before extended storage.
- Do not use rechargeable batteries.
- Do not dispose batteries in fire. Batteries may explode or leak.

FCC Statement:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

P3