

CRYSTALVIEW


Quick Start Guide




Home Media Center

Description of Parts

Home Media Center (Console)

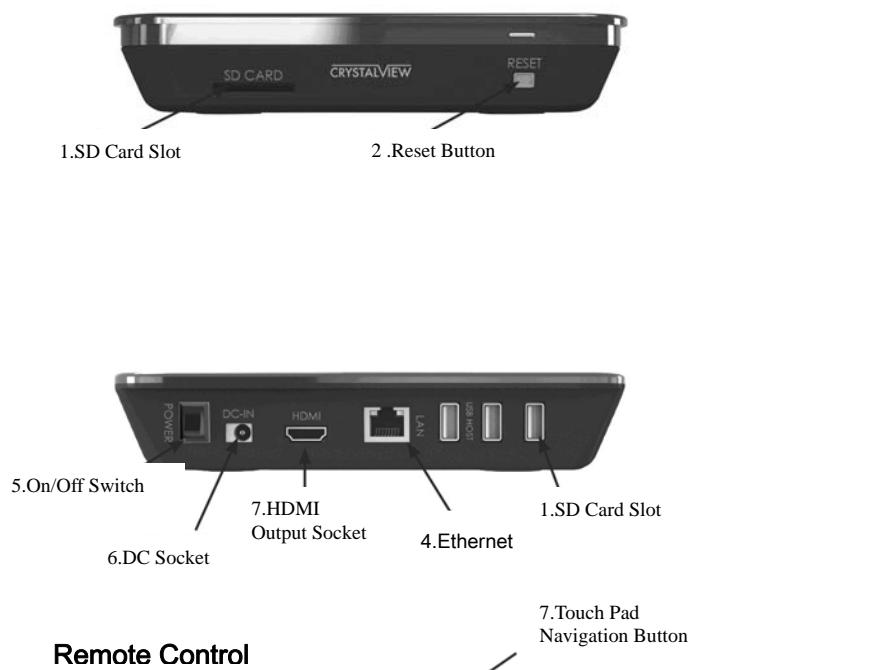

Remote Control

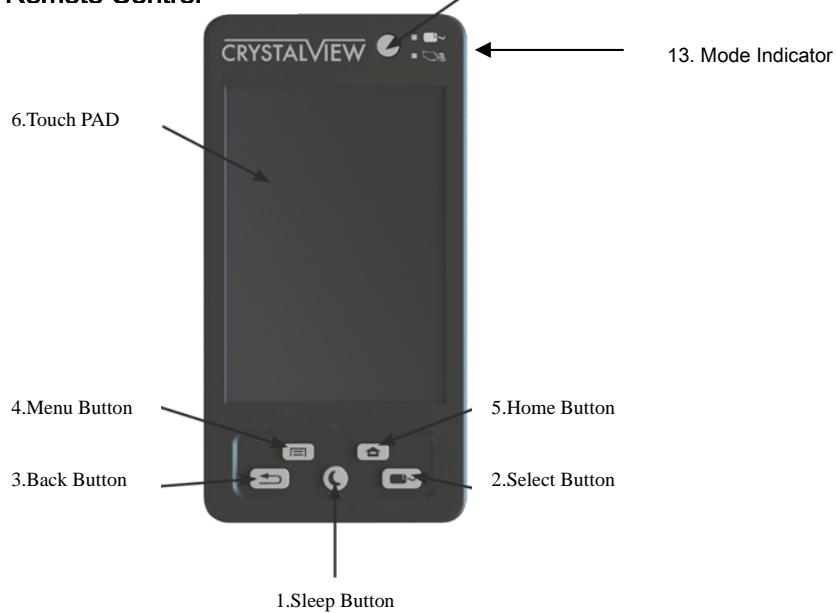



Home Media Center (Console) Description of Parts

1. SD Card Slot – Insert SD/MMC Card here (SD/MMC not included).
2. Reset Button – One Press will reset the Home Media Center
3. USB Ports – Insert USB Flash Drive / connect hardware peripherals like external mouse etc.
4. Ethernet Port – Insert Ethernet cable here for a wired Internet Connection.
5. On/Off – Switches the Home Media Center On.
6. DC Socket – Insert the Power adaptor here
7. HDMI Port – Insert the HDMI cable here

Remote Control

1. Sleep Button – A three second press on the remote will get the Home Media Center into sleep mode. **Please Note:** the remote remains active during sleep mode. To completely turn off the remote use the on/off switch (8)
2. Select Button – Use this button to click and select.
3. Back Button – Press to return to the previous screen.
4. Menu Button – When using an application such as the browser or gallery, press this button to access additional options (is applicable).
5. Home Button – Press to return to home screen.
6. Touch Pad – Slide your finger across the pad to naviagte round the screen.
7. Touch Pad Navigation Button – A press on this button enables you to switch between the “Cursor” mode and “Multi-touch” mode. Multi-touch mode enables you to pinch zoom your pictures and scroll web pages with ease. LED will illuminate to indicate the selected mode.
8. On/Off Switch – Turns the remote control on and off.
9. LED Indicator – Illuminates when the remote is switched on.
10. Slide Panel – Slide the remote in the direction indicated in the diagram to reveal the keyboard.
11. Keyboard – Use the keyboard to input text.
12. Battery Compartment – the remote control requires 3 AAA batteries (not included). To insert the batteries, push the tab in and follow the + and – polarity markings inside the battery compartment.
13. Mode Indicator – this LED indicates the selected mode (Cursor or Multi-touch mode).

Setting Up the Home Media Center

1. Connect the included HDMI cable to the HDMI input on the back of the Home Media Center console. Connect the other end to the HDMI input on your TV.
2. Connect the power adapter to the DC socket on the back of the Home Media Center console and plug the adapter into an power outlet.
3. Switch the On/Off switch at the back of the Home Media Center console to on position.
4. Switch the On/Off switch on the front of the remote to the right to turn the controller on.

Pairing the Controller

The controller has already been paired with the Home Media Center. However, if you find that the remote has not been paired with the unit, follow these steps:

1. Ensure the console is switched off.
2. Turn on the controller using the on/off switch.
3. Simultaneously press and hold the sleep and home buttons for 3 seconds.
4. Switch on the console. Once the unit is on, the controller will pair with it.

If you find the home screen does not fill your TV screen or is too big, this can be adjusted by following the below mentioned steps:

1. On the home screen select the “Settings” icon.
2. Select “Display” followed by screen scale settings.
3. The screen scale settings scroll bar will appear. Use the bar to adjust the size of the home screen until it fills your entire screen.

Connecting to the Internet via Wi-Fi

1. On the home screen, select the “Settings” icon.
2. Select “Wireless and Networks”.
3. Select the “Turn On Wi-Fi” option and after a few moments a green check mark will appear next to this option.
4. Select Wi-Fi settings to show the list of available Wi-Fi networks.
5. Select the Wi-Fi network you wish to join. If the network is password protected, please enter the password when prompted.
6. Once connected, the following Wi-Fi symbol will display on the top bar of the home screen



Connecting to the Internet via Ethernet

1. Connect a Ethernet cable (not included) to the Ethernet port at the back of the Home Media Center console. Connect the other end to a Ethernet (LAN) server/modem, as applicable.
2. Select “Settings” on the home screen.
3. Select “Wireless and Networks”.
4. Select “Ethernet settings”.
5. Select the LAN connection option. If the network is password protected, please enter the password when prompted.
6. Once connected, the following Ethernet symbol will display on the top bar of the home screen



Overview of Functions

Browser – Select the browser icon on the home screen. Use the scroll pad to navigate around the screen. Use the keyboard on the remote control to input web addresses in the browser address bar.

TV – Select the TV icon on the home screen. Here you will find link to a popular TV catch up site www.tv.com and a an interesting weather update app. You can access these links by simply connecting to internet and clicking these links.

Video – Select the Video icon on the home screen. Here you will find You Tube app, that gives you access huge set of videos available on You Tube for you to view. You can access this app by simply connecting to internet and clicking the app.

For detailed instructions on the Home Media Center, please select the Help icon on the home screen. Here you will find a file with detailed instructions on how to operate the unit.

Please note:

The Home Media Center should be plugged into an easily accessible power port.

Battery Replacement Caution

RISK OF EXPLOSION IF BATTERY IS REPLACED WITH AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

Battery Removal at End of Product Life

- Disconnect the power adapter from power port.
- Disconnect the Home Media Center from the power adapter.
- Switch off the remote control.
- Unscrew the battery compartment cover.
- Replace old batteries with new ones.
- Replace the battery compartment cover.

BATTERY SAFETY (For Controller)

Always:

- Ensure the battery compartments are secure by the screw.
- Only use recommended batteries.
- Install the batteries as per applicable polarity (+ and -) marks.
- Do not mix old and new batteries.
- Store unused batteries in their packaging and keep away from metal objects that may cause a short circuit.
- Remove dead batteries from equipment.
- Remove batteries from equipment, if it is not to be used for a long time.
- Keep batteries away from children as they can easily be swallowed.
- Seek medical attention immediately if batteries are swallowed.
- Always take dead batteries to your local recycle center and do not dispose them in trash.

Never:

- Dispose dead batteries in trash.
- Dispose of batteries in a fire.
- Attempt to recharge ordinary batteries.

Limited Warranty

This manufacturer's product warranty extends to the original consumer purchaser of the product. Neither the retailer nor any other company involved in the sale or promotion of this product is a co-warrantor of this manufacturer warranty.

WARRANTY DURATION: All materials and workmanship are warranted to the original consumer purchaser for a period of ninety (90) days from the original purchase date.

WARRANTY COVERAGE: This product is warranted against defective materials or workmanship. This warranty is void if the product has been damaged by accident, in shipment, unreasonable use, misuse, neglect, improper service, commercial use, repairs by unauthorized personnel or other causes not arising out of defects in materials or workmanship. This warranty is effective only if the product is purchased and operated in USA, and does not extend to any units which have been used in violation of written instructions furnished by manufacturer or to units which have been altered or modified or, to damaged products or parts thereof which have had the serial number removed, altered, defaced or rendered illegible.

WARRANTY DISCLAIMERS: This warranty is in lieu of all warranties expressed or implied and no representative or person is authorized to assume for manufacturer any other liability in connection with the sale of our products. There shall be no claims for defects or failure under any theory of tort, contractor commercial law including but not limited to, negligence, gross negligence, strict liability, breach of warranty and breach of contract.

WARRANTY PERFORMANCE: During the above 90 day warranty period, a product with a defect will be either repaired or replaced with a reconditioned comparable model (at manufacturer's option). The repaired or replacement product will be in warranty for the balance of the 90 day warranty period and an additional one-month period. No charge will be applicable for such repair or replacement.

SERVICE AND REPAIR: If service is required for this product, you should first contact Midwest Trading Group Customer Service at info@mtradinggroup.com or by calling 1 (866) 815-4714, Monday to Friday 9am to 5pm CST.

NOTE: Manufacturer cannot assume responsibility for loss or damage during incoming shipment. As a precautionary measure, carefully package the product for shipment, and insure it with the carrier. Be sure to enclose the following details with the product: your full name, return address and daytime phone number, a note describing the problem you experienced, a copy of your sales receipt or other proof of purchase to determine warranty status. C.O.D. shipments cannot be accepted.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body