


CK107 User Manual

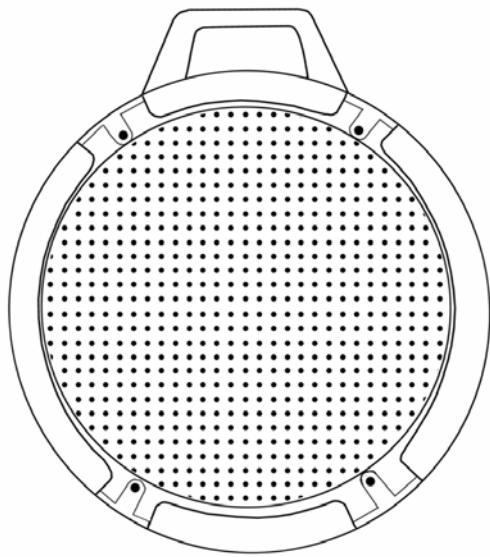

Picture is for reference only

Dear Customer

Thank you for your excellent choice of CK107 Bluetooth speaker. Please read instructions carefully before operating this Bluetooth speaker in order to bring it into full play. Unpack the box, please make sure you get following product and accessories: 1* Bluetooth Speaker, 1* Micro USB Charging Cable, 1* User Manual, 1*Carabiner. Please keep user manual properly for further reference.

Product Introduction

Adopting digital signal processing technique, CK107 is an advanced and portable wireless speaker for Bluetooth play, TF/SD card, external audio input and amplification, compatible with most Bluetooth enabled devices and applicable to indoor entertainment and outdoor activities.

Attentions

For better performance maintaining, please keep this speaker away from following conditions:

- Damp or underwater conditions
- High-temperature conditions
- Direct-sun exposure conditions
- Easy fall off conditions

Warnings



IPX4 splash-proof design, it is better to keep away from water and damp.



Please make sure it is charged with specified voltage to avoid fire or electric shock hazards.


Power Supply

Powered by the built-in 3.7V lithium battery. Please fully charge the speaker 3~4hrs before first use and make sure to charge this speaker once a month due to

its 3.7V self power consuming lithium battery. It takes about 4hrs to be fully charged with a standard micro USB cable (DV 5V) if this speaker run out of juice completely.

This speaker could be charged any time in any mode, however, playing music while charging would greatly lower charging efficiency which is not recommended since there would be a relatively huge current consumption.

Operation Guide

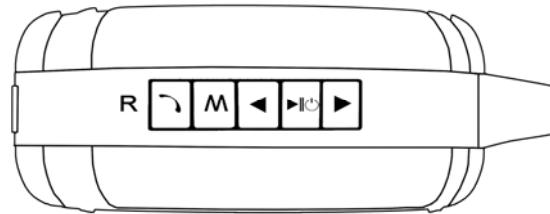

▶ : Short press for next track; long press for volume increase (a voice prompt indicates max volume.)

◀ : Short press for previous track; long press for volume decrease (a voice prompt indicates min volume.)

▶II: Short press to play or pause; long press to power on or power off.

M: Short press to switch between TF card and Bluetooth mode.

○: Short press to answer or hang up calls; long press to reject.

R: Reset

Bluetooth Connection

- Turn on the speaker and switch to Bluetooth mode. Speaker prompts waiting for connection
- Open Bluetooth on your Bluetooth device

- Pair with “CK107”. Speaker prompts Bluetooth connected. (Input “0000”if any pin needed)

TF Card Playing Operation

Power on and insert TF/SD card, the speaker prompts entered TF connection.

Then you could play music inside the TF card.

TF Card Music Download

Insert TF card and connect the speaker with your PC by USB cable to download music directly from the internet.

USB Connection

- Turn on the speaker
- Connect the speaker with your PC through USB cable
- Play music from PC (it might take a few seconds for the driver to be installed automatically to your PC)
- Charge the speaker with USB cable in power off state

Technical Parameters

Power: 5W

Speaker Size: 40mm with Low-frequency amplifier

Frequency Response: 60HZ~18KHZ

SNR: ≥96db

Distortion: ≤0.5%

File Format: All format/APE/FLAC

Battery Capacity: 3.7V 1400mAh

Charging Voltage: DC5V/500MA

Support USB Version: USB2.0, compatible with USB1.1

Bluetooth Version: V2.1+EDR

Troubleshooting

Situation	Solution
Bluetooth failed to connect	Make sure it is disconnected with previous device since it would auto-connect to the last connected device. Please search and connect speaker with new device.
Low or no volume	A: This speaker is designed with low output volume . B: Make sure you've turned up volume of both devices and this speaker.
Poor Bluetooth connection while playing music	Make sure there is no barrier between the speaker and your Bluetooth device. Make sure the speaker isn't too far away from your Bluetooth device. Working scope is less than 10 meters.
Failed to connect other devices	Turn off the Bluetooth on the previous phone or long press ►II on speaker to research for new device
Failed to connect with two devices	It could not pair with two devices simultaneously. Please disconnect with the first device and turn off the Bluetooth function of the first device. To pair and connect with the second device, please turn on the Bluetooth of the second device to pair with this speaker.
No audio output from TF/SD card	A: Check the volume and the play/pause button. B: Make sure TF/SD card insert into card slot completely. C: Try new music. The original music might be incompatible or damaged..
Reset	If the above measures could not solve the problem, please reset this speaker.

Notes

If all those solutions above failed to shoot troubles, please send email directly to ckyservice@hotmail.com and turn to our customer officer for help. We promise every valuable customer with 3-month no hassle after-sale services.

Company Information

Vomaxtech Limited is an energetic startup, established by the returnee from Chicago along with a group of like-minded comrades. We focus on the best customer experience and creating an exclusive product world for them. Here, we have a powerful Statistics Analysis team dedicated to market research to ensure every product suit customers' usage habits and aesthetic standard best. The distinctive R &D team makes every product more energetic to guarantee customers a perfect experience. Besides, the strict QC system and the most intimate service team are ready here to serve you in every detail whenever you need.

Warning:

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different

from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.