

WATERPROOF BLUETOOTH SPEAKER


Item #: 91827

INSTRUCTION MANUAL



Features

Water resistance: IPX7
Hands free speakerphone
Bluetooth wireless (version 5.0)
LED pairing indicator
Micro-USB port for battery recharge

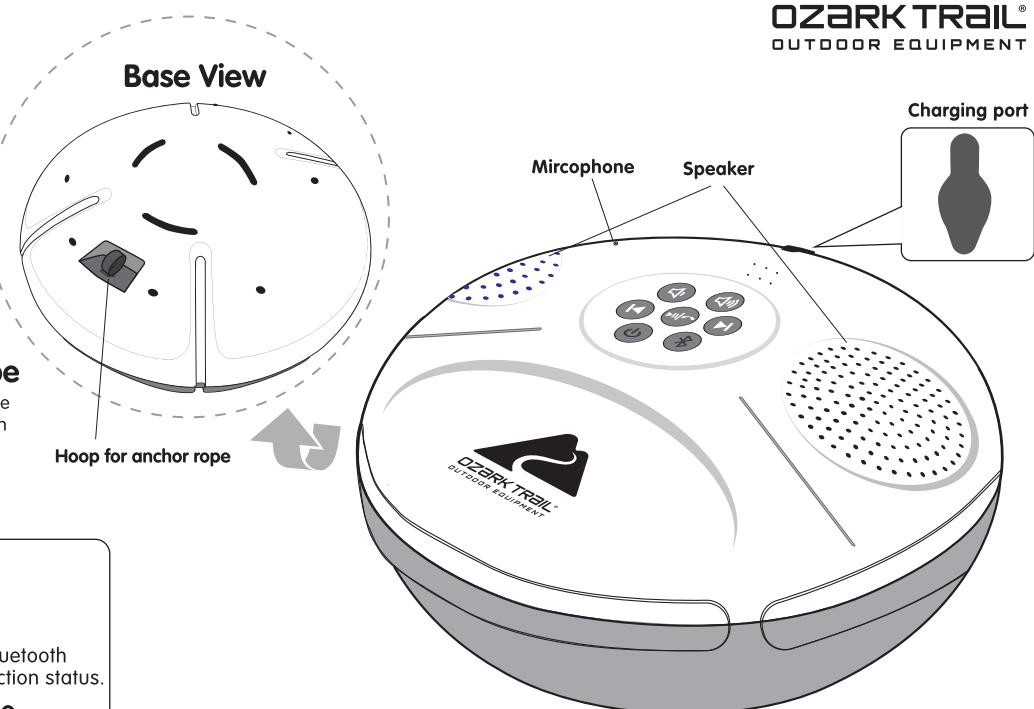

How to install the anchor rope

One end of the anchor rope connect the hoop at the base of the speaker. The other end of the string can be tied on your floaties to avoid drifting away.

Control

Power (Red light)

Press to power on or off.

Pairing bluetooth (Blue light)

Press and hold to begin pairing to a Bluetooth device. BLUE light indicates wireless connection status.

Play / Pause / Speakerphone

Press to play or pause a selected audio track.
Press to answer an incoming call.

Skip Back

Press to skip back a selected audio track.

Move Forward

Press to move forward to the next audio track.

Volume +

Press or hold to increase the volume.

Volume -

Press or hold to decrease the volume.

CHARGE BATTERY BEFORE OPERATING

Bluetooth floating speaker is powered by permanently installed rechargeable 3.7V / 1,200 mAh Li-ion battery (included and non-replaceable).

1. Open the charging port door.
2. Plug the Micro-USB into the speaker charging port.
3. Plug the USB into a computer or USB power supply.

RED LIGHT = CHARGING

LIGHT OFF = FULL CHARGE

4. Charging battery until full and the red light is off.
5. Once charged, unplug the USB from the USB port.
6. Unplug the Micro-USB from speaker and close the door surely.

Bluetooth floating speaker is ready for using.

7. Charging time: 3 hours.

BLUETOOTH

Device Pairing and Audio Playing


1. Press to power on. The pairing indicator will slowly flash blue beneath .
2. Press and hold until blinks blue quickly. On your mobile device: switch on Bluetooth and then search "OT-SPEAKER" to pair.
3. If your device requests a password, enter the default password: 0000.
4. The device should keep within 3 feet distance of the speaker.
5. The blue LED light will turn solid and "BLUETOOTH CONNECTED" can be heard once pairing successfully.
6. Use the controls on the speaker or on the connected device to select and play audio, and adjust the volume.

After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the above steps.

SPEAKERPHONE

1. After paired to your Bluetooth device, a ringtone will sound through the speaker when a call is received.
2. Press the to accept the call or accept the call using the controls on connected device.
3. The incoming call will now be heard through the speakers.
4. To end the call, press the or end the call using the controls on the connected device.

Contains: 1 speaker, 1 charging cord and 1 anchor rope

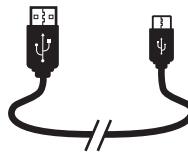

Warning and Caution of the Li-ion Battery:

THIS PRODUCT CONTAINS LI-ION BATTERY 3.7V / 1,200 mAh
Li-ion battery has a severe risk of fire and injury if it is improperly handled or misused. Read all enclosed instructions, warnings and precautions regarding the care, use and disposal of Li-ion battery. The enclosed Li-ion battery is only to be used with the speaker and charger included with this product.

- Keep away from flammable materials.
- Do not expose to direct sunlight.
- Do not place in fires or leave in hot places.
- Keep dry after use.
- Never throw battery in a fire or attempt to open outer casing.
- Rechargeable battery is only to be charged by adults.
- Charging cord used with the speaker is to be regularly examined for damage to the cord, plug, enclosure and other parts. In the event of such damage, it must not be used until the damage has been repaired.

Li-ion battery disposal: Li-ion battery must be recycled or disposed of properly. They should not be disposed of with other correct recycling and/or battery disposal.

CHARGING PRECAUTIONS:

- If you suspect that the battery is damaged or swelling, discontinue operating the speaker immediately.
- Do not modify, heat, or get battery wet in any way.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for the compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Consult the dealer or an experienced radio/TV technician for help.

MAINTENANCE

Keep instruction for future reference.

©2021 Walmart Inc.
Athletic Works is a trademark of
Walmart Inc. All Rights Reserved.

Distributed by/Distribuido por
Walmart Inc., Bentonville, AR 72716

MADE IN CHINA/HECHO EN CHINA

Walmart.com

Federal Communications Commission (FCC) Statement. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received,

including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications made to this device not expressly approved by **MAGIC TIME INTERNATIONAL LIMITED** may void the FCC authorization to operate this device. Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

RF exposure statement:

The transmitter must not be colocated or operated in conjunction with any other antenna or transmitter. This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 5mm between the radiator and any part of your body.