# INSTRUCTION MANUAL R/C Hyper Wake


#### **Batteries Installation:**

The operation requires rechargeable battery pack for the boat and One "V9" size batteries for the transmitter.

## **Install batteries to the boat:**

- Carefully remove product from package.
- Locate the battery compartment in the boat body.
- Unlock and open the battery cover as in indicated in Diagram A point #1.
- Then connect the battery pack with the boat.
- Close the battery compartment door.

## Diagram A

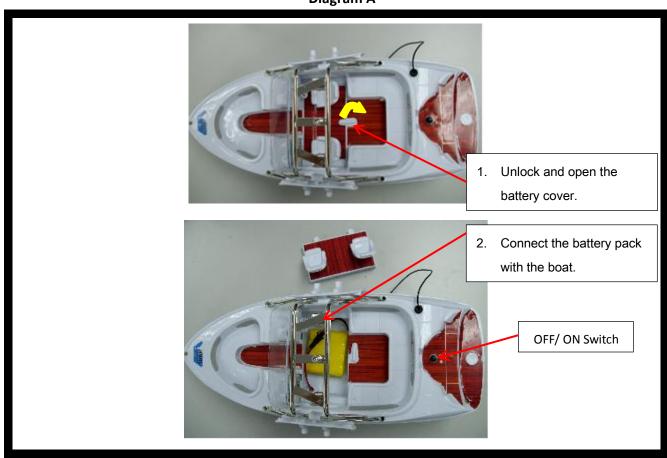


## **Install batteries to the transmitter:**

- Unscrew the battery compartment door on the back of the transmitter.
- Slide out the door from the battery compartment.
- Insert 1 piece of "9V" size battery to the battery compartment according to the polarity direction as engraved inside.
- Close the battery compartment door by the screw.

### **Running the R/C Boat:**

- Step 1: Install the batteries on both the boat and transmitter as mentioned above.
- Step 2 : Turn on the switch on the boat. The switch is located at the tail of the boat body as illustrated in Diagram A.
- Step 3 : Control the boat from the transmitter by the bottoms as indicated in Diagram B below.



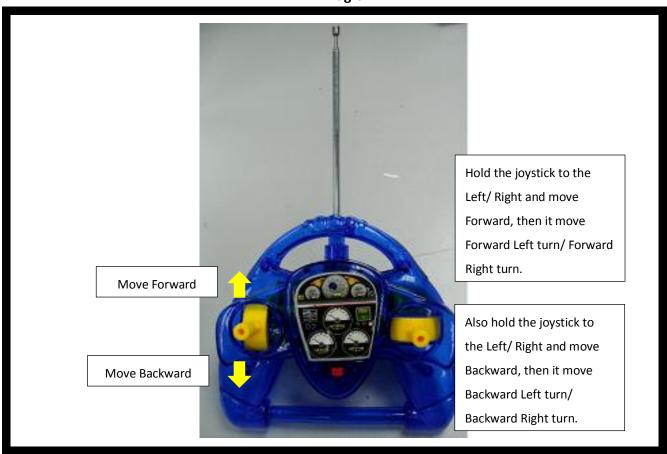

Using One "V9" Battery

#### CAUTION:

- Do not mix old and new batteries.
- > Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not dispose of batteries in fire as batteries may explode or leak.

Battery requirement: Rechargeable Batteries Pack (included).

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.