

STM-8800 USER MANUAL

COPYRIGHT © 2009 Woongjin ALL RIGHTS RESERVED



- Table of Contents -

Copyright -----	4
Proper Handling of the device -----	5
I. Before Using the device -----	7
1. Product Configuration -----	8
2. Specifications (Device/Cradle) -----	9
3. Charging the Battery -----	11
4. Initialization -----	12
II. Getting Started -----	13
1. Power On -----	14
2. How to use the Stylus Pen -----	16
3. Screen Description -----	17
4. Configuring the device -----	19
5. Locking and unlocking the device -----	25
6. Manage battery life -----	26
III. Use File Explorer -----	28
1. Run and use the File Explorer -----	29
IV. Terminal settings, how to optimize ... -----	30
1. Background image -----	31
2. Brightness -----	33
3. Volume and Sounds -----	34
4. Screen -----	36
5. Bluetooth -----	37
6. RFID -----	44
7. Pictures and Videos -----	45

- Table of Contents -

V. PC connection -----	62
1. Microsoft ActiveSync installation -----	63
2. Connect to a PC to install the program -----	65
VI. Appendix -----	66
1. Troubleshooting -----	67
2. Initialize to factory default -----	71
3. Terminal maintenance -----	72
4. Product specifications -----	73
5. Others -----	75

Copyright

This user's manual and related products are under the protection of the copyright law, all rights reserved. This document and any part hereof may not be copied, adopted or translated into other languages without prior written consent of Woongjin Holdings Co. Ltd.

Woongjin Holdings Co. Ltd., in reference to the instructions and/or information in this user's manual in relation to the products referred to herein, does not provide nor implies the granting of an unlimited guarantee of any kind.

- Use the Windows System OS documentation for information regarding the same. For information about the PC used, please refer to the PC instruction manual.
- All names and products used in this manual are names, service marks, and/or registered trademarks of their respective owners.
- Picture, screens, features used herein may vary slightly with the actual product depending on the product version.
- Woongjin Holdings reserves the right to change/,modify this user's manual without prior notice depending on the circumstances that affects the product and/or its version.
- Users must read the **PRECAUTIONS** before using the product.

Woongjin Holdings Co., Ltd.
3rd floor, Kukdong Bldg., 60-1 Chungmuro 3-ga,
Jung-gu, Seoul, Republic of Korea
TEL: 02) 2075-9370 FAX: 02)2075-1098



Proper Handling of the Device

To insure the smooth and safe usage of this product, read carefully the instructions detailed in this manual.

Using accessories other than those recommended and/or included in this product can cause accidents and product failures. Woongjin Holdings Co. Ltd. Will not be responsible for such accidents and/or failures.

Bringing this product to unauthorized repair or service centers/shops will void the warranty. Please contact the manufacturer for any repair and maintenance needs.

Counterfeit mobile phone

This product is identified through its unique phone number (ESN: Electronic Serial Number). Illegally reproducing or changing this unique number is a criminal act under Article 347, and is punishable with less than 10 years of imprisonment or a fine of less than KRW 20 million. In addition, this illegal act voids the warranty of this product.

Wireless/Radio Equipment Inspection and Registration

- This product is inspected by and registered with the Ministry of Information & Communication.
- This product can not be modified that could cause changes in its performance that infringes on the conditions of the registration.

Proper Handling of the Device

- Avoid eye contact with the Barcode scanner. It can cause eye damage.
- Do not remove the battery while device is ON.
- Use only the specified battery charger. Using other chargers can cause damage to the battery and/or be a fire hazard.
- Do not make modifications to this product. This could cause fire, damage, electric shock, or serious injuries to users.
- Do not use this product near gas and other flammable liquid. This could cause explosion.
- Avoid using this product during lightning and thunder storms.
- Keep this product out of reach of children and animals.
- In places where wireless/radio communication is restricted (air flights, near medical equipments, or similar places), follow the instructions provided for by the authorities of such places.
- Do not leave this product in areas with high temperature and/or extreme temperature changes. Do not expose this product to direct sunlight. (Exposing this product to high temperature for long periods could cause explosion.)
- Avoid using this product in areas with high moisture level. Do not submerge this product under water.
- When subjecting this product to search equipment (x-ray machines) in airports, it is advisable to be aware of what is happening.

I

Before using the device...

1. Product Configuration

2. Specifications (Device/Cradle)

3. Charging the Battery

4. Initialization

I -1

Product Configuration

1) Basic product configuration



STM-8800
Adapter
Main device



Cradle & Battery



Power cord &

2) Additional Product Configuration



USB Cable

1) Mobile Device Description



2) Cradle Device Description



I -3

Charging the Battery

1) Charging the battery from the device

Open the battery cover at the back of the device and place the battery into it. Place the device on the cradle and connect the power adapter with cord to the cradle to charge the battery.



2) Separately charging the battery

To charge the battery separately from the device, place the battery on the back side of the cradle.



- 1) When the system does not response you may need to initialize the device by inserting the stylus into the reset hole found at the back of the device.
- 2) When initializing the device all files will be deleted/lost and all running programs will be terminated.

However, initialization (reset) does not delete files in the FileBox folder. In cases where FileBox capacity is not sufficient to contain all important files, another method of backup is with the use of Micro SD cards.



1. Power On
2. How to use the stylus pen
3. Screen description
4. Configuring the device
5. Locking and unlocking the device
6. Manage battery life

II-1

Power On

- Insert the battery into the device and press the Power button to turn ON the power.
- When the device is powered ON, pressing the Power button again turns OFF the power.

If the device does not turn ON, check the battery for proper charging.




[Insert the battery]



► *Initial Setup or Reset*

The first time you power on your device or every system reset, it displays the Windows Mobile® screen which guides you through a series of startup procedures.

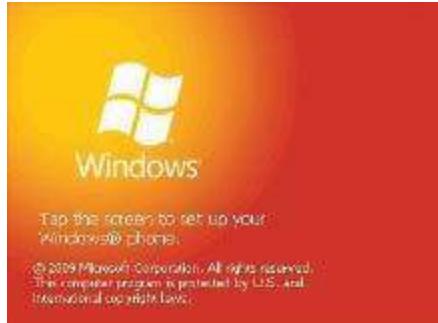

1. From the initial startup screen tap the screen using the stylus.



2. From the align screen, use your stylus to calibrate the touch accuracy of the screen by both accurately and firmly tapping the center of each target (crosshair). Repeat this process for every target that appears until completed.

II-2


How to use the stylus pen

This section describes the basic use of the stylus pen in running or moving programs on the touch screen.



Only use stylus pen that comes with this product or recommended by Woongjin Holdings. Other stylus pen can damage this product.

Tap: Selects an item (program) to run by tapping the stylus pen over the item's icon on the screen.

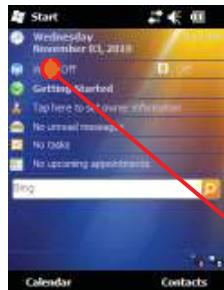

Tap the icon to select



 
Scroll: Moving the stylus pen scrolls the page.



II-3

Screen description

► Status Icon



The task bar that you normally find at the top of the screen is similar to that of the PC Windows. The icons displayed on the task bar indicates the status of the application and/or device it represents.

Icon	Icon Description
	Battery Charge Level – Shows your current battery charge level. (Icon shown is fully charged.)
	Low battery – Shows your current battery charge level is low.
	Battery Charging – Shows the device is connected to a power cable and is currently being charged.
	Windows Start – Provides access to the Windows Menu page.
	OK – Tap to accept and save the current page settings, and then exit.
	Cancel/Exit – Tap to leave the current page without storing any changes.
	Speaker On – Your device's speaker is active. Tap this icon to access the onscreen Volume slider and adjust the volume level.
	Silence All – Your device has the ringer deactivated and the vibrate option unchecked (disabled). No sound is made by the device.
	Vibrate – Your device's the speaker is set to vibrate only. Tap this icon to access the onscreen Volume slider and adjust the volume level.

Icon	Icon Description
	Alarm – An alarm has been set on your phone.
	Bluetooth Enabled – The Bluetooth technology is active and enabled.
	Bluetooth Visible – The Bluetooth technology is active and the device is visible.
	Bluetooth Connected – The Bluetooth technology is active and communicating (paired) with a target Bluetooth device.
	Wi-Fi Inactive – Your Wi-Fi connection is inactive.
	Wi-Fi Active – Your Wi-Fi connection is active and communicating.


► Set the date and time

Setting the date and time on your device makes sure that your calendar and alarm alerts will be accurate.

1. Tap **Start**, tap **Settings** (you may need to scroll the page), and then tap **Clock & Alarms** (you may need to scroll the page).



2. On the **Time** tab, select the correct time zone and set the date and time.

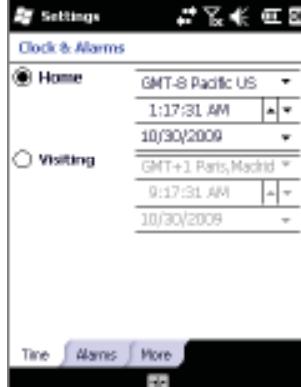

Notes: During synchronization, the time on your device is updated with the time on your computer.

II -4

Configuring the device

► Set up language and regional settings

Regional settings specify the style in which numbers, currency, dates, and times are displayed.

1. Tap **Start**, tap **Settings** (you may need to scroll the page), tap **System** (you may need to scroll the page), and then tap **Regional Settings** (you may need to scroll the page).



2. On the **Region** tab, select your language and region. The region you select determines which options are selected by default on these other tabs: **Number**, **Currency**, **Time**, and **Date**.
3. To change other settings, tap a tab and make the changes you want.

4. Tap **OK**.

