

INSTRUCTIONS/SAFETY SHEET FOR:

Santa Tree Lights Remote Control

This package contains:

- 1 – Santa
- 1 – Lights Remote Control
- 1 – 3 Amp, 125 Volts Replacement Fuses

SAFETY INSTRUCTIONS:


1. Read all instructions before this figure is operated and retain them for future reference.
2. This is not a toy, for decorative purposes only.
3. All warning stated in these operating instructions should be followed.
4. This seasonal use product is not intended for permanent installation or use.
5. Do not mount or place near gas or electric heaters, firelaces, candles or other similar sources of heat.
6. Do not let lamps rest on light strings or on any wire.
7. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
8. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
9. Read and follow all the instruction that are on the product or provided with the product.

TO OPERATION :

- Carefully remove Santa and Control Box from packaging. Keep outer and inner packaging for safe after-use storage.
- The battery compartment is located on the bottom of Santa (A). Use small screwdriver to remove safety screw, remove battery case cover. Insert 3 “AA” size batteries into battery compartment following the polarity markings in the well. Return battery case cover and secure cover. Slide switch to ON position.
- Plug the Lights Remote Control (B) into 120 Volt household wall outlet only. Do not use with an extension cord.
- Plug light strings (not included) into the slot (C) located on the side of Lights remote Control. (**Note: Do not connect more than three (3) UL APPROVED mini light strings together.)**
- Press button on Santa’s right hand (D) to control the ON/OFF function of the light string.
- Santa works as a remote control and uses Radio Frequency (RF) technology. Strong direct light or other RF products may affect the function of this item. Make sure to use product away from other RF items.
- **To prevent the potential interference to the RF signal please do not hold the Santa to close your body.**
- If lights do not turn on right when you plug into remote control (B) click the ON/OFF hand switch of the Santa to switch the remote control box (B) to ON. Lights should now be active.
- To save battery life, switch OFF the unit when not in use.

CAUTION

DO NOT OVERLOAD: Connect end-to-end a maximum of three (3) light strings or decorative outfits of the same type.

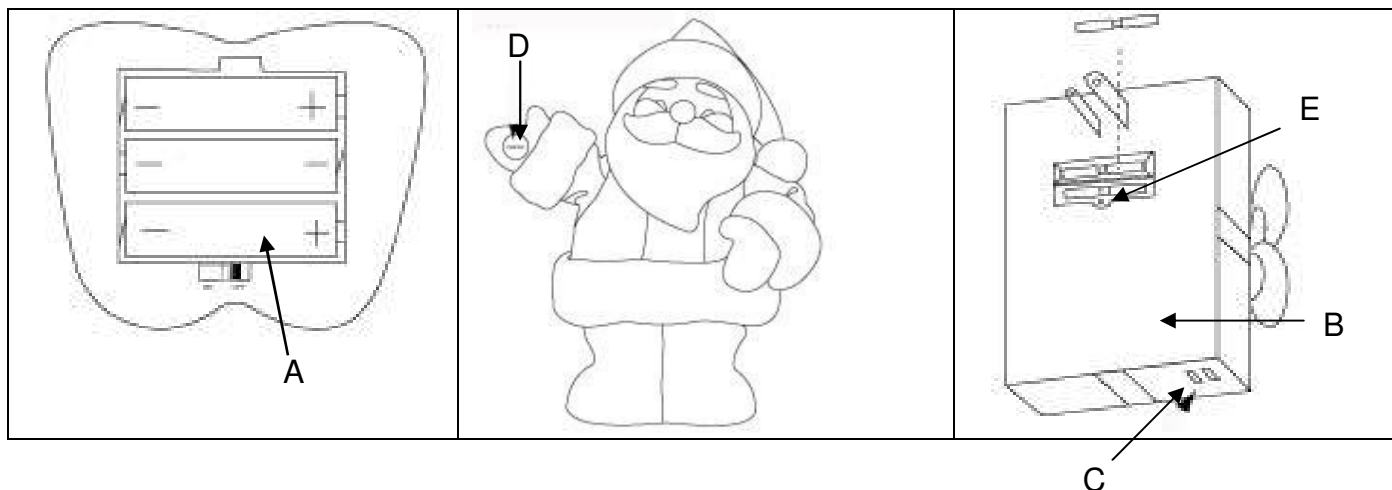

CAUTION

- This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician for help. Do not alter the plug.
- Risk of electric shock. This product is not a toy and is not intended for use by children. For adult use only.
- **Do not overload.** Connect end-to-end a maximum of three (3) series of parallel-connected lighting string or decorative outfits. Do not interconnect different types of products.

WARNING : THIS IS NOT A TOY AND IS NOT INTENDED FOR USE BY CHILDREN. FOR SAFE USE, PLUG ONLY INTO EXPOSED WALL OUTLETS WHERE LIGHTS REMOTE CONTROL IS VENTILATED AND CANNOT CONTACT BED COVERINGS OR OTHER MATERIAL THAT MAY PRESENT A FIRE HAZARD. DO NOT USE WITH EXTENSION CORDS.

FUSE REPLACEMENT: (Under adult supervision at all times)

WARNING – Risk of fire: Do not replace plug. Contains a safety devise (fuse) that should not be removed when in use. Discard product if the plug is damaged.

REPLACING THE FUSE

1. Disconnect from supply before removing.
2. **WARNING – Risk of electric shock:** Grasp plug and remove from the receptacle or other outlet device.
3. Open fuse cover (E) by small screwdriver to remove safety screw.
4. Remove fuse carefully.
5. **WARNING – Risk of fire:** Replace fuse only with same size and rating 3 Amp, 125 Volt fuse. A spare fuse is provided with product
6. Return fuse cover and secure cover.
7. If the fuse repeatedly bows, there may be a short circuit, discard product.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This radio communication device complies with all the requirements of Industry Canada Standard RSS-310.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

PLEASE NOTE: For best results, always use alkaline batteries. Be sure to check the expiration date because fresh batteries will ensure uninterrupted usage/enjoyment of the product. Remove the batteries if the product will not be used for an extended period. If the product does not perform as expected, check for proper battery charge and correct battery installation, or try a fresh set of batteries.

CAUTION: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. To avoid explosion or leakage, do not dispose of batteries in a fire or attempt to recharge standard or alkaline batteries. Remove batteries and store them in a cool, dry place when not in use.

TECHNICAL SPECIFICATION:

- Product –120VAC 60HZ
- Spare Fuse – 125V3A (Included)
- Impulse voltage 1500V
- Temperature of ball pressure test 125 degree.
- This item with type 1.B disconnection.
- This is continuous operating product.
- This is in-line cord control product.
- Pollution degree 2
- Frequency – 27.145MHz
- Under the environment with electrical surge/ring wave, the sample may malfunction and require user to reset the sample.

