

# User Guide



Lenovo

IdeaPad Duet 3i (10", 5)

## **Read this first**

Before using this documentation and the product it supports, ensure that you read and understand the following:

- Appendix A “Important safety information” on page 33
- *Safety and Warranty Guide*
- *Setup Guide*

**First Edition (May 2020)**

**© Copyright Lenovo 2020.**

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

---

# Contents

<b>About this guide . . . . .</b>	<b>iii</b>
<b>Chapter 1. Meet your computer. . . . .</b>	<b>1</b>
Front . . . . .	1
Left . . . . .	2
Right . . . . .	3
Rear . . . . .	4
Bottom . . . . .	4
Bluetooth folio keyboard . . . . .	5
Features and specifications . . . . .	6
Statement on USB transfer rate . . . . .	7
Operating environment . . . . .	7
<b>Chapter 2. Get started with your computer. . . . .</b>	<b>9</b>
Get started with Windows 10 . . . . .	9
Windows account . . . . .	9
Windows desktop . . . . .	10
Windows Updates (for selected models) . . . . .	11
Lenovo Vantage and Lenovo PC Manager . . . . .	11
Connect to wireless networks . . . . .	11
Connect to Wi-Fi networks. . . . .	11
Use a nano SIM card (for selected models) . . . . .	12
Connect a Bluetooth device . . . . .	13
To connect a Bluetooth device using swift pair. . . . .	13
To connect a Bluetooth device using conventional pair . . . . .	13
Use a microSD card . . . . .	13
Install a microSD card . . . . .	13
Combination of computer and Bluetooth folio keyboard . . . . .	14
Use the kickstand . . . . .	14
Lenovo Digital Pen (for selected models) . . . . .	15
Install pen battery . . . . .	17
Interact with your computer . . . . .	17
Keyboard hotkeys . . . . .	17
Use the multi-touch screen . . . . .	18
<b>Chapter 3. Explore your computer . . . . .</b>	<b>21</b>
Manage power . . . . .	21
Check the battery status . . . . .	21
Charge the battery . . . . .	21
Check the battery temperature . . . . .	21
Set power button behavior. . . . .	21
Change or create a power plan . . . . .	21
Set performance mode . . . . .	22
Change settings in UEFI/BIOS setup utility . . . . .	22
What is UEFI/BIOS setup utility . . . . .	22
Open the UEFI/BIOS setup utility . . . . .	22
Change the startup sequence . . . . .	22
Enable or disable always-on . . . . .	22
Set passwords in UEFI/BIOS setup utility . . . . .	22
Password types . . . . .	22
Set administrator password . . . . .	23
Change or remove administrator password . . . . .	23
Set user password . . . . .	24
Enable power-on password . . . . .	24
Set hard disk password . . . . .	24
Change or remove hard disk password . . . . .	24
Reset or restore Windows . . . . .	25
Windows 10 recovery options . . . . .	25
Windows System Restore . . . . .	25
Reset Windows . . . . .	26
Create a recovery drive . . . . .	26
Use a recovery drive to restore or reset Windows . . . . .	26
<b>Chapter 4. Help and support . . . . .</b>	<b>29</b>
Frequently asked questions . . . . .	29
Self-help resources . . . . .	29
What is a CRU? . . . . .	30
CRUs for your product model . . . . .	30
Call Lenovo . . . . .	31
Before you contact Lenovo . . . . .	31
Lenovo Customer Support Center . . . . .	31
Purchase additional services. . . . .	32
<b>Appendix A. Important safety information. . . . .</b>	<b>33</b>
<b>Appendix B. Accessibility and ergonomic information . . . . .</b>	<b>45</b>
<b>Appendix C. Compliance information. . . . .</b>	<b>49</b>
<b>Appendix D. Notices and trademarks. . . . .</b>	<b>61</b>



---

## About this guide

- This guide applies to Lenovo product model(s) listed below. Illustrations in this guide may look slightly different from your product model.

Model name	Machine type (MT)
IdeaPad Duet 3 10IGL5	82AT
IdeaPad Duet 3 10IGL5-LTE	82HK

- This guide may contain information about accessories, features, and software that are not available on all models.
- This guide contains instructions that are based on the Windows 10 operating system. These instructions are not applicable if you install and use other operating systems.
- Microsoft® makes periodic feature changes to the Windows® operating system through Windows Update. As a result, the operating system related instructions may become outdated. Refer to Microsoft resources for the latest information.
- The content of the guide is subject to change without notice. To obtain the latest version, go to <https://support.lenovo.com>.




---

## Chapter 1. Meet your computer

---

### Front

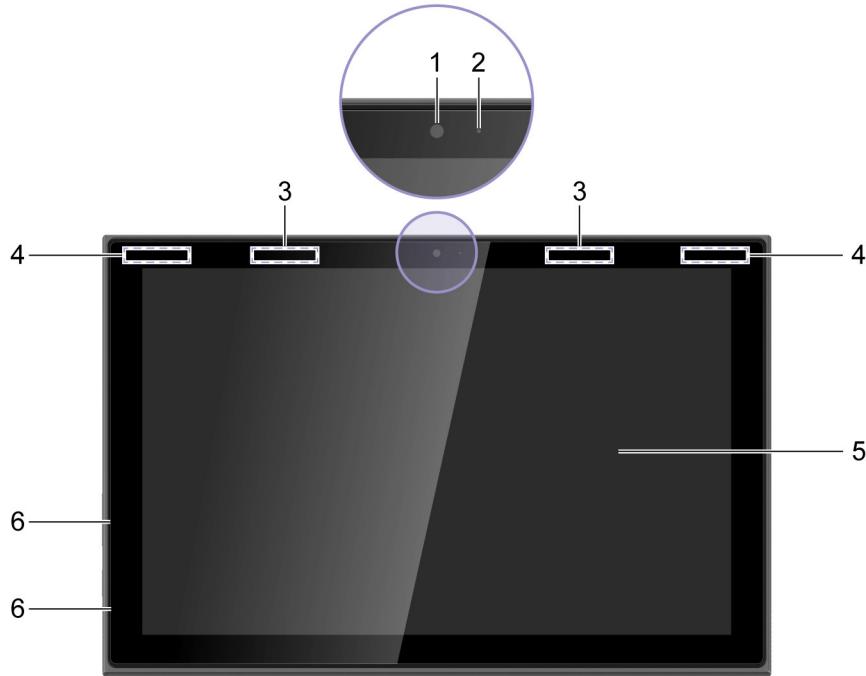

1. Front camera	Capture still and moving images for taking photos, recording videos, and video chatting.
2. Camera light	If the light is on, the camera is in use.
3. Wireless WAN antennas *	Send and receive radio waves for the built-in wireless WAN (wide area network) module. <b>Note:</b> The antennas are not visible from the outside of the computer.
4. Wi-Fi antennas	Send and receive radio waves for the built-in wireless LAN (local area network) and Bluetooth module. <b>Note:</b> The antennas are not visible from the outside of the computer.
5. Screen	Display text, graphics, and videos. The screen supports multi-touch function.
6. Microphones	Capture or record sound and voice.

\* for selected models

---

## Left



---

1. Speaker	Produce sound.
2. Combo audio jack	Connect to headphones or headsets with a 3.5 mm (0.14 inch), 4-pole plug. <b>Note:</b> This jack does not support standalone external microphones. If you use headsets, choose one with a single plug.
3. Nano SIM card slot* /microSD card slot	<ul style="list-style-type: none"><li>Use the nano Subscriber Identity Module (SIM) card (sold separately) to connect to a mobile broadband network.*</li><li>Use the microSD card (sold separately) to transfer or store files.</li></ul>
4. Power connector/USB-C™ connector (2)	<ul style="list-style-type: none"><li>Plug the ac power adapter into the connector to provide power to the computer and charge the internal battery.</li><li>Connect external display, storage, or data devices.</li></ul> <b>Note:</b> An appropriate adapter may be needed for connecting external devices.

---

\* for selected models

---

## Right



---

1. Volume buttons Press the button to increase or decrease the system volume.

2. Power button (with a light)

- Press the button to turn on the computer or put the computer into sleep mode.
- The power button has an integrated light to show the power status.
  - On: The computer is turned on.
  - Off: The computer is turned off or in hibernation mode.
  - Blinking: The computer is in sleep mode.


---

3. Speaker Produce sound.

---

---

## Rear

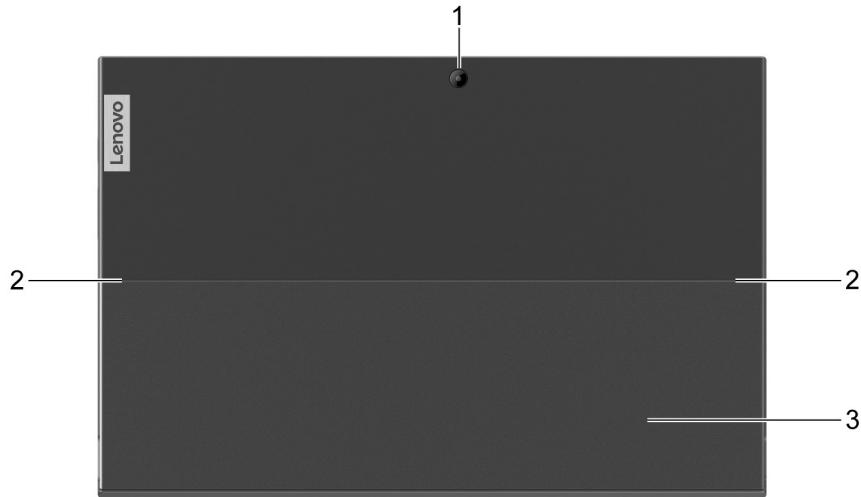


---

1. Rear camera	Capture still and moving images for taking photos, recording videos, and video chatting.
2. Kickstand hinges	Pivot the kickstand.
3. Kickstand	Support your computer when it is placed on a surface.

---

## Bottom

 


---

1. Pogo pin with guide pin	The pogo pin with guide pin enables you to attach the keyboard to your computer magnetically.
----------------------------	---

---

## Bluetooth folio keyboard

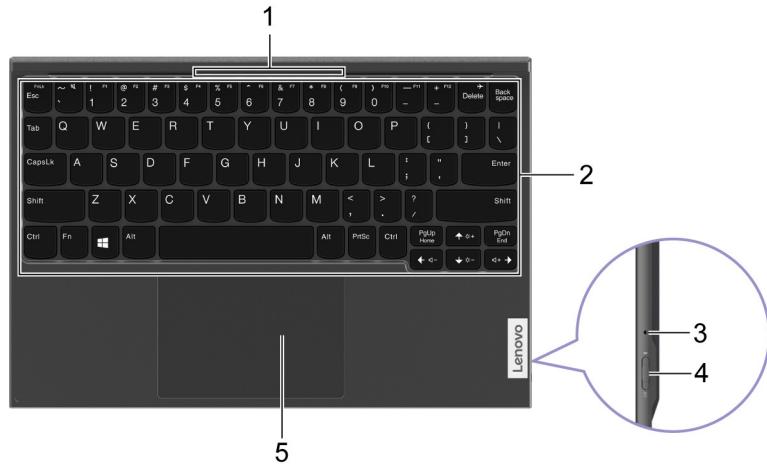

1. Pogo pin with guide pin	The pogo pin with guide pin enables you to attach the keyboard to your computer magnetically.
2. Keyboard	Enter characters and interact with programs. <b>Note:</b> The keyboard also includes hotkeys and function keys for changing settings and performing tasks quickly.
3. Bluetooth light	<ul style="list-style-type: none"><li>• Solid amber: Keyboard is charging through the pogo pin.</li><li>• Continuously blinking white (up to 1 min): Pairing</li><li>• Solid white (for three seconds) and then off: Paired</li><li>• Slowly blinking white: Keyboard is working and connected with pogo pin.</li><li>• Blinking amber: Battery power is low.</li><li>• Off:<ul style="list-style-type: none"><li>– Keyboard is fully charged and connected with pogo pin.</li><li>– The keyboard battery has no power.</li></ul></li></ul>
4. Bluetooth folio keyboard switch	Push the switch to a different position to enable the following functions. <ul style="list-style-type: none"><li>• Off position: Keyboard is turned off.</li><li>• Middle position: Keyboard is turned on and will connect with the latest connected device.</li><li>• Bluetooth icon position: Press and hold the Bluetooth folio keyboard switch to the Bluetooth icon position for three seconds. The keyboard will enable Bluetooth pairing.</li></ul> <b>Note:</b> The spring switch will move back to the middle position automatically after releasing the switch.
5. Touchpad	Perform finger touch and all the functions of a traditional mouse. <b>Note:</b> The touchpad also supports multi-touch function.

## Features and specifications

Dimensions	<ul style="list-style-type: none"><li>Width: 253 mm (9.96 inches)</li><li>Depth: 167.5 mm (6.59 inches)</li><li>Thickness: 10 mm (0.39 inches)</li></ul>
ac power adapter	<ul style="list-style-type: none"><li>Input: 100 V ac–240 V ac, 50 Hz–60 Hz</li><li>Output: 20 V dc, 2.25 A</li><li>Power: 45 W</li></ul>
Battery pack	<ul style="list-style-type: none"><li>Capacity: 30 Wh</li><li>Number of cells:<ul style="list-style-type: none"><li>Computer battery: 2</li><li>Bluetooth folio keyboard battery: 1</li></ul></li></ul>
Microprocessor	To view the microprocessor information of your computer, right-click the Start button and then select <b>System</b> .
Memory	<ul style="list-style-type: none"><li>Type: Onboard</li><li>Number of slots: 0</li></ul>
Storage device	<ul style="list-style-type: none"><li>Type: eMMC 5.1</li></ul>
Screen	<ul style="list-style-type: none"><li>Size: 261.62 mm (10.3 inches)</li><li>Display resolution: 1920 × 1200 pixels</li></ul>
Bluetooth folio keyboard	<ul style="list-style-type: none"><li>Function keys</li><li>Hotkeys</li><li>Bluetooth folio keyboard switch</li></ul>
Connectors and slots	<ul style="list-style-type: none"><li>Combo audio jack</li><li>USB-C connector × 2</li><li>microSD card slot</li><li>Nano SIM card slot*</li></ul>
Security features	<ul style="list-style-type: none"><li>UEFI/BIOS passwords<ul style="list-style-type: none"><li>Administrator password</li><li>User password</li><li>Master hard disk password</li><li>User hard disk password</li></ul></li></ul>
Wireless features	<ul style="list-style-type: none"><li>Bluetooth</li><li>Wireless LAN</li><li>Wireless WAN *</li></ul>

\* for selected models

**Note:** The battery capacity is the typical or average capacity as measured in a specific test environment. Capacities measured in other environments may differ but are no lower than the rated capacity (see product label).

## Statement on USB transfer rate

Depending on many factors such as the processing capability of the host and peripheral devices, file attributes, and other factors related to system configuration and operating environments, the actual transfer rate using the various USB connectors on this device will vary and will be slower than the data rate listed below for each corresponding device.

USB device	Data rate (Gbit/s)
3.1 Gen 1	5
3.1 Gen 2	10
3.1 Gen 2 x 2	20

## Operating environment

### Maximum altitude (without pressurization)

3048 m (10 000 ft)

### Temperature

- At altitudes up to 2438 m (8000 ft)
  - Operating: 5°C to 35°C (41°F to 95°F)
  - Storage: 5°C to 43°C (41°F to 109°F)
- At altitudes above 2438 m (8000 ft)
  - Maximum temperature when operating under the unpressurized condition: 31.3°C (88°F)

**Note:** When you charge the battery, its temperature must be no lower than 10°C (50°F).

### Relative humidity

- Operating: 8% to 95% at wet-bulb temperature 23°C (73°F)
- Storage: 5% to 95% at wet-bulb temperature 27°C (81°F)

Handle your keyboard with care so that you can enjoy this product for a long time. If possible, place your computer in a dry, well-ventilated area without direct exposure to sunshine. Do not use or store your computer in dusty, dirty areas, or extremely hot or cold areas.



---

## Chapter 2. Get started with your computer

---

### Get started with Windows 10

Learn the basics of Windows 10 and start working with it right away. For more information about Windows 10, see the Windows help information.

### Windows account

You must create at least one account to use the Windows operating system. It can be either a local account or a Microsoft account.

#### Local accounts

A local account is created on a particular Windows-enabled device and it can only be used on that device. It is recommended that you set a password for each local account to prevent unauthorized access to the device.

#### Microsoft accounts

A Microsoft account is a user account that you use to sign in to Microsoft software and services. If you use Microsoft services like OneDrive, Outlook.com, Xbox Live, Office 365, and Skype, you might already have one. If you don't have it, you can create one for free.

There are two main benefits of using a Microsoft account:

- Sign in only once. If you use a Microsoft account to sign in to Windows 10, you don't need to sign in again to use OneDrive, Skype, Outlook.com, and other Microsoft services.
- Settings can be synced. If you use your Microsoft account to sign in to multiple Windows-enabled devices, certain Windows settings can be synced among the devices.

### Switch between a local and a Microsoft account

If you are using a local account to sign in to Windows 10, you can switch to use a Microsoft account instead.

Step 1. Open the Start menu and select **Settings** → **Accounts**.

Step 2. Select **Sign in with a Microsoft account instead**.

Step 3. If you already have a Microsoft account, enter the account name and password to sign in. Otherwise, select **Create one** to create a new Microsoft account.

**Note:** The device must have Internet access the first time you use a Microsoft account on that device.

If you want to switch back to use a local account, open the Start menu and select **Settings** → **Accounts** → **Sign in with a local account instead**.

### Add additional user accounts

Your user account must be of the “Administrator” type to add additional user accounts to Windows.

Add additional user accounts if you need to share your computer with family members or other users.


Step 1. Open the Start menu and select **Settings** → **Accounts** → **Family & other users**.

Step 2. Select **Add someone else to this PC**.

**Note:** To add family members, you need to sign in with a Microsoft account.

Step 3. Set the user name and password for the user account.

## Windows desktop

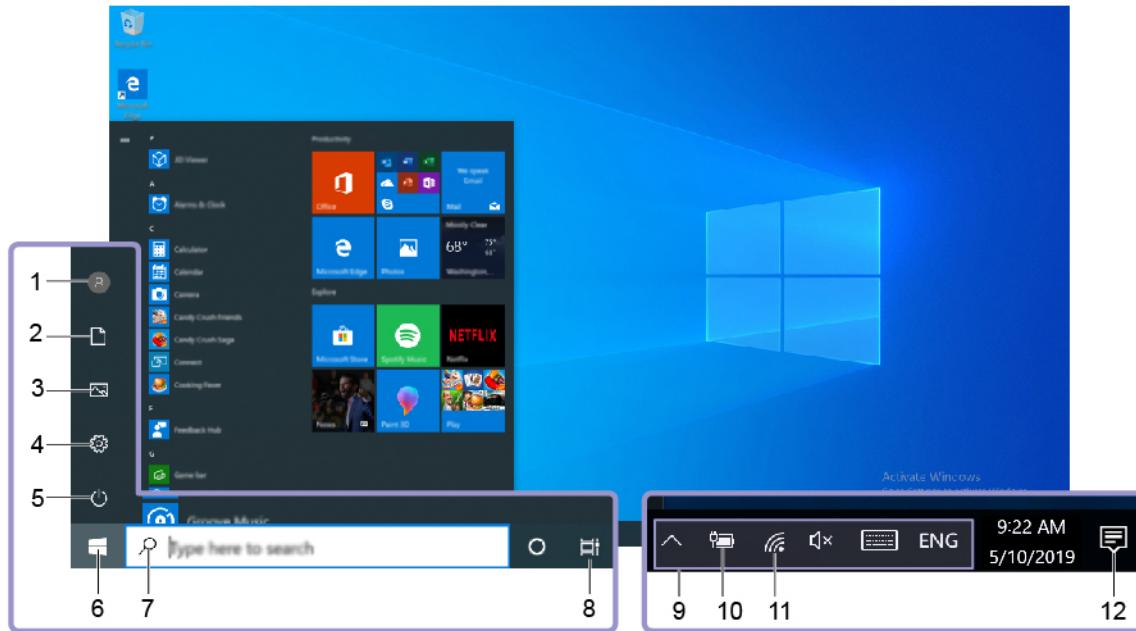

1. Account	Change account settings, lock the computer, or sign out of the current account.
2. Documents	Open the <b>Documents</b> folder, a default folder to save your received files.
3. Pictures	Open the <b>Pictures</b> folder, a default folder to save your received pictures.
4. Settings	Open Settings.
5. Power	Shut down, restart, or put the computer into sleep mode.
6. Start button	Open the Start menu.
7. Windows Search	Enter what you are looking for in the search box and get search results from your computer and the Web.
8. Task View	Display all opened apps and switch between them.
9. Windows notification area	Display notifications and status of some features.
10. Battery status icon	Display power status and change battery or power settings.
11. Network icon	Connect to an available wireless network and display the network status.
12. Action center	Display the latest notifications from apps and provide quick access to some features.

### Open the Start menu

- Click the **Start** button.

- Press the Windows logo key on the keyboard.

### **Open Control Panel**

- Open the Start menu and select **Windows System → Control Panel**.
- Use Windows Search.

### **Open an app**

- Open the Start menu and select the app you want to open.
- Use Windows Search.

## **Windows Updates (for selected models)**

Microsoft periodically releases feature and security updates to the Windows operating system. Updates that are applicable to your version of Windows are downloaded automatically when your computer is connected to the Internet. When updates are downloaded, you are prompted to restart the computer to install these updates.

### **Manually check for updates**

Updates to Windows are downloaded automatically. However, you can also manually check if there are available updates for the installed version of Windows.

**Attention:** Only download and install updates using Windows Update. Updates downloaded from other sources may include security risks.

Step 1. Select **Start → Settings → Update & Security**.

Step 2. Click **Check for updates**.

---

## **Lenovo Vantage and Lenovo PC Manager**

Lenovo Vantage and Lenovo PC Manager is software developed by Lenovo. Using the software, you can:

- View product information
- View warranty and support information
- Run hardware scan and diagnose problems
- Change hardware settings
- Update Windows, drivers, and UEFI/BIOS

Lenovo Vantage or PC Manager may be pre-installed on your computer. To open it, enter the software name in Windows Search and select the matched result.

**Note:** If Lenovo Vantage is not pre-installed, you can download it from Microsoft Store.

---

## **Connect to wireless networks**

Connect your computer to the Internet or other wireless networks so that you can browse on your computer and share information.

### **Connect to Wi-Fi networks**

If your computer includes a wireless adapter, you can connect your computer to Wi-Fi networks.

Step 1. Click the network icon in the Windows notification area. A list of nearby networks is displayed.

**Note:** If no network is displayed, check to ensure that the airplane mode is not turned on.

Step 2. Select a network and click **Connect**. Provide security key if prompted.

**Note:** The network key is usually managed by the network administrator.

## Forget a Wi-Fi network

Windows saves a list of Wi-Fi networks you have connected to, along with their passwords and other settings. By doing this, your computer is automatically connected when it is in the range of a previously connected network. However, if the network password has been changed, you need to forget the network in order to enter a new password.

Step 1. Select **Start** → **Settings** → **Network & Internet** → **Wi-Fi**.

Step 2. Click **Manage known networks**.

Step 3. Click the network name and click **Forget**.

## Turn airplane mode on and off

Airplane mode is a convenient setting to turn all wireless communications of your computer on and off. You may need to turn it on when boarding an airplane.

Step 1. Click the action center icon in the Windows notification area.

Step 2. Click the **Airplane mode** icon to turn it on or off.

### Notes:

- Click **Expand** if you cannot find the airplane mode icon.
- Bluetooth folio keyboard will be disabled when the airplane mode is turned on.

## Use a nano SIM card (for selected models)

If your computer has a nano SIM card slot on the left side of the computer, you can insert a nano SIM card into the nano SIM card slot to establish wireless WAN connections.

## Install a nano SIM card

Step 1. Use an ejection tool to eject the card tray, and then slide the tray out of the computer.

Step 2. Install a new nano SIM card into the tray and insert the tray into the card slot. Ensure that the new nano SIM card is installed in the correct orientation.



## Connect a Bluetooth device

Bluetooth is a short-range wireless communications technology. Use Bluetooth to establish a wireless connection between your computer and another Bluetooth-enabled device within a distance of about 10 m (32.8 ft).

### To connect a Bluetooth device using swift pair

- Step 1. Turn on the Bluetooth device that supports swift pair and make it discoverable. For more information, see the document that comes with the Bluetooth device.
- Step 2. Select **Connect** when a swift pair notification appears that a new Bluetooth device was found.

### To connect a Bluetooth device using conventional pair

If you do not receive the swift pair notification, you can also do as the follows to pair a Bluetooth device.

- Step 1. Turn on the Bluetooth device and make it discoverable.
- Step 2. Select **→** **Devices** **→** **Bluetooth and other devices** **→** **Add Bluetooth or other devices** **→** **Bluetooth**. A list of available Bluetooth devices is displayed.
- Step 3. Select the target Bluetooth device and start pairing.

## Use a microSD card

Your computer has a microSD card slot on the left side of the computer. You can insert a microSD card into the microSD card slot to expand the computer local storage capacity.


### Attention:

- Before handling the microSD card, touch a metal table or a grounded metal object. Otherwise the card might get damaged by the static electricity from your body.
- During data transfer, do not put your computer into sleep mode; otherwise, your data could get damaged.

## Install a microSD card

- Step 1. Use an ejection tool to eject the card tray, and then slide the tray out of the computer.

Step 2. Install a new microSD card into the tray and insert the tray into the card slot. Ensure that the new microSD card is installed in correct orientation.

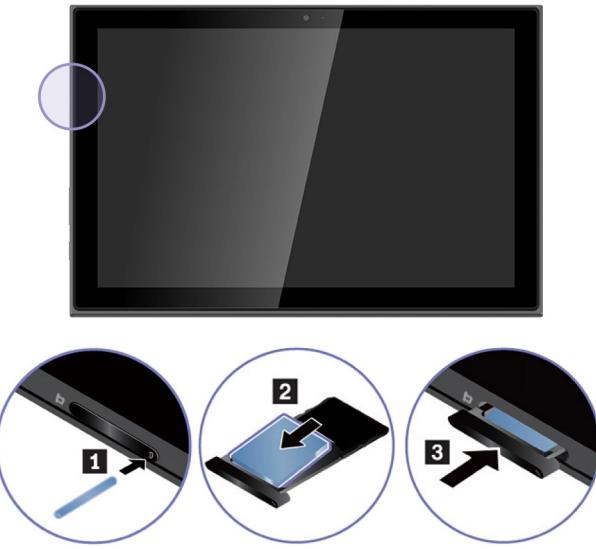

---

## Combination of computer and Bluetooth folio keyboard

Align the connector of the keyboard with the computer and then attach the computer in the direction shown by the arrow.


**Note:** Pair the Bluetooth folio keyboard with the computer the first time you use the keyboard. The Bluetooth folio keyboard supports swift pair. Refer to “Connect a Bluetooth device” on page 13.



---


## Use the kickstand

Your computer has a built-in kickstand. Pivot the kickstand from the pits on both sides of the computer to the open position as shown.

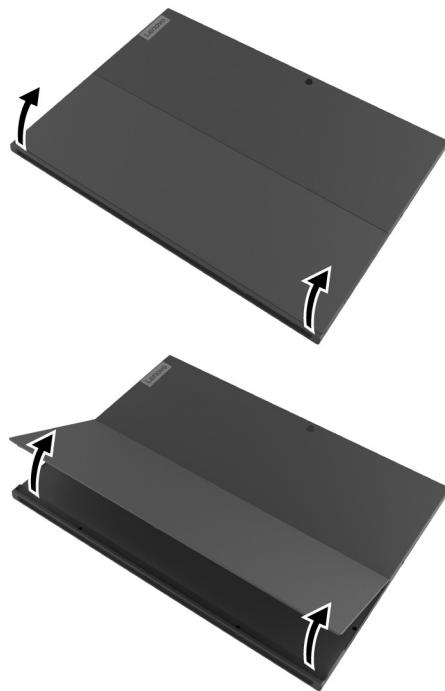

With the kickstand open, you can use the computer in the following modes.

- Stand mode without Bluetooth folio keyboard attached
- Stand mode with Bluetooth folio keyboard attached
- Stylus mode

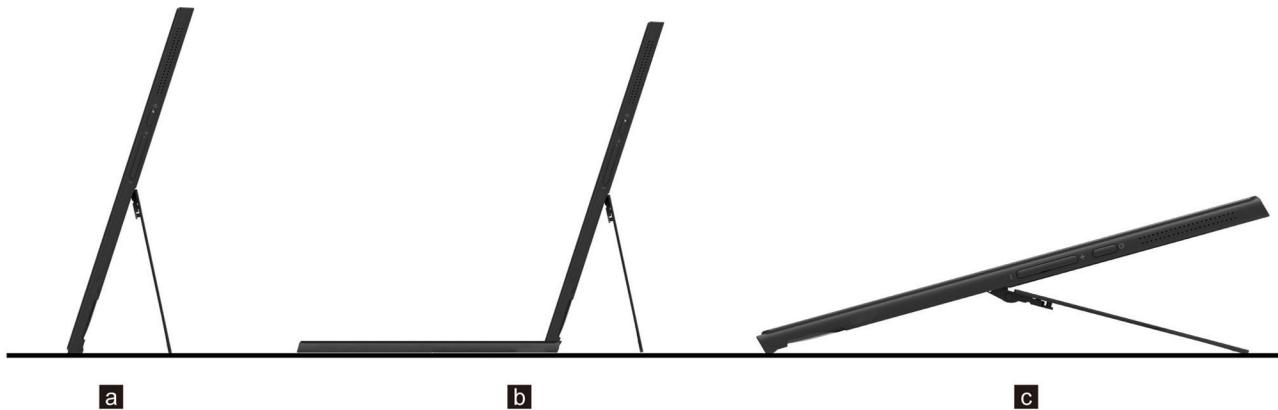

The kickstand is multi-positional. You can adjust the kickstand to various angles for a comfortable user experience.


**Attention:** The appropriate kickstand angle is 45°–150°. Using the kickstand at an improper angle may damage the computer.

## Lenovo Digital Pen (for selected models)

Depending on the model, your computer might come with a Lenovo Digital Pen (referred to as the pen in this section). The pen enables you to write and draw in a natural manner.

### Notes:

- The pen is not waterproof. Take care not to drop the pen in water.
- The pen contains pressure sensors. Do not push the tip of the pen for an extended period of time. Do not subject the pen to shock or vibration.

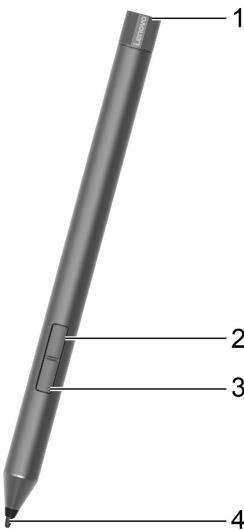


1. Pen cap	Unscrew the pen cap to install or replace a battery.
2. Top barrel button	To right-click, hold the button and tap the screen in supported applications.
3. Bottom barrel button	To erase text or drawings, hold the button to erase the object in supported applications.
4. Pen tip	Write or draw on the touch screen.

#### Notes:

- The default function of each pen button might vary in different apps.
- You can view or change functions of pen buttons in the **Lenovo Pen Settings**. For more information, refer to the *User Guide* of the software. The **Lenovo Pen Settings** may be pre-installed on your computer. To open it, enter the software name in Windows Search and select the matched result. If the software is not pre-installed, you can download and install the latest drivers from <https://support.lenovo.com>.

## Install pen battery

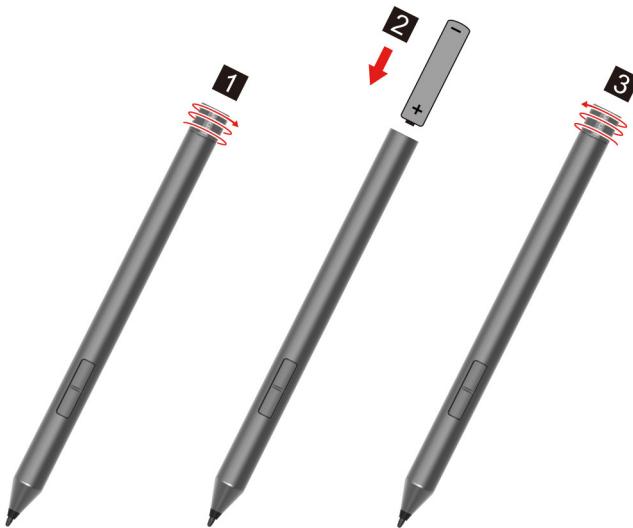

**Note:** AAAA alkaline battery may not be included in some countries and regions.

## Interact with your computer

### Keyboard hotkeys

Some keys on the keyboard are printed with icons. These keys are called hotkeys and can be pressed alone or in combination with the Fn key to open certain apps or change certain settings quickly. The functions of the hotkeys are symbolized by the icons printed on them.

Hotkey	Function
🔇	Mute/Unmute sound.
🔊-🔊+	Decrease/Increase system volume.
💡+💡-	Increase/Decrease screen brightness.
✈	Turn airplane mode on and off.

### The FnLock switch

The FnLock is a switch that reverses the default and hidden function of a hotkey. The following table provides an example of how the FnLock switch changes the default function of the F1 key.

FnLock	Default function of the F1 key
Off	Mute/Unmute sound
On	F1 function *

**Note:** The F1 function is application-dependent. It may have no function if the active application does not have a definition for the key.


The FnLock switch shares the ESC key (in the upper left corner of the keyboard). To turn it on or off, press Fn + ESC.

## Use the multi-touch screen

If your computer screen supports multi-touch function, you can navigate the screen with simple touch gestures.


**Note:** Not all gestures are available on all apps.

### Tap once

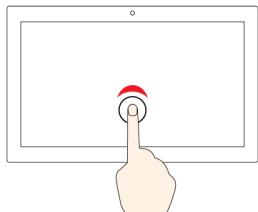


- From the Start menu: Open an app or item.
- From the desktop: Select an app or item.
- In an open app: Perform an action such as **Copy**, **Save**, and **Delete**, depending on the app.

### Tap twice quickly

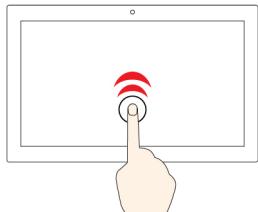


Open an app or item from the desktop.

### Tap and hold

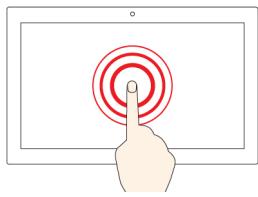


Open a shortcut menu.

### Slide

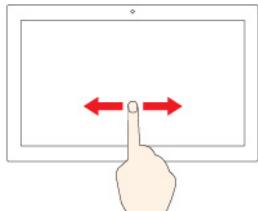


Scroll through items, such as lists, pages, and photos.

### Drag an item to the location you want

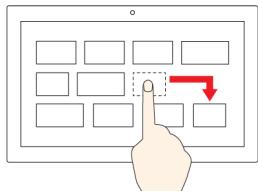

Move an object.


### Move two fingers closer together

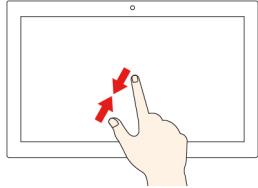

Zoom out.


### Move two fingers farther apart

Zoom in.

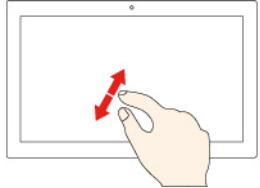


### Swipe in from the right edge

Open the action center to see your notifications and quick actions.

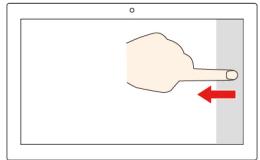

### Swipe in from the left edge

View all your open windows in task view.

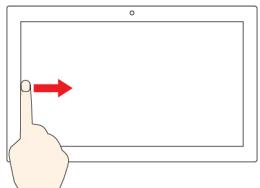


- **Swipe downwards shortly from the top edge (for full-screened app or when your computer is in the tablet mode)**

Show a hidden title bar.

- **Swipe in from the top edge to the bottom edge (when your computer is in the tablet mode)**

Close the current app.

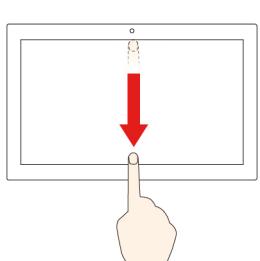



---

## Chapter 3. Explore your computer

---

### Manage power

Use the information in this section to achieve the best balance between performance and power efficiency.

#### Check the battery status

The battery status icon  or  is in the Windows notification area. You can check the battery status, view the current power plan, and access battery settings quickly.

Click the battery status icon to display the percentage of battery power remaining and change the power mode. A warning message is displayed when the battery is low.

#### Charge the battery

When the remaining battery power is low, charge your battery by connecting your computer to ac power.

The battery is fully charged in about two to four hours. The actual charging time depends on the battery capacity, the physical environment, and whether you are using the computer.

Battery charging is also affected by its temperature. The recommended temperature range for charging the battery is between 10°C (50°F) and 35°C (95°F).

**Note:** To maximize the life of the battery, the computer does not start recharging the battery if the remaining power is greater than 95%.

#### Check the battery temperature

You can check the battery temperature in Lenovo Vantage or Lenovo PC manager.

- Step 1. Open Lenovo Vantage.
- Step 2. Click **Hardware Settings** → **Power**.
- Step 3. Locate the **Power Status** section and then click **Show Details** to view the battery temperature.

**Note:** If you're using Lenovo PC Manager, select **System hardware** → **Battery**.

#### Set power button behavior

By default, pressing the power button puts the computer to sleep mode. However, you can change the power button behavior in Windows Control Panel.

- Step 1. Right-click the battery status icon in the Windows notification area.
- Step 2. Select **Power Options** → **Choose what the power button does**.

#### Change or create a power plan

A power plan is a set of power saving settings. You can choose a pre-defined power plan or you can create your own plans.

- Step 1. Right-click the battery status icon in the Windows notification area.
- Step 2. Select **Power Options** → **Change plan settings**.

## Set performance mode

Your computer can work in different performance modes. The performance and power consumption of the computer vary in different performance modes.

---

## Change settings in UEFI/BIOS setup utility

This section introduces what is UEFI/BIOS and the operations you can perform in its setup utility.

### What is UEFI/BIOS setup utility

UEFI/BIOS is the first program that runs when a computer starts. UEFI/BIOS initializes hardware components and loads the operating system and other programs. Your computer may include a setup program (setup utility) with which you can change certain UEFI/BIOS settings.

### Open the UEFI/BIOS setup utility

- Step 1. Turn on or restart the computer.
- Step 2. When the Lenovo logo appears on the screen, press Fn + F2 repeatedly.

### Change the startup sequence

You may need to change the startup sequence to allow the computer to start from another device or a network location.

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Navigate to the Boot menu.
- Step 3. Follow on-screen instructions to change the order of devices under Boot Priority Order.

**Note:** You can also change startup sequence temporarily without opening the setup utility. To do so, start the computer. When the Lenovo logo appears, press F12 (or Fn + F12) repeatedly.

### Enable or disable always-on

For some Lenovo computers with always-on connectors, the always-on function can be enabled or disabled in the UEFI/BIOS setup utility.

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Configuration** → **Always On USB** and press Enter.
- Step 3. Change the setting to **Disabled** or **Enabled**.
- Step 4. Select **Exit** → **Exit Saving Changes**.

---

## Set passwords in UEFI/BIOS setup utility

This section introduces the types of passwords that you can set in the UEFI (Unified Extensible Firmware Interface) or BIOS (Basic Input/Output System) setup utility.

### Password types

You can set various types of passwords in the UEFI/BIOS setup utility.

Password type	Pre-requisite	Usage
Administrator password	No	You must enter it to start the setup utility.
User password	The administrator password must be set.	You can use the user password to start the setup utility.
Master hard disk password	No	You must enter it to start the operating system.
User hard disk password	The master hard disk password must be set.	You can use the user hard disk password to start the operating system.

**Notes:**

- All passwords set in the setup utility consist of alphanumeric characters only.
- If you start the setup utility using the user password, you can only change a few settings.

## Set administrator password

You set the administrator password to prevent unauthorized access to the UEFI/BIOS setup utility.

**Attention:** If you forget the administrator password, a Lenovo authorized service personnel cannot reset your password. You must take your computer to a Lenovo authorized service personnel to have the system board replaced. Proof of purchase is required and a fee will be charged for parts and service.

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Security** → **Set Administrator Password** and press Enter.
- Step 3. Enter a password string that contains only letters and numbers and then press Enter
- Step 4. Enter the password again and press Enter.
- Step 5. Select **Exit** → **Exit Saving Changes**.

Next time you start the computer, you must enter the administrator password to open the setup utility. If **Power on Password** is enabled, you must enter the administrator password or the user password to start the computer.

## Change or remove administrator password

Only the administrator can change or remove the administrator password.

- Step 1. Open the UEFI/BIOS setup utility using the administrator password.
- Step 2. Select **Security** → **Set Administrator Password** and press Enter.
- Step 3. Enter the current password.
- Step 4. In the **Enter New Password** text box, enter the new password.
- Step 5. In the **Confirm New Password** text box, enter the new password again.

**Note:** If you want to remove the password, press Enter in both text boxes without entering any character.

- Step 6. Select **Exit** → **Exit Saving Changes**.

If you remove the administrator password, the user password is also removed.

## Set user password

You must set the administrator password before you can set the user password.

The administrator of the setup utility might need to set a user password for use by others.

- Step 1. Open the UEFI/BIOS setup utility using the administrator password.
- Step 2. Select **Security** → **Set User Password** and press Enter.
- Step 3. Enter a password string that contains only letters and numbers and then press Enter. The user password must be different from the administrator password.
- Step 4. Enter the password again and press Enter.
- Step 5. Select **Exit** → **Exit Saving Changes**.

## Enable power-on password

If the administrator password has been set, you can enable power-on password to enforce greater security.

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Security** → **Power on Password** and press Enter.  
**Note:** The administrator password must be set in advance.
- Step 3. Change the setting to **Enabled**.
- Step 4. Select **Exit** → **Exit Saving Changes**.

If power-on password is enabled, a prompt appears on the screen every time you turn on the computer. You must enter the administrator or user password to start the computer.

## Set hard disk password

You can set a hard disk password in the setup utility to prevent unauthorized access to your data.

**Attention:** Be extremely careful when setting a hard disk password. If you forget the hard disk password, a Lenovo authorized service personnel cannot reset your password or recover data from the hard disk. You must take your computer to a Lenovo authorized service personnel to have the hard disk drive replaced. Proof of purchase is required and a fee will be charged for parts and service.

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Security** → **Set Hard Disk Password** and press Enter.  
**Note:** If you start the setup utility using the user password, you cannot set hard disk password.
- Step 3. Follow on-screen instructions to set both master and user passwords.  
**Note:** The master and user hard disk passwords must be set at the same time.
- Step 4. Select **Exit** → **Exit Saving Changes**.

If the hard disk password is set, you must provide the correct password to start the operating system.

## Change or remove hard disk password

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Security**.
- Step 3. Change or remove the hard disk password.

To change or remove master password, select **Change Master Password** and press Enter.

**Note:** If you remove the master hard disk password, the user hard disk password is also removed.

To change user password, select **Change User Password** and press Enter.

**Note:** The user hard disk password cannot be removed separately.

Step 4. Select **Exit → Exit Saving Changes**.

---

## Reset or restore Windows

This section introduces the recovery options of Windows 10. Ensure that you read and follow the on-screen recovery instructions.

**Attention:** The data on your computer might be deleted during the recovery process. To avoid data loss, make a backup copy of all the data that you want to keep.

## Windows 10 recovery options

Windows 10 provides several options for you to restore or reset your computer. The following table helps you decide which option to choose if you are having problems with Windows.

Problem	Option
Your computer is not working well after installing apps, drivers, or updates.	Restore to a system restore point.
Your computer is not working well and you don't know what causes the problem.	Reset your computer.
You want to recycle or donate your computer.	Reset your computer.
Windows cannot start properly.	Use a recovery drive to restore or reset your computer.

## Windows System Restore

System Restore is a tool included in Windows 10. It monitors changes to Windows system files and saves system state as a restore point. If your computer does not work well after installing apps, drivers, or updates, you can revert your system to a previous restore point.

**Note:** If you revert your system to a previous restore point, personal data is not affected.

System Restore creates restore points:

- automatically (when it detects changes to Windows system files)
- at regular intervals (if set up by the user)
- at any time (if initiated manually by the user)

**Note:** In order for System Restore to create restore points, system protection must be turned on for the system drive.

### Create a system restore point manually

You can use Windows System Restore to create a restore point at any time.

Step 1. In the Windows 10 search box, enter **Create a restore point** and select the matched result.

Step 2. Select the **System Protection** tab and then select **Create**.

**Note:** System protection must be turned on for the system drive (typically with drive letter C) before you can create restore points. Select a drive and then select **Configure** to turn on or disable system protection.

## Restore from a system restore point

- Step 1. In Windows 10 search box, enter **Recovery** and select the matched result.
- Step 2. Select **Open System Restore** → **Next**.
- Step 3. Select a restore point and then select **Next** → **Finish**.

**Note:** You may select **Scan for affected programs** to check which program and driver installation is associated with a particular restore point.

## Reset Windows

If Windows is not running well as usual, you can choose to reset it.

- Step 1. Open the Start menu and then select **Settings** → **Update & Security** → **Recovery**.
- Step 2. Under **Reset this PC**, click **Get started**.
- Step 3. Choose either **Keep my files** or **Remove everything**.

**Attention:** Back up personal data before choosing **Remove everything**.

- Step 4. Follow on-screen instructions to complete the reset process.

## Create a recovery drive

Use a USB drive (not supplied) to create a Windows recovery drive. If Windows will not start, you can use the recovery drive to restore or reset Windows.

**Notes:** Most USB drives utilize the Type-A connector. If your computer does not include a USB Type-A connector, you have two options:

- Purchase and use a USB drive with the Type-C connector, or
- Purchase and use a USB Type-C to Type-A adapter

- Step 1. In the Windows 10 search box, enter **Create a recovery drive** and select the matched result.
- Step 2. Make sure **Back up system files to the recovery drive** is selected and then select **Next**.
- Step 3. Plug a USB drive into your computer, select it, and then select **Next** → **Create**.

**Attention:** Previous files on the drive will be deleted. Back up personal files before using it to create a recovery drive.

When the recovery drive is created, you may see a **Delete the recovery partition from your PC** option. If you want to free up drive space on your computer, select it and then select **Delete**. Otherwise, select **Finish**.

## Use a recovery drive to restore or reset Windows

If Windows cannot start, you can use a recovery drive (created in advance) to restore or reset Windows.

- Step 1. Connect the recovery drive to your computer; restart your computer and set it to start from the recovery drive.

**Note:** For computers without a USB Type-A connector, you may need to purchase and use an adapter (USB Type-C to Type-A) to use a recovery drive.

Step 2. On the **Choose an option** screen, select **Troubleshoot**.

Step 3. Choose a recovery option.

Select **Advanced Options** → **System Restore** to restore your computer to a system restore point.

Or select **Recover from a drive** to reset your computer.

**Note:** If you did not select the **Back up system files to the recovery drive** option when creating the recovery drive, **Recovery from a drive** is not available.

**Attention:** All personal files created on your computer will be deleted after recovering from the drive.



---

## Chapter 4. Help and support

---

### Frequently asked questions

---

How do I open the Control Panel?	<ul style="list-style-type: none"><li>Open the Start menu and select <b>Windows System</b> → <b>Control Panel</b>.</li><li>Use Windows Search.</li></ul>
How should I turn off my computer?	Open the Start menu and select <b>Power</b> → <b>Shut down</b> .
How do I partition my storage drive?	Refer to <a href="https://support.lenovo.com/solutions/ht503851">https://support.lenovo.com/solutions/ht503851</a>
What should I do if my computer stops responding.	Press and hold the power button until the computer turns off. Then restart the computer.
What should I do if I spill liquid on the computer?	<ol style="list-style-type: none"><li>Carefully unplug the ac power adapter and turn off the computer immediately. The more quickly you stop the current from passing through the computer the more likely you will reduce damage from short circuits.</li></ol> <p><b>Attention:</b> Although you might lose some data or work by turning off the computer immediately, leaving the computer on might make your computer unusable.</p> <ol style="list-style-type: none"><li>Wait until you are certain that all the liquid is dry before turning on your computer.</li></ol> <p><b>CAUTION:</b> <b>Do not try to drain out the liquid by turning over the computer. If your computer has keyboard drainage holes on the bottom, the liquid will be drained out through the holes.</b></p>
Where can I get the latest device drivers and UEFI/BIOS?	<ul style="list-style-type: none"><li>Lenovo Vantage or Lenovo PC Manager</li><li>Lenovo Support Web site at <a href="https://support.lenovo.com">https://support.lenovo.com</a></li></ul>

---

### Self-help resources

---

Use the following self-help resources to learn more about the computer and troubleshoot problems.

---

Resources	How to access?
Use Lenovo Vantage or Lenovo PC Manager to: <ul style="list-style-type: none"><li>Download and install the latest drivers and firmware.</li><li>Configure hardware settings</li><li>Diagnose computer hardware problems.</li><li>Check the computer warranty status.</li></ul>	<ul style="list-style-type: none"><li>Open the Start menu and select <b>Lenovo Vantage</b> or <b>PC Manager</b>.</li><li>Use Windows Search.</li></ul>
Product documentation: <ul style="list-style-type: none"><li><i>Safety and Warranty Guide</i></li><li><i>Setup Guide</i></li><li><i>This User Guide</i></li><li><i>Regulatory Notice</i></li></ul>	<ol style="list-style-type: none"><li>Go to <a href="https://support.lenovo.com">https://support.lenovo.com</a>.</li><li>Detect your computer or select computer model manually.</li><li>Select <b>Documentation</b> and filter out the documentation you want.</li></ol>

Resources	How to access?
Lenovo Support Web site with the latest support information of the following:	
<ul style="list-style-type: none"> <li>Drivers and software</li> <li>Diagnostic solutions</li> <li>Product and service warranty</li> <li>Product and parts details</li> <li>Knowledge base and frequently asked questions</li> </ul>	Visit <a href="https://support.lenovo.com">https://support.lenovo.com</a>
Windows help information	<ul style="list-style-type: none"> <li>Open the Start menu and select <b>Get Help or Tips</b>.</li> <li>Use Windows Search or the Cortana® personal assistant.</li> <li>Microsoft support Web site: <a href="https://support.microsoft.com">https://support.microsoft.com</a></li> </ul>

## What is a CRU?

Customer replaceable units (CRUs) are parts that can be upgraded or replaced by the customer. A Lenovo computer may contain the following types of CRUs:

Self-service CRU	Parts that can be installed or replaced easily by customer themselves or by trained service technicians at an additional cost.
Optional-service CRU	Parts that can be installed or replaced by customers with a greater skill level. Trained service technicians can also provide service to install or replace the parts under the type of warranty designated for the customer's machine.

If you intend to install a CRU, Lenovo will ship the CRU to you. You might be required to return the defective part that is replaced by the CRU. When return is required: (1) return instructions, a prepaid shipping label, and a container will be included with the replacement CRU; and (2) you might be charged for the replacement CRU if Lenovo does not receive the defective CRU within thirty (30) days of your receipt of the replacement CRU. For full details, see the *Lenovo Limited Warranty* at [https://www.lenovo.com/warranty/lw\\_02](https://www.lenovo.com/warranty/lw_02).

## CRUs for your product model

The table below lists the CRUs and CRU types that are defined for your product model.

Part	Self-service CRU	Optional-service CRU
Power cord	X	
ac power adapter	X	
Bluetooth folio keyboard *	X	
Lenovo Digital Pen *	X	

\* for selected models

**Note:** CRU replacement instruction is provided in one or more of the following publications and are available from Lenovo at any time upon your request.

- the product *User Guide*
- the printed publications that came with the product

---

## Call Lenovo

If you have tried to correct the problem yourself and still need help, you can call Lenovo Customer Support Center.

### Before you contact Lenovo

Record product information and problem details before you contact Lenovo.

Product information	Problem symptoms and details
<ul style="list-style-type: none"><li>Product name</li><li>Machine type and serial number</li></ul>	<ul style="list-style-type: none"><li>What is the problem? Is it continuous or intermittent?</li><li>Any error message or error code?</li><li>What operating system are you using? Which version?</li><li>Which software applications were running at the time of the problem?</li><li>Can the problem be reproduced? If so, how?</li></ul>

**Note:** The product name and serial number can usually be found on the bottom of the computer, either printed on a label or etched on the cover.

## Lenovo Customer Support Center

During the warranty period, you can call Lenovo Customer Support Center for help.

### Telephone numbers

For a list of the Lenovo Support phone numbers for your country or region, go to <https://pcsupport.lenovo.com/supportphonelist>.

**Note:** Phone numbers are subject to change without notice. If the number for your country or region is not provided, contact your Lenovo reseller or Lenovo marketing representative.

### Services available during the warranty period

- Problem determination - Trained personnel are available to assist you with determining if you have a hardware problem and deciding what action is necessary to fix the problem.
- Lenovo hardware repair - If the problem is determined to be caused by Lenovo hardware under warranty, trained service personnel are available to provide the applicable level of service.
- Engineering change management - Occasionally, there might be changes that are required after a product has been sold. Lenovo or your reseller, if authorized by Lenovo, will make selected Engineering Changes (ECs) that apply to your hardware available.

### Services not covered

- Replacement or use of parts not manufactured for or by Lenovo or nonwarranted parts
- Identification of software problem sources
- Configuration of UEFI/BIOS as part of an installation or upgrade
- Changes, modifications, or upgrades to device drivers

- Installation and maintenance of network operating systems (NOS)
- Installation and maintenance of programs

For the terms and conditions of the Lenovo Limited Warranty that apply to your Lenovo hardware product, see “Warranty information” in the *Safety and Warranty Guide* that comes with your computer.

---

## Purchase additional services

During and after the warranty period, you can purchase additional services from Lenovo at <https://www.lenovo.com/services>.

Service availability and service name might vary by country or region.

---

## Appendix A. Important safety information

---

### Safety notices

This information can help you safely use your computer. Follow and retain all information included with your computer. The information in this document does not alter the terms of your purchase agreement or the Limited Warranty. For more information, see "Warranty Information" in the *Safety and Warranty Guide* that comes with your computer.

Customer safety is important. Our products are developed to be safe and effective. However, personal computers are electronic devices. Power cords, power adapters, and other features can create potential safety risks that can result in physical injury or property damage, especially if misused. To reduce these risks, follow the instructions included with your product, observe all warnings on the product and in the operating instructions, and review the information included in this document carefully. By carefully following the information contained in this document and provided with your product, you can help protect yourself from hazards and create a safer computer work environment.

**Note:** This information includes references to power adapters and batteries. In addition, some products (such as speakers and monitors) ship with external power adapters. If you have such a product, this information applies to your product. In addition, computer products contain a coin-sized internal battery that provides power to the system clock even when the computer is unplugged, so the battery safety information applies to all computer products.

---

### Important information about using your computer

Ensure that you follow the important tips given here to get the most use and enjoyment out of your computer. Failure to do so might lead to discomfort or injury, or cause the computer to fail.

#### Protect yourself from the heat that your computer generates.



When your computer is turned on or the battery is charging, the base, the palm rest, and some other parts may become hot. The temperature they reach depends on the amount of system activity and the level of charge in the battery.

Extended contact with your body, even through clothing, could cause discomfort or even a skin burn.

- Avoid keeping your hands, your lap, or any other part of your body in contact with a hot section of the computer for any extended time.
- Periodically take hands from using the keyboard by lifting your hands from the palm rest.

### Protect yourself from the heat generated by the ac power adapter.



When the ac power adapter is connected to an electrical outlet and your computer, it generates heat.

Extended contact with your body, even through clothing, may cause a skin burn.


- Do not place the ac power adapter in contact with any part of your body while it is in use.
- Never use it to warm your body.
- Do not wrap the cords around the ac power adapter while in use.

### Prevent your computer from getting wet.



To avoid spills and the danger of electrical shock, keep liquids away from your computer.

### Protect the cables from being damaged.

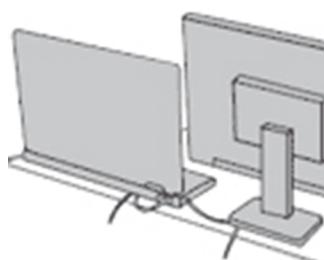

Applying strong force to cables may damage or break them.

Route communication lines, or the cables of an ac power adapter, a mouse, a keyboard, a printer, or any other electronic device, so that they cannot be walked on, tripped over, pinched by your computer or other objects, or in any way subject to treatment that could interfere with the operation of your computer.

### Protect your computer and data when moving it.



Before moving a computer equipped with a hard disk drive, do one of the following:

- Turn it off.
- Put it in sleep mode.
- Put it in hibernation mode.

This helps to prevent damage to the computer, and possible loss of data.

### Handle your computer gently.



Do not drop, bump, scratch, twist, hit, vibrate, push, or place heavy objects on your computer, display, or external devices.

### Carry your computer carefully.



- Use a quality carrying case that provides adequate cushioning and protection.
- Do not pack your computer in a tightly packed suitcase or bag.
- Before putting your computer in a carrying case, make sure that it is off, in sleep mode, or in hibernation mode. Do not put a computer in a carrying case while it is turned on.

## Conditions that require immediate action

Products can become damaged due to misuse or neglect. Some product damage is serious enough that the product should not be used again until it has been inspected and, if necessary, repaired by an authorized servicer.

As with any electronic device, pay close attention to the product when it is turned on.

On very rare occasions, you might notice an odor or see a puff of smoke or sparks vent from your product. Or you might hear sounds like popping, cracking, or hissing. These might merely mean that an internal electronic component has failed in a safe and controlled manner. Or, they might indicate a potential safety issue. Do not take risks or attempt to diagnose the situation yourself. Contact the Customer Support Center for further guidance. For a list of Service and Support phone numbers, see the following Web site:

<https://pcsupport.lenovo.com/supportphonelist>

Frequently inspect your computer and its components for damage or wear or signs of danger. If you have any question about the condition of a component, do not use the product. Contact the Customer Support Center or the product manufacturer for instructions on how to inspect the product and have it repaired, if necessary.

In the unlikely event that you notice any of the following conditions, or if you have any safety concerns with your product, stop using the product and unplug it from the power source and telecommunication lines until you can speak to the Customer Support Center for further guidance.

- Power cords, plugs, power adapters, extension cords, surge protectors, or power supplies that are cracked, broken, or damaged.
- Signs of overheating, smoke, sparks, or fire.
- Damage to a battery (such as cracks, dents, or creases), discharge from a battery, or a buildup of foreign substances on the battery.
- A cracking, hissing, or popping sound, or strong odor that comes from the product.
- Signs that liquid has been spilled or an object has fallen onto the computer product, the power cord, or power adapter.
- The computer product, power cord, or power adapter has been exposed to water.
- The product has been dropped or damaged in any way.
- The product does not operate normally when you follow the operating instructions.

**Note:** If you notice these conditions with a product (such as an extension cord) that is not manufactured for or by Lenovo, stop using that product until you can contact the product manufacturer for further instructions, or until you get a suitable replacement.

---

## Service and upgrades

Do not attempt to service a product yourself unless instructed to do so by the Customer Support Center or your documentation. Only use a Service Provider who is approved to repair your particular product.

**Note:** Some computer parts can be upgraded or replaced by the customer. Upgrades typically are referred to as options. Replacement parts approved for customer installation are referred to as Customer Replaceable Units, or CRUs. Lenovo provides documentation with instructions when it is appropriate for customers to install options or replace CRUs. You must closely follow all instructions when installing or replacing parts. The Off state of a power indicator does not necessarily mean that voltage levels inside a product are zero. Before you remove the covers from a product equipped with a power cord, always ensure that the power is turned off and that the product is unplugged from any power source. If you have any questions or concerns, contact the Customer Support Center.

Although there are no moving parts in your computer after the power cord has been disconnected, the following warnings are required for your safety.



Keep fingers and other parts of your body away from hazardous, moving parts. If you suffer an injury, seek medical care immediately.



Avoid contact with hot components inside the computer. During operation, some components become hot enough to burn the skin. Before you open the computer cover, turn off the computer, disconnect power, and wait approximately 10 minutes for the components to cool.



After replacing a CRU, reinstall all protective covers, including the computer cover, before connecting power and operating the computer. This action is important to help prevent unexpected electrical shock and help ensure the containment of an unexpected fire that could happen under extremely rare conditions.



When replacing CRUs, be cautious of sharp edges or corners that might cause injury. If you suffer an injury, seek medical care immediately.

## Power cords and power adapters



**Use only the power cords and power adapters supplied by the product manufacturer.**

**The power cords shall be safety approved. For Germany, it shall be H03VV-F, 3G, 0.75 mm<sup>2</sup>, or better. For other countries, the suitable types shall be used accordingly.**

**Never wrap a power cord around a power adapter or other object. Doing so can stress the cord in ways that can cause the cord to fray, crack, or crimp. This can present a safety hazard.**

**Always route power cords so that they will not be walked on, tripped over, or pinched by objects.**

**Protect power cords and power adapters from liquids. For instance, do not leave your power cord or power adapter near sinks, tubs, toilets, or on floors that are cleaned with liquid cleansers. Liquids can cause a short circuit, particularly if the power cord or power adapter has been stressed by misuse. Liquids also can cause gradual corrosion of power cord terminals and/or the connector terminals on a power adapter, which can eventually result in overheating.**

**Ensure that all power cord connectors are securely and completely plugged into receptacles.**

**Do not use any power adapter that shows corrosion at the ac input pins or shows signs of overheating (such as deformed plastic) at the ac input pins or anywhere on the power adapter.**

**Do not use any power cords where the electrical contacts on either end show signs of corrosion or overheating or where the power cord appears to have been damaged in any way.**

**To prevent possible overheating, do not cover the power adapter with clothing or other objects when the power adapter is plugged into an electrical outlet.**

## Extension cords and related devices

Ensure that extension cords, surge protectors, uninterruptible power supplies, and power strips that you use are rated to handle the electrical requirements of the product. Never overload these devices. If power strips are used, the load should not exceed the power strip input rating. Consult an electrician for more information if you have questions about power loads, power requirements, and input ratings.

---

## Plugs and outlets



If a receptacle (power outlet) that you intend to use with your computer equipment appears to be damaged or corroded, do not use the outlet until it is replaced by a qualified electrician.

**Do not bend or modify the plug. If the plug is damaged, contact the manufacturer to obtain a replacement.**

**Do not share an electrical outlet with other home or commercial appliances that draw large amounts of electricity; otherwise, unstable voltage might damage your computer, data, or attached devices.**

Some products are equipped with a three-pronged plug. This plug fits only into a grounded electrical outlet. This is a safety feature. Do not defeat this safety feature by trying to insert it into a non-grounded outlet. If you cannot insert the plug into the outlet, contact an electrician for an approved outlet adapter or to replace the outlet with one that enables this safety feature. Never overload an electrical outlet. The overall system load should not exceed 80 percent of the branch circuit rating. Consult an electrician for more information if you have questions about power loads and branch circuit ratings.

**Be sure that the power outlet you are using is properly wired, easily accessible, and located close to the equipment. Do not fully extend power cords in a way that will stress the cords.**

**Be sure that the power outlet provides the correct voltage and current for the product you are installing.**

**Carefully connect and disconnect the equipment from the electrical outlet.**

---

## Power supply statement

Never remove the cover on a power supply or any part that has the following label attached.



Hazardous voltage, current, and energy levels are present inside any component that has this label attached. There are no serviceable parts inside these components. If you suspect a problem with one of these parts, contact a service technician.

---

## External devices

### CAUTION:

**Do not connect or disconnect any external device cables other than Universal Serial Bus (USB) and 1394 cables while the computer power is on; otherwise, you might damage your computer. To avoid possible damage to attached devices, wait at least five seconds after the computer is shut down to disconnect external devices.**

---

## General battery notice



**Batteries supplied by Lenovo for use with your product have been tested for compatibility and should only be replaced with approved parts. A battery other than the one specified by Lenovo, or a disassembled or modified battery is not covered by the warranty.**

**Battery abuse or mishandling can cause overheating, liquid leakage, or an explosion. To avoid possible injury, follow these instructions:**

- Do not open, disassemble, or service any battery.
- Do not crush or puncture the battery.
- Do not short-circuit the battery, or expose it to water or other liquids.
- Keep the battery away from children.
- Keep the battery away from fire.

**Stop using the battery if it is damaged, or if you notice any discharge or the buildup of foreign materials on the battery leads.**

**Store the rechargeable batteries or products containing rechargeable batteries at room temperature, with batteries charged to approximately 30%–50% of the full capacity. We recommend that the batteries be charged at least once per year to prevent over-discharging.**

**Do not put the battery in trash that is disposed of in landfills. When disposing of the battery, comply with local ordinances or regulations.**

---

## Notice for built-in rechargeable battery



**Do not attempt to remove or replace the built-in rechargeable battery. Replacement of the battery must be done by a Lenovo-authorized repair facility or technician.**

**Only recharge the battery strictly according to instructions included in the product documentation.**

**The Lenovo-authorized repair facilities or technicians recycle Lenovo batteries according to local laws and regulations.**

---

## Lithium coin-cell battery notice



**Danger of explosion if battery is incorrectly replaced.**

**If the coin-cell battery is not a CRU, do not attempt to replace the coin-cell battery. Replacement of the battery must be done by a Lenovo-authorized repair facility or technician.**

**The Lenovo-authorized repair facilities or technicians recycle Lenovo batteries according to local laws and regulations.**



When replacing the lithium coin-cell battery, use only the same type or equivalent type that is recommended by the manufacturer. The battery contains lithium and can explode if not properly used, handled, or disposed of. Swallowing the lithium coin-cell battery will cause choking or severe internal burns in just two hours and might even result in death.

Keep batteries away from children. If the lithium coin-cell battery is swallowed or placed inside any part of the body, seek medical care immediately.

**Do not:**

- Throw or immerse into water
- Heat to more than 100 °C (212°F).
- Repair or disassemble
- Leave in an extremely low air pressure environment
- Leave in an extremely high-temperature environment
- Crush, puncture, cut, or incinerate

Dispose of the battery as required by local ordinances or regulations.

The following statement applies to users in the state of California, U.S.A.

California Perchlorate Information:

Products containing manganese dioxide lithium coin-cell batteries may contain perchlorate.

Perchlorate Material - special handling may apply, see <https://www.dtsc.ca.gov/hazardouswaste/perchlorate/>.

## Heat and product ventilation

### DANGER

Computers, ac power adapters, and many accessories can generate heat when turned on and when batteries are charging. Notebook computers can generate a significant amount of heat due to their compact size. Always follow these basic precautions:

- When your computer is turned on or the battery is charging, the base, the palm rest, and some other parts may become hot. Avoid keeping your hands, your lap, or any other part of your body in contact with a hot section of the computer for any extended length of time. When you use the keyboard, avoid keeping your palms on the palm rest for a prolonged period of time. Your computer generates some heat during normal operation. The amount of heat depends on the amount of system activity and the battery charge level. Extended contact with your body, even through clothing, could cause discomfort or even a skin burn. Periodically take breaks from using the keyboard by lifting your hands from the palm rest; and be careful not to use the keyboard for any extended length of time.
- Do not operate your computer or charge the battery near flammable materials or in explosive environments.
- Ventilation slots, fans and/or heat sinks are provided with the product for safety, comfort, and reliable operation. These features might inadvertently become blocked by placing the product on a bed, sofa, carpet, or other flexible surface. Never block, cover, or disable these features.
- When the ac power adapter is connected to an electrical outlet and your computer, it generates heat. Do not place the adapter in contact with any part of your body while using it. Never use the ac power adapter to warm your body. Extended contact with your body, even through clothing, may cause a skin burn.

For your safety, always follow these basic precautions with your computer:

- Keep the cover closed whenever the computer is plugged in.
- Regularly inspect the outside of the computer for dust accumulation.
- Remove dust from vents and any perforations in the bezel. More frequent cleanings might be required for computers in dusty or high-traffic areas.
- Do not restrict or block any ventilation openings.
- Do not operate your computer inside furniture, as this might increase the risk of overheating.
- Airflow temperatures into the computer should not exceed 35°C (95°F).

## Electrical current safety information



### DANGER

Electric current from power, telephone, and communication cables is hazardous.

To avoid a shock hazard:

- Do not use your computer during a lightning storm.
- Do not connect or disconnect any cables or perform installation, maintenance, or reconfiguration of this product during an electrical storm.
- Connect all power cords to a properly wired and grounded electrical outlet.
- Connect properly wired outlets to any equipment that will be attached to this product.
- Whenever possible, use one hand only to connect or disconnect signal cables.
- Never turn on any equipment when there is evidence of fire, water, or structural damage.
- Disconnect the attached power cords, battery, and all the cables before you open the device covers, unless instructed otherwise in the installation and configuration procedures.
- Do not use your computer until all internal parts enclosures are fastened into place. Never use the computer when internal parts and circuits are exposed.



### DANGER

Connect and disconnect cables as described in the following procedures when installing, moving, or opening covers on this product or attached devices.

To connect:

1. Turn everything OFF.
2. First, attach all cables to devices.
3. Attach signal cables to connectors.
4. Attach power cords to outlets.
5. Turn devices ON.

To disconnect:

1. Turn everything OFF.
2. First, remove power cords from outlets.
3. Remove signal cables from connectors.
4. Remove all cables from devices.

The power cord must be disconnected from the wall outlet or receptacle before installing all other electrical cables connected to the computer.

The power cord may be reconnected to the wall outlet or receptacle only after all other electrical cables have been connected to the computer.



### DANGER

During electrical storms, do not perform any replacement and do not connect the telephone cable to or disconnect it from the telephone outlet on the wall.

---

## Liquid crystal display (LCD) notice

**CAUTION:**

The liquid crystal display (LCD) is made of glass, and rough handling or dropping the computer can cause the LCD to break. If the LCD breaks and the internal fluid gets into your eyes or on your hands, immediately wash the affected areas with water for at least 15 minutes; if any symptoms are present after washing, get medical care.

**Note:** For products with mercury-containing fluorescent lamps (for example, non-LED), the fluorescent lamp in the liquid crystal display (LCD) contains mercury; dispose of according to local, state, or federal laws.

---

## Using headphones or earphones



Excessive sound pressure from earphones and headphones can cause hearing loss. Adjustment of the equalizer to maximum increases the earphone and headphone output voltage and the sound pressure level. Therefore, to protect your hearing, adjust the equalizer to an appropriate level.

Excessive use of headphones or earphones for a long period of time at high volume can be dangerous if the output of the headphone or earphone connectors do not comply with specifications of EN 50332-2. The headphone output connector of your computer complies with EN 50332-2 Sub clause 7. This specification limits the computer's maximum wide band true RMS output voltage to 150 mV. To help protect against hearing loss, ensure that the headphones or earphones you use also comply with EN 50332-2 (Clause 7 limits) for a wide band characteristic voltage of 75 mV. Using headphones that do not comply with EN 50332-2 can be dangerous due to excessive sound pressure levels.

If your Lenovo computer came with headphones or earphones in the package, as a set, the combination of the headphones or earphones and the computer already complies with the specifications of EN 50332-1. If different headphones or earphones are used, ensure that they comply with EN 50332-1 (Clause 6.5 Limitation Values). Using headphones that do not comply with EN 50332-1 can be dangerous due to excessive sound pressure levels.

---

## Choking hazard notice



CHOKING HAZARD – Product contains small parts.

Keep away from children under three years.

---

## Plastic bag notice



Plastic bags can be dangerous. Keep plastic bags away from babies and children to avoid danger of suffocation.

---

## Glass parts notice

**CAUTION:**

**Some parts of your product may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove it. Stop using your product until the glass is replaced by trained service personnel.**

---

## Static electricity prevention

Static electricity, although harmless to you, can seriously damage computer components and options. Improper handling of static-sensitive parts can damage the part. When you unpack an option or CRU, do not open the static-protective package containing the part until the instructions direct you to install it.

When you handle options or CRUs, or perform any work inside the computer, take the following precautions to avoid static-electricity damage:

- Limit your movement. Movement can cause static electricity to build up around you.
- Always handle components carefully. Handle adapters, memory modules, and other circuit boards by the edges. Never touch exposed circuitry.
- Prevent others from touching components.
- When you install a static-sensitive option or CRU, touch the static-protective package containing the part to a metal expansion-slot cover or other unpainted metal surface on the computer for at least two seconds. This reduces static electricity in the package and your body.
- When possible, remove the static-sensitive part from the static-protective packaging and install the part without setting it down. When this is not possible, place the static-protective packaging on a smooth, level surface and place the part on it.
- Do not place the part on the computer cover or other metal surface.

---

## Appendix B. Accessibility and ergonomic information

This chapter provides information about accessibility and ergonomics.

---

### Accessibility information

Lenovo is committed to providing users who have hearing, vision, and mobility limitations with greater access to information and technology. This section provides information about the ways these users can get the most out of their computer experience. You also can get the most up-to-date accessibility information from the following Web site:

<https://www.lenovo.com/accessibility>

#### Keyboard shortcuts

The following list contains keyboard shortcuts that can help make your computer easier to use.

**Note:** Depending on your keyboard, some of the following keyboard shortcuts might not be available.

- **Windows logo key + U:** Open Ease of Access Center
- **Right Shift for eight seconds:** Turn on or turn off Filter Keys
- **Shift five times:** Turn on or turn off Sticky Keys
- **Num Lock for five seconds:** Turn on or turn off Toggle Keys
- **Left Alt+Left Shift+Num Lock:** Turn on or turn off Mouse Keys
- **Left Alt+Left Shift+PrtScn (or PrtSc):** Turn on or turn off High Contrast

For more information, go to <https://windows.microsoft.com/>, and then search using any of the following keywords: keyboard shortcuts, key combinations, shortcut keys.

#### Ease of Access Center

Ease of Access Center on the Windows operating system enables you to configure your computers to suit their physical and cognitive needs.

To access Ease of Access Center:

1. Go to Control Panel and view by Category.
2. Click **Ease of Access → Ease of Access Center**.
3. Choose the appropriate tool by following the on-screen instructions.

Ease of Access Center mainly includes the following tools:

- **Magnifier**  
Magnifier is a useful utility that enlarges the entire screen or part of the screen so that you can see the items better.
- **Narrator**  
Narrator is a screen reader that reads what is displayed on the screen aloud and describes events such as error messages.
- **On-Screen Keyboard**  
If you prefer to type or enter data into your computer using a mouse, joystick, or other pointing device instead of a physical keyboard, you can use On-Screen Keyboard. On-Screen Keyboard displays a visual

keyboard with all the standard keys. You can select keys using the mouse or another pointing device, or you can tap to select the keys if your computer supports multi-touch screen.

- **High Contrast**

High Contrast is a feature that heightens the color contrast of some text and images on your screen. As a result, those items are more distinct and easier to identify.

- **Personalized keyboard**

Adjust keyboard settings to make your keyboard easier to use. For example, you can use your keyboard to control the pointer and make the keyboard easier to type certain key combinations.

- **Personalized mouse**

Adjust mouse settings to make your mouse easier to use. For example, you can change the pointer appearance and make your mouse easier to manage windows.

## **Speech Recognition**

Speech Recognition enables you to control your computer by voice.

You can use verbal instructions to control the keyboard and mouse. With verbal instructions, you can start programs, open menus, click objects on the screen, dictate text into documents, and write and send e-mails.

To use Speech Recognition:

1. Go to Control Panel and view by Category.
2. Click **Ease of Access → Speech Recognition**.
3. Follow the on-screen instructions.

## **Screen-reader technologies**

Screen-reader technologies are primarily focused on software program interfaces, help systems, and various online documents. For additional information about screen readers, see the following:

- Using PDFs with screen readers:

<https://www.adobe.com/accessibility.html?promoid=DJGVE>

- Using the JAWS screen reader:

<https://www.freedomscientific.com/Products/Blindness/JAWS>

- Using the NVDA screen reader:

<https://www.nvaccess.org/>

## **Screen resolution**

You can make the text and images on your screen easier to read by adjusting the screen resolution of your computer.

To adjust the screen resolution:

1. Right-click a blank area on the desktop and then click **Display settings → Display**.
2. Follow the on-screen instructions.

**Note:** Setting a resolution too low might prevent some items from fitting on the screen.

## **Customizable item size**

You can make the items on your screen easier to read by changing the item size.

- To change the item size temporarily, use the Magnifier tool in Ease of Access Center.
- To change the item size permanently:

- Change the size of all the items on your screen.
  1. Right-click a blank area on the desktop and then click **Display settings** → **Display**.
  2. Change the item size by following the on-screen instructions. For some applications, your configuration might not take effect until you sign out and then sign in again.
- Change the size of the items on a Web page.
 

Press and hold Ctrl, and then press the plus-sign key (+) to enlarge or the minus-sign key (–) to reduce the text size.
- Change the size of the items on the desktop or a window.

**Note:** This function might not work on some windows.

If your mouse has a wheel, press and hold Ctrl, and then scroll the wheel to change the item size.

## Industry-standard connectors

Your computer provides industry-standard connectors that enable you to connect assistive devices.

## Documentation in accessible formats

Lenovo provides electronic documentation in accessible formats, such as properly tagged PDF files or HyperText Markup Language (HTML) files. Lenovo electronic documentation is developed to ensure that visually impaired users can read the documentation through a screen reader. Each image in the documentation also includes adequate alternative text so that visually impaired users can understand the image when they use a screen reader.

---

## Ergonomic information

Good ergonomic practice is important to get the most from your personal computer and to avoid discomfort. Arrange your workplace and the equipment you use to suit your individual needs and the kind of work that you perform. In addition, use healthy work habits to maximize your performance and comfort when using your computer.

Working in the virtual office might mean adapting to frequent changes in your environment. Adapting to the surrounding light sources, active seating, and the placement of your computer hardware, can help you improve your performance and achieve greater comfort.

This example shows someone in a conventional setting. Even when not in such a setting, you can follow many of these tips. Develop good habits, and they will serve you well.



**General posture:** Make minor modifications in your working posture to deter the onset of discomfort caused by long periods of working in the same position. Frequent short breaks from your work also help to prevent minor discomfort associated with your working posture.

**Display:** Position the display to maintain a comfortable viewing distance of 510 mm to 760 mm (20 inches to 30 inches). Avoid glare or reflections on the display from overhead lighting or outside sources of light. Keep the display screen clean and set the brightness to levels that enable you to see the screen clearly. Press the brightness control keys to adjust display brightness.

**Head position:** Keep your head and neck in a comfortable and neutral (vertical, or upright) position.

**Chair:** Use a chair that gives you good back support and seat height adjustment. Use chair adjustments to best suit your comfort posture.

**Arm and hand position:** If available, use chair arm rests or an area on your working surface to provide weight support for your arms. Keep your forearms, wrists, and hands in a relaxed and neutral (horizontal) position. Type with a soft touch without pounding the keys.

**Leg position:** Keep your thighs parallel to the floor and your feet flat on the floor or on a footrest.

### **What if you are traveling?**

It might not be possible to observe the best ergonomic practices when you are using your computer while on the move or in a casual setting. Regardless of the setting, try to observe as many of the tips as possible. Sitting properly and using adequate lighting, for example, helps you maintain desirable levels of comfort and performance. If your work area is not in an office setting, ensure to take special note of employing active sitting and taking work breaks. Many product solutions are available to help you modify and expand your computer to best suit your needs. You can find some of these options at <https://www.lenovo.com/accessories>. Explore your options for docking solutions and external products that provide the adjustability and features that you want.

### **Questions about vision?**

The visual display screens of notebook computers are designed to meet the highest standards. These visual display screens provide you with clear, crisp images and large, bright displays that are easy to see, yet easy on the eyes. Any concentrated and sustained visual activity can be tiring. If you have questions on eye fatigue or visual discomfort, consult a vision-care specialist for advice.

### **Turn on night light**

Night light is a switch in Windows that you can turn on and off. When it is turned on, your screen shows warmer colors and the amount of emitted blue light is reduced. Enabling night light reduces the chances of developing eye fatigue or eye strain.

Step 1. Click the notification icon in the Windows notification area.

Step 2. Click the **Night light** icon to turn it on or off.

**Note:** Click **Expand** if you cannot find the night light icon.

For more guidance on reducing eye fatigue or eye strain, go to <https://www.lenovo.com/us/en/compliance/visual-fatigue>.

---

## Appendix C. Compliance information

This appendix provides the various compliance statements for Lenovo products.

---

### Radio frequency compliance statements

Computer models equipped with wireless communications comply with the radio frequency and safety standards of any country or region in which it has been approved for wireless use.

Besides this document, ensure that you read the *Regulatory Notice* for your country or region before using the wireless devices contained in your computer.

### European Union – compliance with the Radio Equipment Directive

This product is in conformity with all the requirements and essential norms that apply to EU Council Radio Equipment Directive 2014/53/EU on the approximation of the laws of the Member States relating to radio equipment. The full text of the system EU declaration of conformity and the EU wireless module declarations are available at the following Internet addresses:

- For notebook computers: <https://www.lenovo.com/eu-doc-notebooks>
- For tablet computers: <https://www.lenovo.com/eu-doc-tablets>
- For wireless peripheral devices: <https://www.lenovo.com/eu-doc-wireless-options>

Lenovo cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the installation of option cards from other manufacturers. This product has been tested and found to comply with the limits for Class B equipment according to European Standards harmonized in the Directives in compliance. The limits for Class B equipment were derived for typical residential environments to provide reasonable protection against interference with licensed communication devices.

### FCC ID and IC ID location

If you purchased your computer in the United States or Canada and the computer includes factory-preinstalled wireless modules, the FCC ID and IC ID label information for the wireless modules are visible on the computer's bottom cover.

The following graphic shows the location of the engraved (laser etched) text or the attached non-removable label.



## Brazil

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

This equipment is not protected against harmful interference and may not cause interference with duly authorized systems.

## Mexico

**Advertencia:** En Mexico la operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

## Singapore

**Complies with  
IMDA Standards  
DB102306**

## Korea

무선설비 전파 흔신 (사용주파수 2400~2483.5, 5725~5825 무선제품해당)

해당 무선설비가 전파흔신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없음

### SAR 정보

본 장치는 전파 노출에 대한 가이드라인을 충족합니다.

본 장치는 무선 송수신기입니다. 본 장치는 국제 가이드라인으로 권장되는 전파 노출에 대한 제한을 초과하지 않도록 설계되었습니다. 장치 액세서리 및 최신 부품을 사용할 경우 SAR 값이 달라질 수 있습니다. SAR 값은 국가 보고 및 테스트 요구 사항과 네트워크 대역에 따라 다를 수 있습니다. 본 장치는 사람의 신체에서 20mm 이상의 거리에서 사용할 수 있습니다.

---

## Environmental information by countries and regions

This section provides environmental, recycling, and RoHS information about Lenovo products.

### Recycling and environmental information

Lenovo encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. Lenovo offers a variety of programs and services to assist equipment owners in recycling their IT products. For information about recycling Lenovo products, go to:

<https://www.lenovo.com/recycling>

The latest environmental information about our products is available at:

<https://www.lenovo.com/ecodeclaration>

### Important WEEE information



The WEEE marking on Lenovo products applies to countries with WEEE and e-waste regulations (for example, the European WEEE Directive, India E-Waste Management Rules). Appliances are labeled in accordance with local regulations concerning waste electrical and electronic equipment (WEEE). These regulations determine the framework for the return and recycling of used appliances as applicable within each geography. This label is applied to various products to indicate that the product is not to be thrown away, but rather put in the established collection systems for reclaiming these end of life products.

Users of electrical and electronic equipment (EEE) with the WEEE marking must not dispose of end of life EEE as unsorted municipal waste, but use the collection framework available to them for the return, recycling, and recovery of WEEE and to minimize any potential effects of EEE on the environment and human health due to the presence of hazardous substances. Lenovo electrical and electronic equipment (EEE) may contain parts and components, which at end-of-life might qualify as hazardous waste.

EEE and waste electrical and electronic equipment (WEEE) can be delivered free of charge to the place of sale or any distributor that sells electrical and electronic equipment of the same nature and function as the used EEE or WEEE.

For additional WEEE information, go to:

<https://www.lenovo.com/recycling>

#### WEEE information for Hungary

Lenovo, as a producer, bears the cost incurred in connection with the fulfillment of Lenovo's obligations under Hungary Law No. 197/2014 (VIII.1.) subsections (1)-(5) of section 12.

## Japan recycling statements

### Collecting and recycling a disused Lenovo computer or monitor

If you are a company employee and need to dispose of a Lenovo computer or monitor that is the property of the company, you must do so in accordance with the Law for Promotion of Effective Utilization of Resources. Computers and monitors are categorized as industrial waste and should be properly disposed of by an industrial waste disposal contractor certified by a local government. In accordance with the Law for Promotion of Effective Utilization of Resources, Lenovo Japan provides, through its PC Collecting and Recycling Services, for the collecting, reuse, and recycling of disused computers and monitors. For details, visit the Lenovo Web site at:

<https://www.lenovo.com/recycling/japan>

Pursuant to the Law for Promotion of Effective Utilization of Resources, the collecting and recycling of home-used computers and monitors by the manufacturer was begun on October 1, 2003. This service is provided free of charge for home-used computers sold after October 1, 2003. For details, go to:

<https://www.lenovo.com/recycling/japan>

### Disposing of Lenovo computer components

Some Lenovo computer products sold in Japan may have components that contain heavy metals or other environmental sensitive substances. To properly dispose of disused components, such as a printed circuit board or drive, use the methods described above for collecting and recycling a disused computer or monitor.

### Disposing of disused lithium batteries from Lenovo computers

A button-shaped lithium battery is installed inside your Lenovo computer to provide power to the computer clock while the computer is off or disconnected from the main power source. If you need to replace it with a new one, contact your place of purchase or contact Lenovo for service. If you need to dispose of a disused lithium battery, insulate it with vinyl tape, contact your place of purchase or an industrial-waste-disposal operator, and follow their instructions.

Disposal of a lithium battery must comply with local ordinances and regulations.

### Disposing of a disused battery from Lenovo notebook computers

Your Lenovo notebook computer has a lithium ion battery or a nickel metal hydride battery. If you are a company employee who uses a Lenovo notebook computer and need to dispose of a battery, contact the proper person in Lenovo sales, service, or marketing, and follow that person's instructions. You also can refer to the instructions at:

<https://www.lenovo.com/jp/ja/environment/recycle/battery/>

If you use a Lenovo notebook computer at home and need to dispose of a battery, you must comply with local ordinances and regulations. You also can refer to the instructions at:

<https://www.lenovo.com/jp/ja/environment/recycle/battery/>

## Recycling information for Brazil

*Declarações de Reciclagem no Brasil*


*Descarte de um Produto Lenovo Fora de Uso*

Equipamentos elétricos e eletrônicos não devem ser descartados em lixo comum, mas enviados à pontos de coleta, autorizados pelo fabricante do produto para que sejam encaminhados e processados por empresas especializadas no manuseio de resíduos industriais, devidamente certificadas pelos órgãos ambientais, de acordo com a legislação local.

A Lenovo possui um canal específico para auxiliá-lo no descarte desses produtos. Caso você possua um produto Lenovo em situação de descarte, ligue para o nosso SAC ou encaminhe um e-mail para: [reciclar@lenovo.com](mailto:reciclar@lenovo.com), informando o modelo, número de série e cidade, a fim de enviarmos as instruções para o correto descarte do seu produto Lenovo.

## **Battery recycling information for the European Union**

EU

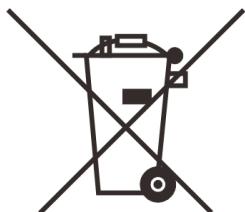

**Notice:** This mark applies only to countries within the European Union (EU).

Batteries or packaging for batteries are labeled in accordance with European Directive 2006/66/EC concerning batteries and accumulators and waste batteries and accumulators. The Directive determines the framework for the return and recycling of used batteries and accumulators as applicable throughout the European Union. This label is applied to various batteries to indicate that the battery is not to be thrown away, but rather reclaimed upon end of life per this Directive.

In accordance with the European Directive 2006/66/EC, batteries and accumulators are labeled to indicate that they are to be collected separately and recycled at end of life. The label on the battery may also include a chemical symbol for the metal concerned in the battery (Pb for lead, Hg for mercury, and Cd for cadmium). Users of batteries and accumulators must not dispose of batteries and accumulators as unsorted municipal waste, but use the collection framework available to customers for the return, recycling, and treatment of batteries and accumulators. Customer participation is important to minimize any potential effects of batteries and accumulators on the environment and human health due to the potential presence of hazardous substances.

Before placing electrical and electronic equipment (EEE) in the waste collection stream or in waste collection facilities, the end user of equipment containing batteries and/or accumulators must remove those batteries and accumulators for separate collection.

### **Disposing of lithium batteries and battery packs from Lenovo products**

A coin-cell type lithium battery might be installed inside your Lenovo product. You can find details about the battery in the product documentation. If the battery needs to be replaced, contact your place of purchase or contact Lenovo for service. If you need to dispose of a lithium battery, insulate it with vinyl tape, contact your place of purchase or a waste-disposal operator, and follow their instructions.

### **Disposing of battery packs from Lenovo products**

Your Lenovo device might contain a lithium-ion battery pack or a nickel metal hydride battery pack. You can find details on the battery pack in the product documentation. If you need to dispose of a battery pack, insulate it with vinyl tape, contact Lenovo sales, service, or your place of purchase, or a waste-disposal operator, and follow their instructions. You also can refer to the instructions provided in the user guide for your product.

For proper collection and treatment, go to:

<https://www.lenovo.com/lenovo/environment>

## Recycling information for mainland China

《废弃电器电子产品回收处理管理条例》提示性说明

联想鼓励拥有联想品牌产品的用户当不再需要此类产品时，遵守国家废弃电器电子产品回收处理相关法律法规，将其交给当地具有国家认可的回收处理资质的厂商进行回收处理。更多回收服务信息，请点击进入<http://support.lenovo.com/activity/551.htm>

## Battery recycling information for Taiwan



廢電池請回收

## Battery recycling information for the United States and Canada



US & Canada Only

## RoHS compliance statements

Lenovo is committed to protecting the environment. An important priority for Lenovo is the implementation of RoHS (Restriction of Hazardous Substances) requirements globally. Lenovo meets all the RoHS requirements currently in effect. This section provides RoHS compliance statements by countries or regions. See <https://www.lenovo.com/ecodeclaration> for more information about Lenovo worldwide compliance on RoHS.

## European Union

This Lenovo product, with included parts (cables, cords, and so on) meets the requirements of *Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment* ("RoHS recast" or "RoHS 2").

## Turkey

The Lenovo product meets the requirements of the *Republic of Turkey Directive on the Restriction of the Use of Certain Hazardous Substances in Waste Electrical and Electronic Equipment (WEEE)*.

### Türkiye AEEE Yönetmeliğine Uygunluk Beyanı

Bu Lenovo ürünü, T.C. Çevre ve Orman Bakanlığı'nın "Atık Elektrik ve Elektronik Eşyalarda Bazı Zararlı Maddelerin Kullanımının Sınırlandırılmasına Dair Yönetmelik (AEEE)" direktiflerine uygundur.

AEEE Yönetmeliğine Uygundur.

## Ukraine

Цим підтверджуємо, що продукція Леново відповідає вимогам нормативних актів України, які обмежують вміст небезпечних речовин

## Mainland China

为满足中国电子电器产品有害物质限制相关的法律法规和其他要求，联想公司对本产品中有害物质按部件分类，声明如下。

Table 1. 产品中有害物质的名称及含量

部件名称	铅 ( Pb )	汞 ( Hg )	镉 ( Cd )	六价铬 ( Cr ( VI ) )	多溴联苯 ( PBB )	多溴二苯醚 ( PBDE )
印刷电路板组件*	X	○	○	○	○	○
硬盘	X	○	○	○	○	○
光驱	X	○	○	○	○	○
LCD面板 ( LED背光源 )	X	○	○	○	○	○
键盘	X	○	○	○	○	○
内存	X	○	○	○	○	○
电池	X	○	○	○	○	○
电源适配器	X	○	○	○	○	○
底壳、顶壳和扬声器	X	○	○	○	○	○

注：

本表格依据SJ/T 11364的规定编制。某些型号的产品可能不包含表中的部分部件。

○：表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X：表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。标记“X”的部件，皆因全球技术发展水平限制而无法实现有害物质的替代。

\*：印刷电路板组件包括印刷电路板及其零部件、电容和连接器等。



在中华人民共和国境内销售的电子信息产品必须带有此“环保使用期限”(EPuP)标志。圆圈内的数字表示正常使用状态下产品的环保使用期限。

## Supplier's declaration of conformity label for mainland China RoHS

依照《电器电子产品有害物质限制使用合格评定制度实施安排》，《绿色产品标识使用管理办法》以及市场监管总局关于明确电器电子产品有害物质限制使用合格评定制度“供方符合性标志”的公告中对于合格评定标识的相关要求，联想公司针对纳入《电器电子产品有害物质限制使用达标管理目录》内的产品，使用自我声明的合格评定方式，并使用如下合格评定标识：



## Taiwan

單元Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr <sup>+6</sup> )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
外殼	-	○	○	○	○	○
電路板組件	-	○	○	○	○	○
機械部件	-	○	○	○	○	○
顯示螢幕	-	○	○	○	○	○
電源供應器	-	○	○	○	○	○
儲存裝置	-	○	○	○	○	○
輸入裝置	-	○	○	○	○	○
配件	-	○	○	○	○	○

備考1."超出0.1 wt %"及"超出0.01 wt %"係指限用物質之百分比含量超出百分比含量基準值。

Note 1 : "Exceeding 0.1 wt %" and "exceeding 0.01 wt %" indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.

備考2. "○"係指該項限用物質之百分比含量未超出百分比含量基準值。

Note 2: "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

備考3. " - "係指該項限用物質為排除項目。

Note 3: " - " indicates that the restricted substance corresponds to the exemption.

單元	說明
機械部件	泛指風扇、散熱器、喇叭、光碟機(選配)等
儲存裝置	泛指硬碟、固態硬碟、記憶體等
輸入裝置	泛指鍵盤、觸控板、攝影機、麥克風等
配件	泛指電源線組(選配)、觸控筆(選配)、耳機(選配)等

## India

RoHS compliant as per *E-waste (Management) Rules*.

## Electromagnetic emission notices

### Federal Communications Commission (FCC) Supplier's Declaration of Conformity

The following information refers to Lenovo product model(s) listed below.

Model name	Machine type (MT)
IdeaPad Duet 3 10IGL5	82AT
IdeaPad Duet 3 10IGL5-LTE	82HK

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an authorized dealer or service representative for help.

Lenovo is not responsible for any radio or television interference caused by using cables and connectors other than those recommended by Lenovo or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Responsible Party:

Lenovo (United States) Incorporated  
7001 Development Drive  
Morrisville, NC 27560  
Email: FCC@lenovo.com



## Industry Canada compliance statement

CAN ICES-3(B)/NMB-3(B)

## European Union conformity

EU Contact: Lenovo (Slovakia), Landererova 12, 811 09 Bratislava, Slovakia



### Compliance with the EMC Directive

This product is in conformity with the protection requirements of EU Council Directive 2014/30/EU on the approximation of the laws of the Member States relating to electromagnetic compatibility.

This product has been tested and found to comply with the limits for Class B equipment according to European Standards harmonized in the Directives in compliance. The Class B requirements for equipment are intended to offer adequate protection to broadcast services within residential environments.

## German Class B compliance statement

### *Hinweis zur Einhaltung der Klasse B zur elektromagnetischen Verträglichkeit*

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie zur elektromagnetischen Verträglichkeit Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der Klasse B der Norm gemäß Richtlinie.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der Lenovo empfohlene Kabel angeschlossen werden. Lenovo übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der Lenovo verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der Lenovo gesteckt/eingebaut werden.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Betriebsmitteln, EMVG vom 20. Juli 2007 (früher Gesetz über die elektromagnetische Verträglichkeit von Geräten), bzw. der EU Richtlinie 2014/30/EU, der EU Richtlinie 2014/53/EU Artikel 3.1b), für Geräte der Klasse B.

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen. Verantwortlich für die Konformitätserklärung nach Paragraf 5 des EMVG ist die Lenovo (Deutschland) GmbH, Meitnerstr. 9, D-70563 Stuttgart.

## Japan VCCI Class B compliance statement

この装置は、クラスB機器です。この装置は、住宅環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

VCCI-B

## Japan compliance statement for products which connect to the power mains with rated current less than or equal to 20 A per phase

日本の定格電流が 20A/相 以下の機器に対する高調波電流規制  
高調波電流規格 JIS C 61000-3-2 適合品

## Japan notice for ac power cord

The ac power cord shipped with your product can be used only for this specific product. Do not use the ac power cord for other devices.

本製品およびオプションに電源コード・セットが付属する場合は、  
それぞれ専用のものになっていますので他の電気機器には使用し  
ないでください。

---

## Other compliance information

This section provides other compliance information about Lenovo products.

## Export classification notice

This product is subject to the United States Export Administration Regulations (EAR) and has an Export Classification Control Number (ECCN) of 5A992.c. It can be re-exported except to any of the embargoed countries in the EAR E1 country list.

## Lenovo product service information for Taiwan

委製商/進口商名稱: 荷蘭商聯想股份有限公司台灣分公司  
進口商地址: 台北市中山區北安路780號7樓  
進口商電話: 0800-000-702 (代表號)

## Taiwan precautionary vision statement

警語：使用過度恐傷害視力

注意事項：

- 使用30分鐘請休息10分鐘。
- 未滿2歲幼兒不看螢幕，2歲以上每天看螢幕不要超過1小時。

## Supplemental information for the Eurasian Union

Назначение	персональный компьютер для личного и служебного использования, для передачи данных, с поддержкой различных профилей подключения (Wi-Fi, Bluetooth и пр.).
Изготовитель	Леново ПЦ ХК Лимитед, 23/Ф Линcoln Хаус, Тайку Плэйс 979 Кингз Роуд, Куарри Бэй, Гонконг (Lenovo PC HK Limited, 23/F Lincoln House, Taikoo Place 979 King's Road, Quarry Bay, Hong Kong)
Страна производства	Китай
Наименование и местонахождение уполномоченного изготовителем лица	ООО «Леново (Восточная Европа/Азия)» 143401, Московская область, г. Красногорск, бульвар Строителей, дом 4, корпус 1, помещение VII, тел. +7 495 645 83 38, факс +7 495 645 78 77.
Импортер	Наименование, адрес импортера и информация для связи с ним указаны на этикетке* на упаковке продукции.  *Согласно ГОСТ 2.601-2013 «Единая система конструкторской документации. Эксплуатационные документы», пункт 5.1, подпункт 5.1.2, этикетка является видом эксплуатационных документов.
Дата изготовления (месяц и год)	Указана на этикетке* на упаковке продукции, в графе Date (дата указана в формате год-месяц-дата). Для получения более подробной информации посетите веб-сайт: <a href="https://support.lenovo.com">https://support.lenovo.com</a>
Единый знак обращения на рынке стран Таможенного союза	

## Brazil audio notice

Ouvir sons com mais de 85 decibéis por longos períodos pode provocar danos ao sistema auditivo.

## ENERGY STAR



ENERGY STAR is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy aimed at saving money and protecting the environment through energy efficient products and practices.

Lenovo is proud to offer products with the ENERGY STAR certified designation. Lenovo computers, if carry an ENERGY STAR mark, have been designed and tested to conform to the ENERGY STAR program requirements for computers as prescribed by the U.S. Environmental Protection Agency. For certified computers, an ENERGY STAR mark may be affixed to the product, the product packaging, or displayed electronically on the E-label screen or the power settings interface.

By using ENERGY STAR compliant products and taking advantage of the power management features of your computer, you reduce the consumption of electricity. Reduced electrical consumption contributes to potential financial savings, a cleaner environment, and the reduction of greenhouse gas emissions. For more information about ENERGY STAR, go to <https://www.energystar.gov>

Lenovo encourages you to make efficient use of energy an integral part of your day-to-day operations. To help in this endeavor, Lenovo has preset the following power-management features to take effect when your computer has been inactive for a specified length of time.

*Table 2. Balanced (when plugged into ac power)*

- Turn off the display: After 10 minutes
- Put the computer to sleep: After 30 minutes

---

## Appendix D. Notices and trademarks

### Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent programs covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc.

8001 Development Drive

Morrisville, NC 27560

U.S.A.

Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

Changes are made periodically to the information herein; these changes will be incorporated in new editions of the publication. To provide better service, Lenovo reserves the right to improve and/or modify the products and software programs described in the manuals included with your computer, and the content of the manual, at any time without additional notice.

The software interface and function and hardware configuration described in the manuals included with your computer might not match exactly the actual configuration of the computer that you purchase. For the configuration of the product, refer to the related contract (if any) or product packing list, or consult the distributor for the product sales. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

This document is copyrighted by Lenovo and is not covered by any open source license, including any Linux agreement(s) which may accompany software included with this product. Lenovo may update this document at any time without notice.

For the latest information or any questions or comments, contact or visit the Lenovo Web site:

<https://support.lenovo.com>

#### **Trademarks**

LENOVO and the LENOVO logo are trademarks of Lenovo. Microsoft, Windows, OneDrive, Outlook, Skype, Office 365, Direct3D, and Cortana are trademarks of the Microsoft group of companies. Wi-Fi and Miracast are registered trademarks of Wi-Fi Alliance. USB-C is a trademark of USB Implementers Forum. All other trademarks are the property of their respective owners. © 2020 Lenovo.



**Lenovo**

## Regulatory Notice for Wireless LAN/WAN modules

**First edition (February 2019)**

**© Copyright Lenovo 2020.**

---

# Contents

<b>Chapter 1. Notice for users in USA and Canada . . . . .</b>	<b>1</b>
Approved wireless devices . . . . .	1
Preinstalled wireless LAN module . . . . .	2
Simultaneous use of RF transmitters . . . . .	2
Canada — Industry Canada (IC) . . . . .	3
Approved wireless devices . . . . .	3
Preinstalled wireless LAN module . . . . .	3
Low power license-exempt radiocommunication devices (RSS-210, RSS- 247) . . . . .	4
Exposure of humans to RF fields (RSS-102) . . . . .	4
Canada — Industrie Canada (IC) . . . . .	4
Périphériques sans fil homologués . . . . .	4
Module réseau local sans fil préinstallé . . . . .	5
Appareils de radio-communication basse tension sans licence d'utilisation (CNR-210, CNR-247) . . . . .	5
Conformité des appareils de radiocommunication aux limites d'exposition humaine aux radiofréquences (CNR-102) . . . . .	6
Electronic emission notices . . . . .	6
Federal Communications Commission (FCC) Declaration of Conformity . . . . .	6
Usage environment and your health . . . . .	7
<b>Chapter 2. Europe — EU Declaration of Conformity . . . . .</b>	<b>9</b>
English . . . . .	9
RF exposure information . . . . .	9
Bulgarian . . . . .	9
Информация за излагане на радиочестоти . . . . .	10
Croatian . . . . .	10
Informacije o izlaganju radijskoj frekvenciji . . . . .	10
Czech . . . . .	10
Informace o vystavení radiofrekvenčnímu záření . . . . .	10
Danish . . . . .	11
Oplysninger om radiobølgeeksponering . . . . .	11
Dutch . . . . .	11
Informatie over blootstelling aan radiogolven . . . . .	11
Estonian . . . . .	11
Raadiosagedusliku kiurguse teave . . . . .	12
Finnish . . . . .	12
Tietoja radiotaajuiseille sääteilylle altistumisesta . . . . .	12
French . . . . .	12

Informations sur l'exposition aux RF . . . . .	12
German . . . . .	12
Informationen zur HF-Exposition . . . . .	13
Greek . . . . .	13
Πληροφορίες σχετικά με την έκθεση στις ραδιοσυχνότητες (RF) . . . . .	13
Hungarian . . . . .	13
RF-kitettségre vonatkozó információk . . . . .	14
Italian . . . . .	14
Informazioni sull'esposizione RF . . . . .	14
Latvian . . . . .	14
Informācija par pakļaušanu RF starojumam . . . . .	14
Lithuanian . . . . .	14
Informacija apie radio dažnių poveikį . . . . .	15
Norwegian . . . . .	15
Informasjon om RF-eksponering . . . . .	15
Polish . . . . .	15
Informacje o ekspozycji na częstotliwości radiowe . . . . .	15
Portuguese . . . . .	16
Informações sobre exposição a RF . . . . .	16
Romanian . . . . .	16
Informații privind expunerea la frecvențele radio . . . . .	16
Slovenian . . . . .	16
Informacije o izpostavljenosti RF-sevanju . . . . .	17
Slovakian . . . . .	17
Informácie o vystavení rádfrekvenčnému žiareniu . . . . .	17
Spanish . . . . .	17
Información de exposición a RF . . . . .	17
Swedish . . . . .	18
Information om exponering för radiovågor . . . . .	18
Turkish . . . . .	18
RF maruz kalma bilgileri . . . . .	18
<b>Chapter 3. Regulatory notices for other countries/regions . . . . .</b>	<b>19</b>
Notice for users in Argentina (Nota para uso en Argentina) . . . . .	19
Modelo: Intel 3165NGW . . . . .	19
Modelo: Intel 7265NGW . . . . .	19
Modelo: Intel 8265NGW . . . . .	19
Modelo: Qualcomm QCNFA344A . . . . .	19
Modelo: Qualcomm QCNFA364 . . . . .	19
Modelo: Qualcomm QCNFA435 . . . . .	19
Modelo: Realtek RTL8821CE . . . . .	19
Modelo: Realtek RTL8822BE . . . . .	20

Modelo: Intel 9260NGW . . . . .	20	Notice for users in Mexico (Nota para uso en Mexico) . . . . .	28
Modelo: Intel 9560NGW . . . . .	20	Modelo: 3165NGW . . . . .	28
Modelo: Intel 9560NGW R . . . . .	20	Modelo: 7265NGW . . . . .	29
Modelo: Intel 9462NGW . . . . .	20	Modelo: 8265NGW . . . . .	29
Modelo: Realtek RTL8822CE . . . . .	20	Modelo: QCNFA344A . . . . .	29
Modelo: Intel 9560D2W . . . . .	20	Modelo: QCNFA364 . . . . .	29
Modelo: Intel AX200NGW . . . . .	20	Modelo: QCNFA435 . . . . .	29
Modelo: Intel AX201NGW . . . . .	20	Modelo: RTL8821CE . . . . .	29
Modelo: Intel AX201D2W . . . . .	21	Modelo: RTL8822BE . . . . .	29
Modelo: L850-GL . . . . .	21	Modelo: 9260NGW . . . . .	29
Notice for users in Chile (Nota para uso en Chile) . . . . .	21	Modelo: 9560NGW . . . . .	29
Notice for users in Brazil (Aviso para usuarios no Brasil) . . . . .	24	Modelo: 9560NGW R . . . . .	30
For model: 3165NGW . . . . .	24	Modelo: 9462NGW . . . . .	30
For model: 7265NGW . . . . .	24	Modelo: RTL8822CE . . . . .	30
For model: QCNFA344A . . . . .	24	Modelo: 9560D2W . . . . .	30
For model: QCNFA364 . . . . .	24	Modelo: AX200NGW . . . . .	30
For model: QCNFA435 . . . . .	25	Modelo: AX201NGW . . . . .	30
For model: 8265NGW . . . . .	25	Modelo: AX201D2W . . . . .	30
For model: RTL8821CE . . . . .	25	Modelo: L850-GL . . . . .	30
For model: RTL8822BE . . . . .	25	Notice for users in Morocco . . . . .	30
For model: 9260NGW . . . . .	25	Notice for users in Nigeria . . . . .	34
For model: 9560NGW . . . . .	25	Notice for users in Saudi Arabia . . . . .	35
For model: 9560NGW R . . . . .	26	For model: 3165NGW . . . . .	35
For model: 9462NGW . . . . .	26	For model: 7265NGW . . . . .	36
For model: RTL8822CE . . . . .	26	For model: 8265NGW . . . . .	37
For model: 9560D2W . . . . .	26	For model: Qualcomm QCNFA344A . . . . .	38
For model: AX200NGW . . . . .	26	For model: Qualcomm QCNFA364 . . . . .	39
For model: AX201NGW . . . . .	26	For model: Qualcomm QCNFA435 . . . . .	40
For model: AX201D2W . . . . .	27	For model: RTL8821CE . . . . .	41
For model: L850-GL . . . . .	27	For model: RTL8822BE . . . . .	42
Notice for users in India . . . . .	27	For model: 9260NGW . . . . .	43
Model: 3165NGW . . . . .	27	For model: 9560NGW . . . . .	44
Model: 7265NGW . . . . .	27	For model: 9560NGW R . . . . .	45
Model: 8265NGW . . . . .	27	For model: 9462NGW . . . . .	46
Model: QCNFA344A . . . . .	27	For model: RTL8822CE . . . . .	47
Model: QCNFA364 . . . . .	27	For model: 9560D2W . . . . .	48
Model: QCNFA435 . . . . .	27	For model: AX200NGW . . . . .	49
Model: RTL8821CE . . . . .	27	For model: AX201NGW . . . . .	50
Model: RTL8822BE . . . . .	28	For model: AX201D2W . . . . .	51
Model: 9260NGW . . . . .	28	For model: L850-GL . . . . .	52
Model: 9560NGW . . . . .	28	Notice for users in Serbia . . . . .	53
Model: 9560NGW R . . . . .	28	Notice for users in South Africa . . . . .	53
Model: 9462NGW . . . . .	28	For model: 3165NGW . . . . .	53
Model: RTL8822CE . . . . .	28	For model: 7265NGW . . . . .	53
Model: 9560D2W . . . . .	28	For model: 8265NGW . . . . .	53
Model: AX200NGW . . . . .	28	For model: QCNFA344A . . . . .	53
Model: AX201NGW . . . . .	28	For model: QCNFA364 . . . . .	53
Model: AX201D2W . . . . .	28	For model: QCNFA435 . . . . .	53

---

For model: RTL8822BE . . . . .	54	For model: QCNFA344A. . . . .	56
For model: 9260NGW. . . . .	54	For model: QCNFA364 . . . . .	56
For model: 9560NGW. . . . .	54	For model: QCNFA435 . . . . .	56
For model: 9560NGW R. . . . .	54	For model: RTL8821CE . . . . .	57
For model: 9462NGW. . . . .	54	For model: RTL8822BE . . . . .	57
For model: RTL8822CE . . . . .	54	For model: 9260NGW. . . . .	57
For model: 9560D2W . . . . .	55	For model: 9560NGW. . . . .	57
For model: AX200NGW . . . . .	55	For model: 9560NGW R. . . . .	57
For model: AX201NGW . . . . .	55	For model: 9462NGW. . . . .	57
For model: AX201D2W . . . . .	55	For model: RTL8822CE . . . . .	57
For model: L850-GL . . . . .	55	For model: 9560D2W . . . . .	58
Notice for users in Taiwan. . . . .	55	For model: AX200NGW . . . . .	58
根據NCC低功率電波輻射性電機管理辦法規定 . . . . .	55	For model: AX201NGW . . . . .	58
Notice for users in the UAE . . . . .	56	For model: AX201D2W . . . . .	58
For model: 3165NGW. . . . .	56	For model: L850-GL . . . . .	58
For model: 7265NGW. . . . .	56	Trademarks . . . . .	lix
For model: 8265NGW. . . . .	56		

## About this manual

This publication contains regulatory information for wireless modules that may be included by Lenovo computers. Different computer products support different wireless modules.

Product Name	Wireless Modules
Lenovo IdeaPad C340-14IWL	QCNFA435, RTL8822BE, 9560NGW, 9462NGW
Lenovo IdeaPad C340-15IWL	QCNFA435, RTL8822BE, 9560NGW, 9462NGW
Lenovo IdeaPad C340-14API	QCNFA435, RTL8821CE, RTL8822BE
Lenovo IdeaPad S340-14IWL	QCNFA435, RTL8822BE, 9560NGW, 9462NGW
Lenovo IdeaPad S340-15IWL	QCNFA435, RTL8822BE, 9560NGW, 9462NGW
Lenovo IdeaPad S340-15IWL Touch	QCNFA435, RTL8822BE, 9560NGW, 9462NGW
Lenovo IdeaPad S340-14API	QCNFA435, RTL8821CE, RTL8822BE
Lenovo IdeaPad S340-15API	QCNFA435, RTL8821CE, RTL8822BE
Lenovo IdeaPad S340-15API Touch	QCNFA435, RTL8821CE, RTL8822BE
Lenovo IdeaPad S540-14IWL	QCNFA435, RTL8822BE, 9560NGW, 9462NGW
Lenovo IdeaPad S540-14IWL Touch	QCNFA435, RTL8822BE, 9560NGW, 9462NGW
Lenovo IdeaPad S540-14API	QCNFA435, RTL8821CE, RTL8822BE
Lenovo IdeaPad FLEX-14API	QCNFA435, RTL8821CE, RTL8822BE
Lenovo IdeaPad FLEX-14IWL	QCNFA435, RTL8822BE, 9560NGW, 9462NGW
Lenovo IdeaPad FLEX-15IWL	QCNFA435, RTL8822BE, 9560NGW, 9462NGW
Lenovo Legion Y540-15IRH	QCNFA435, RTL8821CE, RTL8822BE, 9560NGW, 9462NGW
Lenovo Legion Y540-15IRH-PG0	QCNFA435, RTL8821CE, RTL8822BE, 9560NGW, 9462NGW

<b>Product Name</b>	<b>Wireless Modules</b>
Lenovo Legion Y540-17IRH	QCNFA435, RTL8821CE, RTL8822BE, 9560NGW, 9462NGW
Lenovo Legion Y540-17IRH-PG0	QCNFA435, RTL8821CE, RTL8822BE, 9560NGW, 9462NGW
Lenovo E41-35	QCNFA435, RTL8821CE
Lenovo ThinkBook 13s-IWL	RTL8822CE, 9560NGW
Lenovo ThinkBook 14s-IWL	RTL8822CE, 9560NGW
Lenovo ThinkBook 13s-IML	RTL8822CE, 9560NGW
Lenovo ThinkBook 14s-IML	RTL8822CE, 9560NGW
Lenovo V330-14ISK	QCNFA435, 3165NGW, 8265NGW, RTL8822BE, RTL8821CE
Lenovo V330-14IKB	QCNFA435, 3165NGW, 8265NGW, RTL8822BE, RTL8821CE
Lenovo V330-14ARR	QCNFA435A, RTL8821CE
Lenovo V330-14IGM	QCNFA435A, 3165NGW, RTL8821CE
Lenovo Legion Y740-15IRH	9560NGW, AX200NGW
Lenovo Legion Y740-15IRHg	9560NGW
Lenovo Legion Y740-17IRH	9560NGW
Lenovo Legion Y740-17IRHg	9560NGW
Lenovo IdeaPad S540-15IWL GTX	RTL8822BE, 9560NGW
Lenovo Chromebook C340-11	9560NGW
Lenovo Chromebook S340-14	9560NGW
Lenovo Chromebook S340-14 Touch	9560NGW

<b>Product Name</b>	<b>Wireless Modules</b>
Lenovo Legion Y7000 2019	QCNFA435, RTL8821CE, RTL8822BE, 9560NGW, 9462NGW
Lenovo Legion Y7000 2019 PG0	QCNFA435, RTL8821CE, RTL8822BE, 9560NGW, 9462NGW
Lenovo Legion Y7000 2019 1050	RTL8822BE, 9560NGW
Lenovo 100e 2nd Gen	9260NGW, 9560NGW, AX200NGW, QCNFA344A
Lenovo 300e 2nd Gen	9260NGW, 9560NGW, AX200NGW, QCNFA344A
Lenovo Legion Y545	QCNFA435, RTL8821CE, RTL8822BE, 9560NGW, 9462NGW
Lenovo Legion Y545 PG0	QCNFA435, RTL8821CE, RTL8822BE, 9560NGW, 9462NGW
Lenovo IdeaPad S540-13IML	9560NGW, AX201NGW, RTL8822CE
Lenovo Yoga C940 BE-14IIL	9560D2W, AX201D2W
Lenovo Yoga C940-14IIL	9560D2W, AX201D2W
Lenovo Yoga S740-15IRH	9560NGW, AX200NGW
Lenovo IdeaPad S740-15IRH	9560NGW, AX200NGW
Lenovo IdeaPad S740-15IRH Touch	9560NGW, AX200NGW
Lenovo Yoga S730-13IML	RTL8822CE , 9560NGW
Lenovo IdeaPad 730S-13IML	RTL8822CE , 9560NGW
Lenovo ideapad S530-13IML	RTL8822CE, 9560NGW, 9462NGW, QCNFA435
Lenovo IdeaPad S540-15IML	RTL8822CE, 9560NGW, 9462NGW
Lenovo Yoga C740-14IML	RTL8822CE, 9560NGW, AX201NGW
Lenovo Yoga C740-15IML	RTL8822CE, 9560NGW, AX201NGW
Lenovo Yoga S740-14IIL	RTL8822CE, 9560NGW, AX201NGW

<b>Product Name</b>	<b>Wireless Modules</b>
Lenovo IdeaPad S740-14IIL	RTL8822CE, 9560NGW, AX201NGW
Lenovo Chromebook C340-15	7265NGW
Lenovo Yoga C640-13IML	RTL8822CE, 9560NGW
Lenovo Yoga C640-13IML LTE	RTL8822CE, 9560NGW, L850-GL
Lenovo 14w	QCNFA344A
Lenovo 14e Chromebook	QCNFA344A
Lenovo Chromebook S345-14AST	QCNFA344A
Lenovo IdeaPad S340-13IML	RTL8822CE, 9260NGW
Lenovo Ideapad S340-14IML	RTL8822CE, 9560NGW, 9462NGW, QCNFA435
Lenovo Ideapad S340-15IML	RTL8822CE, 9560NGW, 9462NGW, QCNFA435
Lenovo Ideapad S340-15IML Touch	RTL8822CE, 9560NGW, 9462NGW, QCNFA435
Lenovo IdeaPad C340-15IIL	RTL8822CE, 9560NGW, 9462NGW, QCNFA435
Lenovo IdeaPad Flex-15IIL	RTL8822CE, 9560NGW, 9462NGW, QCNFA435
Lenovo Legion Y740S-15IRH	9560NGW, AX200NGW
Lenovo IdeaPad S540-14IML	RTL8822CE, 9560NGW, 9462NGW, QCNFA435
Lenovo IdeaPad S540-14IML Touch	RTL8822CE, 9560NGW, 9462NGW, QCNFA435
Lenovo Yoga S940-14IIL	AX201D2W
Lenovo IdeaPad S940-14IIL	AX201D2W
Lenovo IdeaPad Slim 1-11AST-05	RTL8822CE, QCNFA435, QCNFA344A

<b>Product Name</b>	<b>Wireless Modules</b>
Lenovo IdeaPad Flex-14IML	RTL8822CE, 9560NGW, 9462NGW, QCNFA435
Lenovo IdeaPad C340-15IML	RTL8822CE, 9560NGW, 9462NGW, QCNFA435
Lenovo IdeaPad Flex-15IML	RTL8822CE, 9560NGW, 9462NGW, QCNFA435
Lenovo IdeaPad S540-13API	RTL8822CE, QCNFA344A, QCNFA435
Lenovo Yoga C940-15IRH	AX200NGW, 9560NGW
Lenovo IdeaPad S540-13API	RTL8822CE, QCNFA435, QCNFA344A
Lenovo ideapad S340-14IIL	RTL8822CE, QCNFA435, 9560NGW, 9462NGW
Lenovo IdeaPad S340-15IIL	RTL8822CE, QCNFA435, 9560NGW, 9462NGW
Lenovo IdeaPad S340-15IIL Touch	RTL8822CE, QCNFA435, 9560NGW, 9462NGW
Lenovo 500e Chromebook 2nd Gen	9560NGW
Lenovo 300e Chromebook 2nd Gen	9560NGW
Lenovo 100e Chromebook 2nd Gen	9560NGW
Lenovo ThinkBook 14-IML	RTL8822CE, 9560NGW, 9462NGW, AX201NGW, QCNFA435
Lenovo ThinkBook 15-IML	RTL8822CE, 9560NGW, 9462NGW, AX201NGW, QCNFA435
Lenovo IdeaPad S540-13API	RTL8822CE, QCNFA344A, QCNFA435
Lenovo ThinkBook 14-IIL	RTL8822CE, 9560NGW, 9462NGW, AX201NGW, QCNFA435
Lenovo ThinkBook 15-IIL	RTL8822CE, 9560NGW, 9462NGW, AX201NGW, QCNFA435
IdeaPad 5 15IIL05	AX201NGW, 9560NGW R, RTL8822CE
Lenovo IdeaPad 1 11IGL05	RTL8822CE, 9560NGW R, 9462NGW, QCNFA435

<b>Product Name</b>	<b>Wireless Modules</b>
IdeaPad Flex 5 14IIL05	RTL8822CE, 9560NGW R, AX201NGW
IdeaPad Flex 5 14ARE05	RTL8822CE, QCNFA344A
IdeaPad Flex 5 15IIL05	RTL8822CE, 9560NGW R, AX201NGW
Lenovo Yoga 9 15IMH05	AX200NGW
IdeaPad Flex 3 11IGL05	9560NGW R, RTL8822CE
Lenovo ThinkBook Plus	AX201NGW
IdeaPad Flex 3 CB 11AST05	NFA344A
IdeaPad Flex 5 CB 13IML05	AX201NGW
IdeaPad Flex 3 11IGL05	9560NGW R, RTL8822CE
IdeaPad Flex 3 CB 11AST05	NFA344A
IdeaPad Flex 5 CB 13IML05	AX201NGW
IdeaPad Flex 3 CB 11IGL05	9560NGW R
IdeaPad 3 CB 14IGL05	9560NGW R
Yoga Slim 7 14IIL05	RTL8822CE, 9560NGW, AX201NGW
Yoga Slim 7 15IIL05	RTL8822CE, 9560NGW, AX201NGW
Yoga Slim 7 14ARE05	RTL8822CE, QCNFA344A, AX200NGW
Yoga Slim 7 15IMH05	AX201NGW
IdeaPad 5 14IIL05	AX201NGW, 9560NGW
Lenovo Ducati 5	AX201NGW
IdeaPad 5 14ARE05	RTL8822CE, QCNFA344A, AX200NGW
Lenovo Legion 7 15IMH05	AX201NGW

<b>Product Name</b>	<b>Wireless Modules</b>
Lenovo Legion 7 15IMHg05	AX201NGW
Lenovo Legion 7 15IMHc05	AX201NGW
Lenovo Legion 7 15IMHcg05	AX201NGW
Lenovo Legion Y740S-15IMH	AX200NGW, AX201NGW
Lenovo Legion C7 15IMH05	AX201NGW
Yoga Creator 7 15IMH05	AX201NGW
IdeaPad 5 15ARE05	AX200NGW, RTL8822CE, QCNFA344A
Lenovo Legion 5 15IMH05S	AX201NGW
Lenovo Legion 5 15IMH05H	AX201NGW
Lenovo Legion 5 15IMH05	AX201NGW
Lenovo Legion 5P 15IMH05S	AX201NGW
Lenovo Legion 5P 15IMH05H	AX201NGW
Lenovo Legion 5P 15IMH05	AX201NGW
Lenovo Legion 5 15ARH05	AX200NGW, RTL8822CE
Lenovo Legion 5 15ARH05H	AX200NGW, RTL8822CE
Lenovo Legion 5 17IMH05S	AX201NGW
Lenovo Legion 5 17IMH05H	AX201NGW
Lenovo Legion 5 17IMH05	AX201NGW
IdeaPad 3 CB 11IGL05	9560NGW R
Lenovo IdeaPad S540-13ARE	AX200NGW, RTL8822CE, QCNFA344A, 9260NGW

<b>Product Name</b>	<b>Wireless Modules</b>
Yoga Duet 7 13IML05	AX201D2W
Yoga Duet 7 13IML05-LTE	AX201D2W, L850-GL
IdeaPad Duet 3 10IGL05	9560D2W
IdeaPad Duet 3 10IGL05-LTE	9560D2W, L850-GL
Yoga 9 14ITL5	AX201D2W
Yoga 9 15IMH5	AX201NGW
Lenovo Legion 5P 15ARH05H	AX200NGW, RTL8822CE
Lenovo Legion 5 17ARH05H	AX200NGW, RTL8822CE
Yoga 6 13ARE05	AX200NGW
IdeaPad 5 14ITL05	AX201NGW, 9560NGW R, RTL8822CE
IdeaPad 5 14ITL06	AX201NGW, 9560NGW R, RTL8822CE
ThinkBook 14s Yoga ITL	9560NGW R, AX201NGW , RTL8822CE
IdeaPad 5 14ALC06	AX200NGW, RTL8822CE, QCNFA344A
Yoga Slim 9 14ITL5	AX201D2W
Lenovo ThinkBook 15p IMH	9560NGW R, AX201NGW
IdeaPad 3 CB 11AST5	NFA344A
IdeaPad Flex 3 11ADA05	NFA344A, RTL8822CE
Lenovo Legion S7 15IMH5	AX201NGW
Lenovo Legion S7 15ARH5	AX200NGW
Lenovo Legion 5P 15ARH05H	AX200NGW, RTL8822CE
Lenovo Legion 5 17ARH05H	AX200NGW, RTL8822CE

<b>Product Name</b>	<b>Wireless Modules</b>
Yoga 7 14ITL5	AX201NGW, 9560NGW R, RTL8822CE
Yoga 7 15ITL5	AX201NGW, 9560NGW R, RTL8822CE
Yoga Slim 7 Pro 14ITL5	AX201NGW, RTL8822CE
Yoga Slim 7 14IIL05	RTL8822CE, 9560NGW, AX201NGW
Yoga Slim 7 15IIL05	RTL8822CE, 9560NGW, AX201NGW
Yoga Slim 7 14ARE05	RTL8822CE, QCNFA344A, AX200NGW
Yoga Slim 7 15IMH05	AX201NGW
Yoga Creator 7 15IMH05	AX201NGW
Yoga Slim 7 14ITL05	AX201NGW
Yoga Slim 7 15ITL05	AX201NGW
Thinkbook 14 G2 ITL	9560NGW R, AX201NGW, RTL8822CE
Thinkbook 15 G2 ITL	9560NGW R, AX201NGW, RTL8822CE
Thinkbook 14 G2 ARE	AX200NGW, RTL8822CE, QCNFA344A
Thinkbook 15 G2 ARE	AX200NGW, RTL8822CE, QCNFA344A
Yoga 6 13ARE05	AX200NGW
IdeaPad 5 14ITL05	AX201NGW, 9560NGW R, RTL8822CE
IdeaPad 5 15ITL05	AX200NGW, 9560NGW R, RTL8822CE
ThinkBook 14s Yoga ITL	9560NGW R, AX201NGW, RTL8822CE
IdeaPad 5 14ALC05	AX200NGW, RTL8822CE, QCNFA344A
Yoga Slim 7 13ITL5	AX201NGW, 9560NGW, RTL8822CE
Yoga Slim 7 Carbon 13ITL5	AX201NGW, 9560NGW, RTL8822CE

<b>Product Name</b>	<b>Wireless Modules</b>
Thinkbook 13s G2 ITL	9560D2W R, AX201D2W
Thinkbook 14s G2 ITL	9560D2W R, AX201D2W
Thinkbook 13s G2 ARE	9260D2WL, AX200D2WL
Thinkbook 14s G2 ARE	9260D2WL, AX200D2WL
Lenovo IdeaPad 1 11ADA05	QCNFA344A, RTL8822CE
IdeaPad Flex 5 14ITL05	AX201NGW, 9560NGW R, RTL8822CE
IdeaPad Flex 5 15ITL05	AX201NGW, 9560NGW R, RTL8822CE
IdeaPad Flex 5 14ALC05	AX200NGW, RTL8822CE, QCNFA344A
IdeaPad Flex 5 15ALC05	AX200NGW, RTL8822CE, QCNFA344A
Lenovo IdeaPad S540-13ITL	AX201NGW, 9560NGW R, RTL8822CE
Yoga slim 7 Pro 14ARH5	AX200NGW, RTL8822CE
IdeaPad 5 Pro 14ITL6	AX201NGW, RTL8852AE, RTL8822CE, 9560NGW R
IdeaPad 5 Pro 14ACN6	AX200NGW, RTL8852AE, RTL8822CE, QCNFA344A



---

## Chapter 1. Notice for users in USA and Canada

Read this document before using your computer. This computer complies with the radio frequency and safety standards of any country or region in which it has been approved for wireless use. Install and use your computer according to the following instructions.

The latest Regulatory Notice manual is available on the Lenovo Web site. To download the manual, go to <http://www.lenovo.com/support> and then follow the on-screen instructions.

Lisez ce document avant d'utiliser votre ordinateur. Cet ordinateur est conforme aux normes de fréquence radioélectrique et de sécurité du pays ou de la région où son utilisation sans fil est autorisée. Installez et utilisez votre ordinateur en vous conformant aux instructions ci-dessous.

La dernière version du manuel Regulatory Notice est disponible sur le site Web de Lenovo. Pour télécharger le document, rendez-vous sur <http://www.lenovo.com/support> et suivez les instructions à l'écran.

---

### Approved wireless devices

This system contains the following wireless devices and underwent the certification process of FCC CFR 47 Part 2 section 1093, Part 15 Subpart C and Subpart E, Part 27, Part 22 Subpart H, Part 24 Subpart E, and Part 90 under each respective FCC ID below. The FCC ID is indicated on the bottom cover of your system.

#### Preinstalled wireless LAN/wireless WAN modules with Bluetooth function

- FCC ID: PD97265NGU (Model: 7265NGW)
- FCC ID: PD93165NGU (Model: 3165NGW)
- FCC ID: PD98265NG (Model: 8265NGW )
- FCC ID: PPD-QCNFA435 (Model: QCNFA435)
- FCC ID: PPD-QCNFA364AH (Model: QCNFA364)
- FCC ID: PPD-QCNFA344AH (Model: QCNFA344A)
- FCC ID: TX2-RTL8821CE (Model: RTL8821CE)
- FCC ID: TX2-RTL8822BE (Model: RTL8822BE)
- FCC ID: PD99260NG (Model: 9260NGW)
- FCC ID: PD99560NG (Model: 9560NGW)
- FCC ID: PD99462NG (Model: 9462NGW)
- FCC ID: TX2-RTL8822CE (Model: RTL8822CE)
- FCC ID: PD99560D2 (Model: 9560D2W)
- FCC ID: PD9AX200NG (Model: AX200NGW)
- FCC ID: PD9AX201NG (Model: AX201NGW)
- FCC ID: PD9AX201D2 (Model: AX201D2W)
- FCC ID: ZMOL850GL (Model: L850-GL)
- FCC ID: O57AX200NGW (Model: AX200NGW (Lenovo))
- FCC ID: PD99560NG (Model: 9560NGW R)
- FCC ID: O57IPS540A13 (for Lenovo IdeaPad S540-13ARE when using 9260NGW)

#### Notes:

- The wireless LAN, the Bluetooth, and the WiGig features operate at different frequencies exclusively, and transmit radio frequencies simultaneously.
- The following wireless LAN modules marketed in the USA and Canada do not support or function in the extended channels (12ch, 13ch):
  - Model: QCNFA435

---

## Preinstalled wireless LAN module

The wireless LAN module in your computer is preinstalled by Lenovo®, and you are prohibited to replace with other wireless adapter or remove it. If the device requires replacement due to some problem during warranty, it must be serviced by a Lenovo authorized servicer.

### 1. FCC ID location

The FCC ID for the preinstalled wireless LAN module is shown on the enclosure of your computer. For the location of the FCC ID label, see the *User Guide*.

### 2. FCC RF exposure compliance

The radiated output power of the wireless LAN module authorized to use for your computer is far below the FCC radio frequency exposure limits. Nevertheless, it shall be used in such a manner that the potential for human contact during normal operation is minimized as follows:

**CAUTION:**

**The total radiated energy from the antennas connected to the installed wireless LAN module, conforms to the FCC limit of the SAR (Specific Absorption Rate) requirement, regarding 47 CFR Part 2 section 1093, when the computer was tested in either conventional notebook or tablet computer orientations.**

The transmission antennas for the wireless LAN module are located in the LCD cover. See the *User Guide* for the location of the antennas.

### 3. Radio Frequency interference requirements

Each device has been tested and found to comply with the limits for a Class B digital device pursuant to FCC Part 15 Subpart B. Refer to "Electronic emission notices" on page 6.

When you use a wireless LAN module in the 802.11 a/n transmission mode, note that high power radars are allocated as primary users of the 5250 to 5350 MHz and 5650 to 5850 MHz bands. These radar stations can cause interference with and/or damage this device.

---

## Simultaneous use of RF transmitters

Your computer is approved for simultaneous use of one of the approved wireless LAN modules, the approved wireless WAN module, and the approved NFC module.

Make sure of the following conditions when you use any other external RF option device:

- When you use any other RF option device, you are requested to confirm that the device conforms to the RF Safety requirement and is approved to use for your computer.
- You must follow the RF Safety instructions of the RF option device that are included in the user manual of the RF option device.
- If the RF option device is prohibited to use in conjunction with another transmitters, you must turn off all other wireless features in your computer.

---

## Canada – Industry Canada (IC)

### Approved wireless devices

This system contains the following wireless devices and the IC certification number is as below. The IC certification number is indicated on the bottom cover of your system.

#### Preinstalled wireless LAN/wireless WAN modules with Bluetooth function

- IC: 1000M-7265NG (Model: 7265NGW)
- IC: 1000M-3165NG (Model: 3165NGW)
- IC: 1000M-8265NG (Model: 8265NGW )
- IC: 4104A-QCNFA435 (Model: QCNFA435)
- IC: 4104A-QCNFA364A (Model: QCNFA364)
- IC: 4104A-QCNFA344A (Model: QCNFA344A)
- IC: 6317A-RTL8821CE (Model: RTL8821CE)
- IC: 6317A-RTL8822BE (Model: RTL8822BE)
- IC: 1000M-9260NG (Model: 9260NGW)
- IC: 1000M-9560NG (Model: 9560NGW)
- IC: 1000M-9462NG (Model: 9462NGW)
- IC: 6317A-RTL8822CE (Model: RTL8822CE)
- IC: 1000M-9560D2 (Model: 9560D2W)
- IC: 1000M-AX200NG (Model: AX200NGW)
- IC: 1000M-AX201NG (Model: AX201NGW)
- IC: 1000M-AX201D2 (Model: AX201D2W)
- IC: 21374-L850-GL (Model: L850-GL)
- IC: 10407A-AX200NGW (Model: AX200NGW (Lenovo))
- IC: 1000M-9560NG (Model: 9560NGW R)
- IC: 10407A-IPS540A13 (for Lenovo IdeaPad S540-13ARE when using 9260NGW)

#### Notes:

- The wireless LAN, the Bluetooth, and the WiGig features operate at different frequencies exclusively, and transmit radio frequencies simultaneously.
- The following wireless LAN modules marketed in the USA and Canada do not support or function in the extended channels (12ch, 13ch):
  - Model: QCNFA435

### Preinstalled wireless LAN module

The IC Certification number for the wireless LAN module is shown on the enclosure of your computer. For the location of the IC Certification number, see the *User Guide* .

**Attention:** The wireless LAN module in your computer is preinstalled by Lenovo, and you are prohibited to replace with other wireless adapter nor remove it. If the device requires replacement due to some problem during warranty, it must be serviced by a Lenovo authorized servicer.

## Low power license-exempt radiocommunication devices (RSS-210, RSS-247)

Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

When you use a wireless LAN module in the 802.11 a/n transmission mode, note the following:

- The devices for the band 5150–5350 MHz are only for indoor usage to reduce potential for harmful interference to co-channel Mobile Satellite systems
- The devices for the band 5150–5350 MHz are only for indoor usage to reduce potential for harmful interference to co-channel Mobile Satellite systems
- High power radars are allocated as primary users (meaning they have priority) of 5250–5350 MHz and 5650–5850 MHz and these radars could cause interference and/or damage to LE-LAN (Licence-Exempt Local Area Network) devices.
- The maximum antenna gain permitted for devices in the 5250–5350 MHz, 5470–5725 MHz, and 5725–5825 MHz bands complies with the e.i.r.p. limit.

## Exposure of humans to RF fields (RSS-102)

The computers employ low gain integral antennas that do not emit RF field in excess of Health Canada limits for the general population; consult Safety Code 6, obtainable from Health Canada's Web site at <http://www.hc-sc.gc.ca>.

The radiated energy from the antennas connected to the wireless modules conforms to the Canada Portable RF exposure limit regarding IC RSS-102, Issue 5, Section 4, set forth for an uncontrolled environment, and are safe for intended operation in the conventional setting. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

---

## Canada – Industrie Canada (IC)

### Périphériques sans fil homologués

Ce système contient les périphériques sans fil suivants et le numéro d'homologation IC indiqué ci-dessous. Le numéro d'homologation IC figure sur la partie inférieure de votre système.

#### Modules de réseau local sans fil avec fonction Bluetooth préinstallés

- IC: 1000M-7265NG (modèle: 7265NGW)
- IC: 1000M-3165NG (modèle: 3165NGW)
- IC: 1000M-8265NG (modèle: 8265NGW )
- IC: 4104A-QCNFA435 (modèle: QCNFA435)
- IC: 4104A-QCNFA364A (modèle: QCNFA364)
- IC: 4104A-QCNFA344A (modèle: QCNFA344A)
- IC: 6317A-RTL8821CE (modèle: RTL8821CE)
- IC: 6317A-RTL8822BE (modèle: RTL8822BE)
- IC: 1000M-9260NG (modèle: 9260NGW)

- IC: 1000M-9560NG (modèle: 9560NGW)
- IC: 1000M-9462NG (modèle: 9462NGW)
- IC: 6317A-RTL8822CE (modèle: RTL8822CE)
- IC: 1000M-9560D2 (modèle: 9560D2W)
- IC: 1000M-AX200NG (modèle: AX200NGW)
- IC: 1000M-AX201NG (modèle: AX201NGW)
- IC: 1000M-AX201D2 (modèle: AX201D2W)
- IC: 21374-L850-GL (modèle: L850-GL)
- IC: 10407A-AX200NGW (modèle: AX200NGW (Lenovo))
- IC: 1000M-9560NG (modèle: 9560NGW R)
- IC: 10407A-IPS540A13 (Lenovo IdeaPad S540-13ARE, modèle: 9260NGW)

**Notes:**

- Les fonctions de réseau local sans fil, Bluetooth et WiGig sont opérationnelles à des fréquences différentes exclusivement et émettent des fréquences radio simultanément.
- Les modules de réseau local sans fil suivants commercialisés aux États-Unis et au Canada ne prennent pas en charge les canaux étendus (12ch, 13ch):
  - Modèle: QCNFA435

## Module réseau local sans fil préinstallé

Le numéro de certification IC correspondant au module de réseau local sans fil figure sur le boîtier de votre ordinateur. Pour connaître l'emplacement du numéro de certification IC, reportez-vous à le *guide d'utilisation*.

**Attention:** Le module réseau local sans fil est préinstallé sur votre ordinateur par Lenovo et il est interdit au client de le remplacer par un autre adaptateur sans fil ou de le supprimer. Si le périphérique doit être remplacé à cause d'un problème survenu pendant la période de garantie, l'opération doit être effectuée par un technicien agréé Lenovo.

## Appareils de radio-communication basse tension sans licence d'utilisation (CNR-210, CNR-247)

Le fonctionnement de ce type d'appareil est soumis aux deux conditions suivantes:

1. Cet appareil ne peut pas causer de perturbations électromagnétiques.
2. Cet appareil doit accepter toutes les perturbations reçues, y compris celles susceptibles d'occasionner un fonctionnement indésirable.

Lorsque vous utilisez un module de réseau local sans fil dans le mode de transmission 802.11 a/n, tenez compte des remarques suivantes:

- Les appareils destinés à la bande 5150–5350 MHz devront être exclusivement utilisés en intérieur afin de réduire les risques de perturbations électromagnétiques gênantes sur les systèmes de satellite mobile dans un même canal. Potential for harmful interference to co-channel Mobile Satellite systems
- Les radars à forte puissance sont désignés comme les utilisateurs principaux (c'est-à-dire qu'ils sont prioritaires) des bandes 5250–5350 MHz et 5650–5850 MHz. Ils peuvent provoquer des perturbations électromagnétiques sur les appareils de type LE-LAN (réseau de communication local sans licence) ou les endommager.

- Le gain d'antenne maximal autorisé pour les appareils dans les bandes de fréquence 5250-5350 MHz, 5470-5725 MHz et 5725-5825 MHz est conforme à la limite p.i.r.e (puissance isotrope rayonnée équivalente).

## Conformité des appareils de radiocommunication aux limites d'exposition humaine aux radiofréquences (CNR-102)

Les ordinateurs utilisent des antennes intégrales à faible gain qui n'émettent pas un champ électromagnétique supérieur aux normes imposées par Santé Canada pour la population. Consultez le Code de sécurité 6 sur le site Web de Santé Canada à l'adresse <http://www.hc-sc.gc.ca/>.

L'énergie émise par les antennes reliées aux modules sans fil respecte la limite d'exposition aux radiofréquences émises par les appareils portables au Canada telle que définie par Industrie Canada dans la section 4 du document CNR-102, version 5 pour un environnement non contrôlé et permet d'affecter sans danger le produit à l'usage auquel il est destiné. La réduction de l'exposition aux radiofréquences est possible si le produit peut être conservé aussi loin que possible du corps de l'utilisateur ou en définissant une puissance de sortie plus faible si une telle fonction est disponible.

---

## Electronic emission notices

### Federal Communications Commission (FCC) Declaration of Conformity

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an authorized dealer or service representative for help.

Lenovo is not responsible for any radio or television interference caused by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Responsible Party:

Lenovo (United States) Incorporated  
1009 Think Place-Building One  
Morrisville, NC 27560  
Email address: FCC@lenovo.com



## Usage environment and your health

The wireless device installed in the computer operates within the guidelines identified by radio frequency (RF) safety standards and recommendations; therefore, Lenovo believes this product is safe for use by consumers. These standards and recommendations reflect the consensus of the worldwide scientific community, and result from deliberations of panels and committees of scientists, who continually review and interpret the extensive research literature.

In some situations or environments, the use of wireless devices might be restricted by the proprietor of a building or responsible representatives of an organization. For example, these situations and areas might include the following:

- On board of airplanes, in hospitals, or near petrol stations, blasting areas (with electro-explosive devices), medical implants, or body-worn electronic medical devices, such as pace makers.
- In any other environment where the risk of interference to other devices or services is perceived or identified as harmful.

If you are uncertain of the policy that applies to the use of wireless devices in a specific area (such as an airport or hospital), you are encouraged to ask for authorization to use a wireless device prior to turning on the computer.



---

## Chapter 2. Europe – EU Declaration of Conformity



	AT	BE	BG	CH	CY	CZ	DE	DK	EE	EL	ES
	FI	FR	HR	HU	IE	IS	IT	LI	LT	LU	LV
	MT	NL	NO	PL	PT	RO	SE	SI	SK	TR	UK

Table 1. EU Directive 2014/53/EU

Technology	Frequency band [MHz]	Maximum transmit power (less than)
WLAN 802.11b/g/n/ax	2400 - 2483.5	20 dBm
WLAN 802.11a/n/ac/ax	5150 - 5725	23 dBm
WLAN 802.11a/n/ac/ax	5725 - 5875	13.98 dBm
Bluetooth BR/EDR/LE	2400 - 2483.5	20 dBm
WWAN UMTS	1/3/8	24.5 dBm
WWAN LTE	1/3/7/8/20/28	24 dBm

---

## English

Hereby, Lenovo (Singapore) Pte. Ltd., declares that the wireless equipment listed in this document is in compliance with the Radio Equipment Directive 2014/53/EU.

The full text of the system EU declaration of conformity is available at the following Internet addresses:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### EU Frequency band restriction for a wireless LAN

Usage of this device is limited to indoor in the band 5150 MHz to 5350 MHz (channels 36, 40, 44, 48, 52, 56, 60, 64).

### RF exposure information

This device meets the EU requirements and the International Commission on Non-Ionizing Radiation Protection (ICNIRP) guidelines for general public's exposure to electromagnetic fields. To comply with the RF exposure requirements, refer to the *Setup Guide* for your product for the minimum safe-operating separation distance and SAR values.

---

## Bulgarian

С настоящото Lenovo (Singapore) Pte. Ltd. декларира, че безжичното оборудване, споменато в този раздел, съответства на Директивата за радиооборудване 2014/53/EC.

Пълният текст на декларацията за съответствие с ЕС относно системата е наличен на следния адрес в интернет:

<https://www.lenovo.com/us/en/compliance/eu-doc>

#### **Ограничение в ЕС за честотни ленти за безжичен LAN**

Употребата на това устройство е ограничена само на закрито в диапазона 5150 MHz до 5350 MHz (канали 36, 40, 44, 48, 52, 56, 60, 64).

### **Информация за излагане на радиочестоти**

Това устройство отговаря на изискванията на ЕС и насоките на международната комисия за защита от нейонизираща радиация (ICNIRP) за общо обществено излагане на електромагнитни полета. За съответствие с изискванията за излагане на радиочестоти вижте *Ръководство за настройка* на продукта си за минимално разделно разстояние за безопасна употреба и стойности за SAR.

---

## **Croatian**

Lenovo (Singapore) Pte. Ltd. ovime izjavljuje da je bežična oprema navedena u ovom dokumentu uskladena s Direktivom o radijskoj opremi 2014/53/EU.

Potpuni tekst deklaracije EU-a o sukladnosti sustava dostupan je na sljedećoj internetskoj adresi:

<https://www.lenovo.com/us/en/compliance/eu-doc>

#### **Ograničenje frekvencijskog pojasa za bežični LAN u EU-u**

Upotreba uređaja ograničena je na zatvorene prostore unutar pojasa od 5150 MHz do 5350 MHz (kanali 36, 40, 44, 48, 52, 56, 60, 64).

### **Informacije o izlaganju radijskoj frekvenciji**

Ovaj uređaj zadovoljava zahtjeve EU-a i smjernice Međunarodne komisije za zaštitu od neionizirajućeg zračenja o izlaganju javnosti elektromagnetskim poljima. Da bi oprema bila uskladena sa zahtjevima o izlaganju radijskoj frekvenciji, u *priručniku za postavljanje* proizvoda potražite vrijednosti minimalne sigurne udaljenosti i specifične brzine apsorpcije.

---

## **Czech**

Společnost Lenovo (Singapore) Pte. Ltd. tímto prohlašuje, že bezdrátová zařízení uvedená v tomto dokumentu splňují základní i další relevantní požadavky směrnice o rádiových zařízeních 2014/53/EU.

Úplné znění EU prohlášení o shodě systému je dostupné na následujících internetových adresách:

<https://www.lenovo.com/us/en/compliance/eu-doc>

#### **Omezení EU pro frekvenční pásma bezdrátové sítě LAN**

Použití tohoto zařízení je omezeno na vnitřní prostory a frekvenční pásma 5150 až 5350 MHz (kanály 36, 40, 44, 48, 52, 56, 60, 64).

### **Informace o vystavení radiofrekvenčnímu záření**

Toto zařízení splňuje požadavky EU a pokyny ICNIRP (International Commission on Non-Ionizing Radiation Protection – Mezinárodní komise pro ochranu před neionizujícím zářením) týkající se vystavení obecné veřejnosti elektromagnetickým polím. Informace o minimální bezpečné provozní vzdálenosti a hodnotách SAR pro váš produkt, které jsou v souladu s požadavky na ochranu před radiofrekvenčním zářením, najdete v *Návodu k nastavení*.

---

## Danish

Lenovo (Singapore) Pte. Ltd. erklærer hermed, at det trådløse udstyr, der er angivet i dette dokument, overholder direktivet om radioudstyr 2014/53/EU.

Hele teksten til EU's overensstemmelseserklæring findes på følgende internetadresser:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Restriktioner for frekvensbånd i EU for et trådløst LAN**

Brug af denne enhed er begrænset til indendørs brug i frekvensbåndet 5150 MHz til 5350 MHz (kanal 36, 40, 44, 48, 52, 56, 60, 64).

## **Oplysninger om radiobølgeskspønering**

Denne enhed opfylder EU-kravene og ICNIRP-retningslinjerne ( International Commission on Non-Ionizing Radiation Protection) for eksponering for elektromagnetiske felter. For at overholde RF-eksponeringskravene, kan du se *Brugervejledningen* for dit produkt for den minimale sikkerhedsafstandsafstand og SAR-værdier.

---

## Dutch

Hierbij verklaart Lenovo (Singapore) Pte. Ltd. dat de draadloze apparatuur die in dit artikel is aangegeven voldoet aan de richtlijn 2014/53/EU voor radioapparatuur.

De volledige tekst van de EU-verklaring van conformiteit van het systeem is beschikbaar op de volgende internetpagina:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **EU-beperking van frequentieband voor een draadloos LAN**

Gebruik van dit apparaat is beperkt tot gebruik binnenshuis in de band van 5150 MHz tot 5350 MHz (kanalen 36, 40, 44, 48, 52, 56, 60, 64).

## **Informatie over blootstelling aan radiogolven**

Dit apparaat voldoet aan de vereisten van de EU en de richtlijnen van de ICNIRP (International Commission on Non-Ionizing Radiation Protection) voor blootstelling van het algemene publiek aan elektromagnetische velden. Om te voldoen aan de vereisten voor blootstelling aan radiogolven, raadpleegt u de *Installatiehandleiding* voor uw product voor de minimale veilige afstand en de SAR-waarden.

---

## Estonian

Siinkohal kinnitab ettevõte Lenovo (Singapore) Pte. Ltd., et käesolevas dokumendis kirjeldatud juhtmeta seadmed on kooskõlas raadioseadmete direktiiviga 2014/53/EL.

Süsteemi ELi vastavusdeklaratsiooni täielik tekst on saadaval järgmisel Interneti-aadressil:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **EL-i sagedusvahemiku piirang traadita side LAN-ile**

Seda seadet võib kasutada siseruumides sagedusvahemikus 5150–5350 MHz (kanalid 36, 40, 44, 48, 52, 56, 60, 64).

## Raadiosagedusliku kiirguse teave

Seade vastab EL-i nõuetele ja Rahvusvahelise mitteioniseeriva kiirguse eest kaitsmise komisjoni (ICNIRP) juhistele elanikkonna elektromagnetiliste väljadega kokkupuute kohta. Raadiosageduslikule kiirgusele sätestatud nõuetele vastamiseks vt oma toote kohta käivat vähimat ohutut töötamiskaugust ja SAR-i vääruseid *seadistusjuhendist*.

---

## Finnish

Lenovo (Singapore) Pte. Ltd. ilmoittaa täten, että tässä asiakirjassa mainittu langaton laite on radiolaitedirektiivin 2014/53/EU mukainen.

Lausuma järjestelmän EU-säännöstenmukaisuudesta on saatavilla kokonaisuudessaan seuraavassa Internet-osoitteessa:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Langattoman lähiverkon taajuusalueen rajoitus EU:n alueella**

Tämä laite on tarkoitettu käytettäväksi sisätiloissa taajuusalueella 5 150–5 350 MHz (kanavat 36, 40, 44, 48, 52, 56, 60 ja 64).

## **Tietoja radiotaajuiselle sähelylle altistumisesta**

Tämä laite täyttää Euroopan unionin vaatimukset ja kansainvälisen ionisoimattoman sähelyn toimikunnan (ICNIRP, International Commission on Non-Ionizing Radiation Protection) suositukset, jotka koskevat väestön altistumista sähkömagneettisille kentille. Saat lisätietoja radiotaajuiselle sähelylle altistumista koskevien vaatimusten noudattamisesta tutustumalla tuotteen *asennusoppaassa* ilmoitettuihin SAR-arvoihin ja turvallisen käytön edellyttämään vähimmäisetäisyteen.

---

## French

Par la présente, Lenovo (Singapore) Pte. Ltd., déclare que les équipements sans fil listés dans ce document sont conformes à la directive 2014/53/EU sur les équipements radio.

Le texte complet de la déclaration de l'UE de conformité du système est disponible à l'adresse suivante:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Restriction liée à une bande de fréquence pour un réseau local sans fil au sein de l'Union européenne**

Ce périphérique doit être utilisé exclusivement à l'intérieur, dans la bande de fréquence de 5150 à 5350 MHz (canaux 36, 40, 44, 48, 52, 56, 60, 64).

## **Informations sur l'exposition aux RF**

Ce périphérique respecte les directives de l'UE et de la Commission internationale pour la protection contre les radiations non-ionisantes (ICNIRP) concernant l'exposition du public à des champs électromagnétiques. Pour répondre aux exigences en matière d'exposition aux RF, reportez-vous au *Guide de configuration* de votre produit afin de connaître la distance de séparation minimale pour une utilisation en toute sécurité, ainsi que les valeurs de débit d'absorption spécifique.

---

## German

Hiermit erklärt Lenovo (Singapore) Pte. Ltd., dass das in diesem Dokument aufgelistete drahtlose Gerät die Funkanlagen-Richtlinie 2014/53/EU erfüllt.

Die vollständige EU-Konformitätserklärung für das System finden Sie unter der folgenden Internetadresse:

<https://www.lenovo.com/us/en/compliance/eu-doc>

#### **EU-Frequenzbandeinschränkung für drahtloses LAN**

Die Verwendung dieses Gerätes ist im Frequenzband zwischen 5.150 und 5.350 MHz (Kanäle 36, 40, 44, 48, 52, 56, 60, 64) auf die Verwendung im Innenbereich beschränkt.

### **Informationen zur HF-Exposition**

Dieses Gerät erfüllt die EU-Anforderungen sowie die Richtlinien der International Commission on Non-Ionizing Radiation Protection (ICNIRP) hinsichtlich der Exposition der Bevölkerung gegenüber elektromagnetischen Feldern. Um die Anforderungen bezüglich der HF-Exposition zu erfüllen, lesen Sie die *Einrichtungsanleitung* zu Ihrem Produkt im Hinblick auf den Mindestabstand für einen sicheren Betrieb und die SAR-Werte.

---

### **Greek**

Με την παρούσα, η Lenovo (Singapore) Pte. Ltd., δηλώνει ότι ο ασύρματος εξοπλισμός που αναφέρεται στο παρόν έγγραφο συμμορφώνεται με την Οδηγία περί Ραδιοεξοπλισμού 2014/53/EU.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης της ΕΕ για το σύστημα διατίθεται στην εξής διεύθυνση στο Internet:

<https://www.lenovo.com/us/en/compliance/eu-doc>

#### **Περιορισμός ζώνης συχνοτήτων στην ΕΕ για ασύρματο LAN**

Η χρήση αυτής της συσκευής περιορίζεται σε εσωτερικούς χώρους στη ζώνη συχνοτήτων 5150 MHz έως 5350 MHz (κανάλια 36, 40, 44, 48, 52, 56, 60, 64).

### **Πληροφορίες σχετικά με την έκθεση στις ραδιοσυχνότητες (RF)**

Η συγκεκριμένη συσκευή πληροί τις απαιτήσεις της ΕΕ και τις οδηγίες της Διεθνούς Επιτροπής για την Προστασία από τις Μη Ιοντίζουσες Ακτινοβολίες (ICNIRP) σχετικά με την έκθεση του ευρύτερου κοινού στα ηλεκτρομαγνητικά πεδία. Για την πλήρη συμμόρφωση με τις απαιτήσεις περί έκθεσης στις ραδιοσυχνότητες (RF), ανατρέξτε στον Οδηγό εγκατάστασης του προϊόντος σας για πληροφορίες σχετικά με την ελάχιστη απόσταση διαχωρισμού για ασφαλή λειτουργία και τις τιμές SAR.

---

### **Hungarian**

A Lenovo (Singapore) Pte. Ltd. kijelenti, hogy a jelen dokumentumban említett vezeték nélküli készülék megfelel a 2014/53/EU számú, rádióberendezésekéről szóló direktívában foglaltaknak.

A rendszer EU-s megfelelőségi nyilatkozatának teljes szövege a következő webhelyen tekinthető meg:

<https://www.lenovo.com/us/en/compliance/eu-doc>

#### **Frekvenciatartományra vonatkozó európai uniós korlátozás vezeték nélküli LAN-hálózatokhoz**

Az eszköz használata beltérre korlátozódik az 5150–5350 MHz tartományban (csatornák: 36, 40, 44, 48, 52, 56, 60, 64).

## RF-kitettségre vonatkozó információk

Ez az eszköz megfelel a személyek elektromágneses mezőknek való kitettségére vonatkozó, az EU és az International Commission on Non-Ionizing Radiation Protection (ICNIRP – Nemzetközi Bizottság a Nem-ionizáló Sugárzással Szembeni Védelemről) által előírt követelményeknek. Az RF-kitettségre vonatkozó követelményeknek való megfelelésről (többek között a biztonságos használat minimális távolságáról és a SAR-értékekről) az *Üzembe helyezési útmutatóban* talál további információt.

---

## Italian

Con la presente documentazione, Lenovo (Singapore) Pte. Ltd. dichiara che l'apparecchiatura wireless indicata in questo documento è conforme alla direttiva 2014/53/EU sulle apparecchiature radio.

Il testo integrale della dichiarazione di conformità dei sistemi dell'UE è disponibile al seguente indirizzo Internet:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### Restrizioni UE sulla banda di frequenza per una WLAN (wireless LAN)

L'utilizzo di questo dispositivo è limitato ad ambienti chiusi in banda compresa tra 5150 MHz e 5350 MHz (canali 36, 40, 44, 48, 52, 56, 60, 64).

## Informazioni sull'esposizione RF

Questo dispositivo rispetta i requisiti EU e le linee guida ICNIRP (International Commission on Non-Ionizing Radiation Protection) per l'esposizione generale ai campi elettromagnetici. Per rispettare i requisiti di conformità dell'esposizione RF, consultare la *Guida di configurazione del prodotto* per conoscere la distanza di sicurezza operativa minima e i valori SAR.

---

## Latvian

Ar šo uzņēmums Lenovo (Singapore) Pte. Ltd. paziņo, ka šajā dokumentā norādītais bezvadu aprīkojums atbilst radioiekārtu Direktīvai 2014/53/EK.

Pilns ES atbilstības deklarācijas teksts ir pieejams šajā interneta adresē:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### ES frekvenču joslu ierobežojums bezvadu LAN adapterim

Šī ierīce ir paredzēta izmantošanai iekštelpās joslās no 5150 MHz līdz 5350 MHz (kanālos 36, 40, 44, 48, 52, 56, 60, 64).

## Informācija par pakļaušanu RF starojumam

Šī ierīce atbilst ES prasībām un vadlīnijām, ko publicējusi Starptautiskā komisija aizsardzībai pret nejonizējošo starojumu (International Commission on Non-Ionizing Radiation Protection – ICNIRP), attiecībā uz vispārīgu sabiedrības pakļaušanu elektromagnētiskajam laukam. Lai nodrošinātu prasības par pakļaušanu RF starojumam, sk. jūsu produkta *Iestatīšanas pamācību* un meklējiet informāciju par minimālo drošo lietošanas attālumu un SAR vērtības.

---

## Lithuanian

„Lenovo (Singapore) Pte. Ltd.“ pareiškia, kad belaidē įranga, nurodyta šiame dokumente, atitinka Radijo įrangos direktyvos 2014/53/ES reikalavimus.

Visą sistemos ES atitikties deklaracijos tekstą galite rasti šiuo internetiniu adresu:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Belaidžio LAN ES dažnių diapazono apribojimas**

Šį įrenginį patalpose galima naudoti 5 150–5 350 MHz dažnių diapazonu (kanalai: 36, 40, 44, 48, 52, 56, 60, 64).

### **Informacija apie radijo dažnių poveikį**

Šis įrenginys atitinka ES reikalavimus ir Tarptautinės apsaugos nuo nejonizuojančiosios spinduliuotės komisijos (ICNIRP) gaires dėl elektromagnetinių laukų poveikio plėčiajai visuomenei. Kad laikytumėtės radijo dažnių poveikio apribojimo reikalavimų, savo produkto *Sąrankos vadove* ieškokite informacijos apie minimalų saugų naudojimo atstumą ir SAR (savitiosios sugerties sparta, angl. „Specific Absorption Rate“) vertes.

---

## **Norwegian**

Lenovo (Singapore) Pte. Ltd. erklærer herved at det trådløse utstyret som er oppført i dette kapittelet, er i samsvar med direktiv 2014/53/EU om radioutstyr.

Hele teksten til EU-s samsvarserklæring finner du på følgende Internett-adresse:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Begrensinger for frekvensbånd i EU for trådløst LAN**

Denne enheten er begrenset til innendørs bruk i frekvensbåndet 5150 til 5350 MHz (kanal 36, 40, 44, 48, 52, 56, 60, 64).

### **Informasjon om RF-eksponering**

Denne enheten oppfyller EU-kravene og IEC/IEEE-retningslinjene (International Commission on Non-Ionizing Radiation) for eksponering for elektromagnetiske felter ved generell bruk. Se produktets *installasjonsveiledning* for informasjon om minimumsavstand for trygg bruk og SAR-verdiene som overholder RF-eksponeringskravene.

---

## **Polish**

Lenovo (Singapore) Pte. Ltd., niniejszym oświadcza, że urządzenia bezprzewodowe wymienione w tym dokumencie spełniają wymagania dyrektywy w sprawie sprzętu radiowego 2014/53/UE.

Pełna treść deklaracji zgodności systemu jest dostępna na następującej stronie internetowej:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Ograniczenia dotyczące pasm częstotliwości w UE dla połączeń bezprzewodowych LAN**

Urządzenie jest przeznaczone do używania wewnątrz budynków, w pasmach częstotliwości 5150 do 5350 MHz (kanaly 36, 40, 44, 48, 52, 56, 60 i 64).

### **Informacje o ekspozycji na częstotliwości radiowe**

To urządzenie spełnia wymagania UE i wytyczne Międzynarodowej Komisji ds. Ochrony przed Promieniowaniem Niejonizującym (ICNIRP) dotyczące wystawienia ludzi na działanie pól elektromagnetycznych. W celu spełnienia wymagań dotyczących wystawienia na działanie częstotliwości

radioowych zobacz *Podręcznik konfiguracji* do swojego produktu, aby sprawdzić minimalną bezpieczną odległość podczas obsługi i wartości SAR.

---

## Portuguese

A Lenovo (Singapore) Pte. Ltd., declara por este meio que o equipamento sem fios listado neste documento está em conformidade com a Diretiva de Equipamento de Rádio 2014/53/UE.

O texto integral da declaração de conformidade da UE do sistema está disponível no seguinte endereço na Internet:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Restrição da banda de frequências na UE para uma LAN sem fios**

A utilização deste dispositivo está limitada à utilização no interior, na banda 5150 a 5350 MHz (canais 36, 40, 44, 48, 52, 56, 60, 64).

## Informações sobre exposição a RF

Este dispositivo cumpre os requisitos da UE e as diretrizes da International Commission on Non-Ionizing Radiation Protection (ICNIRP) para exposição do público geral a campos eletromagnéticos. Para estar em conformidade com os requisitos de exposição a RF, consulte o *Manual de Configuração* do produto para ficar a saber a distância mínima de separação para uma operação segura e os valores SAR.

---

## Romanian

Prin prezenta, Lenovo (Singapore) Pte. Ltd., declară că echipamentul fără fir prezentat în acest document este în conformitate cu Directiva privitoare la echipamentele radio 2014/53/EU.

Textul complet al declarației de conformitate UE a sistemului este disponibil la următoarele adrese:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Restricția UE privind banda de frecvență a unei rețele LAN fără fir**

Utilizarea acestui dispozitiv este limitată la spațiile interioare, în banda de 5.150 – 5.350 MHz (canalele 36, 40, 44, 48, 52, 56, 60, 64).

## Informații privind expunerea la frecvențele radio

Acest dispozitiv îndeplinește cerințele UE și instrucțiunile Comisiei internaționale pentru protecția împotriva radiațiilor neionizante (ICNIRP) referitoare la expunerea persoanelor la câmpuri electromagnetice. Pentru a respecta cerințele privind expunerea la frecvențele radio, consultați *Ghid de configurare* al produsului, pentru distanță minimă de utilizare în siguranță și pentru valorile SAR.

---

## Slovenian

Lenovo (Singapore) Pte. Ltd. s tem izjavlja, da je brezžična oprema, navedena v tem dokumentu, skladna z direktivo o radijski opremi 2014/53/EU.

Celotno besedilo izjav EU o skladnosti je na voljo na tem internetnem naslovu:

<https://www.lenovo.com/us/en/compliance/eu-doc>

## **Omejitve Evropske unije glede frekvenčnega pasu za brezžična krajevna omrežja**

Ta naprava je omejena na notranjo uporabo v pasu od 5150 do 5350 MHz (kanali 36, 40, 44, 48, 52, 56, 60, 64).

## **Informacije o izpostavljenosti RF-sevanju**

Ta naprava izpolnjuje zahteve EU in smernice Mednarodne komisije za varstvo pred neionizirnimi sevanji (International Commission on Non-Ionizing Radiation Protection – ICNIRP) za izpostavljenost splošne javnosti elektromagnetskim poljem. Informacije za izpolnjevanje zahtev glede izpostavljenosti RF-sevanju so v *navodilih za uporabo za ustrezen izdelek*, v katerih so navedene najmanjše ločitvene razdalje za varno uporabo in vrednosti SAR.

---

## **Slovakian**

Spoločnosť Lenovo (Singapore) Pte. Ltd. týmto vyhlasuje, že bezdrôtové zariadenie uvedené v tomto dokumente je v súlade so smernicou o rádiových zariadeniach 2014/53/EÚ.

Úplné znenie systémového vyhlásenia EÚ o zhode je k dispozícii na týchto internetových adresách:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Obmedzenie frekvenčného pásma EÚ pre bezdrôtovú sieť LAN**

Používanie tohto zariadenia je obmedzené na interiér vo frekvenčnom pásme 5 150 až 5 350 MHz (kanály 36, 40, 44, 48, 52, 56, 60, 64).

## **Informácie o vystavení rádiovrekvenčnému žiareniu**

Toto zariadenie využíva požiadavkám EÚ a smerniciam Medzinárodnej komisie pre ochranu pred neionizujúcim žiareniom (ICNIRP), ktoré upravujú vystavenie širokej verejnosti elektromagnetickým poliam. Na zaistenie súladu s požiadavkami v oblasti vystavenia rádiovrekvenčnému žiareniu sa oboznámte s *Príručkou o nastavení*, ktorá obsahuje informácie o minimálnej vzdialosti vyžadovanej na bezpečné používanie a o hodnotách SAR.

---

## **Spanish**

Mediante el presente documento, Lenovo (Singapore) Pte. Ltd., declara que el equipo inalámbrico indicado en este documento cumple con la Directiva de Equipos de Radio 2014/53/UE.

El texto completo de la declaración de conformidad del sistema de la UE está disponible en la siguiente dirección de Internet:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Restricción de banda de frecuencia de la UE para LAN inalámbrica**

La utilización de este dispositivo está limitada a interiores en la banda de 5150 MHz a 5350 MHz (canales 36, 40, 44, 48, 52, 56, 60, 64).

## **Información de exposición a RF**

Este dispositivo satisface los requisitos de la UE y las directrices de la International Commission on Non-Ionizing Radiation Protection (ICNIRP) sobre la exposición del público general a campos electromagnéticos. Para cumplir los requisitos de exposición a RF, consulte la *Guía de instalación* del producto, donde encontrará la información acerca de la distancia de separación mínima segura y los valores de SAR.

---

## Swedish

Härmed intygar Lenovo (Singapore) Pte. Ltd. att den trådlösa utrustningen i detta dokument överensstämmer med direktivet för radioutrustning 2014/53/EU.

Den fullständiga texten i EU:s deklaration om överensstämmelse finns tillgänglig på:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Frekvensområdesbegränsning inom EU för trådlöst nätverk**

Enheten får bara användas inomhus i frekvensområdet 5150–5350 MHz (kanal 36, 40, 44, 48, 52, 56, 60, 64).

## **Information om exponering för radiovågor**

Denna enhet överensstämmer med EU:s krav och ICNIRP:s (International Commission on Non-Ionizing Radiation Protection) riktlinjer avseende allmänhetens exponering för elektromagnetiska fält. För att uppfylla kraven på exponering för radiovågor, se information om minsta avstånd för säker användning samt SAR-värden i *installationshandboken*.

---

## Turkish

Lenovo (Singapore) Pte. Ltd., bu belgede listelenen kablosuz cihazların temel gereksinimler ve Radyo Ekipmanları Yönetmeliği 2014/53/EC ile uyumlu olduğunu beyan eder.

Sistem AB uyumluluk bildiriminin tam metni şu İnternet adresinde sunulmaktadır:

<https://www.lenovo.com/us/en/compliance/eu-doc>

### **Kablosuz LAN için AB Frekans bandı kısıtlaması**

Bu cihazın kullanımı iç mekanlarda, 5150 - 5350 MHz bant aralığı (36, 40, 44, 48, 52, 56, 60, 64 kanalları) ile sınırlıdır.

## **RF maruz kalma bilgileri**

Bu cihaz, kamunun elektromanyetik alanlara maruz kalmasına ilişkin AB gereksinimlerine ve Uluslararası Non-İyonizan Radyasyondan Korunma Komitesi (International Commission on Non-Ionizing Radiation Protection-ICNIRP) önerilerine uygundur. RF maruz kalma gereksinimlerine uyum gereği, minimum güvenli çalışma mesafesi ve SAR değerleri için ürününüzü *Kurulum Kılavuzu*'na bakın.

---

## Chapter 3. Regulatory notices for other countries/regions

This chapter provides wireless information about the following countries/regions.

---

### Notice for users in Argentina (Nota para uso en Argentina)



#### **Modelo: Intel 3165NGW**

Equipo: Acceso Inalambrico De Red

CNC: C-14446

#### **Modelo: Intel 7265NGW**

Equipo: Acceso Inalambrico De Red

CNC: C-13275

#### **Modelo: Intel 8265NGW**

Equipo: Transceptor

CNC: C-16376

#### **Modelo: Qualcomm QCNFA344A**

Equipo: Transceptor

CNC: C-14869

#### **Modelo: Qualcomm QCNFA364**

Equipo: Acceso Inalambrico De Red

CNC: C-14866

#### **Modelo: Qualcomm QCNFA435**

Equipo: Transceptor

CNC: C-14476

#### **Modelo: Realtek RTL8821CE**

Equipo: Transceptor

CNC: C-17250

## **Modelo: Realtek RTL8822BE**

Equipo: Transceptor

CNC: C-16809

## **Modelo: Intel 9260NGW**

Equipo: Acceso Inalambrico De Red

CNC: C-20821

## **Modelo: Intel 9560NGW**

Equipo: Acceso Inalambrico De Red

CNC: C-20824

## **Modelo: Intel 9560NGW R**

Equipo: Acceso Inalambrico De Red

CNC: C-20824

## **Modelo: Intel 9462NGW**

Equipo: Acceso Inalambrico De Red

CNC: C-20987

## **Modelo: Realtek RTL8822CE**

Equipo: Transceptor

CNC: C-22785

## **Modelo: Intel 9560D2W**

Equipo: Acceso Inalambrico De Red

CNC: C-20985

## **Modelo: Intel AX200NGW**

Equipo: Acceso Inalambrico De Red

CNC: C-22838

## **Modelo: Intel AX201NGW**

Equipo: Acceso Inalambrico De Red

CNC: C-22446

## Modelo: Intel AX201D2W

Equipo: Acceso Inalambrico De Red

CNC: C-22445

## Modelo: L850-GL

CNC: H-21331

---

### Notice for users in Chile (Nota para uso en Chile)

Modelo	SUBTEL
Lenovo IdeaPad C340-14IWL	N° 1297/DO N° 53169/F60
Lenovo IdeaPad C340-15IWL	N° 1295/DO N° 53171/F60
Lenovo IdeaPad C340-14API	N° 1296/DO N° 53170/F60
Lenovo IdeaPad S340-14IWL	N° 1091/DO N° 53006/F26
Lenovo IdeaPad S340-15IWL	N° 1091/DO N° 53006/F26
Lenovo IdeaPad S340-15IWL Touch	N° 1091/DO N° 53006/F26
Lenovo IdeaPad S340-14API	N° 1091/DO N° 53006/F26
Lenovo IdeaPad S340-15API	N° 1091/DO N° 53006/F26
Lenovo IdeaPad S340-15API Touch	N° 1091/DO N° 53006/F26
Lenovo IdeaPad S540-14IWL	N° 1087/DO N° 53002/F26
Lenovo IdeaPad S540-14API	N° 1086/DO N° 53001/F26
Lenovo Legion Y740-15IRH	N° 4127/DO N° 54703/F60
Lenovo Legion Y740-15IRHg	N° 4126/DO N° 54704/F60
Lenovo Legion Y740-17IRH	N° 4125/DO N° 54705/F60
Lenovo Legion Y740-17IRHg	N° 4124/DO N° 54706/F60
Lenovo ThinkBook 13s-IWL	N° 7280/DO N° 56155/F60
Lenovo ThinkBook 14s-IWL	N° 10494/DO N° 57840/F60
Lenovo Yoga C640-13IML	N° 10738/DO N° 57851/F71
Lenovo 500e Chromebook 2nd Gen	N° 9121/DO N° 57047/F60
Lenovo 300e Chromebook 2nd Gen	N° 9118/DO N° 57050/F60
Lenovo 100e Chromebook 2nd Gen	N° 9122/DO N° 57046/F60
Lenovo 300e Chromebook 2nd Gen MTK	N° 9119/DO N° 57049/F60
Lenovo 100e Chromebook 2nd Gen MTK	N° 9120/DO N° 57048/F60
Lenovo Yoga C940-14IIL	N° 11678/DO N° 58448/F60
Lenovo Yoga C940 BE-14IIL	N° 11677/DO N° 58449/F60
Lenovo Yoga S740-14IIL	N° 9908/DO N° 57435/F60
Lenovo Yoga S940-14IIL	N° 11261/DO N° 58059/F71
Lenovo Yoga S730-13IML	N° 11059/DO N° 57978/F71

Modelo	SUBTEL
Lenovo Yoga S740-15IRH	Nº 10287/DO N° 57749/F60
Lenovo IdeaPad S340-14IIL	Nº 11467/DO N° 58301/F60
Lenovo IdeaPad S340-14IML	Nº 11468/DO N° 58302/F60
Lenovo IdeaPad S340-15IIL	Nº 11469/DO N° 58303/F60
Lenovo IdeaPad S340-13IML	Nº 11531/DO N° 58327/F14
Lenovo IdeaPad S340-13IML	Nº 11531/DO N° 58327/F14
Lenovo IdeaPad S540-13IML	Nº 13353/DO N° 59219/ F60
Lenovo ThinkBook 14-IML	Nº 14127/DO N° 59778/ F60
Lenovo ThinkBook 14-IIL	Nº 14127/DO N° 59778/ F60
Lenovo ThinkBook 15-IML	Nº 14126/DO N° 59777/ F60
Lenovo ThinkBook 15-IIL	Nº 14126/DO N° 59777/ F60
Lenovo IdeaPad S540-13API	Nº 12441/DO N° 58795/F60
Lenovo IdeaPad S540-14IML	Nº 11380/DO N° 58274/F60
QCNFA344A	Nº 4957/DO 23081/F-25
Lenovo IdeaPad S540-15IML	Nº 11386/DO N° 58268/ F60
Yoga Slim 7 14IIL05	Nº 15951/DO N° 60470/ F60
Yoga Slim 7 15IMH05	Nº 1101/DO N° 62027/ F60
Yoga Slim 7 14ARE05	Nº 2629/DO N° 62769/ F39
Lenovo Legion 7 15IMHg05	Nº 3337/DO N° 63271/ F39
Yoga Slim 7 15IIL05	Nº 0588/DO N° 61803/ F60
Lenovo IdeaPad 1 11IGL05	Nº 16424/DO N° 61034/ F60
Lenovo ThinkBook Plus	Nº 3139/DO N° 63043/ F28
IdeaPad 5 15IIL05	Nº 2477/DO N° 61498/F71
IdeaPad 5 15ARE05	Nº 3287/DO N° 63285/F60
Lenovo IdeaPad S540-13ARE	Nº 5837/DO N° 65167/F39
IdeaPad Flex 5 15IIL05	Nº 5415/DO N° 64489/F23
Lenovo Legion 7 15IMH05	Nº 5421/DO N° 64766/F23
IdeaPad Flex 5 14ARE05	Nº 5924 /DO N° 64478/ F23
IdeaPad Flex 5 14IIL05	Nº 5927 /DO N° 64487/ F23
Lenovo IdeaPad Slim 1-11AST-05	Nº 15018/DO N° 60327/ F60
Lenovo Legion 5 15ARH05	Nº 6089 /DO N° 65257/ F39
Lenovo Legion 5P 15IMH05H	Nº 6034 /DO N° 65262/ F39
Lenovo Legion 5P 15IMH05	Nº 6035 /DO N° 65263/ F39
Lenovo Legion 5 15IMH05	Nº 6944 /DO N° 65412/ F23
Yoga Duet 7 13IML05	Nº 6753 /DO N° 65876/ F39

Modelo	SUBTEL
Lenovo Legion C7 15IMH05	Nº 5930 /DO N° 64491/ F23
Lenovo Legion 5 15IMH05H	Nº 7434 /DO N° 65411/ F23
Yoga Creator 7 15IMH05	Nº 7778 /DO N° 64502/ F23
Lenovo Legion Y740S-15IMH	Nº 6793 /DO N° 65398/ F23
Yoga 9 14ITL5	Nº 9148 /DO N° 67685/ F28
Yoga Slim 9 14ITL5	Nº 12177/DO N° 69755/ F28
Lenovo Legion 5 15ARH05H	Nº 9471 /DO N° 67396/ F71
Lenovo Legion 5 17ARH05H	Nº 10009 /DO N° 68349/ F14
Lenovo Legion 5P 15ARH05H	Nº 10010 /DO N° 68350/ F14
IdeaPad Duet 3 10IGL5	Nº 12117 /DO N° 69485/ F39
IdeaPad Flex 5 14ITL05	Nº 12519 /DO N° 69784/ F39
IdeaPad Flex 5 15ITL05	Nº 12525 /DO N° 69790/ F39
Lenovo IdeaPad 1 11ADA05	Nº 13960 /DO N° 70808/ F14
IdeaPad 5 15ITL05	Nº 13054 /DO N° 69868/ F23
Lenovo ThinkBook 15p IMH	Nº 12663 /DO N° 69967/F23
Yoga 7 14ITL5	Nº 11750 /DO N° 69133/F71
Yoga 7 15ITL5	Nº 13040 /DO N° 70432/ F28
ThinkBook 13s G2 ITL	Nº 13959 /DO N° 70807/ F14
ThinkBook 14s G2 ITL	Nº 13958 /DO N° 70806/ F14
Lenovo IdeaPad S540-13ITL	Nº 12524 /DO N° 69789/F39
Lenovo Legion S7 15IMH5	Nº 13055 /DO N° 70077/ F39
ThinkBook 14 G2 ARE	Nº 13053 /DO N° 69867/ F23
ThinkBook 15 G2 ARE	Nº 12843 /DO N° 69862/ F23
Yoga Slim 7 Pro 14ITL5	Nº 15274 /DO N° 71870/ F23
ThinkBook 14 G2 ITL	Nº 13051 /DO N° 69863/ F23
ThinkBook 15 G2 ITL	Nº 13052 /DO N° 69864/ F23
ThinkBook 14s Yoga ITL	Nº 15145 /DO N° 72010/ F28
Yoga Slim 7 14ITL05	Nº 16728 /DO N° 72716/ F14
Yoga Slim 7 15ITL05	Nº 12517 /DO N° 69782/ F39
Yoga Slim 7 Pro 14ARH5	Nº 16573 /DO N° 72589/ F39
Lenovo Legion S7 15ARH5	Nº 16347 /DO N° 71964/F71

---

## Notice for users in Brazil (Aviso para usuarios no Brasil)

**For models:** QCNFA344A, QCNFA435, QCNFA364, 7265NGW, 8265NGW, 3165NGW, RTL8821CE, RTL8822BE, 9260NGW, 9560NGW, 9560NGW R, 9462NGW, RTL8822CE, 9560D2W, AX200NGW, AX201NGW, AX201D2W, L850-GL

Portuguese	Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.
English	This equipment is not protected against harmful interference and may not cause interference with duly authorized systems.
Portuguese	Este produto está homologado pela Anatel, de acordo com os procedimentos regulamentados pela Resolução nº 242/2000 e atende aos requisitos técnicos aplicados, incluindo os limites de exposição da Taxa de Absorção Específica referente a campos elétricos, magnéticos e eletromagnéticos de radiofrequência, de acordo com as Resoluções nº 303/2002
English	This product meets the applicable technical requirements, including exposure limits on Specific Absorption Rate related to electric, magnetic and electromagnetic radiofrequency, in accordance with Resolutions No. 303/2002.

### For model: 3165NGW



### For model: 7265NGW



### For model: QCNFA344A



### For model: QCNFA364



**For model: QCNFA435**



**For model: 8265NGW**



**For model: RTL8821CE**



**For model: RTL8822BE**



**For model: 9260NGW**



**For model: 9560NGW**



**For model: 9560NGW R**



**For model: 9462NGW**



**For model: RTL8822CE**



**For model: 9560D2W**



**For model: AX200NGW**



**For model: AX201NGW**

