

manual

1. Remote controller



1. Remote controller (front): Fixed plate.
2. LCD Moniter: Show grill's temperature and food temperature.
3. Rise Button: Hold this button could rise the temperature, each press will rise 5F.
4. Food temperature button: Press this button will show food temperature.
5. Down Button: Hold this button could low the temperature, each press will low 5F.
6. Battery Compartment: Cover board for battery.
7. Remote controller (Back): Fixed plate.

2. Control grill with remote controller.


Step 1 : Pour pellets in hopper and then start the grill. If it is the first time to use the grill, then it should add 70g pellets in firebox. Insert the food temperature sensor.

Step 2 : Push the power switch, LED will show "OFF". The grill is in standby state.

Press any of the key on the remote controller, it will be on and show "OFF".

Step 3: Press the right or left key, the grill will begin to igniter procedure.

Igniter procedure is made by "0,1,2,3". The remote controller will show each procedure.

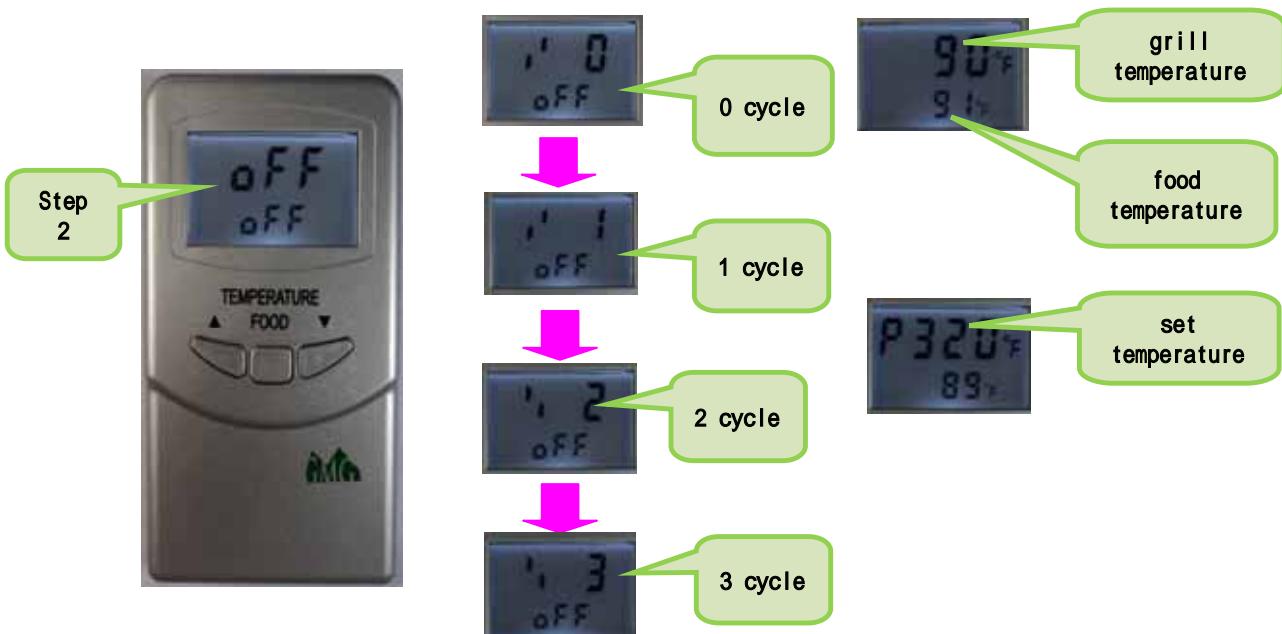


Step 4: After igniter, the remote controller LED will show grill temperature and food temperature.

You could press rise or down button to set the grill temperature.

The set temperature will be shown with "P". See picture above.

Step 5: When the pellets are empty, the low pellet alarm will warn.

The LED will show "FULE".

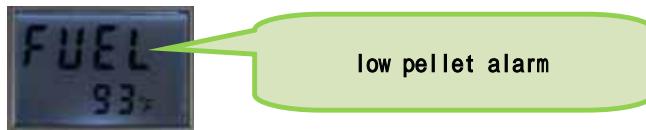

Step 6: Don't shut the power directly. Firstly, press down button to 150F.


And then press it again. It will show "Fan". The grill will enter fan procedure.

After ten minutes, fan procedure is over. LED shows "OFF", now shut the power.



3. Replace the battery.

Step 1: push the cover following the arrow.

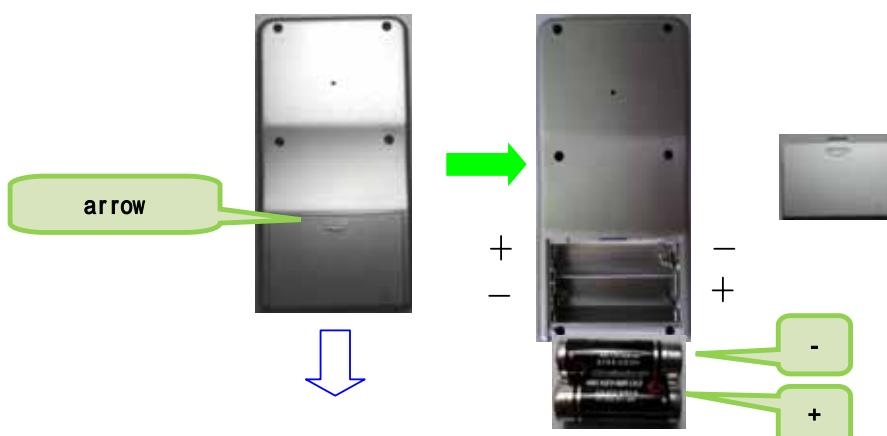

Step 2: Take out the old battery, install two No. 5 alkaline dry batteries. See pictures above.

Step 3: Shut the cover.

Attentions:

- 1、Don't use different kinds of batteries, or it may cause the remote controller fail.
- 2、If don't use the remote controller for a long time, take out the batteries.
- 3、The remote controller should be used within a certain range.
- 4、If the remote controller couldn't use normally. Please take out the battery and re-install after 30 seconds.

Warning

Don't wet the remote controller. Don't use water wash control panel, remote controller and hopper, or it may cause electric shock.

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.