

ESPAÑOL

ENGLISH



MFL69121501 (1.0)



www.lg.com



Printed in China



www.lg.com

User Guide

ENGLISH

- Screen displays and illustrations may differ from those you see on actual phone.
- Actual displays and the color of the phone may vary.
- Some of the contents of this guide may not apply to your phone, depending on the software and your service provider. All information in this document is subject to change without notice.
- This handset is not suitable for people who have a visual impairment due to the touch screen keyboard.
- Copyright© 2015 LG Electronics, Inc. All rights reserved. LG and the LG logo are registered trademarks of LG Group and its related entities.
All other trademarks are the property of their respective owners.

Contents

Phone Overview	5	In-Call Menu	16
Getting Started	7	During a Call	16
Installing the Battery	7	Making a Second Call	16
Removing the Battery	8	Swapping Between Two Calls	16
Charging the Battery	9	Answering an Incoming Call	16
On-Screen Icons	9	Rejecting an Incoming Call	17
General Functions	11	Muting the Microphone	17
Before you begin	11	Using the Speakerphone	17
Making a Call	11	Prepaid	18
Making a Call with the Send Key.....	11	Add airtime	18
Making International Calls	11	Buy airtime	18
Ending a Call	12	My phone number	18
Making a Call from the Contacts.....	12	My airtime (balance) info	18
Answering a Call	12	Airtime display	19
Adjusting the Volume	13	Serial number	19
Silent Mode (Quick).....	13	SIM number	19
Signal Strength.....	13	Code entry mode	19
Entering Text	13	Contacts	20
Changing the Text input mode	13	Contact list	20
123 mode (Numbers mode).....	13	New contact	20
Using the 123 (Numbers) mode	14	Groups	20
Symbol mode	14	Speed dial	21
ABC mode.....	14	SIM management	21
Using the ABC mode	14	Own number	21
		My business card	21

Messages	22	Video	32
Create message	22	Other files	33
Inbox	25	File manager	33
Drafts	26	Tools	34
Outbox	26	Voice command	34
Message settings	27	Voice command Options.....	35
Message alert.....	27	Calculator	36
Save to	27	Tasks	36
Signature	27	Stopwatch	37
Text message	27	Tip calculator	38
Multimedia message.....	28	Unit converter	38
Voicemail	28	Voice recorder	38
Recent calls	29	Browser	40
Accessibility	30	Launch the Browser	40
Menu readout.....	30	Using the Browser	40
Keypad tone	30	Menus for the Browser	41
Large text.....	30	Using the Navigation Keys	41
Invert color	30	Alarm clock	42
Mono sound	30	Calendar	43
Senior mode.....	30	Settings	44
TTY.....	30	Audio & ringtones	44
Hearing aid.....	31	Ringtone	44
Voice command.....	31	Message tone.....	44
Notepad	31	Alert tone	45
My Folder	32	Keypad tone	45
Audio	32	Multimedia	45
Pictures	32		

Call.....	45
Phone settings.....	45
Languages	45
Set hotkeys	45
Auto key lock	46
Airplane mode	46
Security.....	46
Reset settings.....	47
Display.....	47
Wallpapers	47
Fonts	47
Clocks & calendar	47
Brightness.....	48
Backlight timer	48
Menu styles.....	48
Call.....	48
Send my number	48
Answer mode	48
Senior mode.....	49
Connection vibration	49
Memory	49
Used space	49
Applications.....	50
Messages	50
Browser	50
Phone information	52
Accessories.....	53
For your safety.....	54

Phone Overview

1

1 Earpiece

2

2 LCD Screen

3 Soft keys

Each of these keys performs the functions indicated by the text on the display immediately above them.

4 Navigation Keys Home screen functions

⎵ : Accessibility ⎵ : Contacts

[: Alarm clock] : Message

⏏ **OK Key:** Select options and menus.

5

3

4

3

6

10

9

5 Speakerphone Key

Toggle speakerphone mode at the standby screen or during a call.

7

8

When speaker turned on from the standby screen, speakerphone will be turn off after 1 minute of inactivity.

6 Send Key

7 Lock Mode Key

Toggle edit mode at editor Silent on/off (Long press while in idle)

8 Vibrate Mode Key with Silent Mode Key

Press and hold to activate/deactivate Silent Mode.

9 Power/End Key

10 BACK/Voice Commands Key

Allows you to return to the previous screen.

Press and hold from standby mode to activated the Voice Recorder function, and press from standby mode to activated the Voice Command function. You can also use this key to erase text/numbers you have entered.

- **Charger/Accessory Port** Connects the phone to the charger or other compatible accessories.

Charging with PC & USB cable: You can use your computer to charge your phone. Connect one end of a USB cable to the Charger/ Accessory Port on your phone and the other end to a high-power USB port on your PC (commonly located on the front panel of the computer).

Installing the Battery

- 1 Use the fingernail cutout at the bottom of the back cover to lift and remove the cover.
- 2 Align the battery contacts with the terminals near the top of the battery compartment and insert the battery into the compartment.
- 3 Align the back cover and press it downwards until it clicks into place.

Removing the Battery

- 1 Turn the phone off.
- 2 Use the fingernail cutout at the bottom of the back cover to lift and remove the cover.
- 3 Use the fingertip opening near the bottom of the battery compartment to lift the battery out.

Charging the Battery

Use the charger provided with your phone.

WARNING: Use only the charger provided with the phone. Using any charger other than the one included with the phone may damage your phone or battery.

















NOTICE: Please make sure that the 'B' side faces up before inserting a charger or USB cable into the Charger/ Accessory Port of your phone.

Plug one end of the charging adapter into the phone's Charger/Accessory Port and the other end into an electrical outlet.

The charge time varies depending upon the battery level.

On-Screen Icons

The table below describes various display indicators or icons that appear on the phone's display screen.

ICON/ INDICATOR	DESCRIPTION
	Network signal strength (number of bars will vary)
	No network signal
	Low battery
	New text message
	An alarm is set
	Ring profile in use
	Silent all profile in use
	EDGE network available
	3G network available
	The browser is active
	Vibrating mode on
	Speakerphone
	Call in progress
	Voicemail
	Battery full
	Battery charging





ICON/ INDICATOR	DESCRIPTION
	Airplane mode on

General Functions



Before you begin

Remember that you can select the menu icons from the Menu screen using the number keys if you set the Menu Styles option as **List**. If you set the Menu Styles option as **Icon**, you can only use the Navigation Keys to select the menu icons.



Making a Call

- 1 Make sure your phone is powered on.
- 2 Enter a phone number including the area code. To edit a number on the display screen, simply press the **Clear/Back Key**  to erase one digit at a time.
 - Press and hold the **Clear/Back Key**  to erase the entire number.
- 3 Press the **Send Key** .
- 4 To end the call, press the **End/Power Key** .

Making a Call with the Send Key

- 1 Press the **Send Key**  to display the most recent missed, dialed and received calls will be displayed.
- 2 Highlight the desired number by using the Navigation Keys.
- 3 Press the **Send Key** .

Making International Calls

- 1 Press and hold the  key and the international access character '+' will appear.
- 2 Enter the country code, area code, and the phone number.
- 3 Press the **Send Key** .

Ending a Call

To end a call, press the **End/Power Key** .

Making a Call from the Contacts

You can store frequently called names and phone numbers in the SIM card as well as in your Contacts List.

You can dial a number by simply highlighting a name in the Contacts List and pressing the **Send Key** .


- 1 Press the **Down Navigation Key**  to access the Contact List.
- 2 Highlight the Contact and press the **Send Key** .

Answering a Call

When you receive a call, the phone displays a notification on the screen and rings and/or vibrates. If the caller can be identified, the caller's phone number (or name, if stored in your Contacts) is displayed.

- 1 Press the **Send Key**  or the **Left Selection Key**  **Accept** to answer an incoming call.

If the **Answer Mode** has been set as **Any Key** ( **Menu** > **Settings** >  **Call** >  **Answer Mode**), any key press will answer a call, except for the **End/Power Key** , **Right Selection Key** , and **Volume Keys (Up/Down Navigation Keys)** .

- 2 End the call by pressing the **End/Power Key** .

NOTE: You can answer a call while using other functions or features.

Adjusting the Volume

Use the Volume Keys during a call to adjust the earpiece volume.

Silent Mode (Quick)

Silent Mode can be activated by pressing and holding down the  key.


Signal Strength

If you are inside a building, being near a window may give you better reception. You can see the strength of your signal by the signal indicator on your phone's display screen.


Entering Text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the Contacts, writing a message, or scheduling events in the calendar all require text to be entered.

Changing the Text input mode

Change the text input mode by pressing  when in a text entry field. You can check the current text input mode in the upper right corner of the screen. The following text input modes are available on the phone.

123 mode (Numbers mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed in the upper right corner.

Using the 123 (Numbers) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example) more quickly. Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Symbol mode




The Symbol mode enables you to enter various symbols or special characters. To enter a symbol, press the  key. Use the Navigation Keys to highlight the desired symbol and press the **OK Key** .

ABC mode

This mode allows you to enter letters by pressing the key labeled with the required letter.

Using the ABC mode


Use the alphanumeric keypad to enter your text.

- 1 Press the key labeled with the required letter.
- 2 To insert a space, press the  key once. To delete letters, press the **Clear/Back Key** . Press and hold down the **Clear/Back Key**  to erase all of the entered text.

NOTE: Refer to the table below for more information on the characters available using the keys.

Key	Characters in the order displayed	
	Upper case	Lower case
1 ١٢٣	1	1
2 ABC	A B C 2	a b c 2
3 DEF	D E F 3	d e f 3
4 GHI	G H I 4	g h i 4
5 JKL	J K L 5	j k l 5
6 MNO	M N O 6	m n o 6
7 PQRS	P Q R S 7	p q r s 7
8 TUV	T U V 8	t u v 8
9 WXYZ	W X Y Z 9	w x y z 9
0 +↵	Space Key, 0 (Long press)	Space Key, 0 (Long press)

During a Call

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the **Left Selection Key**  **Options**.

Making a Second Call

You can select a number you wish to dial from the Contacts to make a second call.

- 1 Press the **Left Selection Key** , then select **Contacts**.
- 2 Highlight the contact, then press the **Send Key**  to make a second call.

Swapping Between Two Calls


Once the second call has been dialed (or answered), you can switch between the calls by using one of the following three methods:

- 3 Press the **Send Key** .
- 4 Press the **Left Selection Key**  **Options** and then select **Swap Calls**.


Answering an Incoming Call

To answer an incoming call when the phone is ringing, simply press the **Send Key** .

 
 
The phone is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece and the display will show that a second call is waiting. This feature, known as Call Waiting, is only available if your network supports it.

If Call Waiting is turned on, you can put the first call on hold and answer the second call by pressing the **Send Key** .

 
Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the **End/Power Key** .

Muting the Microphone

You can mute the microphone during a call by pressing the **Right Selection Key**  **Mute**. The phone can be unmuted by pressing the **Right Selection Key**  **Unmute**. When the phone is muted, the caller cannot hear you, but you can still hear the caller.

Using the Speakerphone

You can use the integrated Speakerphone during a call by pressing the **Speaker On/Off key** . The loudspeaker is automatically deactivated when you end the call.

Warning: Due to increased volume levels, do not place the phone near your ear while the speakerphone is enabled.

Prepaid


Add airtime

Allows you to add airtime.

- 1 Press the **Left Selection Key**  **Menu, Prepaid**  and **1 ∞ Add airtime**.
- 2 Enter the airtime PIN and touch the **Left Selection Key**  **OK**.
- 3 Read the displayed message, then select **Yes** or **No**.

Buy airtime

Allows you to buy additional airtime.

- 1 Press the **Left Selection Key**  **Menu, Prepaid**  and **2 ABC Buy airtime**.
- 2 Select the amount of airtime you want to purchase and follow the instructions on the screen.


My phone number

Allows you to view the device's phone number.

- 1 Press the **Left Selection Key**  **Menu, Prepaid**  and **DEF My phone number**.
- 2 Your phone number is displayed.






My airtime (balance) info

Allows you to check your minutes, messages, data, and service end date.

- 1 Press the **Left Selection Key**  **Menu, Prepaid**  and **4 GHI My airtime info**.
- 2 Your airtime info is displayed.

Airtime display

Allows you to select if you want to display the Balance and/or Service end date on the home screen.

- 1 Press the **Left Selection Key**  **Menu, Prepaid**  and **5**  **Airtime display.**
- 2 Press **1**  **Balance** or **2**  **Service end date** and choose your setting.

Serial number

This menu simply displays the information of your phone's IMEI.

- 1 Press the **Left Selection Key**  **Menu, Prepaid**  and **6**  **Serial number.**
- 2 Your serial number is displayed.

SIM number

This menu simply displays the information of your phone's SIM number.

- 1 Press the **Left Selection Key**  **Menu, Prepaid**  and **7**  **SIM number.**
- 2 Your SIM number is displayed.

Code entry mode

Code entry mode will allow the phone to accept TracFone-related codes in order to add units, modify specific data and troubleshoot the phone. In using the code entry mode, you can't receive incoming calls or use events alert.

- 1 Press the **Left Selection Key**  **Menu, Prepaid**  and **8**  **Code entry mode.**