
Test Setup photographs (DTS & DSS)

EUT Position: X-axis




EUT Position: Y-axis



EUT Position: Z-axis



Test Setup Photo of Radiated Measurement (DTS & DSS)

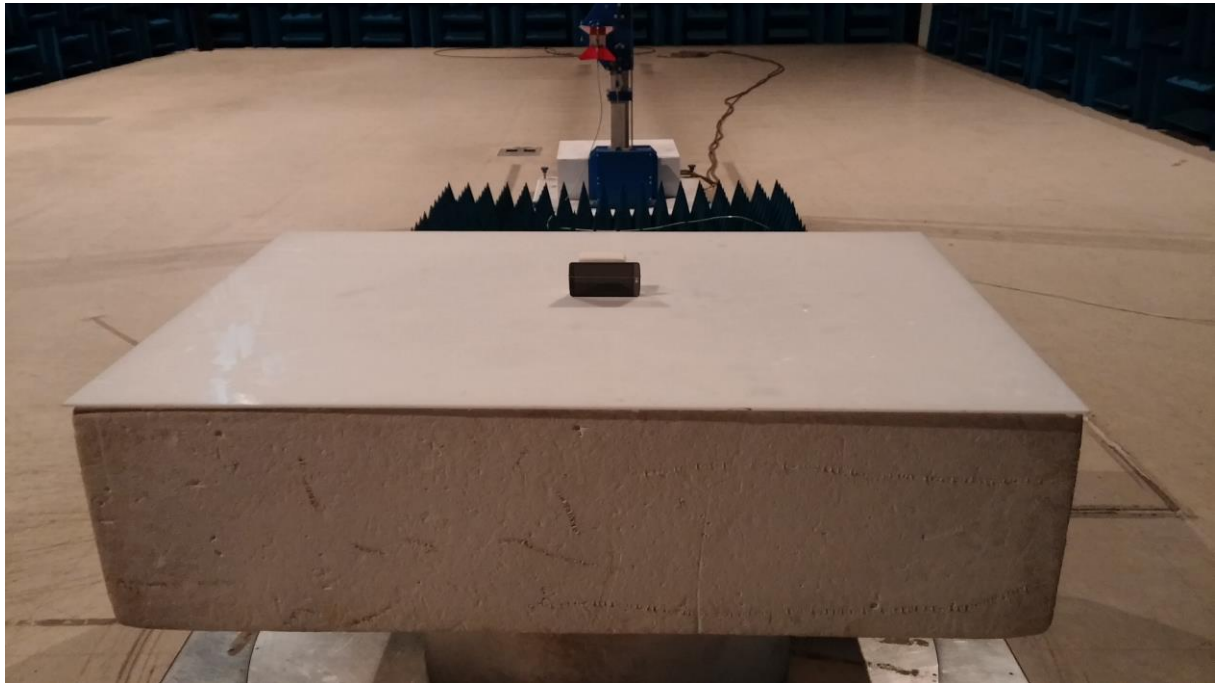

Test Setup photo of Conducted Emissions (DTS & DSS)

