
Test Setup photographs (DXX)

EUT Position: X-axis



Test Setup photographs (DXX)

EUT Position: Y-axis




Test Setup photographs (DXX)

EUT Position: Z-axis



Test Setup photographs (DXX)

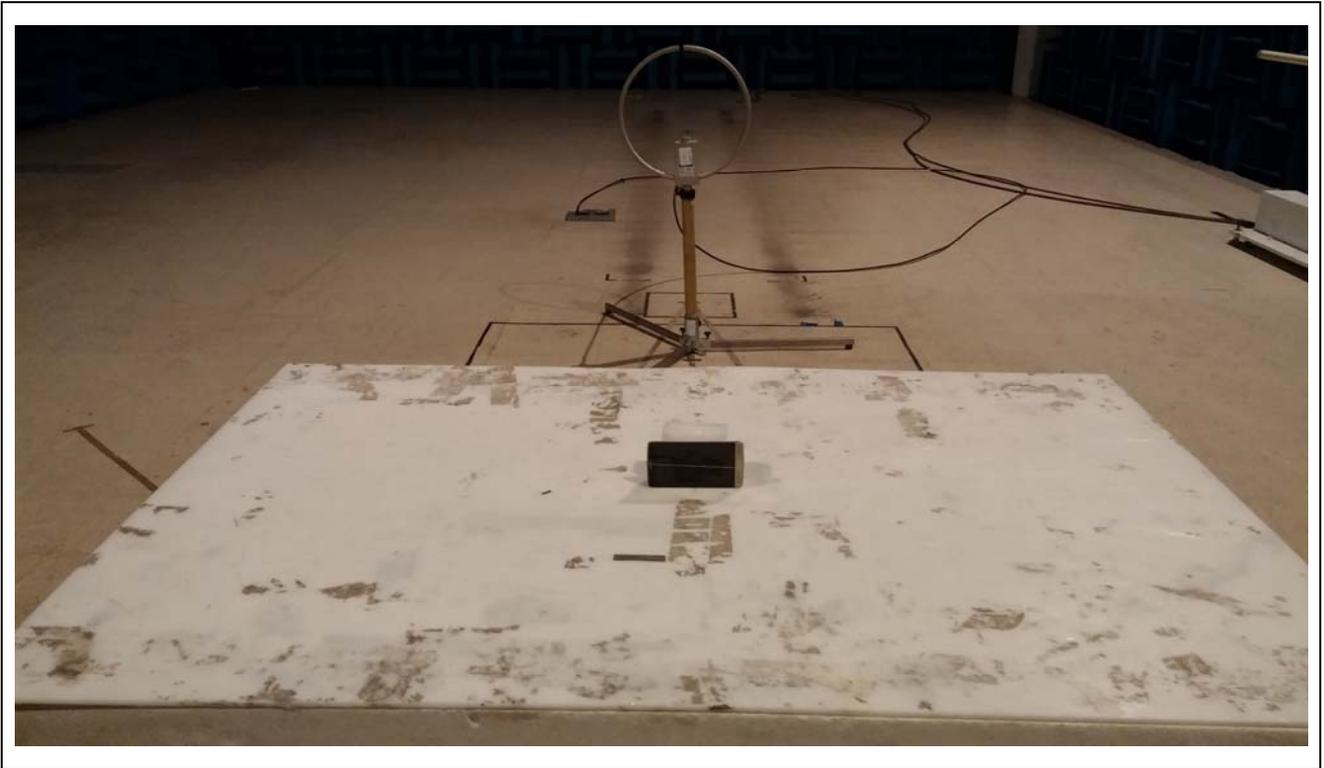

Test Setup photographs (DXX)

