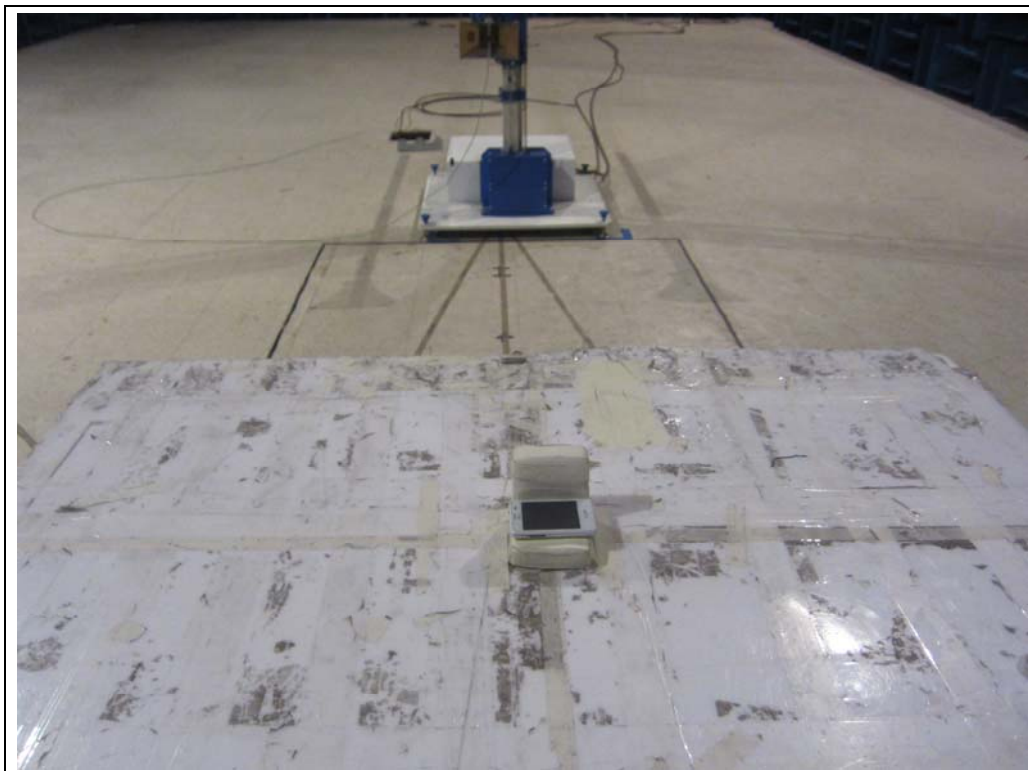

Test Setup photographs (DTS & DSS)

EUT Position: X-axis



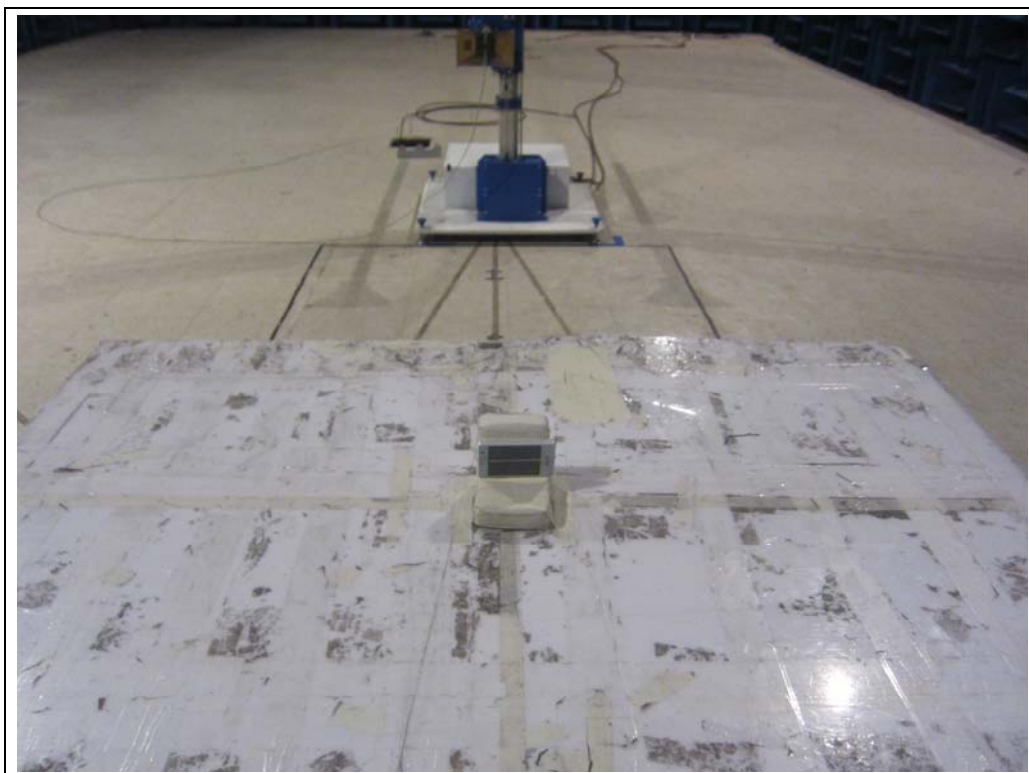
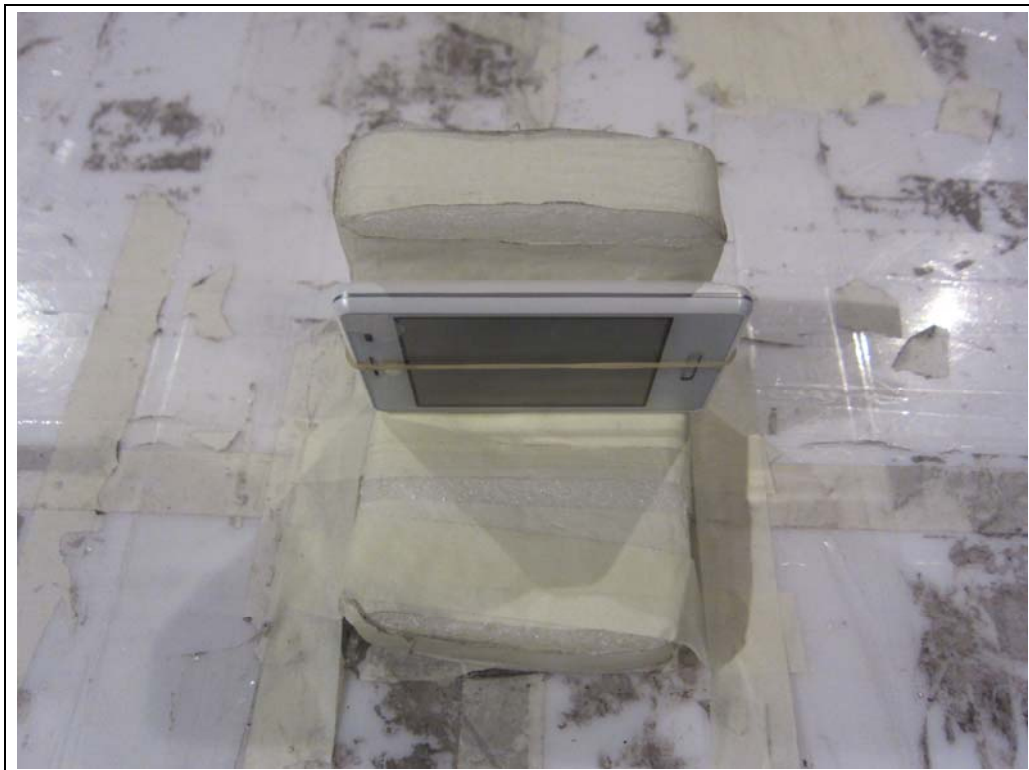
Test Setup photographs (DTS & DSS)

EUT Position: Y-axis



Test Setup photographs (DTS & DSS)

EUT Position: Z-axis



Test Setup photographs (DTS & DSS)

