

---

## Test Setup photographs (DTS & DSS & NII)

---

### EUT Position: X-axis




---

## Test Setup photographs (DTS & DSS & NII)

---

### EUT Position: Y-axis

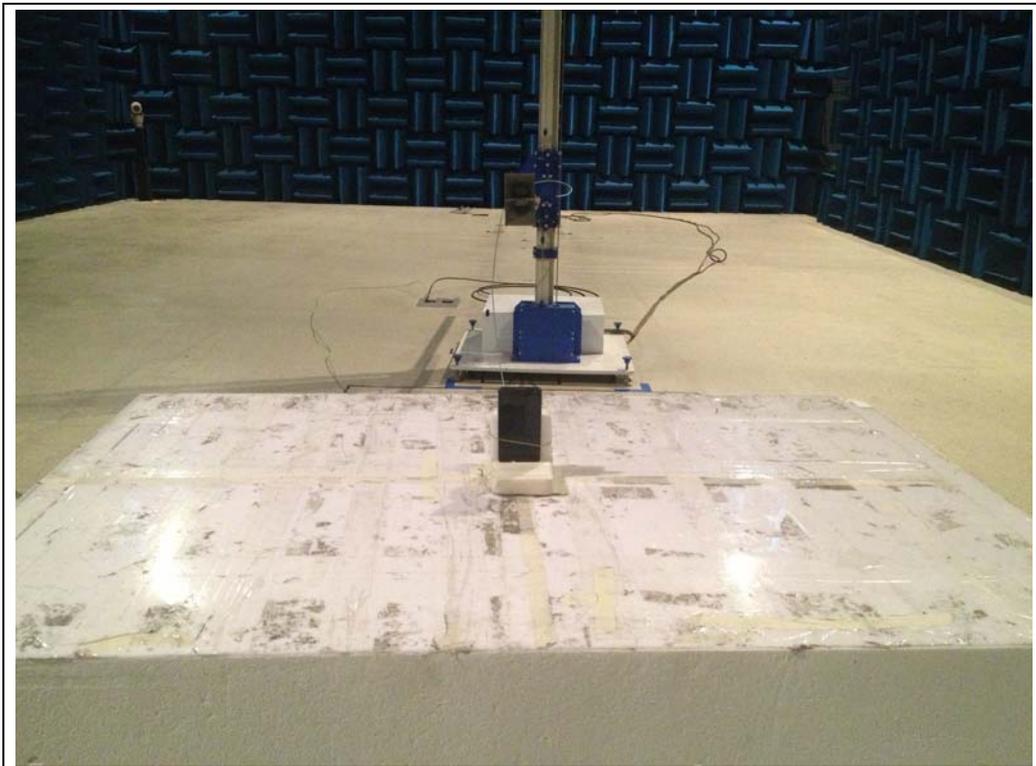


---

## Test Setup photographs (DTS & DSS & NII)

---

### EUT Position: Z-axis

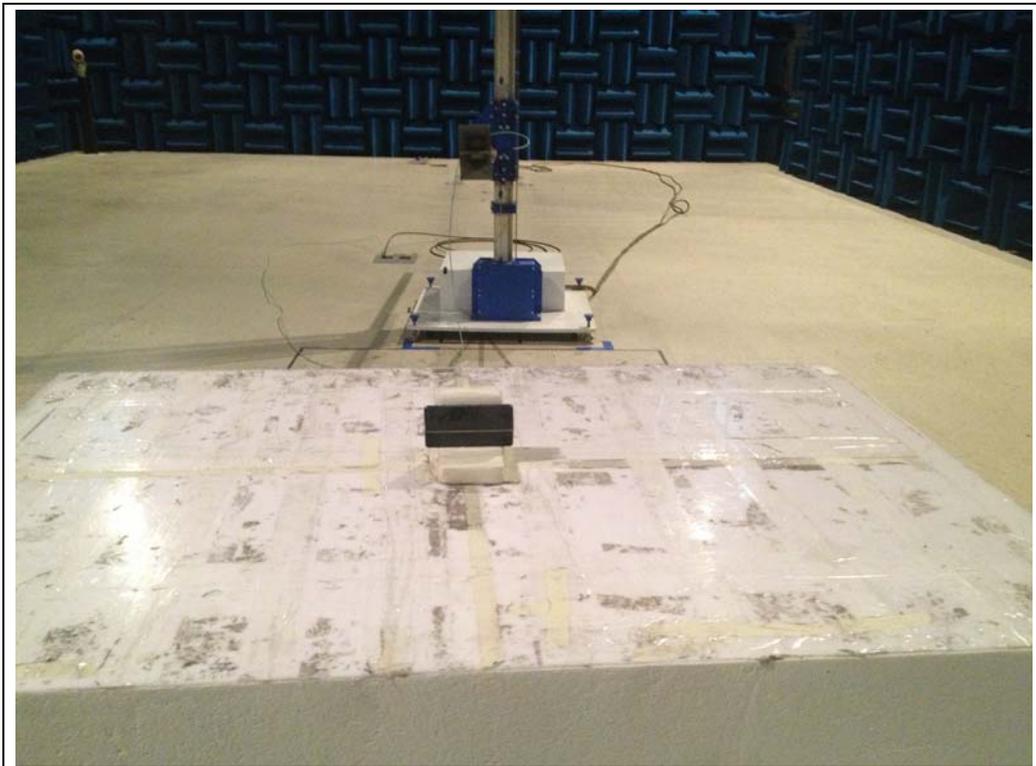

---

## Test Setup photographs (DTS & DSS & NII)

---

