
Test Setup photographs (DTS & DSS)

EUT Position: X-axis




EUT Position: Y-axis




EUT Position: Z-axis



Test Setup Photo of Radiated Measurement (below 1000MHz)

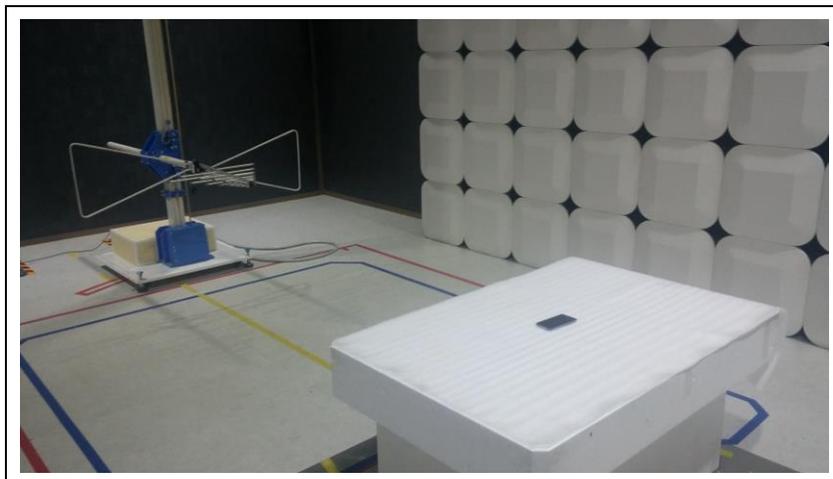

Test Setup Photo of Radiated Measurement (Above 1GHz)

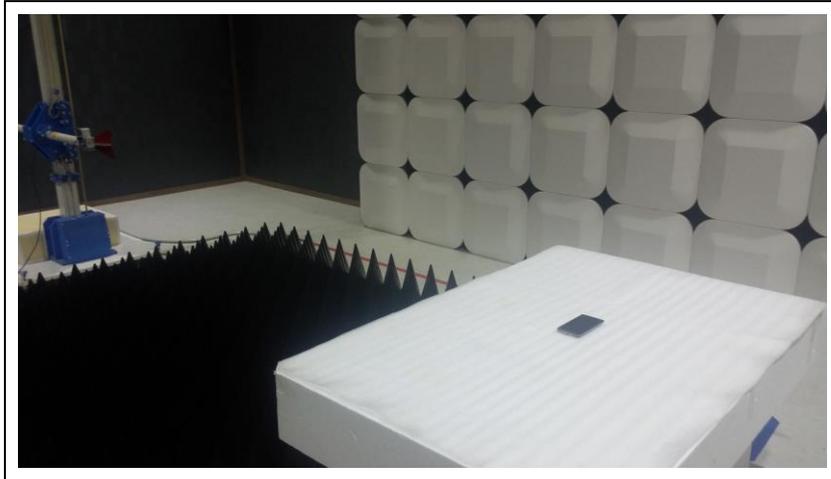

Test Setup photographs (DTS & DSS)

