

---

## To add a Contact to your list of favorites:

1. Touch the **Contacts** tab and then the Contact entry you want to add to your Favorites.
2. Touch the grey star next to the Contact's name. The star turns blue and the entry is added to your Favorites.

To remove a Favorite, touch the blue star in either the Contacts list or Favorites list. The star turns grey and the entry is removed from your Favorites.

## Voice Dialer

### Call a Contact by Voice Dialing

You can call numbers directly by saying the contact's name or number.

1. Touch the **Apps Key**  > **Voice Dialer** .
2. Say "Call" or "Dial" then a name or a phone number.  
Or, you can say "Redial" to redial the last number dialed.
3. If a list of results is displayed, touch the one you want to use.

### Open an Application using Voice Dialer


1. Touch the **Apps Key**  > **Voice Dialer** .
2. Say "Open" and then an application name.
3. If a list of results is displayed, touch the one you want to use.  
The device opens the corresponding application.

---

## Camera

To open the Camera application, touch the **Apps Key**  > **Camera** .

### Getting to know the viewfinder

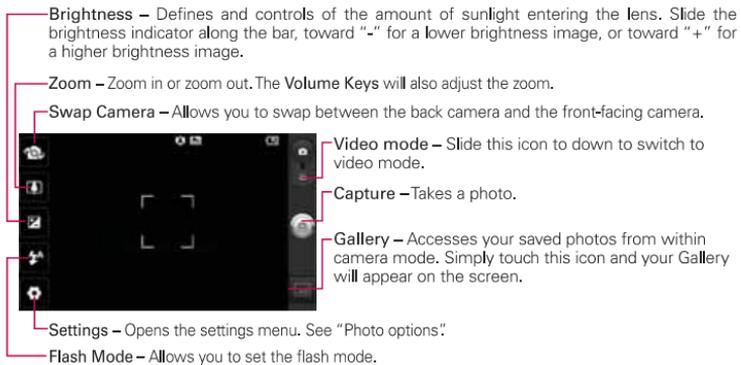

**NOTE** Default resolution is 5M(2592X1944).

### Photo options

You can make adjustments to optimize your shot. The following options are available:

- **Image size:** 5M(2592X1944), 3M(2048X1536), 2M(1600X1200), 1M(1280X960), VGA(640X480), QVGA(320X240).
- **Scene mode:** Adjust for better image capture in different environments. Choose from Auto, Portrait, Landscape, Sports, Night, and Sunset.
- **ISO:** Controls the camera’s sensitivity to light. Choose from Auto, 400, 200, 100.
- **White balance:** Improves color qualities under different lighting conditions. Choose from Auto, Incandescent, Sunny, Fluorescent, and Cloudy.
- **Color effect:** Applies artistic effects to pictures. Choose from Off, Mono, Negative, Solarize, Sepia, or Blue.
- **Timer:** Off, 3 secs., 5 secs., or 10 secs.

- 
- **Shot mode:** Normal, Continuous shot, Smile shot, Beauty shot, Art shot, Panorama, Face effect, or Cartoon.
  - **Focus:** Auto, Macro, Face tracking, or Manual.
  - **Image Quality:** Super fine, Fine, or Normal.
  - **Auto review:** On or Off.
  - **Shutter sound:** Tone 1~ 4, Off.
  - **Tag location:** Off or On.
  - **SD card & phone storage:** Determines where the file is saved. Choose from Internal memory or SD card.

**TIP!** You can close all the setting icons to give a clearer viewfinder screen. Just touch the center of the viewfinder once. To recall the options, touch the screen again.

### Using the focus mode

You can select from the following focus options:

**Auto** Sets the camera to focus automatically.

**Macro** Sets the camera to be able to take extreme close-ups. If you are trying to take a close-up shot but the focus box remains red, try turning the Macro mode on.

**Face tracking** Sets the camera to detect and focus on human faces automatically.

**Manual** Sets the camera to focus manually.

### Taking a quick photo

1. Open the **Camera** application.
2. Holding the phone horizontally, point the lens toward the subject you want to photograph.
3. Touch and hold the **Capture** button lightly and a focus box will appear in the center of the viewfinder screen.
4. Position the phone so you can see the subject in the focus box.
5. When the focus box turns green, the camera has focused on your subject.
6. Take your finger off the **Capture** button .

---

## Once you've taken the photo

Your captured photo will appear on the screen until you touch an option or icon to proceed.

**NOTE** Simply touch the screen to redisplay photo options if they recede from the screen.

The following options are available after taking a photo:

**Share** Touch to share your photo using **SmartShare**, **Bluetooth**, **Email**, **Facebook**, **Gmail**, **Messaging**, **Picasa**, **Twitter**, or any other application you've downloaded that supports this feature.

**Set as** Touch to use the image as a **Contact icon** or **Wallpaper**.

**Rename** Touch to edit the name of the selected picture.

**Edit** Touch to edit the photos you have taken.

 Touch to delete the image, then touch **OK** to confirm.

 Touch to take another photo immediately. Your current photo will be saved to your Gallery.

 Touch to view the Gallery of your saved photos.

## Viewing your saved photos

1. You can access your saved photos from camera mode. Just touch **Gallery** , then touch a photo to display it.

**TIP!** Slide your finger left or right to view other photos or videos.

While viewing a photo, touch the screen to access the following options:

**Slideshow** Touch to see your photos played in a slideshow.

**Menu** Touch to open a menu of options including **Share**, **Delete**, or **More**. **More** provides the following additional options:

**Details** Touch to display information about the selected photo (e.g., file type, file size, etc.).

**Set as** Sets the photo as the icon identifying a contact or sets it as your phone wallpaper.

**Crop** Allows you to manually crop the photo. Use your finger to move or resize the cropping box to encompass only the part of the photo you want to see, then touch **Save**.

**Rotate** Touch one of the rotation icons to rotate the photo clockwise or

---


counter-clockwise.

**Edit Touch** to access ImageEditor, which allows you to edit the image using various tools.

## Video Camera

To open the Video Camera, touch the **Apps Key**  > **Camera** . Slide the Camera mode icon down for Video mode.

### Getting to know the viewfinder

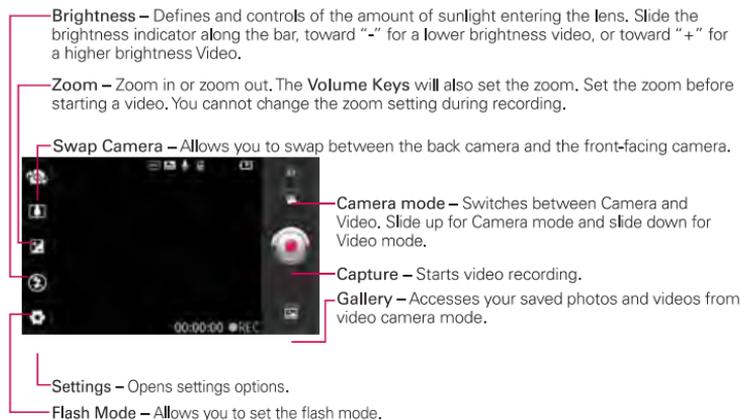

---

## Recording a quick video

1. Open the **Camera** application.
2. Slide the Camera mode icon  down to change to Video mode. The Camera mode icon changes to  and the Capture button changes to .
3. The Video camera's viewfinder will appear on the screen.
4. Holding the phone horizontally, point the lens toward the subject of the video.
5. Touch the **Capture** button  once to start recording.
6. REC will appear at the bottom of the viewfinder with a timer showing the length of the video.
7. Touch  on the screen to stop recording.

## After recording a video

A still image representing your video will appear on the screen until you touch an option or icon to proceed.

**NOTE** Simply touch the screen to redisplay video options if they recede from the screen.

The following options are available:

**Play** Touch to play the video you just recorded.

**Share** Touch to share your video using SmartShare, Bluetooth, Email, Gmail, Messaging, YouTube, or any other compatible applications you have downloaded.

**NOTE** Additional charges may apply when MMS messages are downloaded while roaming.

**Rename** Touch to edit the name of the selected video.

 Touch to delete the video you just made, and confirm by touching **OK**. The viewfinder will reappear.

 Touch to shoot another video right away. Your current video will be saved in your Gallery.

 Touch to view the Gallery of your saved videos.

## Watching your saved videos

1. In the viewfinder, touch **Gallery** .
2. Your Gallery will appear on the screen.
3. Touch a video to play it automatically.

---

## Music

### Transferring Music Files to Your Phone

The **Music** application plays audio files that are stored on your phone's microSD card. Copy audio files from your computer onto the microSD card before you open the **Music** application. The **Music** application supports audio files in numerous formats, including MP3, M4A (DRM-free AAC files, from iTunes®), AMR, MIDI, and OGG Vorbis.

**NOTE** The LG USB driver needs to be installed on your PC before connecting your phone to transfer music.

### To copy music files onto the phone's microSD card

1. Connect the phone to your computer with a USB cable. If the default connection mode is not set to Mass Storage, open the Notifications panel and touch **USB connected** > **Mass Storage**. Your computer will prompt you with different actions to take. Choose to open the folder to view files.

- ▶ Use the computer to organize your audio files then create a music folder at the top level of the microSD card.

**NOTE** The MS840 has an internal memory and can use a removable microSD card to store user content, such as photos, videos, and voice recordings.

If the USB connection mode is set to Mass Storage when connecting the phone to a PC via USB cable, two removable disk drives will be displayed on your PC, one for the internal memory and another for the microSD card (if installed). You can copy files to and from both disk drives."

2. Use the computer to copy music and other audio files into the folder that you created on the microSD card.
  - ▶ You can use subfolders on the microSD card to organize your music files or you can simply copy the audio files to the top level of the microSD card.
3. Open the Notifications panel and touch **USB connected** > **Charge Only**. Then disconnect the USB cable from the phone.

---

## Opening Music and Working with Your Library


After you've copied some music onto your microSD card you can open the **Music** application and see your library of music files, sorted in one of four ways.

### To open Music and view your music library

- ▶ Touch the **Apps Key**  > **Music** .

The **Music** application searches the microSD card for music files you copied to your card, then builds a catalog of your music based on the information contained in each music file. This can take from a few seconds to several minutes, depending on how many files you have copied onto the microSD card.

When the catalog is complete, the Music library screen opens with tabs that you can touch to view your music library organized by Artists, Albums, Songs, or Playlists.

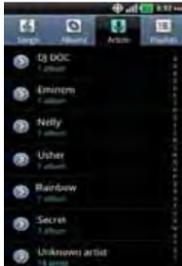

You can return to the main Library screen from most other screens in the **Music** application by touching the **Menu Key**  > **Library**.

### To search for music in your library

1. Open the main Library screen then touch the **Search Key** .
2. Start typing the name of the artist, album, or track you're looking for. Matching songs are displayed in the list below the search box.
3. Touch a matching song to play it or touch a matching album or artist to view a list of associated songs.

---

## To delete a song from the microSD card

You can delete music from the storage card.

- ▶ Touch and hold a song in a library list. In the menu that opens, touch **Delete**.

**OR**

- ▶ On the Playback screen, touch the **Menu Key**  > **Delete**.

You can also delete music files from the microSD card when your phone is connected to the computer. To do this, browse for the music files you wish to delete and delete them from the folder.

## Playing Music

You can listen to music using the phone's built-in speaker, through a wired headset, or through a wireless Bluetooth stereo headset that supports the A2DP profile.

### To play music

- ▶ Touch a song in your library to listen to it.

**OR**

- ▶ While viewing a list of tracks in an album, touch the **Menu Key**  > **Play all**.

The Playback screen opens and the song you touched or the first song in the album or other playlist starts to play. Your music continues to play even when you switch applications or receive a phone call. The tracks in the current playlist play in order until it reaches the end, then stops. If you choose a repeat option, playback only stops when you stop it.

---

You can return to the Playback screen from most other screens in the **Music** application by touching the currently playing song at the bottom of the screen.

You can return to the Playback screen from any other application by opening the Notifications panel and touching the ongoing music notification.

### To control playback

The Playback screen contains several icons that you can touch to control the playback of songs, albums, and playlists:

|   |  |
|---|--|
|    | Touch to pause playback.   |
|    | Touch to resume playback.  |
|    | Touch to skip to the next track in the album, playlist, or shuffle.                                  |
|    | Touch to restart the current track or skip to the previous track in the album, playlist, or shuffle. |
|    | Touch to open the current playlist.  |
|    | Touch to play the current playlist in shuffle mode (tracks are played in random order).              |
|   | Touch to set repeat mode to repeating all songs, repeat current song, or repeat off.                 |
|  | Touch to activate or deactivate the Dolby Mobile setting, which enhances your music listening.       |

---

## To control playback volume

In addition to the techniques for setting media volume, you can control the volume of music in the **Music** application.

- ▶ Press the phone's up/down **Volume Keys**.  
A panel opens to show the current media volume.  
Some headsets include their own volume controls or ways to pause and resume playback or to skip tracks.

## To play your tracks in a party shuffle

When you turn on Party Shuffle, the **Music** application plays tracks from your microSD card in random order until Party Shuffle is turned off.

- ▶ In a Library screen, touch the **Menu Key**  > **Party shuffle**.  
The **Music** application creates a playlist of tracks selected randomly from your microSD card and starts playing them.
- ▶ View the current playlist that Party Shuffle is playing by touching the **Playlist icon**  on the Playback screen.
- ▶ Add a track to the end of the Party Shuffle playlist by touching and holding the name of a track in your library. In the menu that opens, touch **Add to playlist** > **Current playlist**.
- ▶ Stop Party Shuffle by touching the **Menu Key**  > **Party shuffle off**.

## To customize settings in the Playback or a Library screen

Touch the **Menu Key**  > **Settings**.

- ▶ **Show notification** Shows the controller on the notification bar.
- ▶ **Sleep timer** Turns off the player automatically. Touch the following options to apply sleep timer: **Off**, **After 10 minutes**, **After 20 minutes**, **After 30 minutes**, **After 1 hour**, **After 2 hours**
- ▶ **Dolby Mobile** Applies the following sound effect (Dolby) options: **Off**, **Neutral**, **Expansive**, **Bass Boost**, **Treble Boost**, **Vocal Boost**

---

## Landscape view

When holding the phone in landscape orientation, the **Music** application screen changes to fit the screen as shown below:



## To use a song as a ringtone

You can use a song as your phone ringtone, in place of one of the ringtones that come with the phone.

- ▶ Touch and hold a song in a Library list. In the menu that opens, touch **Use as ringtone**.

**OR**

- ▶ On the Playback screen, touch the **Menu Key**  > **More** > **Use as ringtone**.

## Working with Playlists

You can create playlists to organize your music files into sets of songs, which you can play in the order you set or in a shuffle.

### To create a playlist

1. When viewing a list of songs in the Library, touch and hold the first song you want to add to the new playlist.
2. Touch **Add to playlist**.
3. Touch **New**.
4. Enter a name for the playlist and touch **Save**.  
The new playlist is added to the Playlist library.

---

You can also add the song that is playing in the Playback screen as the first song in a playlist by touching the **Menu Key**  > **Add to playlist** or touching **Save as playlist** to save all the songs in the current playlist as a playlist.

### To add a song to a playlist

1. While viewing a list of tracks in the Library, touch and hold a song to display an Options menu.
2. Touch **Add to playlist**.
3. Touch the name of the playlist to add the song to.  
You can also add the song that is playing in the Playback screen to a playlist by pressing the **Menu Key**  > **Add to playlist**.

### To remove a song from a playlist

1. Open a playlist.
2. Touch and hold the song you want to remove then touch **Remove from list**.

### To delete or rename a playlist

1. Open the Playlist library.
2. Touch and hold the playlist to display the Options menu then touch **Delete** or **Rename**.

---

## SmartShare

SmartShare uses DLNA (Digital Living Network Alliance) technology to share digital content through a wireless network. Both devices must be DLNA certified to support this feature.

### To turn SmartShare on and allow sharing contents

1. Touch the **Apps Key**  > **SmartShare**  > **Menu key**  > **Settings** 
  - ▶ **Always allow request** Checkmark to allow you to always accept sharing requests automatically.
  - ▶ **Device name** Allows you to view and edit the name your phone displays to other devices when trying to share contents.
2. Under the Sharing contents section, touch to checkmark the types of contents you would like to share. Choose from **Pictures**, **Videos**, and **Music**.
  - ▶ **Pictures** Checkmark to share all image contents
  - ▶ **Videos** Checkmark to share all video contents
  - ▶ **Music** Checkmark to share your music library
3. Touch Discoverable to checkmark and turn the function on.
4. SmartShare is now activated and ready to share contents.

### To control your renderer devices

Let your renderer device (e.g., TV) play multimedia contents from your remote content library (e.g., PC).

**NOTE** Make sure that the DLNA functionality of your devices is properly configured (e.g., TV and PC).

1. Touch the **Apps Key**  > **SmartShare**  .
2. Touch the top right button to select the device from renderer lists.
3. Touch the top left button and select the device of the remote content library.
4. You can browse the content library.

- 
5. Touch and hold a content thumbnail and flick them to the top area with your finger or touch the play button.

### To share contents from your phone to your renderer device (e.g., TV)

**NOTE** Make sure that your renderer device is properly configured.

1. While browsing your pictures or videos using the **Gallery** application, touch and hold to select files. Then you will be able to select multiple files to be shared.
2. Touch **Share** on the menu and select **SmartShare**.
3. **SmartShare** is automatically launched with the selected files.
4. Touch the top right button to select the device from renderer lists.
5. Touch the play button to let your renderer device play the files.

**NOTE** Follow the same steps to use the Music player to share music files.

- NOTICE**
- Check that your device is connected with your home network using a Wi-Fi connection to use this application.
  - Some DLNA enabled device devices (e.g., TV) support only the Digital Media Player (DMP) feature of DLNA and will not appear in the renderer device list.
  - Your device might not be able to play some contents.

---

## Video player

You can play a wide variety of videos using the Video player. The video player supports the following file formats: 3gp, mp4, avi, wmv, mov, mkv (Codec: MPEG4, H.263, Sorenson H.263, H.264, VC-1, DivX/XviD).

- Supported file formats are dependent on the software version of the phone.

### To open the Video player application

1. Touch the **Apps Key**  > **Video player** .
2. Touch the video you want to play.

### Playback controls

Touch the screen to display the playback controls. The following options allow you to control the video playback:

|   |  |
|---|--|
|  | Pause playback.  |
|  | Play a video file.   |
|  | Touch and hold to fast-forward playback.   |
|  | Touch to start playing the video from the beginning. Touch and hold to rewind playback.        |
|  | Touch to activate or deactivate the Dolby Mobile setting, which enhances your music listening. |

### Video player list options

The following options are available from the Video player list screen:

- ▶ **Delete** Touch the **Menu Key**  > **Delete**, then touch each video to delete. When all files to be deleted have been checkmarked, touch **Delete** > **OK** to confirm.

---

# YouTube™

## Opening YouTube and Watching Videos

You can browse, search for, view, upload, and rank YouTube videos on your phone with the **YouTube** application.

### To open the YouTube application

- ▶ Touch the **Apps Key**  > **YouTube** .

Touch a video to watch it or touch to take other actions on the video.

### To watch and interact with YouTube videos

- ▶ Touch a video to play it.

- ▶ Touch the screen to view the Playback controls. You can pause and play the video or drag the slider to the point in the video you want to watch.

- ▶ Touch the **Back Key**  to stop playback and return to the videos list.

- 
- ▶ Touch the **Menu Key**  for the following options: **Home**, **Browse**, **Search**, **My Channel**, **Upload**, and **Settings**.

For details about these features, visit the YouTube website.

### To search for videos

1. At the top of the main YouTube screen, touch  or the **Search Key** .
2. Enter the text to search for or touch the **Microphone icon**  to search by voice.
3. Touch a suggestion below the search box or touch the **Search icon** .
4. Scroll through the search results and touch a video to watch it.

### To share your videos on YouTube

You can record and share a video using the **YouTube** application. First, you must create a YouTube account and sign into it on your phone.

You can also share the videos you record with the **Camera** application by uploading them to YouTube.

1. Touch  at the top right of main YouTube screen.
2. If you want to set any configurations manually, touch the screen to open the video camera settings.
3. Point the lens to frame the scene where you want to start.
4. Touch  to start recording.
5. Touch  to stop recording.
6. Touch .

The YouTube Upload details screen is displayed.

7. Touch **More details** to enter a title, description, and tags for your video.
8. If you want to share the video with everyone, checkmark **Public**. If not touch **Private**.
9. Touch **Upload**.

---

## Voice Recorder

The **Voice Recorder** application records audible files for you to use in a variety of ways. Use them simply to remind you about something you don't want to forget (like a grocery list) or record sound effects that you can attach to a message or set as a ringtone for calls.

### Record a Voice Memo

1. Touch the **Apps Key**  > **Voice Recorder** .
2. Touch  to start recording.
3. Speak into the microphone.
4. When you're finished, touch .

The recording is automatically saved to your recordings list.

- ▶ Touch  to listen to your recording.
- ▶ Touch  to record a new voice memo.
- ▶ Touch  to view your list of recordings.

### Play a Voice Memo

1. Touch the **Apps Key**  > **Voice Recorder** .
2. Touch .
3. Touch the voice memo you wish to play.

**NOTE** You can send the voice memo to others by touching and holding a voice memo and touching **Share**.

### Managing your Voice Memos

1. Touch the **Apps Key**  > **Voice Recorder** .
2. Touch .
3. Touch the **Menu Key**  > **Share** or **Sort by**.
  - ▶ Touch **Share** to send via Bluetooth, Email, Gmail, Messaging, or other compatible applications you have downloaded.
  - ▶ Touch **Sort by** to choose how to display the list, either by date or by name.

---

## Calendar

### Viewing Your Calendar and Events

Open the **Calendar** application to view events you've created or that others have invited you to.

When you first set up your phone, you configured it to use an existing Google Account or you created a new account. The first time you open the **Calendar** application on your phone, it displays any existing calendar events from your Google Account on the web.

You can add additional accounts with Google Calendar or Microsoft Exchange calendars to your phone, and configure them to display in Calendar.

When you first set up Calendar to synchronize events on your phone, it includes events from the previous month through one year in the future. Subsequently, Calendar keeps a year's worth of future events synchronized between your phone and the web, plus any later events that you add to your calendar using Calendar on your phone.

### To open the Calendar application

- ▶ Touch the **Apps Key**  > **Calendar** .

Events from each account you've added to your phone and configured to synchronize calendars is displayed in Calendar.

Events from each calendar are displayed in a different color.

### To change your calendar view

- ▶ Touch the **Agenda**, **Day**, **Week**, or **Month** tabs above the calendar.

Each view displays the events in your calendar for the period of time specified.

- ▶ To view more information about an event in Agenda, Day, or Week view, touch the event.
- ▶ To view the events of a day in Month view, touch a day. The event will be displayed below the calendar. Touch the event to view its details.

---

## Working in Agenda View

Agenda view is a list of your events in chronological order. All-day and multi-day events are listed at the start of each day.

### To switch to Agenda view

- ▶ Touch the **Agenda** tab above the calendar.



### To learn more about events in Agenda view

- ▶ Touch an event.  
A screen with details about the event opens.


---

## Working in Day View

Day view displays a chart of the events of one day, in a table of one-hour rows. The current time will be highlighted. All-day and multi-day events are displayed at the top. Part of the title of each event is displayed in the rows that correspond to when it occurs.

### To switch to Day view

- ▶ Touch the **Day** tab above the calendar.

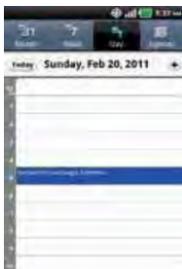

### To learn more about events in Day view

- ▶ Touch an event to view its details.
- ▶ Touch and hold an event to open an Options menu to view, edit, or delete the event. Also allows you to create another new event in the same time slot for juggling multiple events.

### To add an event in Day view

- ▶ Touch and hold an empty spot or an event in the day to open an options menu then touch **New event** to create a new event at that time.

---

## Working in Week View

Week view displays a chart of the events of one week. All-day and multi-day events are displayed at the top.

### To switch to Week view

- ▶ Touch the **Week** tab above the calendar.



### To learn more about events in Week view

- ▶ Touch an event to view its details.
- ▶ Touch and hold an event to open an options menu to view, edit, or delete the event. Also allows you to create another new event in the same time slot for juggling multiple events.

### To add an event in Week view

- ▶ Touch and hold an empty spot or an event in the week to open an options menu then touch **New event** to create a new event at that time.

---

## Working in Month View

Month view displays a chart of the events of the month. Segments of each day with scheduled events are green in the day's vertical bar.

### To switch to Month view

- ▶ Touch the **Month** tab above the calendar.



### To view more information about events in Month view

- ▶ Touch a day to display the events below the calendar. You can then touch the event to view more information about it.


---

## Viewing Event Details

You can view more information about an event in a number of ways, depending on the current view.

### To view information about an event

- ▶ In Agenda, Day, or Week view, touch an event to view its details.
- ▶ In Month view, touch a day to display the events below the calendar. Then touch an event to view its details.

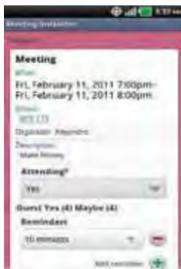

Touch the **Attending** field to set or change whether you'll attend the event.

Other attendees' status is displayed below your own.

Touch the **Reminders** field to change reminder settings, or touch  to add a reminder.

If you have permission to change events, you can touch the **Menu Key**  to edit or delete the event.

---

## Creating an Event

You can use the **Calendar** application on your phone to create events that appear on your phone and in Google Calendar on the web.

### To create an event

1. In any Calendar view, touch the **Menu Key**  > **New event** to open an Event details screen for a new event.

You can also touch and hold a spot in Day, Week, or Month view. In the menu that opens, touch **New event** to open the Event details screen with that day and time already entered.

2. Add details about the event.

Enter a name, time, and optional additional details about the event.

If you have more than one calendar, you can choose the calendar to which to add the event.

Touch  to add more reminders.

3. Invite guests to the event.

In the **Guests** field, enter the email addresses of everyone you want to invite to the event. Separate multiple addresses with commas ( , ). If the people to whom you send invitations use Google Calendar, they'll receive an invitation in Calendar and by email.

4. Touch the **Menu Key**  > **Show extra options**  to add details about the event.

5. Touch **Save** to save the event.

The event is added to your calendar.

---

## Editing or deleting an event

You can edit or delete an event that you created on the phone or on the web. You can also edit or delete events created by others, if they have given you permission.

### To edit an event

1. Touch an event to view its details.
2. Touch the **Menu Key**  > **Edit event**.

The Event Details screen opens.

Touch the **Menu Key**  > **Show extra options**  to add or edit additional event details.

3. Make your changes to the event.
4. Touch **Save** to save the event.

### To delete an event

There are a number of ways to delete an event.

- ▶ In Agenda view, touch an event to view its details. Then touch the **Menu Key**  > **Delete event** > **OK**.
- ▶ In Day or Week view, touch and hold the event > **Delete event** > **OK**.

If the event repeats, you're asked whether you want to delete just that occurrence, this and all future occurrences, or all past and future occurrences in your Calendar.

---

## Setting an Event Reminder

You can set one or more reminders for an event, whether or not you created the event or have permission to edit its other details.

### To set an event reminder

1. Touch an event to view its details.
2. If no reminder is set, touch  to automatically add a reminder for 10 minutes before the event.

If a reminder is already set, you can add an additional reminder by touching .

3. Touch the reminder field and, in the dialog box that opens, touch the length of time before the event that you want to be reminded of.

When the time comes, you receive a notification about the event.

You can use Google Calendar on the web to configure additional reminder settings.

### To delete an event reminder

1. Touch an event to view its details.
2. Touch .

---

## Calculator

Allows you to perform simple mathematical calculations.

### To open and use the Calculator

- ▶ Touch the Apps Key  > Calculator .



- ▶ Enter numbers and arithmetic operators on the Basic panel.
- ▶ Drag the Basic panel to the left to open the Advanced panel.
- ▶ Touch and hold the Calculator's display to open a menu where you can copy what you've entered and access other tools.
- ▶ Touch **Clear** to delete the last number or operator you entered. Touch and hold **Clear** to delete all of the entered information.

---

## Alarm/Clock

You use the **Clock** application to access the Alarm, Timer, World Clock and Stopwatch functions.

### To open the Clock application

- ▶ Touch the **Apps Key**  > **Alarm/Clock** .

### Setting Alarms

You can set an alarm by modifying an existing alarm or by adding a new one.

#### To set an alarm

1. Touch **New alarm** or touch an existing alarm to change its time and other attributes to modify it.
2. Touch the time to set the alarm time then touch **Set**.
  - ▶ Enter the alarm time manually by scrolling the hour (or minutes) field.
  - ▶ Scroll to **AM** or **PM** to set for morning or afternoon.
3. Touch the day(s) when you want the alarm to sound in the **Repeat** field. If you don't touch the Repeat setting, the alarm sounds only the one day you set it to.
4. Touch **Snooze duration** to open a dialog box to set the amount of time to wait before sounding the alarm again if it is not dismissed.
5. Touch **Vibrate** to checkmark the setting and have the phone vibrate, in addition to playing the ringtone.

- 
6. Touch **Alarm tone** to select a ringtone for the alarm, then touch **OK**. The ringtone plays briefly when you select it.
  7. Touch **Puzzle lock on** to checkmark the setting, which requires you to wake up enough to solve a simple puzzle to dismiss the alarm.
  8. Touch **Label** to enter a name for the alarm.
  9. When you're finished, touch **Save**.

## Setting Timer

The Timer can be used to alert you with an audible signal when a set amount of time has passed.

1. Open the **Clock** application and touch the **Timer** tab.
2. Set the time by scrolling Hour, Minute or Second fields.
3. Touch **Vibrate** to checkmark the setting and have the phone vibrate when the set time expires.
4. Touch **Alert Tone** to select an alert tone for the timer, then touch **OK**.
5. Touch **Start** to begin the time countdown.

## Setting World clock

Allows you to determine the current time in another time zone or city.

1. Open the **Clock** application and touch the **World Clock** tab.
2. Touch **New City** and search through the available cities for the one you want.

## Using Stopwatch

This feature allows you to use your phone as a Stopwatch.

1. Open the **Clock** application and touch the **Stopwatch** tab.
2. Touch **Start** to start timing and touch **Stop** to stop the time. You can use the Lap function by touching **Lap** to record lap times.
3. Touch **Reset** or **Resume**.

---

## **Polaris Office**

Polaris Office 3.0 is a professional Mobile Office Solution which enables users to conveniently view or edit various types of office documents including Word, Excel, and PowerPoint file extensions anywhere, anytime, using their mobile device.

### **Managing Files**

Polaris Office 3.0 provides mobile users with the convenience of managing files including copying, moving, and deleting files and folders right on the device.

### **Viewing Files**

Mobile users now have the convenience of being able to view a wide variety of file types including Microsoft Office documents, Adobe PDF right on their mobile device. When viewing these documents using Polaris Office 3.0, the objects and layout remain unchanged from their original documents.

### **Editing Microsoft Office Files**

Mobile users also have the convenience of being able to create, edit, and save Word, Excel and PowerPoint documents on their mobile device. Saved Documents generated or modified using Polaris Office 3.0, are not distorted from the originals.

---

## Settings

### Opening Settings

The **Settings** application contains most of the tools for customizing and configuring your phone. All of the settings in the **Settings** application are described in this section.

#### To open Settings

- ▶ From the Home screen, touch the **Menu Key**  > **Settings** .

OR

- ▶ Touch the **Apps Key**  > **Settings** .

### Changing Browser settings

You can configure a number of Browser settings, including several that you can use to manage your privacy.

- ▶ To open the Browser settings screen, touch the **Menu Key**  from the Browser and touch **More** > **Settings**.

---

## FCC Hearing-Aid Compatibility (HAC) Regulations for Wireless Devices

On July 10, 2003, the U.S. Federal Communications Commission (FCC) Report and Order in WT Docket 01-309 modified the exception of wireless phones under the Hearing Aid Compatibility Act of 1988 (HAC Act) to require digital wireless phones be compatible with hearing-aids. The intent of the HAC Act is to ensure reasonable access to telecommunications services for persons with hearing disabilities.

While some wireless phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed a rating system for wireless phones, to assist hearing device users to find phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label located on the box.


The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. T4 is the better/ higher of the two ratings.

---

Hearing devices may also be rated. Your hearing device manufacturer or hearing health professional may help you find this rating. Higher ratings mean that the hearing device is relatively immune to interference noise. The hearing aid and wireless phone rating values are then added together. A sum of 5 is considered acceptable for normal use. A sum of 6 is considered for best use.

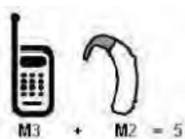

In the example to the left, if a hearing aid meets the M2 level rating and the wireless phone meets the M3 level rating, the sum of the two values equal M5. This should provide the hearing aid user with “normal usage” while using their hearing aid with the particular wireless phone. “Normal usage” in this context is defined as a signal quality that’s acceptable for normal operation.

The M mark is intended to be synonymous with the U mark. The T mark is intended to be synonymous with the UT mark. The M and T marks are recommended by the Alliance for Telecommunications Industries Solutions (ATIS). The U and UT marks are referenced in Section 20.19 of the FCC Rules. The HAC rating and measurement procedure are described in the American National Standards Institute (ANSI) C63.19 standard.

When you're talking on a cell phone, it's recommended that you turn the BT (Bluetooth) mode off for HAC.

**For information about hearing aids and digital wireless phones**

**Wireless Phones and Hearing Aid Accessibility**

<http://www.accesswireless.org/hearingaid/>

**FCC Hearing Aid Compatibility and Volume Control**

[http://www.fcc.gov/cgb/consumerfacts/hac\\_wireless.html](http://www.fcc.gov/cgb/consumerfacts/hac_wireless.html)