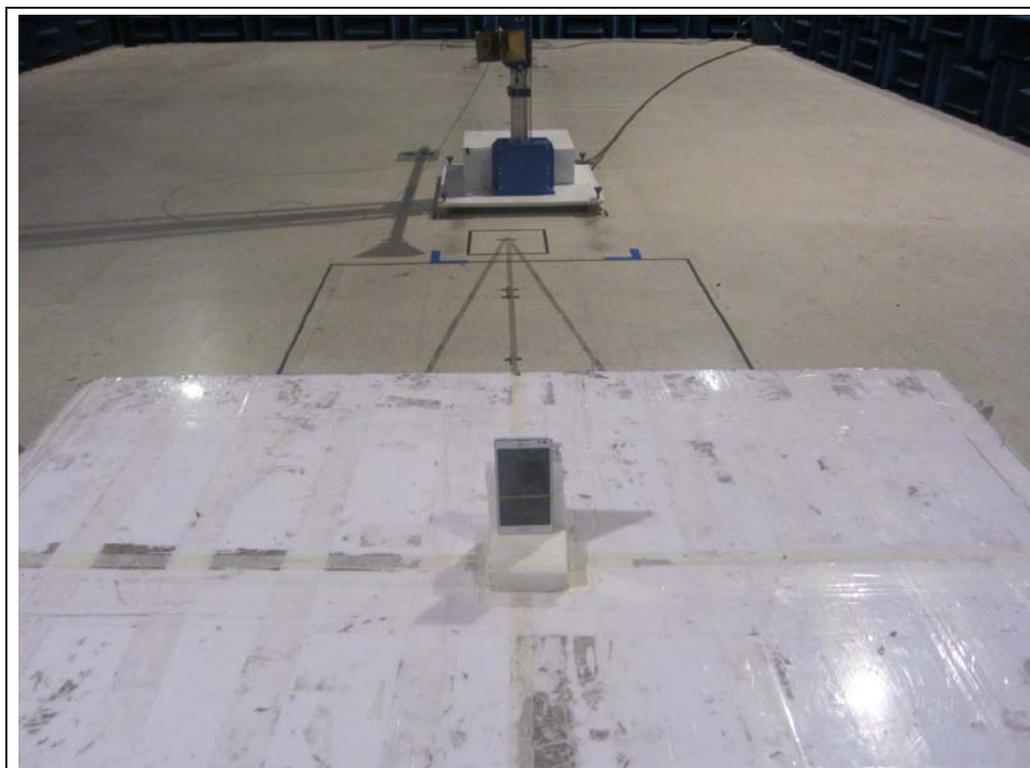

Test Setup photographs (DTS & DSS & NII)

EUT Position: X-axis



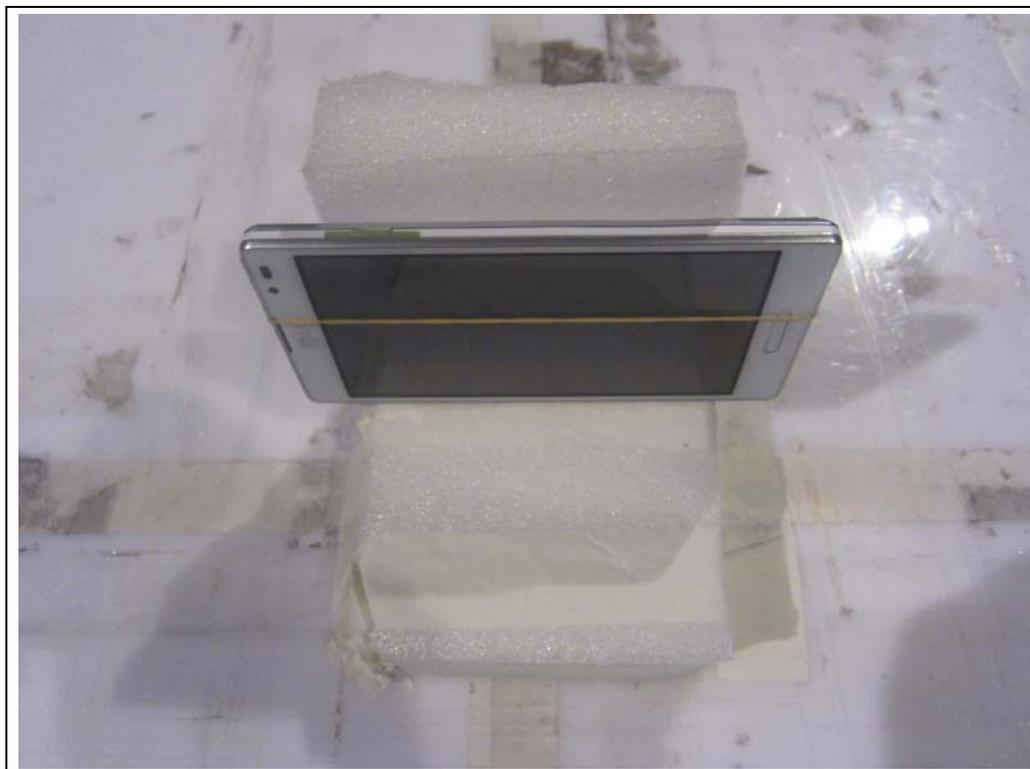
Test Setup photographs (DTS & DSS & NII)

EUT Position: Y-axis



Test Setup photographs (DTS & DSS & NII)

EUT Position: Z-axis



Test Setup photographs (DTS & DSS & NII)

