
Test Setup photographs(DSS)

EUT Position: X-axis




Test Setup photographs(DSS)

EUT Position: Y-axis



Test Setup photographs(DSS)

EUT Position: Z-axis

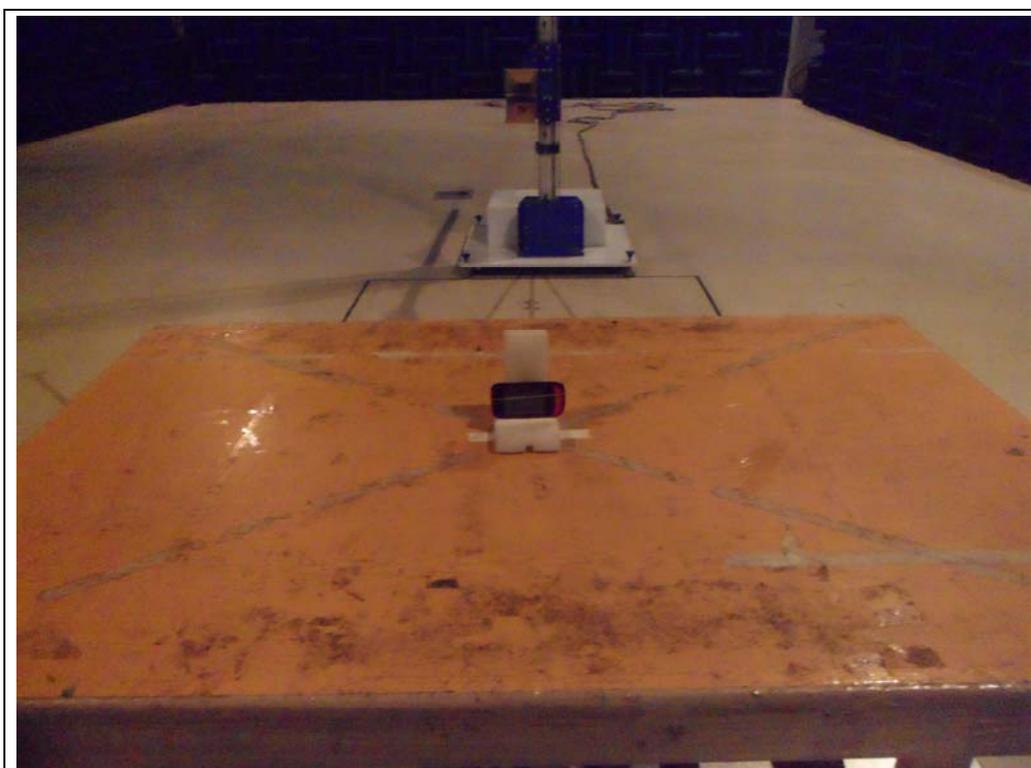

Test Setup photographs (DSS)

