

This device is not intended for sale in the U.S.A

Part 15.21 statement

" Change or Modifications that are not expressly approved by the manufacturer could void the user's authority to operate the equipment. "

Part 15.105 statement

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Part 15.19 statement

This device complies with part 15 of FCC rules and ICES-003 Class B digital apparatus requirements for Industry Canada. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Body-worn Operation

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm (0.59 inches) between the user's body and the back of the phone. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm (0.59 inches) must be maintained between the user's body and the back of the phone. Third-party belt-clips, holsters, and similar accessories containing metallic components may not be used. Body-worn accessories that cannot maintain 1.5cm (0.59 inches) separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

LG-T585 User Guide - ENGLISH

This guide will help you understand your new mobile phone. It will provide you with useful explanations of features on your phone.

Some of the contents in this manual may differ from your phone depending on the software of the phone or your service provider.

Contents

Phone Components.....5

Using your touch screen.....7

Touch screen tips..... 7

Control the touch screen..... 7

Installing the SIM Card and Charging the Battery.....8

Installing the SIM Card8

Installing a Memory card.....10

Formatting the Memory card.....10

Calls.....11

Making a Call11

Making a call from your contacts 11

Answering and rejecting a call 12

Cost save mode 12

Contacts.....12

Searching for a contact..... 12

Adding a new contact..... 12

Messaging.....13

Entering Text14

Setting up your email15

Camera.....15

Taking a quick photo 15

After taking a photo..... 15

Using the advanced settings 16

Video camera16

Making a quick video..... 16

After making a video17




Using the advanced settings17


Music17

Managing files.....	18	Settings.....	21
QuickMemo	18	Changing your phone settings	21
Banner.....	18	SOS Service settings.....	21
Safety Care.....	19	Changing your connectivity settings	22
Games and apps.....	19	Sending and receiving your files using	
Setting your alarm	19	Bluetooth	22
Voice recorder	19	Wi-Fi.....	23
Using your calculator	19	Phone Software update.....	24
Converting a unit	19	LG Mobile Phone Software update	
Installing LG PC Suite on your computer		from internet	24
20		Guidelines for Safe and Efficient Use	25
The web.....	20	Exposure to radio frequency energy	25
Accessing the web	20	Product care and maintenance.....	26
Dual SIM setting.....	20	Efficient phone operation.....	28
		Road safety.....	29

Avoid damage to your hearing.....	29
Glass Parts	30
Blasting area.....	30
Potentially explosive atmospheres...	30
In aircraft.....	30
Children.....	31
Emergency calls	31
Battery information and care	31
Accessories.....	33

Phone Components

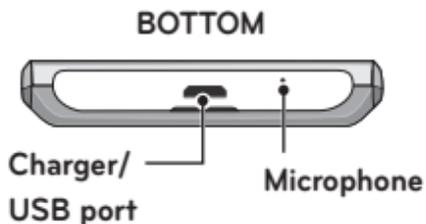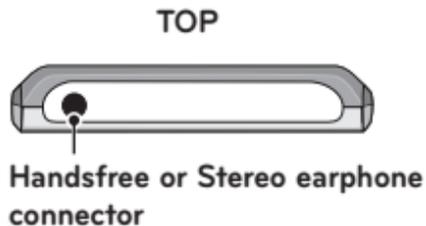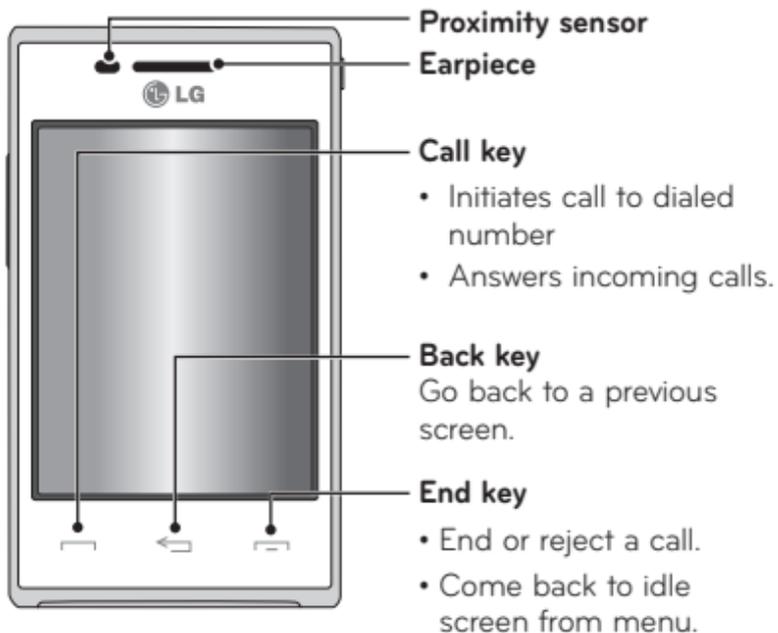

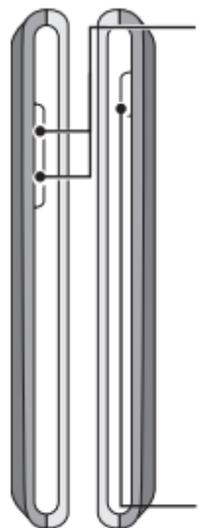

Volume keys

- **In the Home screen:** Ring tone and touch tone volume.
- **During a call:** Earpiece volume.
- **Down volume key:** Press and hold to activate/ deactivate Silent mode.
- **How to start QuickMemo:** Press Volume up and down key simultaneously. QuickMemo allows you to write a memo on a captured image

Power/Lock key

- Short press to turn on/off the screen.
- Long press for power on/off.

Using your touch screen

Touch screen tips

- To select an item, touch the centre of the icon.
- Do not press too hard; the touch screen is sensitive enough to pick up a light, yet firm touch.
- Use the tip of your finger to touch the option you require. Be careful not to touch any other keys.
- Whenever your LG-T585 is not in use, it will return to the lock screen.

Control the touch screen

The controls on the LG-T585 touch screen change dynamically depending on the task you are carrying out.

Opening Applications

To open any application, simply touch its icon.

Scrolling

Drag from side to side to scroll. On some screens, such as the Logs list, you can also scroll up or down.

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important!

- › The SIM card can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.
- › Only 2G/2.5G SIM cards are supported.

Illustrations

Always switch off your phone and disconnect the charger before removing the battery.

1. Open back cover.



2. Remove the battery.



3. Insert your SIM Cards.




4. Insert your battery.



5. Close the back cover.



6. Charge your battery.

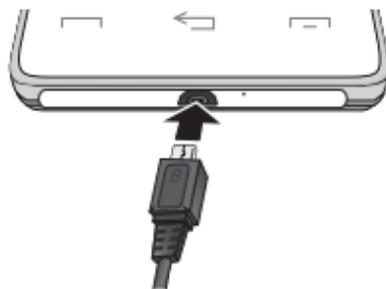



WARNING: Do not remove the battery when the phone is switched on, as this may damage the phone.

Installing a Memory card

Remove the Back cover and insert a micro SD card with the golden contact area facing downwards as shown in the diagram. To remove the Memory card, gently pull it.



NOTE: Memory card is an optional accessory.

Formatting the Memory card

Select **Settings** from Menu, go to **Device settings** Choose **Memory info**, then select **External memory** and tap **Format**. Enter phone password when prompted to formatting the Memory card.



WARNING: When you format your Memory card, all the content will be Erased. If you do not want to lose the data on your Memory card, take a backup first.

Calls

Making a Call

1. Touch  to open the keypad.
2. Enter the number using the keypad.
3. Touch  to initiate the call.

TIP! To enter + for making an international call, touch and hold "0".

Press the power key to lock the touch screen to prevent calls being made by mistake.

Making a call from your contacts

1. From the home screen touch  to open the **Contacts**.

2. Tap the search field box on the top of the screen and enter the first few letters of the contact you would like to call using the keypad.
3. From the filtered list, touch the contact ,then touch Call icon to make a call. The call will use the default number if there is more than one number for that contact.
4. Or you can touch the contact name and touch the number to call,if there is more than one number for that contact. You can also touch  key to initiate the call to the default number.

NOTE:

Self call - Self call imitates a real incoming call. Enter '#*#' on the Dialpad to activate a self call. This doesn't charge any fee.

Answering and rejecting a call

When your phone rings, touch  key to answer the call.

To mute the ringing, touch on **Silent** tab in alerting screen. This is useful if you forgot to change your profile to Silent for a meeting. Touch on **Reject** tab to reject an incoming call in alerting screen.

Cost save mode

Every contact is added along with assigned SIM when adding in phone book. During Calling, matching operator SIM is identified and the operation is completed using the matching operator SIM. This makes possible to use benefit from using same operator.

To use Cost save mode feature, make sure the feature is On [**Settings** > **Call settings** >

Common settings > Cost save mode]

NOTE: Cost save mode doesn't work during in-call.

Contacts

Searching for a contact

1. Touch **Contacts**.
2. Enter the first few letters of the contact's name you want to call by touching Search

Adding a new contact

1. Touch **Contacts** and touch **Add**.
2. Choose whether to save the contact to your **Internal memory**, **SIM1** or **SIM2**.
3. Enter your First and Last name.

4. You can enter up to five different numbers per contact.
5. Add an email addresses. You can enter up to two different email addresses per contact.
6. Assign the contact to one or more groups.
7. Touch **Save** to save the contact.

Messaging

Your LG-T585 combines SMS and MMS into one intuitive and easy-to-use menu.

Sending a message

1. Touch **Messages** in menu and touch **Write message** to begin composing a new message.
2. Touch **Insert** to add an Image, Video, Sound, Template and so on.
3. Touch **To:** field at the top of the screen to enter the recipients, then enter the number or touch  to select a contact. You can even add multiple contacts.
4. Touch  when ready.

NOTE: To send a message from SIM2 touch the forward arrow mark on  icon.



WARNING: If an image, video, sound, New slide and so on is added to an SMS it will be automatically converted to an MMS and you will be charged accordingly.

TIP: User can copy a selected text from any editor and can paste the same in any other editor
Ex: Go to Message editor, type some text. Now select the text you want to copy by scrolling over the text and go to Option and tap on **Copy** . Now place the cursor at a point you want to paste the text. Go to Option and tap on **Paste**, so that copied text will get pasted.

NOTE: Spam message - You can block the unwanted messages by giving **Spam numbers** or **Spam words**. Those messages will get stored in **Spam message** Folder.

Entering Text

You can choose your input method by tapping  and **Input method**.

Touch  to turn on T9 mode. This icon is only shown when you choose **Keypad** as the input method. Touch to  change between numbers, symbols and text input. Use **Shift** key to change between capital or lowercase input.

TIP: You can send SMS to many contacts at a time. User can select/deselect contacts for sending the message. Only 20 contacts can be marked and if user choose **Select all** only first 20 contacts will be marked.

To send the SMS to a particular group of contacts select **Groups** and select particular group.

NOTE: Excuse message - During Incoming call alert, a preset message can be send by taping on **Excuse msg.**

NOTE: SMS Sorting - Inbox Messages can be sorted with the given sorting options for an easy access of messages. (**Date, Sender, Read and unread**)

Setting up your email

Touch **E-mail** from Apps Menu Screen 2.
If the email account is not set up, start the email set up wizard and finish it. You can check and edit settings also you can check the additional settings that were filled in automatically when you created the account.

Camera

Taking a quick photo

1. Touch **Camera** icon.
2. When the camera has focused on your subject, touch  to take a photo.

TIP: To switch to the camera mode or video mode, slide up/down the camera or video icon on the centre-right of the viewfinder.

After taking a photo

Your captured photo will appear on the screen.
The following options are available.

Touch 

Upload - Touch to upload the photo.

Send Via - Touch to send the photo as a **Message, E-mail** or via **Bluetooth**.

Set as - Touch to set as **Home screen wallpaper, Lock screen wallpaper, Contacts image**.



Touch to delete the image.



Touch to take another photo immediately.



Touch to view a gallery of your saved photos.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options.

After selecting the option, touch the **OK** button.

Video camera

Making a quick video

To switch to the camera mode or video mode, slide up/down the camera or video icon on the right centre of the viewfinder.

1. Holding the phone horizontally, point the lens towards the subject of the video.
2. Touch the red dot .
3. ● **REC** will appear at the bottom of the viewfinder with a timer at the bottom showing the length of the video.
4. To pause the video, touch  and resume by selecting .
5. Touch  on screen to stop video recording.

After making a video

A still image representing your captured video will appear on the screen. The name of the video is displayed at the bottom of the screen.

The following options are available.

 Touch to play the video.

Touch  to

Send Via - To send the video as a **Message**, **E-mail** or via **Bluetooth**.

 Touch to delete the video you have just made and confirm by touching **Yes**. The viewfinder will reappear.

 Touch to shoot another video immediately. Your current video will be saved.

 Touch to view a gallery of saved videos and images.

Using the advanced settings

From the viewfinder, touch  to open all advanced settings options. You can change the video camera setting after selecting the option, touch the **OK** button.

Music

To access the music player, touch **Music**. From here, you can access a number of folders:

Recently played - List of songs that you have played recently.

All tracks - Contains the songs you have on your phone except the pre-loaded default music.

Artists - Browse through your music collection by artist.

Albums - Browse through your music collection by album.

Genres - Browse through your music collection by genre.

Folders - Contains all the folders you have created.

Playlists - Contains all the playlists you have created.

Shuffle tracks - Play your tracks in a random order.

Managing files

You can store multimedia files in your phone's memory so you have easy access to all your images, sounds, videos, documents and other content. You can also save your files to a memory card. Using a memory card allows you

to free up space in your phone's memory.

By touching **My stuff**, you can open a list of the folders that store all your multimedia files.

QuickMemo

The QuickMemo allows you to create memos and capture screen shots. Capture screens, draw on them, and share them with family and friends with QuickMemo.

To start QuickMemo press Volume up & down keys simultaneously.

Banner

You can use it as a cheering tool in the concert hall or performance theatre.

Safety Care

Go to **Menu > Settings > Device settings > Safety Care**.

Safety care let people around you know your emergency situations.

Safety care provides services as follow:

- Emergency call forwarding
- Phone non-usage notice

Games and apps

You can install new games and applications on your phone to keep you amused when you have spare time. Touch **Games and apps** and choose **Games, Applications, Phantom browser**.

Setting your alarm

1. Touch **Alarms**.
2. Touch **Add**, then you can set and save your alarm in this menu.

Voice recorder

Use your **Voice recorder** to record voice memos or other audio files.

Using your calculator

1. Touch **Calculator**.
2. Touch the number keys to enter numbers.

Converting a unit

1. Touch **Unit converter**.
2. Choose whether you want to convert **Currency, Area, Length, Weight**,

Temperature, Volume or Velocity.

3. Then select the unit and enter the value you would like to convert from.

Installing LG PC Suite on your computer

1. Go to **www.lg.com** and choose your country.
2. Select Support and Go to Mobile Support. Follow the instructions on screen to complete the LG PC Suite Installation on your PC.

The web

Internet gives you a fast, colourful world of games, music, news, sport, entertainment and loads more, straight to your mobile phone.

Wherever you are and whatever you're into.

Accessing the web

1. Touch the **Internet**.
2. To go straight to the internet home page touch Yes. In the page tap on option button present at the right bottom corner for more options.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

Dual SIM setting

You can see two Network Signal icons on the left-top of the screen when you insert two SIM-Card.

To Activate/Deactivate the SIM card, Touch **Dual SIM settings** from Menu.

Settings

Changing your phone settings

Use the freedom of adapting the LG-T585 to your own preferences.

Touch **Settings** then select **Device settings**.

Anti-theft mobile tracker - When the handset is stolen, handset sends the SMS to the numbers configured by real owner. To activate the ATMT feature, you will need to set ATMT on, and configure the ATMT settings with **Sender name** and **Sending number list**. Default ATMT Code is "0000".

NOTE: Anti Theft Mobile Tracker - (**Settings > Device settings > Security > Anti-theft Mobile tracker**) When the handset is stolen, handset sends the SMS to the predefined numbers configured by real owner. ATMT SMS will contain information about the stolen phone **IMEI, Owner name & phone number** of the person who is using that handset.

SOS Service settings

- **SOS Service** - Enable "SOS service" at SOS Service settings. After enabling, press down volume key 4 times when screen is locked, the SOS message is sent and the phone stays in SOS Mode.

In the emergency situation SOS message will be sent to the assigned receivers and incoming calls by them will be automatically

accepted. All notification sound will be muted. To exit the SOS mode, press the End key in Homescreen.

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use **Settings > Connectivity**.

Sending and receiving your files using Bluetooth

To send a file:

1. Open the file you want to send, typically this will be a photo, video or music file.
2. Choose **Send via**. Choose **Bluetooth**.

3. If you have already paired the **Bluetooth** device, your LG-T585 will not automatically search for other **Bluetooth** devices. If not, your LG-T585 will search for other **Bluetooth** enabled devices within range.
4. Choose the device you want to send the file to.
5. Your file will be sent.

To receive a file:

1. To receive files, your Bluetooth must be both **ON** and **Visible**. See **Bluetooth settings** for more information.
2. A message will prompt you to accept the file from the sender. Touch **Yes** to receive the file.
3. You will see where the file has been saved. For image files, you can choose to **View**

the file. Files will usually be saved to the appropriate folder in **My stuff**.

TIP!

1. When you use a Bluetooth headset, A2DP and AVRCP profiles are not supported while you play video. It means you will not listen video sound if you use Bluetooth headset.
2. Bluetooth file transferring function will be blocked under some applications running. (Voice call, Camera, Music Player, UMS/PCSync)

Wi-Fi

Wireless Manager allows you to manage Internet connections your phone's Wi-Fi (a wireless LAN). It allows the phone to connect to local wireless networks or access the Internet wirelessly. Wi-Fi is faster and has a greater range than Bluetooth wireless technology. It allows fast emailing and Internet browsing.

NOTE: The LG-T585 supports WEP and WPA/WPA2-PSK security. If your Wi-Fi service provider or network administrator sets encryption for network security, fill in the key in the pop-up window. If encryption is not set, this pop-up window will not be shown. You can obtain the key from your Wi-Fi service provider or network administrator.

Phone Software update

LG Mobile Phone Software update from internet

For more information on using this function, please visit the <http://update.lgmobile.com> or <http://www.lg.com/common/index.jsp> ----> select country.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service centre.

As the mobile phone firmware update requires the user's full attention for the duration of the update process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing

the USB data cable or battery during the upgrade may seriously damage your mobile phone.

For your safety

Important Information

This user's guide contains important information about the use and operation of this phone. Read all information carefully for optimal performance and to avoid any damage or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Before you begin

Safety Guidelines



WARNING! To reduce the possibility of electric shock, do not expose your product to high humidity areas, such as bathroom or swimming pool.

Keep the phone away from heat. Never store your phone in environment that may expose it to temperatures below 0°C or above 40°C, such as outdoor during snowstorm, or in your car in hot days. Exposure to cold or heat will result in malfunction, damage or permanent failure. Be careful when using your phone near other electronic devices. The RF emissions from mobile phones may affect nearby electronic equipment that not adequately shielded. You should consult manufacturers of any personal medical devices, as in the case of pacemakers and hearing aides, to determine whether they are susceptible to interference from cell phones.

Turn off your phone in medical facilities or at gas stations. Never place your phone in microwaves, as it will cause the battery to explode.

Important!

Before using your phone, please read the SAFETY INFORMATION OF THE TELECOMMUNICATIONS INDUSTRY ASSOCIATION (TIA).

Safety Information

Read these simple guidelines. Breaking the rules may be illegal or dangerous.

More detailed information is provided in this user's guide.

- Never use an unapproved battery that could cause damages to the phone or the battery itself, or even explode.
- Never place your phone in a microwave oven, as this will result in an explosion of the battery.
- Do not dispose of your battery in fire or with hazardous or flammable materials.
- Make sure the battery does not come into contact with sharp-edged items, such as animal teeth or claws. This could cause a fire.
- Store the battery in a place out of the reach of children.
- Be careful so that children do not swallow any parts of the phone, such as rubber plugs (earpiece, parts that connect to the phone, etc.). This could cause asphyxiation or suffocation.
- Disconnect the plug and charger from the outlet when the phone shows that the battery has been fully charged, because it may cause electric shock or fire hazard.
- When in the car, do not leave your phone, or install a hands-free kit, near the airbag. If wireless equipment is improperly installed, you can be seriously injured if the airbag is

deployed.

- Do not use mobile phone while driving.
- Do not use the phone in areas where its usage is prohibited. (For example: in airplanes).
- Do not expose the battery charger or adapter to direct sunlight, or use it in places with high humidity, such as bathroom.
- Never store your phone in temperatures lower than -20°C or higher than 50°C.
- Do not use harsh chemicals (such as alcohol, benzene, solvents, etc.) or detergents to clean the phone. This could cause fire.
- Do not drop the phone, strike it, or shake it hard.
Such actions may harm the phone's internal circuit boards.
- Do not use your phone in high explosive areas,

as this may generate sparks.

- Do not damage the power cord by bending, twisting, pulling, or heating it. Do not use the plug if it is loose as it may cause fire or electric shock.
- Do not handle the phone with wet hands while it is charging. This can cause electric shock or seriously damage your phone.
- Do not disassemble the phone.
- Do not make or answer calls while charging the phone, which can cause a short circuit, electric shock, or fire.
- Use only batteries and chargers provided by LG. The warranty does not apply to products provided by other providers.
- Only authorized personnel should service the phone and its accessories.

Installation or service may result in accidents and consequently invalidate the warranty.

- Do not hold or let the antenna come in contact with your body during a call.
- Emergency calls can be made only within a service area. To make an emergency call, make sure you are within a service area and the phone is on.
- Use your accessories, such as headphones or headsets, with caution, ensuring that the cables are plugged properly and that they do not touch the antenna unnecessarily.

Information about the RF exposure from FCC



WARNING! Read this information before operating the phone.

In August 1996, the Federal Communications Commission (FCC) of the United States, with its action in Report and Order FCC 96-326, adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both international and U.S. standards.

The design of this phone complies with FCC guidelines and these international standards.

Caution

Use only the supplied antenna. Use of unauthorized antennas, or modifications, could impair call quality, damage the phone, void your warranty, or result in a violation of FCC regulations.

Do not use the phone with a damaged antenna.

A damaged antenna in contact with the skin could cause a singe. Contact your local dealer for an antenna replacement.

Adapter Precautions (Charger)

- Using the wrong battery charger could damage your phone and void your warranty.
- The adapter or battery charger is only designed for indoor use.
- Do not expose the battery charger or adapter to direct sunlight, or use it in places with high humidity, such as the bathroom.

Cautions for Battery

- Do not disassemble or open crush, bend or deform, puncture or shred.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Only use the battery for the system for which

it is specified.

- Only use the battery with a charging system that has been qualified with the system per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725-200x. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.
- Promptly dispose of used batteries in accordance with local regulations.
- Battery usage by children should be supervised.

- Avoid dropping the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- For those host devices that utilize a USB port as a charging source, the host device's user manual shall include a statement that the phone shall only be connected to products that bear the USB-IF logo or have completed the USB-IF compliance program.
- Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.

Avoid damage to your ear

- Damage to your hear can occur due to constant exposure to excessive high sound. We, therefore, recommend that you do not turn on or off the phone near your ear. We also recommend you be reasonable with the music and volume level.
- If you listen to music, please ensure that the volume level is adequate, so that you are aware of your surroundings. This is particularly important when attempting to cross a street.

Safety instructions

TIA's Safety Information

This includes complete security information on wireless phones from TIA (Telecommunications Industry Association).

It's required, for CTIA Certification, the inclusion in the user manual of text covering pacemakers, hearing aids and other medical devices. It's encouraged the use of the remaining TIA language when relevant.

Exposure to Radio Frequency Signal

Your wireless handheld portable telephone is a lowpower radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals.

In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure

guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C95.1 (1992) *

NCRP Report 86 (1986)

ICNIRP (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop

the ANSI Standard (C95.1).

* American National Standards Institute;
National Council on Radiation Protection and

Measurements; International Commission on Non-Ionizing Radiation Protection.

The design of your phone complies with the FCC guidelines (and those standards).

Antenna Care

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

Suggestions for a more efficient operation

For your phone to operate most efficiently:

- Do not touch the antenna unnecessarily, when the phone is in use. The contact with the antenna affects call quality, and may cause the phone to operate at a higher power level than otherwise would be need.

Driving

Check the laws and regulations related to the use of wireless phones in the areas where you drive. Always obey these regulations. Also, if using your phone while driving, make sure to:

- Pay full attention to driving; driving safely is your first responsibility;
- Use hands-free operation, if available;

- Pull off the road and park, before making or answering a call, if driving conditions demand so.

Electronic Devices

Most modern electronic equipment is shielded from RF signals.

However, certain electronic equipment may not be shielded against the RF signals from your wireless phone.

Pacemaker

The Medical Industry Manufacturers Association recommends a minimum distance of fifteen (15) centimeters, or six (6) inches, between a handheld wireless phone and a pacemaker, in order to avoid potential interference between them.

These advices are consistent with independent researches, and with recommendations based on wireless technology research.

People with pacemakers should:

- ALWAYS keep the phone at least fifteen centimeters (six inches) from their pacemaker, whenever the phone is turned on;
- Not carry the phone in a shirt pocket;
- Use the ear opposite to the pacemaker, to minimize the potential interference;
- If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such

interference, we recommend that you contact your service provider.

Other Medical Devices

If you use any other personal medical devices, consult your device manufacturer to determine if they are adequately shielded from external RF energy. Your doctor can help you obtain this information.

Health Care Facilities

Turn off your phone in health care facilities, whenever there are signs asking you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect improperly installed or inadequately shielded devices in motor vehicles.

Check with the manufacturer, or its representative, regarding your vehicle.

You should also consult the manufacturer about any equipment that has been added to your vehicle.

Facilities with signs

Turn off the phone in any facility where warning signs request you to do so.

Airplanes

FCC regulations prohibit the use of phones while in the air. Turn off your phone before boarding an airplane.

Blasting Areas

To avoid interfering with blasting operations, turn your phone off when in a 'blasting area' or in areas with signs that read: 'Turn off two-way radios' . Obey all signs and instructions.

Potentially Explosive Atmosphere

Turn off the phone when in an area with a potentially explosive atmosphere, and obey all signs and instructions.

Sparks in such areas could cause an explosion or fire that could result in personal injury or death.

Areas with a potentially explosive atmosphere are often clearly marked, but not always. Among the potentially dangerous areas are:

Fueling areas (such as gas stations), areas

below deck on boats, facilities where chemical products are transferred or stored, vehicles using liquefied petroleum gas (as propane or butane), areas where the air contains chemicals or particles (such as grain, dust or metal powders), and any other areas where you would normally be advised to turn off your vehicle engine.

For vehicles equipped with air bags

Air bags inflate with strong force. Do not place objects in the area over the air bag or in its deployment area, including wireless equipment, either installed or portable.

Serious injuries could occur if wireless equipment is improperly installed into the car when the air bag inflates.

Safety Information

Read and observe the following information for the safe and proper use of your phone, and to prevent any damage.

Also, keep the user's guide in an accessible place at all times after reading it.

Charger, Adapter and Battery Security

- The charger and adapter are designed only for indoor use.
- Dispose of your battery properly, or bring it to your wireless provider for recycling.
- The battery doesn't need to be fully discharged before recharging.
- Only use LG approved chargers that are specifically made for your phone model, since they are designed to maximize the battery life.
- Do not disassemble or short-circuit it.
- Keep the metal contacts on the battery clean.
- Replace the battery when it no longer provides acceptable performance. The battery can be recharged several hundred times before replacement.
- Charge the battery after long periods without use to maximize its life.
- The battery life will vary depending on usage patterns and environmental conditions.
- Intensive use of backlighting, browser, and packet data connectivity affect battery life and talk/standby times.
- The role of self-protection interrupts the phone when its operation is in an abnormal state. In this case, remove the battery from the phone, reinstall it, and turn on the phone.

Explosion, Shock and Fire Danger

- Do not place the phone in a place exposed to excessive dust, and keep the minimum required distance between the power cord and heat sources.
- Unplug the power cord before cleaning the phone, and clean the power plug whenever it is dirty.
- When using the power plug, make sure it is firmly connected. Otherwise, it can overheat or start a fire.
- Placing the phone in a pocket or bag without covering the receptacle (power plug pin), metallic articles (such as a coin, clip or pen) may short-circuit the phone. Always cover the receptacle when not in use.
- Do not short-circuit the battery. Metal items,

such as coins, paper clips, or pens, in your pocket or bag may cause a shortcircuit between the + and - terminals of the battery (metal strips on the battery). The short-circuit of the terminals may damage the battery and cause an explosion.

General Notice

- Using a damaged battery, or inserting it into the mouth can cause serious injuries.
- Do not place the phone in proximity to items containing magnetic components, such as credit cards, calling cards, bank books, or subway tickets. The phone magnetism may damage the data stored in the magnetic strip.
- Talking on the phone for a long period of time may reduce call quality, because of the heat generated during use.

- When the phone has not been in use for a long time, store it in a safe place, with the power cord unplugged.
- Using the phone close to a receiving equipment (such as TV or radio) may cause interference.
- Do not use the phone if the antenna is damaged. If a damaged antenna contacts skin, it may cause a slight singe. Contact an LG Authorized Service Facility to replace the damaged antenna.
- Do not immerse your phone in water. If this happens, immediately turn it off and remove the battery. If your phone does not work, take it to an LG Authorized Service Facility.
- The power supply contains elements that could be harmful to your health, if components are handled directly. If this happens, we

recommend immediate hand-washing.

- Do not paint the phone.
- Data stored in your phone might be deleted due to careless use, hardware repair or software upgrade.
Please backup your important phone numbers (ringtones, text or voice messages, images, and videos might also get deleted). The manufacturer is not liable for damages due to loss of data.
- When using the phone in public places, you may set the ringer on vibrate to avoid disturbing others.
- Do not switch the phone on/off while it is in your ear.

Accessories

There are various accessories for your mobile phone. You can select these options according to your personal communication requirements.

Travel Adapter



Standard Battery



**User Guide
LG-T585**



Headset



NOTE

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions; please check with our regional service company or agent for further enquires.