
Test Setup photographs (PCE)

EUT Position: X-axis




EUT Position: Y-axis




EUT Position: Z-axis



Test Setup Photo of Radiated Measurement (PCE)

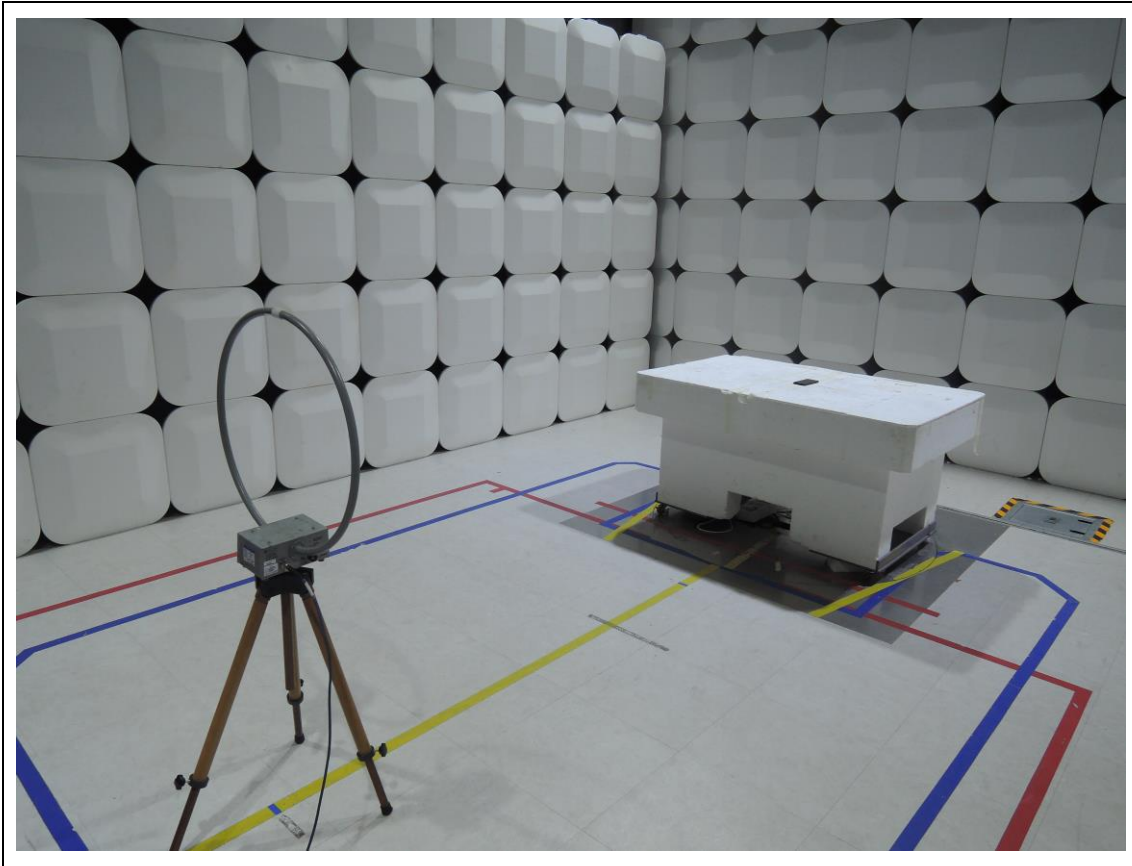

Test Setup Photo of Radiated Measurement (PCE)

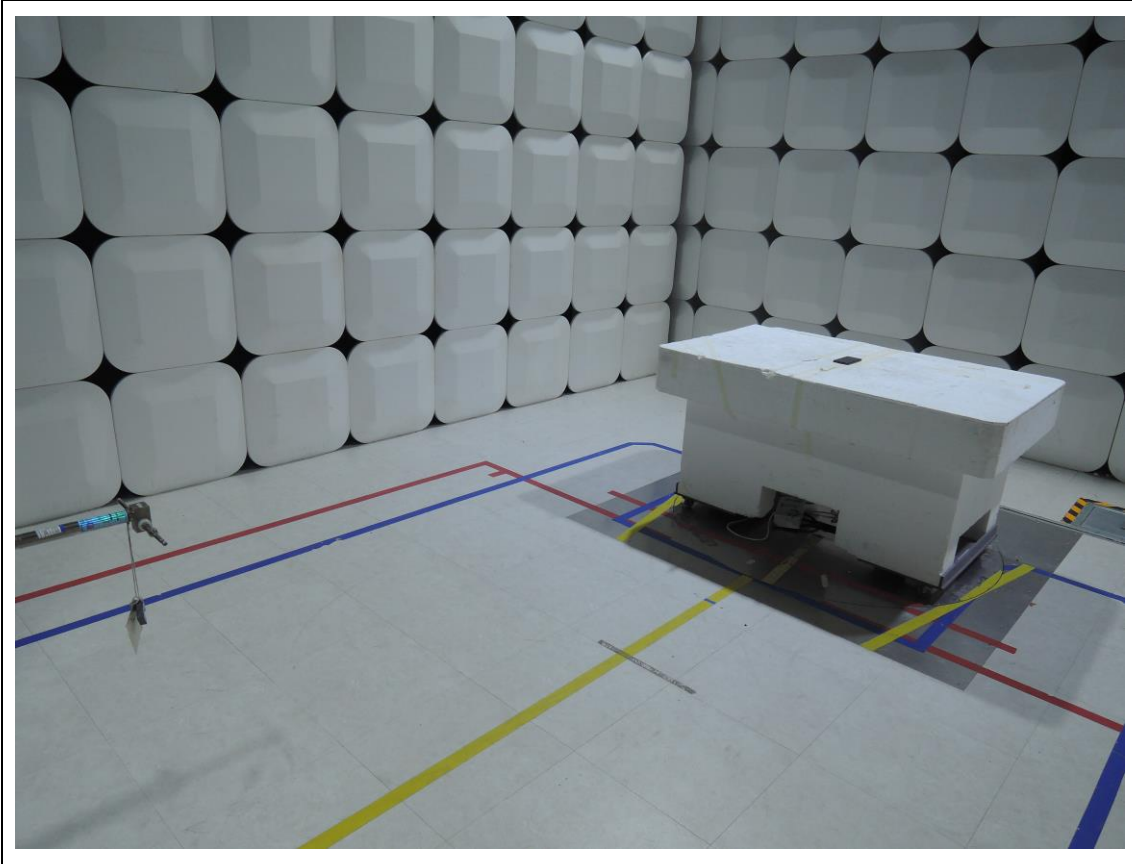

Test Setup Photo of Radiated Measurement (PCE)

