 



# Operation description

MODEL: SR-182C

## 1. Product description

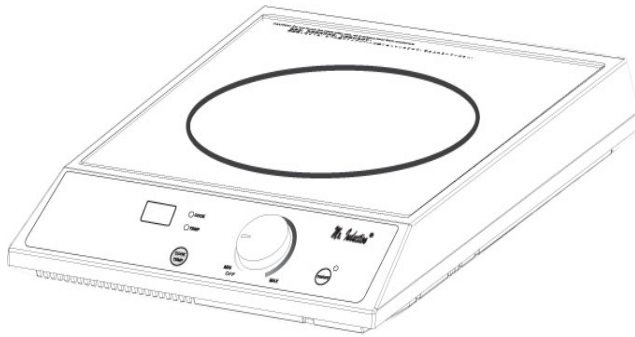
 
## 2. Control Plate:

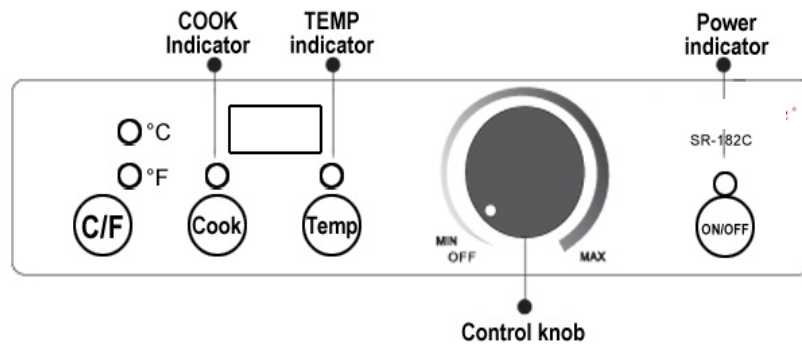

## 3. HOW TO USE

1. Plug in power cord (120V / 60Hz) - unit will beep once.
2. Please use suitable cookware and add food contents.
3. Press ON/OFF button (red indicator light will illuminate) AND turn knob clockwise away from OFF position. (COOK mode by default)
4. Press COOK or TEMP button to select setting  
COOK mode: LED displays power level: 1~20  
TEMP mode: LED displays temperature: 90°F~440°F or 32°C~226°C  
By Pressing the button of C/F
5. Turn knob clockwise/counter-clockwise to set power level or temperature.
6. When cooking is done, turn unit off by pressing ON/OFF button or turn knob all the way left to "OFF" position.

### NOTE:

- If unit is off and knob is turned to OFF position, you must press ON/OFF button AND turn knob clockwise pass OFF position to turn on unit.
- If unit is off and knob is not in the OFF position, simply press ON/OFF button to turn on unit.
- Unit will cook until: manually shut off or unit will shut off when there has been no change to any setting for 2 hours.
- if no cookware or unsuitable cookware is placed, unit will shut off after 2 minutes.
- To avoid temperature jump, please cook at least 1 quart of food/content.

 
# Operation description

MODEL: SR-183C

## 1. Product description



## 2. Control Plate:

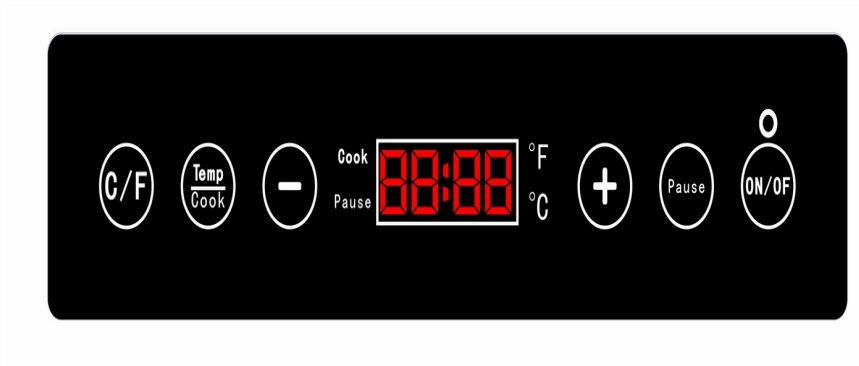

## 3. HOW TO USE

1. Plug in power cord (120V / 60Hz) - unit will beep once.
2. Please use suitable cookware and add food contents.
3. Press ON/OFF button (red indicator light will illuminate) and then press COOK/TEMP button.(COOK mode by default)
4. Press COOK/TEMP button to select setting  
COOK mode: LED displays power level: 1~20  
TEMP mode: LED displays temperature: 90°F~440°F or 32°C~226°C  
By Pressing the button of C/F
5. Press + or - button to set power level or temperature.
6. When cooking is done, turn unit off by pressing ON/OFF button
7. When cooking is done, pause the cooking by pressing PAUSE button ,  
Press the PAUSE button again, unit restore cooking

### NOTE:

- Unit will cook until: manually shut off or unit will shut off when there has been no change to any setting for 2 hours.
- if no cookware or unsuitable cookware is placed, unit will shut off after 2 minutes.
- To avoid temperature jump, please cook at least 1 quart of food/content.

 
# Operation description

MODEL: SR-652C

## 1. Product description



## 2. Control Plate:

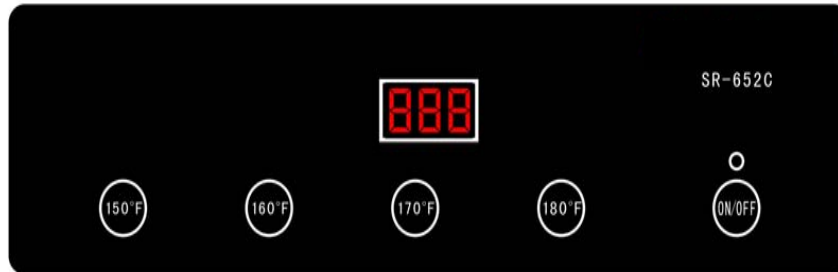

## 3. HOW TO USE

1. Plug in power cord (120V / 60Hz) unit will beep once.
2. Please use suitable cookware and add food contents.
3. Press ON/OFF button (red indicator light will illuminate) and then Press 150F or 160F or 170F or 180F button.
4. Press 150F or 160F or 170F or 180F button to set temperature.  
LED displays a three digit number: 150°F, 160°F, 170°F, 180°F
- 5 When cooking is done, turn unit off by pressing ON/OFF button

 
### NOTE:

- Unit will cook until: manually shut off or unit will shut off when there has been no change to any setting for 2 hours.
- if no cookware or unsuitable cookware is placed, unit will shut off after 2 minutes.
- To avoid temperature jump, please cook at least 1 quart of food/content.

# Operation description


MODEL: SR-182R

## 1. Product description

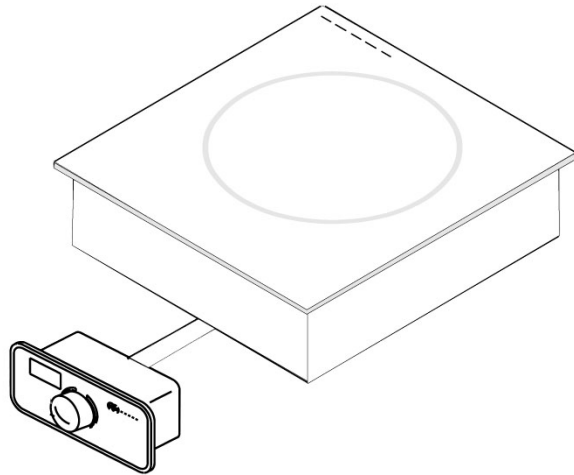


## 2. Installation

 - The cooktop can be surface-mounted into the countertop.
- The cooktop can be flush with the countertop

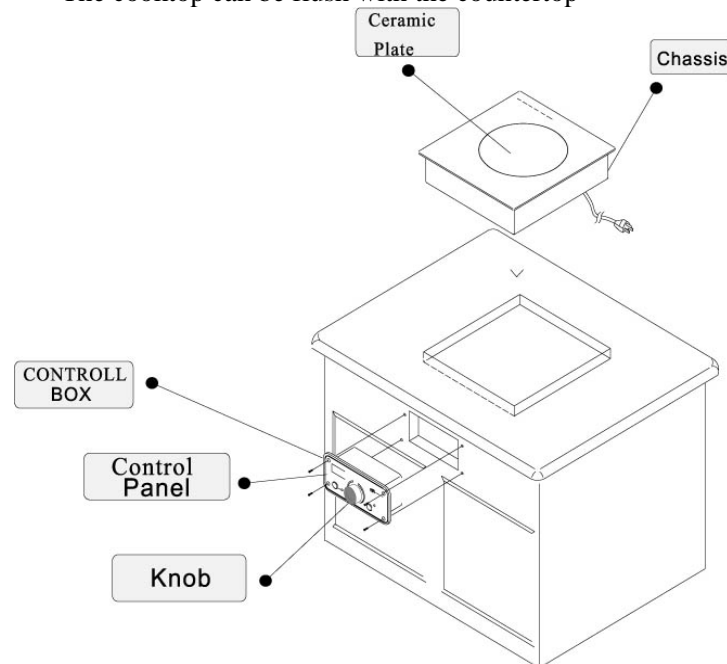

## 3. Control Plate:

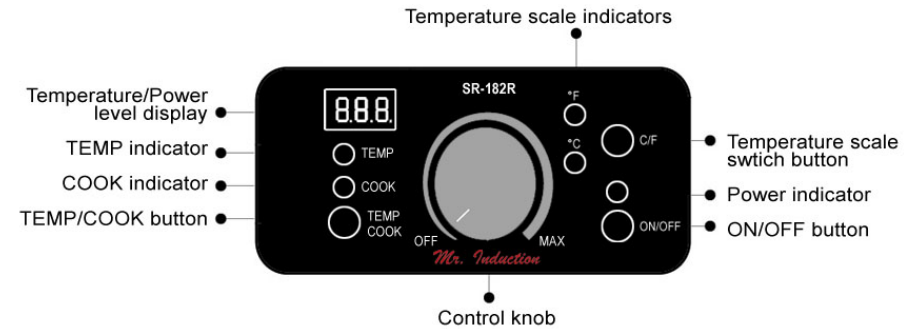 

## 4. HOW TO USE

1. Plug in power cord (120V / 60Hz) - unit will beep once.
2. Please use suitable cookware and add food contents.
3. Press ON/OFF button (red indicator light will illuminate) AND turn knob clockwise away from OFF position. (COOK mode by default)
4. Press COOK/TEMP button to select setting  
COOK mode: LED displays power level: 1~20  
TEMP mode: LED displays temperature: 90°F~440°F or 32°C~226°C  
By Pressing the button of C/F
5. Turn knob clockwise/counter-clockwise to set power level or temperature.
6. When cooking is done, turn unit off by pressing ON/OFF button or turn knob all the way left to "OFF" position.

### NOTE:

- If unit is off and knob is turned to OFF position, you must press ON/OFF button AND turn knob clockwise pass OFF position to turn on unit.
- If unit is off and knob is not in the OFF position, simply press ON/OFF button to turn on unit.
- Unit will cook until: manually shut off or unit will shut off when there has been no change to any setting for 2 hours.
- if no cookware or unsuitable cookware is placed, unit will shut off after 2 minutes.
- To avoid temperature jump, please cook at least 1 quart of food/content.

# Operation description

 
MODEL: SR-652R

## 1. Product description




## 2. Installation

- The cooktop can be surface-mounted into the countertop.
- The cooktop can be flush with the countertop

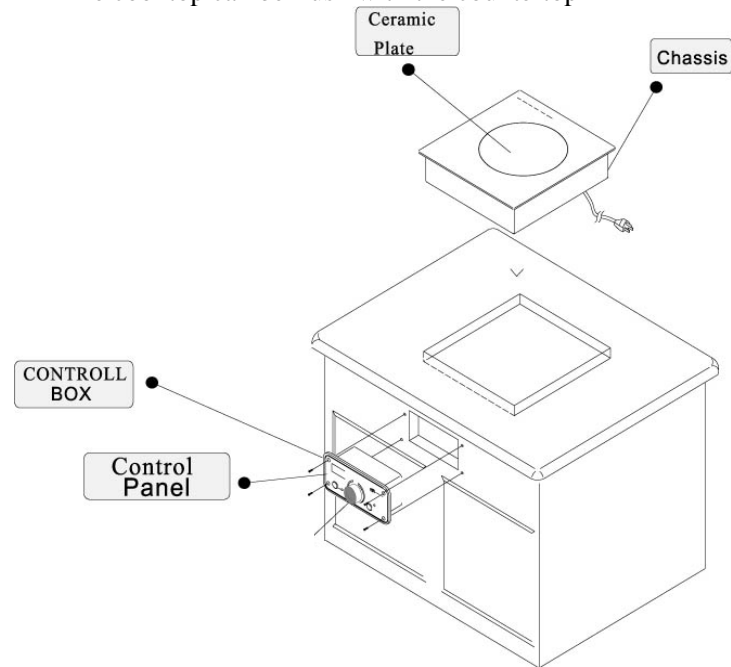

## 3. Control Plate:

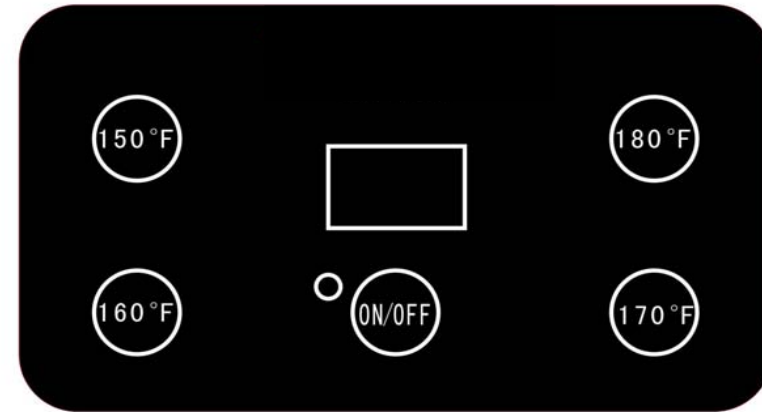 

## 4. HOW TO USE

1. Plug in power cord (120V / 60Hz) unit will beep once.
2. Please use suitable cookware and add food contents.
3. Press ON/OFF button (red indicator light will illuminate) and then Press 150F or 160F or 170F or 180F button.
4. Press 150F or 160F or 170F or 180F button to set temperature. LED displays a three digit number: 150°F, 160°F, 170°F, 180°F
- 5 When cooking is done, turn unit off by pressing ON/OFF button

### NOTE:

- Unit will cook until: manually shut off or unit will shut off when there has been no change to any setting for 2 hours.
- if no cookware or unsuitable cookware is placed, unit will shut off after 2 minutes.
- To avoid temperature jump, please cook at least 1 quart of food/content.