



## USER MANUAL



### Table of Contents

1. Start up your device.....	2
1.1 Connect the power.....	2
1.2 The Android mini PC start.....	2
2. Use.....	2
2.1 Adjust the display resolution.....	2
2.2 Choose language.....	3
2.3 Connect to the network.....	3
2.4 Adjust the volume of sound.....	4
2.5 Copy documents.....	4
2.6 Install and uninstall applications.....	4
3. Frequently asked questions.....	5

1

### 1. Start up your device

#### 1.1 Connect the power

Firstly, connect one end of USB cable to the adapter, and plug the other end into the micro USB device, then connect mouse and keyboard that used to manage the Android TV dongle, and connect the dongle to the HDMI connector of your TV or Monitor. Finally, connect the power adapter into the wall socket.

 
#### 1.2 The TV dongle start

When it start, the TV screen shows the main interface, if it can not boot, please refer tp "Frequently Asked Questions".

### 2. USE

#### 2.1 Adjust the display resolution


If the image on the TV screen size does not fit properly or does not look rightly, click the "Settings" and choose the "HDMI", then set the output resolution.

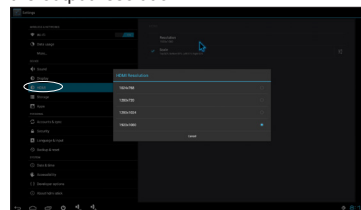

2


### 2.2 Set language

 Click the "Settings", then choose the "Language & input", and choose your language that you need.

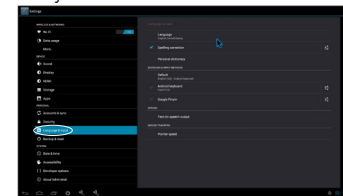

### 2.3 Connect to the network

 The TV dongle has built-in WiFi, when firstly use you need to set up the WiFi network. Firstly click "Settings", then turn on the "Wi-Fi" and choose the WiFi router finally, input the password( if has password), click "Connect" and when connected, the bottom right corner of the screen will display the "WiFi" icon.

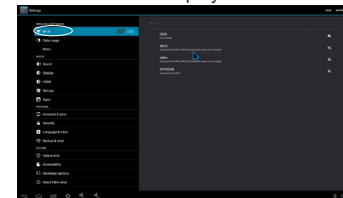

3

2.4 Adjust the volume of sound  
Use the mouse click the volume +/- icons to adjust the sound.



 
2.5 Copy files from computer  
Firstly, connect the TV dongle with your computer by the USB cable supplied, and a few seconds later, you will see a new disk in the computer. Then you can copy files to the TV dongle

2.6 Install and uninstall applications

2.6.1 Install applications  
Click the icon( shop ) in the top right corner or "Play Store", then choose the APK that you need, and download it, then you install it.


If you use the "Play Store" for the first time, you need to input your Google mail account and password following the tips as your Google account

4

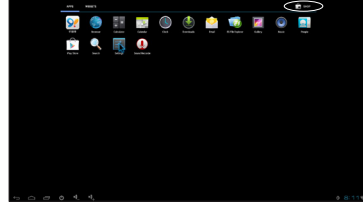

2.6.2 Uninstall applications

 Click the "settings", then choose the "Apps", and click the application which you want to uninstall, and uninstall it.

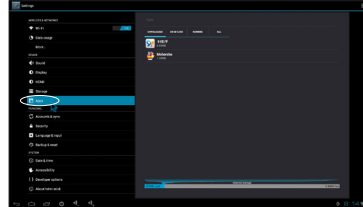

3. Frequently Asked Questions

1. If the TV is turned on but TV screen doesn't show TV android interface, please check

5

whether the HDMI is connected well, or check whether the TV video output has been switched to HDMI output.

2. If you can not see mouse icon on TV screen, please check whether the mouse is connected well, if you use 2.4G wireless mouse, please make sure it has battery inside.( Some of the mouse do not match the TV dongle due to non-standard, please consult the mouse suppliers).

3. If you have set up the WiFi network. but still no internet access, please check if the WiFi icon in lower right corner is completely gray. If it is gray it means the WiFi signal is weak, approach the router or access point to verify wireless connection.

4. When you need to input text but soft keyboard doesn't appear, please click the "keyboard" icon in the lower right corner, and turn off the "physical keyboard".

5. Some applications are designed for mobile phones and may not be full screen displayed.

6. If some applications can not be used, these applications may not be optimized for the Android 4.0 operation system.

6

Hardware	
CPU	ARM Cortex A9 Dual core @ 1.2GMHz Mali-400MP
Memery	1G DDR3
Nand Flash	4G
Wi-Fi	WiFi 802.11 b/g/n
SD card	Support TF card
HDMI	HDMI 1.4,support 1080p,full screen output,plug and play
OTG	Support external keyboard,mouse,and so on.
HOST	HOST2.0,support 2.4G mouse,keyboard,and so on.
System	
OS	Google Android 4.0
Language	Support multi language
Interface	
Storage	Can be used as removable storage
Input	2.4G Mouse and Keyboard
Power Input	5V,1A
HDMI	HDMI 1.4
Micro USB	USB 2.0

7

## FCC Notice

### FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct

The interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. such modifications could void the user's authority to operate this equipment.

### Instructional Icons

The TV Dongle HDMI port can only connect to TV, and prohibit connecting to computer. Please make sure use USB cable connect the TV Dongle to computer if want to connect computer, and make sure the USB cable not less than 20cm between the TV Dongle and computer. At the same time, please make sure the TV Dongle any part not less than 20cm between the users.