


# Wireless Microphone

Model Name:VHF-04HHM

FCC ID:ZRIVHF-04HHM

## PARTS DESCRIPTION & OPERATION

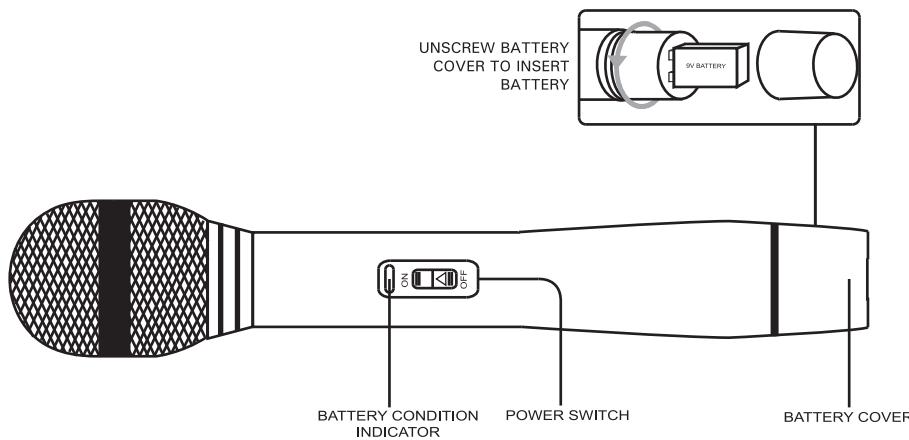

1. Unscrew the battery cover at the end of the microphone. Install the provided 9 volt battery and then close the cover. Make sure to connect with the correct polarity.
2. Move power switch to ON position. Power LED indicator will flash once and then go off. This indicates correct operation. If power LED indicator lights red, this indicates the battery is low. Please replace new battery.
3. Move power switch to center to mute the microphone.
4. If the microphone is not going to be used for a long period of time, please take out the battery to prevent damage by battery leakage.

## SPECIFICATION

Oscillation Mode:	Quartz Controlled	
Frequency :	179.0MHz	dB
Frequency Stability:	30ppm	
Modulation Mode:	FM	e
Maximum Deviation:	±75kHz	
Audio Dynamic Range:	>100dB	
S/N:	>60dB	
Frequency Response:	80~20000Hz at ±3	
T.H.D:	≤0.5%	
Mike Capsule:	Dynamic Microphon	
Pre-emphasis:	50 μs	rea)
Antenna:	Built-in housing	
RF Output:	<10mW	
Spurious Emission:	>40dB	
Power Supply:	One 9V Battery	
Power Dissipation:	<250mW	
Operating Range:	30m(line and sight a	
Operation Temperature:	-20°C~50°C	

## **IMPORTANT REGULATORY INFORMATION**

This device complies with Part 15 of the FCC Rules: Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference that is received, including any interference that may cause undesired operation.

## **WARNING:**

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.