


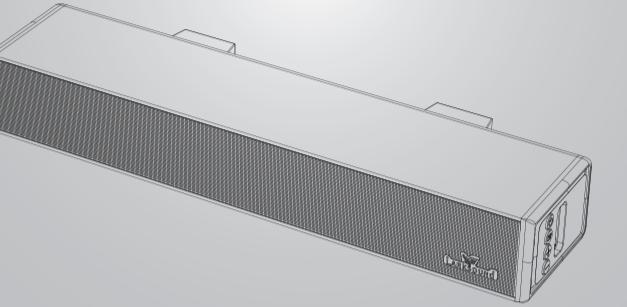

SOUNDBAR L210BWM

2.1 CH 3D soundbar with build-in subwoofer
USER MANUAL



Thank you for purchasing the home theater L210BWM Soundbar. Please read this user manual carefully and keep for future reference.

Warning



Caution:

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.

Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.
2. Never use the device unsupervised! Switch off the device whenever you are not using it or leave it on for a short while.
3. The appliance is not intended to be operated by means of an external timer or separate remote control system.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.

- 1 -

6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing and that objects filled with liquids, such as vases, must not be placed on the apparatus.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not locate this unit near any water sources e.g. taps, bathtubs, washing machine or swimming pools. Ensure that you place the unit on a dry, stable surface.

10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on a amplifier or receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is placed on nearby this unit while it is also on, lines might appear on the TV screen. Turn off this unit or the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.
16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

Important Safety Instructions

1. Read these instructions. Keep these instructions. Follow all instructions. Head all warnings.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other.
7. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles or at the point where they exit from the apparatus.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when unused for long periods of time.

- 2 -

10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
11. The DC plug is used to disconnect the device, the disconnected device should remain readily operable. In order to disconnect the apparatus from the DC power completely, the DC plug must be removed from the AC outlet completely.

Preparation for Use

Unpacking and Set Up
• Remove the Sound bar from the carton and remove all packing material from the Sound bar. Save the packing material, if possible, in case the Sound bar ever needs to be serviced or transported. The original carton and packing material is the only safe way to pack your Sound bar to protect it from damage in transit.
• Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
• Place your Sound bar on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
• Unwind the Line cord connecting the AC adapter and extend it to its full length.

Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specifically designed to avoid leaving any marks or stains on your furniture. Some certain types of cleaners used for the plastic cleaner, preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement center everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the unit.

Power Source

This sound bar is designed to operate on normal AC Power source, it works only under SMPS 100V-240V ~ 50Hz/60Hz. Do not attempt to operate the Sound bar on any other power source. You could cause damage to the Sound bar that is not covered by your warranty.

- 3 -

Important Notes

• This sound bar was especially developed for LED/LCD/Plasma TV's: It should not be used in combination with CRTTV's (Cathode Ray Tube TV's) in order to avoid possible interference.

• Safety and operating instruction manual should be retained for future reference.

• The apparatus should not be exposed to dripping, splashing or placed in a humid atmosphere such as a bathroom.

• Do not install the product in the following areas:

• Places exposed to direct sunlight or close to radiators.

• Areas where there is constant vibration.

• Do not place near candles or other flames.

• Operate the product only as instructed in this manual.


• Before turning on the power for the first time, make sure the sound bar is placed in a stable position.

• Remove any descriptive labels or stickers on the front or top of the cabinet.

• Place your Sound bar on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.

• Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.


Product Diagram

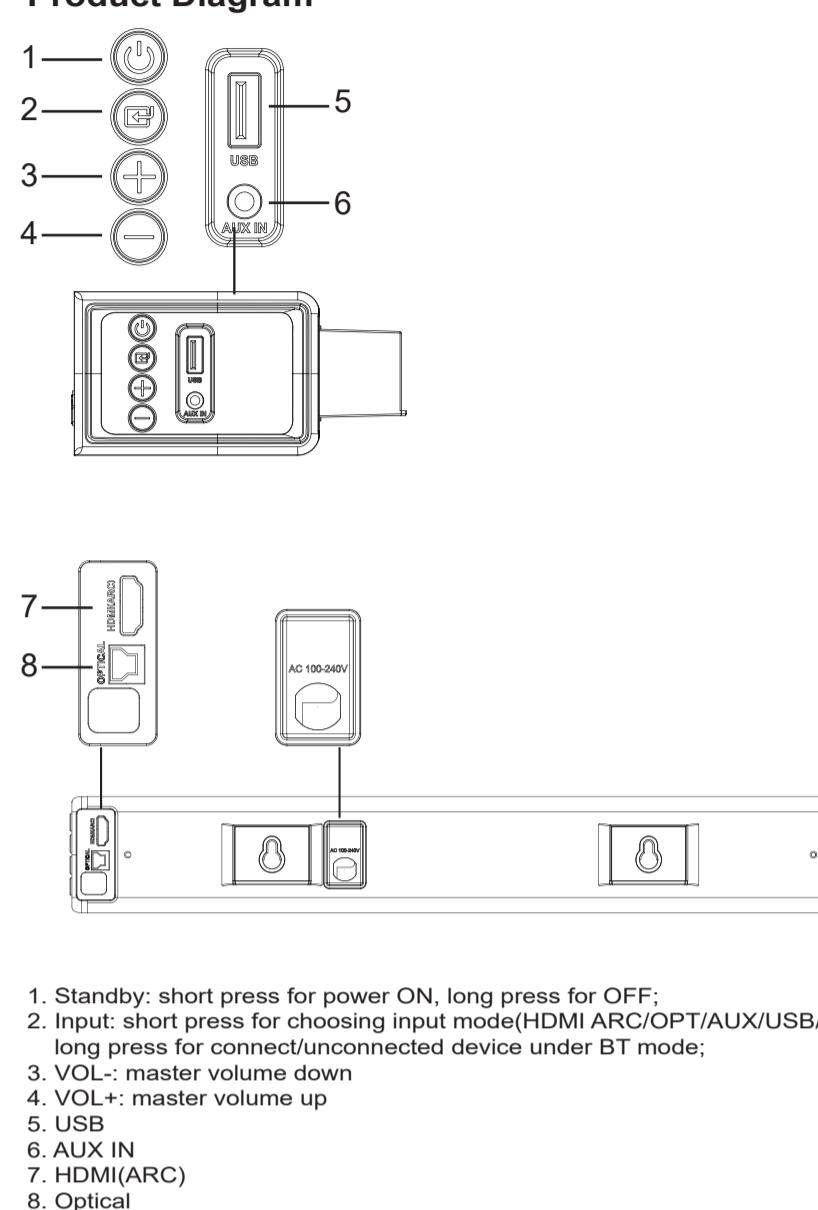

1. Standby: short press for power ON, long press for OFF;
2. Input: short press for choosing input mode(HDMI ARC/OPT/AUX/USB/BT);
3. VOL-: master volume down
4. VOL+: master volume up
5. USB
6. AUX IN
7. HDMI(ARC)
8. Optical

- 4 -


正面

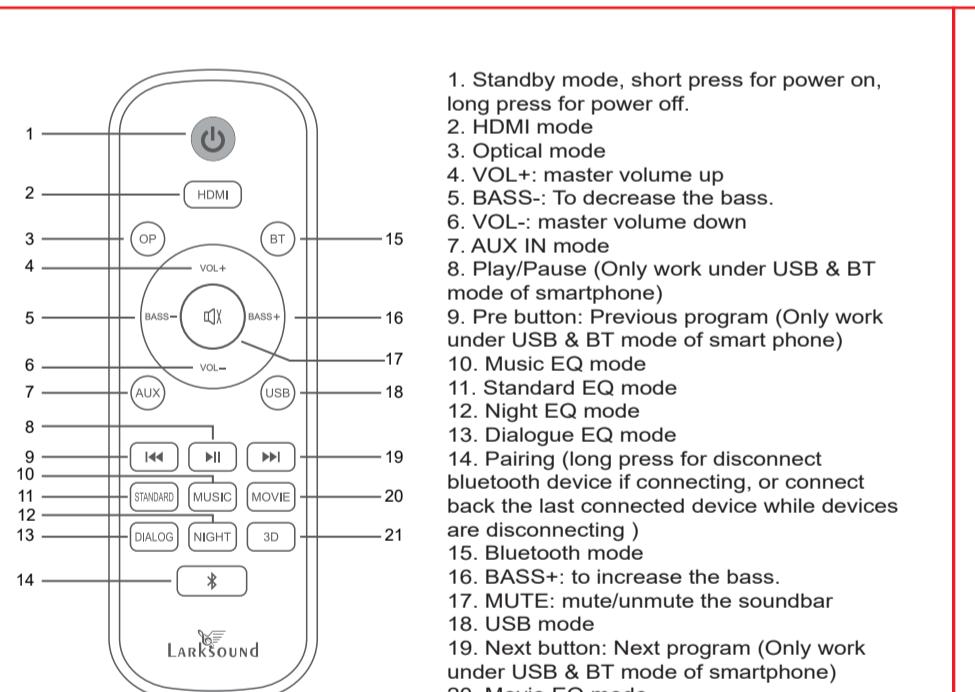

1. Standby mode, short press for power off, long press for power off.
2. HDMI mode
3. BT mode
4. VOL+: master volume up
5. BASS-: To decrease the bass.
6. VOL-: master volume down
7. AUX mode
8. BT mode
9. Play/Pause (Only work under USB & BT mode of smartphone)
10. Previous: Previous program (Only work under USB & BT mode of smartphone)
11. Standard EQ mode
12. Night EQ mode
13. Analog EQ mode
14. Volume up
15. Volume down
16. BASS+: to increase the bass.
17. MUTE: mute/unmute the soundbar
18. USB mode
19. BT mode
20. Next: Next program (Only work under USB & BT mode of smartphone)
21. 3D Sound: select the 3D sound effect.

Positioning the Sound Bar

Place on a flat surface
Place the sound bar horizontally on a flat surface such as a TV unit or shelves and align it centrally with the TV screen. Allow some space between the speaker and the wall. Don't place inside a cabinet or an a walled shelf. Follow this guidance for best sound output and good airflow around the sound bar.

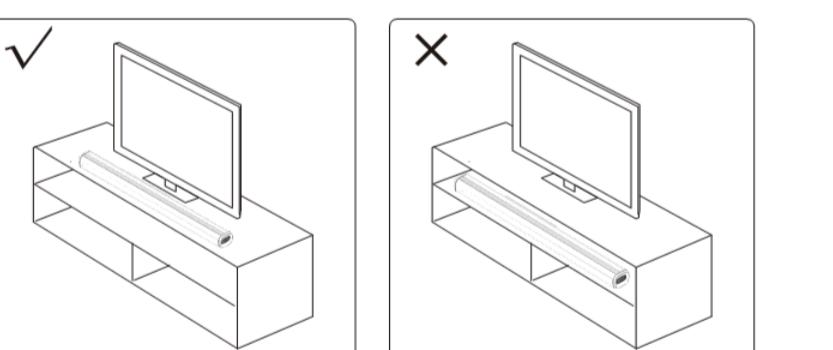


Mount on the wall

WARNING: If you don't feel confident to correctly and securely wall-mount the sound bar, seek the assistance of a experienced person of professional.
Insert the wall-mount screw into the wall, then wall mounting template we supplied in package for the distance.

Install the speaker on a vertical, fast, reinforced area of wall. For plaster walls, it is recommended to screw into wall studs for greater security. For optimum performance, allow at least 30mm distance between the sound bar and the TV.

Follow below steps to mount the sound bar on the wall
1. Make 3 holes on the wall with distance same as the wall bracket on the soundbar, refer to wall mounting template to make it correct easily.
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip, do not tighten the screws all the way make sure leave some space.
3. Once the screws securely fastened, hang the sound bar over by inserting the screws onto the wall mount bracket.
4. We also provide one set of plus bracket in case you need more distance between wall and soundbar when you use HDMI or Optical cable, only move the screw of original bracket on the soundbar and exchange the plus set.

PACKAGE CONTENTS

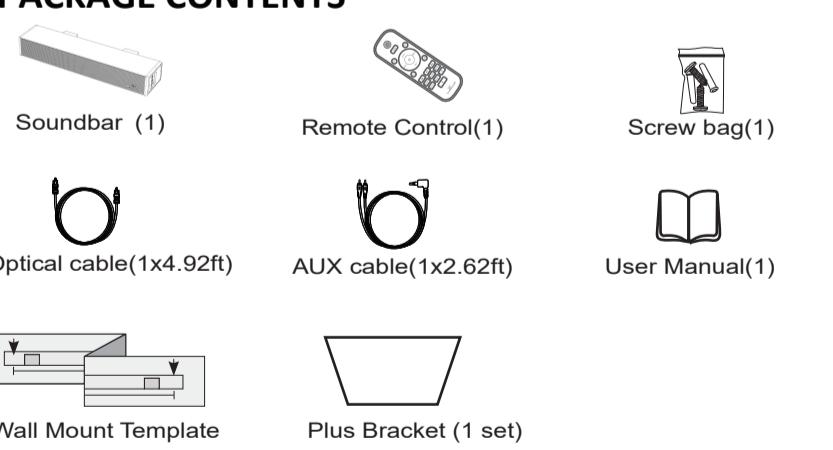

- 6 -

- 7 -

Connecting Electrical Power

Use the power components to connect the Soundbar to an electrical outlet in the following order:

1. Connect the power cord to the USB port on the sound bar (or your own USB extension cable connected to the USB port);
2. Turn off the device, press the power button either on Soundbar keyboard or on remote control, then unplug from wall socket.

Setting the Soundbar

1. Plug the power cord in and the LED will light up.
2. Press the HDMI(ARC)/BLUETOOTH/OPTICAL/AUX/USB button on the remote control to switch the input mode. The indicator can change into 5 different colors, representing different input mode:

HDMI(ARC) mode: Green
Bluetooth mode: Blue
Optical mode: White
AUX mode: Orange
USB mode: Red

3. The indicator will light off after 30 seconds without any operation, press any button on the remote control to turn on it.

4. The soundbar will be standby after 30 mins without any audio input.

5. When the soundbar in highest volume, you will hear a beep sound if you keep add volume.

Playing Audio via BT Connection

1. Turn on sound bar and then short-press BT to switch to BT mode;
2. Activate the pairing function on your phone or other compatible device and select "L210BWM".

3. When successfully paired, the LED display will stay on blue light.

4. The remote control includes BT mode playback controls.

Note: Press 1 on remote control to shutdown in pairing mode, and repress to reconnected to the last connected device.

* If the connected device is switched off or manual disconnected, the sound bar will automatically enter pairing mode, successfully connected device will be re-established once you re-enter wireless range(10 meters). To connect to other devices, repeat the above pairing steps.

AUX mode

1. Connect the sound bar to your PC, tablet, smart phone, TV or other device using 3.5mm audio cable by short-press AUX on remote control.

2. In this mode, playback can only be controlled on your connected device.

Playing Audio via USB Port

1. Ensure that your USB flash drive contains MP3 or WMA audio files (other file types not supported).

2. Connect the power cord to the USB port on the soundbar (or your own USB extension cable connected to the USB port);
3. Select USB mode by short press USB on remote control;

4. The remote control includes USB mode playback controls.

Optical Mode

You can connect digital amplifiers or TV with an optical digital output to the sound bar via optical cable.

Proceed as follows:

• Connect the optical cable to the optical digital output of your output device.
• Then connect the optical cable to soundbar.

• Press OP on the remote control to select optical mode.

• Start playing on the output device.
• Using the native controls on your connected device, ensure the audio settings are set to PCM or Optical Audio.

HDMI Mode

1. The Soundbar supports HDMI with Audio Return Channel(ARC). If your TV is HDMI(ARC) compliant, you can hear the TV audio through your Soundbar by using a single HDMI cable.

2. Using a High Speed HDMI cable, connect the HDMI(ARC) connector on the soundbar to the HDMI(ARC) connector on the TV. The HDMI(ARC) connector on the TV might be labelled differently. For details, see the TV user manual.

3. By using HDMI connection, you can control soundbar vol-/ through TV remote control.

Important Notes:

1. Enable Consumer Electronics Control(CEC) on your TV; Only HDMI ARC connections needs to enable CEC.

2. These are names different brands might use for HDMI-CEC: Samsung (Anynet++), Vizio(CEC), Sony(Bravia Sync), LG(Simplink), Sharp(Aquos Link), Philips (EasyLink), Roku(1-Touch Play)

Note: Press 1 on remote control to shutdown in pairing mode, and repress to reconnected to the last connected device.

* If the connected device is switched off or manual disconnected, the sound bar will automatically enter pairing mode, successfully connected device will be re-established once you re-enter wireless range(10 meters). To connect to other devices, repeat the above pairing steps.

Playing Audio via USB Port

1. Ensure that your USB flash drive contains MP3 or WMA audio files (other file types not supported).

2. Connect the power cord to the USB port on the soundbar (or your own USB extension cable connected to the USB port);
3. Select USB mode by short press USB on remote control;

4. The remote control includes USB mode playback controls.

Specifications

Model	L210BWM
Technology	BT/AUX/HDMI(ARC)/OPTICAL/USB
Frequency Response	60Hz-20KHz
Power Input	100V-240V~50Hz/60Hz
Bluetooth Version	Version: 5.0 Range:up to 10m
Bluetooth Frequency	2402MHz - 2480MHz
Dimensions	Soundbar:15.7*2.36*4.13 inch

||
||
||