

R/C CARS

Ages: 3+

FOR ITEM NO.: 62599

49MHZ

The 1:26 RC Rally Monster is the ultimate speed driving experience and challenges. The frame is lightweight, allowing you to tackle any obstacle with speed and durability.

NOTE:

- Parental guidance is recommended when installing or replacing batteries
- Users should keep and retain this information for future reference
- The color and design of this product may vary from the images

Battery Requirements:

1. 2 X 1.5V "AA"/LR6/ battery for Vehicle
2. 2 X 1.5V "AA"/LR6 for Transmitter

Features:

1. Full Function Radio Control
 - Forward/Reverse Driving
 - Left/Right Pivot Steering

DRIVING TIPS:

- The turning speed and radius may vary at different lever position combinations.
- Operate vehicle on flat, smooth firm and dry surfaces
- Do not drive your vehicle on sand or through water or snow
- Do not operate near concrete walls which may disturb radio signal transmission.

BATTERY INSTALLATION:

FOR TRANSMITTER AND CAR:

1. Make sure the power switch is on "OFF" position
2. Open the battery cover at the bottom of the transmitter/ vehicle by loosening the screw with screwdriver.
3. Install the "AA" BATTERY with the correct polarity (+/-) as shown inside the battery compartment.
4. Close the battery compartment cover and fasten the screw.

CAUTIONS:

1. Non – rechargeable batteries are not to be recharged
2. Rechargeable batteries are to be removed from toy before being charged
3. Rechargeable batteries are only to be charged by an adult
4. Different types of batteries or new and used batteries are not to be mixed
5. Only batteries of same or Equivalent type as recommended are to be used
6. Batteries are to be inserted with correct polarity
7. Exhausted batteries are to be removed from toy
8. The supply terminals are not to be short-circuited
9. Do not mixed Old and New batteries
10. Do not mixed alkaline and standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries

Pre-caution and Care :

1. Do not crash the RC vehicle into hard objects
2. Operating Range of the transmitter can be affected by various factors:
 - o Weak batteries in the vehicle and / or transmitter.
 - o To get the best range from transmitter, operate the vehicle outdoors
3. Switch Off the power and remove all batteries from both transmitter and vehicle when not in use.
4. Keep Fingers, hair and loose clothing away from the wheels
5. Wipe body with soft cloth
6. Do not use chemicals or water to clean
7. Brush areas where dirt gets trapped.



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.