


EUT-Cover off View




Antenna
Location

EUT-Main Board Top View

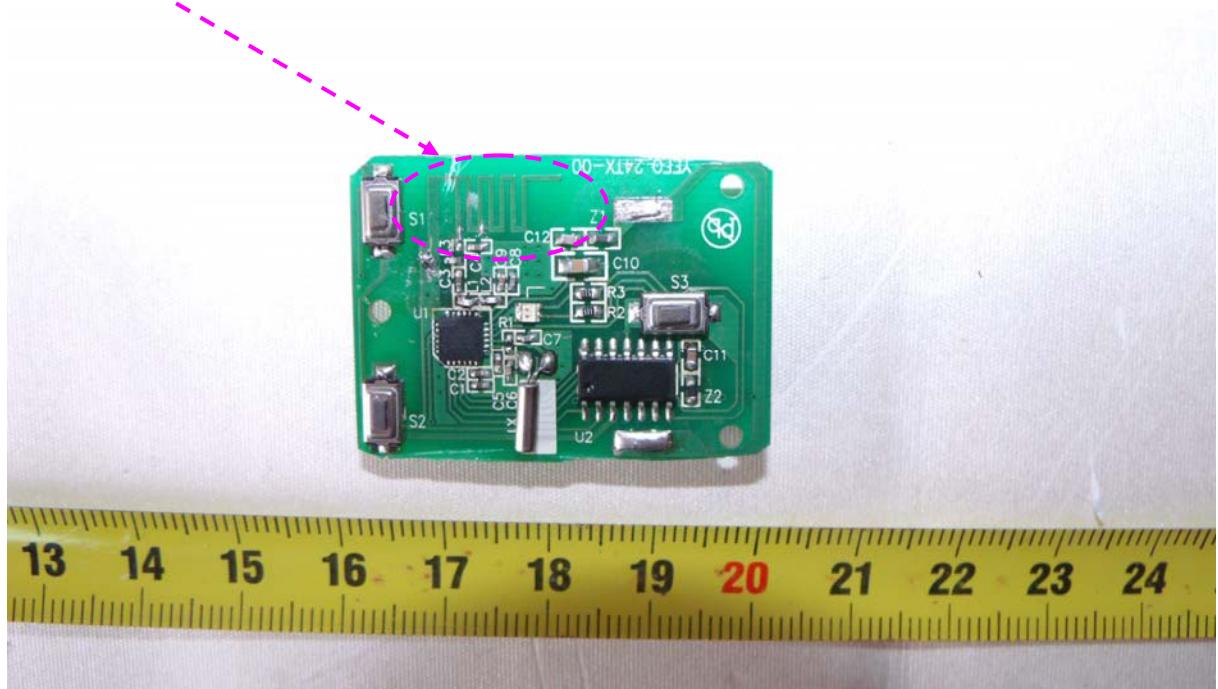

EUT-Main Board Bottom View

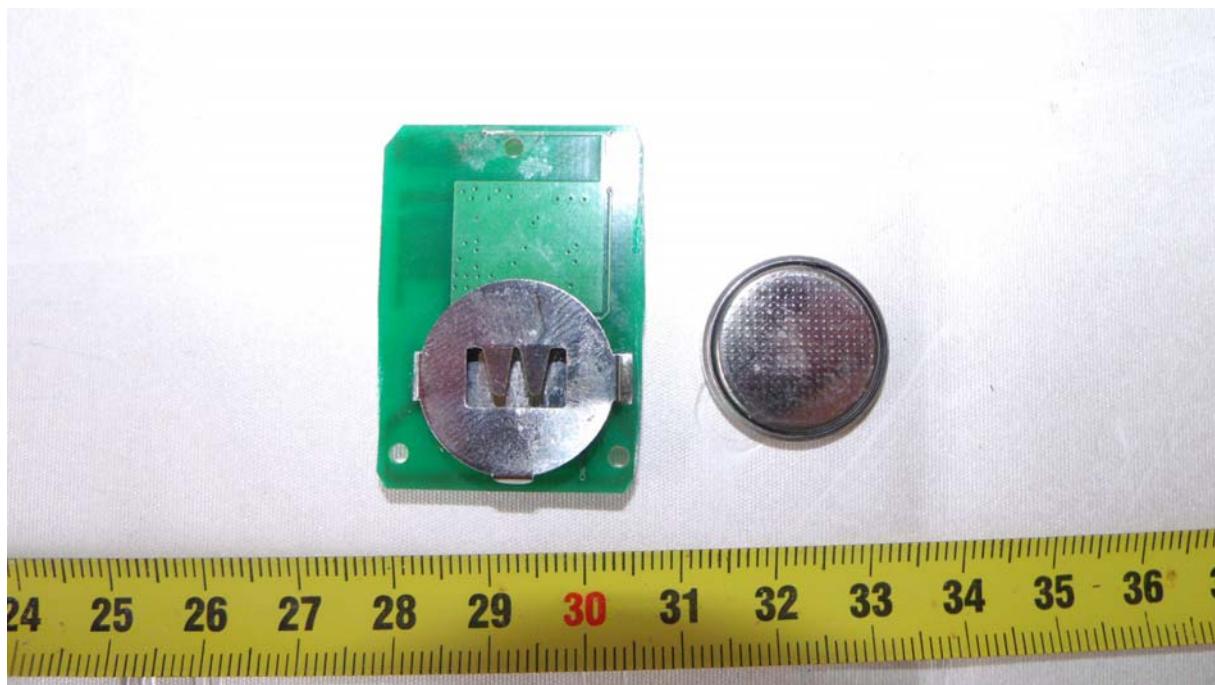

Battery Information View

