

REMOTE EXCAVATOR INSTRUCTION MANUAL

PLEASE READ THIS MANUAL CAREFULLY BEFORE USING

PARTS LIST:

EXCAVATORS x1



REMOTE CONTROL x1



ASSEMBLED PAPERBOARD
TRAY X1



CARDBOARD MODEL x3
(CAR2+ BRIDGE1)



ENVIRONMENTAL SAND x1
MOULD x9




INSTRUCTIONS x1




SAFETY WARNING

TO PARENTS: TO ENSURE YOUR CHILD HAS A GOOD TIME AND SAFETY,
PLEASE READ THIS MANUAL BEFORE USING. DON'T PICK UP MOVING TOYS
TO AVOID INJURY.

EXCAVATORS INTRODUCE :

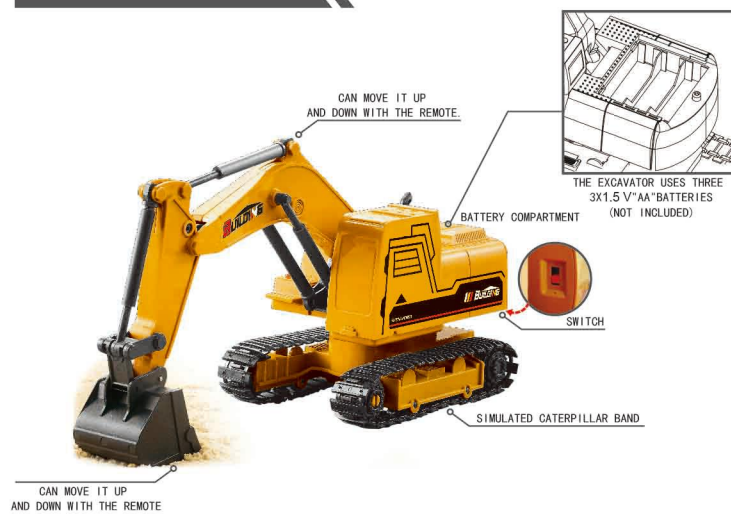

OPERATION OF REMOTE CONTROL INTRODUCTION :

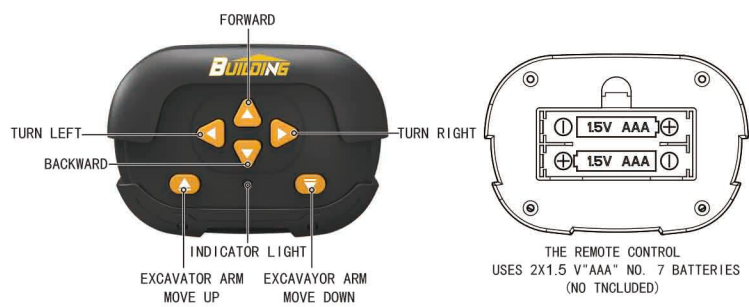

IMPORTANT BATTERY INFORMATION:

BATTERY SAFETY TIPS :

- Non-rechargeable batteries can not be charged;
- Power supply shall not be short-circuited;
- The battery should be put in with the correct polarity;
- Depleted batteries should be removed from the Toy;
- Different types of batteries or old and new batteries can not be mixed;
- It needs to be assembled by adults. Please make sure the power is off before installation;
- Waste batteries should be disposed correctly as required by the environmental protection department;
- Please do not put the battery into the fire to avoid causing danger;
- Do not wipe the surface of the toy with a damp cloth.

2. 4G FREQUENCY:

- After the excavator is properly loaded with batteries, turn on the power switch, and then properly load the remote control with batteries. At this point the excavator and the remote control indicator light will flash several times to complete the frequency.

LOW BATTERY SIGNAL:

- If the excavator driving power is insufficient, digging bucket is weak, lights dim or part of the function failure, there may be insufficient power, please turn off the power and replace the battery.


FREQUENTLY ASKED QUESTIONS:

FREQUENTLY ASKED QUESTIONS:	PROCESSING METHOD
NO RESPONSE	CHECK THAT THE BATTERY IS PROPERLY CONNECTED, OR THAT IT IS FULLY CHARGED.
REMOTE CONTROL CAN'T OPERATE	Please Make Sure The Remote Control Is Fully Charged. When Remote Control Please Aim At The Signal Receiving Port Of Excavator, in Bright Light Or Sunlight, It Can Interfere With Remote Control.
THE EXCAVATOR DOES NOT FOLLOW THE CONTROL SIGNAL	Please Check Whether The Excavator Battery Is Sufficient, When The Power Is Low, there Is Garbled Code.


INSTALLATION INSTRUCTIONS FOR PAPERBOARD TRAY:



INSTALLATION INSTRUCTIONS FOR THE CARDBOARD MODEL:

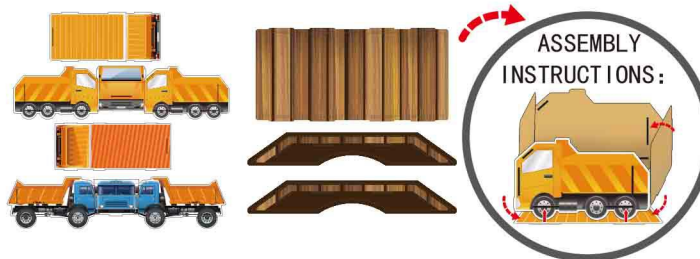

SAND MOULD SCULPT:

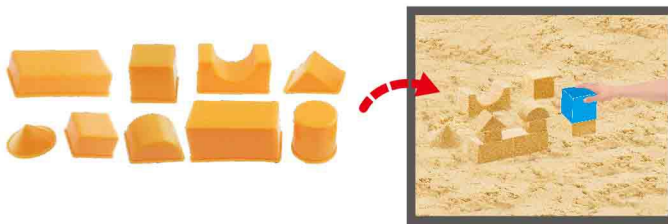

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.