

Tablet PC
Kaisen Model: I7003G
User Manual

Dear User:

Thank you for choosing our products. We hope you would have a good experience in using this product and enjoy the fun of multi-media!

The information shows in this manual is the same as what is released when we launched this product, and we will keep improving this product and updating the information, therefore, the information shows in this manual including the software, appearance and functions might be a little different from the product actually provided and this manual is for reference only.

Thanks again for choosing our products!

Table of Contents

1. Precautions	6
2 For New Users.....	7
2.1 Accessories	7
2.2 Guide for Quick Start	7
2.3 Charging the Battery	7
2.4 Inserting the SIM or USIM Card	9
2.5 Inserting the Storage Card (Optional Accessories).....	9

3 Basic Operations.....	11
3.1 Power On/Off.....	12
3.2 About Your Pad.....	12
3.3 Using the Touch Screen.....	16
3.4 About Your Home Screen.....	19
3.5 Viewing Applications	22
3.6 Customizing Your Pad.....	23
3.7 Inputting Texts	26
4 Basic Applications	28
4. 1 Networks	28
4.2 Browser	28
4.3 Searching	32
4.4 Communication.....	32
4.4.1 Phone Calls	32
4.4.2 E-Mail.....	36
4.4.3 SMS.....	38
4.5 Entertainment.....	39
4.5.1 Music Player	39
4.5.2 Sound Recorder.....	41
4.5.3 Camera.....	42
4.5.4 Videos	43
4.5.5 Picture Base	44

5 Applications of the Third Party Software	46
5. 1 Downloading and Installing Software.....	46
5. 2 Application of Software	46
6 Functions.....	46
6. 1 Personal Information (Contacts).....	46
6. 2 Calendar.....	49
6.3 Connection.....	51
6.3.1 Connecting to the Personal Computer.....	51
6.3.2 Wi-Fi.....	52
6.3.3 Mobile Network	54
6.3.4 Bluetooth	54
6.3.5 GPS.....	57
6.3.6 HDMI	58
6.4 Toolkit	58
6.4.1 My Document	59
6.4.2 Clock	60
6.4.3 Searching	61
7 Setting	62
7.1 Wireless and Network	62
7.2 Sound.....	63
7.3 Display	64
7.4 Location and Security	64

7.5 Applications.....	65
7.6 Accounts and Syncing.....	66
7.7 Privacy.....	67
7.8 SD Card and Internal storage	67
7.9 Searching	67
7.10 Language and Keypad.....	68
7.11 Uxiliary Function.....	69
7.12 Date and Time.....	69
7.13 About the Equipment.....	70

1. Precautions

This manual provides very important information such as safety precautions and the instructions on how to use this product correctly, so for the purpose of avoiding any accident, please read this manual carefully before using this product.

- ◆ Please do not place the product in high-temperature, high-humidity or dusty areas.
- ◆ Please do not place the product in high-temperature areas, especially in a car with all windows closed in summer.
- ◆ Please do not drop or fiercely crash the product or violently shake TFT screen, otherwise it might cause the damage or abnormal display of TFT screen.
- ◆ Please choose appropriate volume when using the headset. In case your ears are tingling, please turn down the volume or stop using the headset.
- ◆ Please do not break off the connection when the player is formatting, uploading or downloading files, otherwise it might cause program error.
- ◆ The Company shall bear no responsibility for the loss of internal memory arising from the damage, maintenance of the product or other reasons. The user shall have standard operation in accordance with this manual.
- ◆ Please do not disassemble the product or clean the surface of the product with alcohol, thinner or benzene solvent.
- ◆ Please do not use the product in areas where it is not allowed to use electronic products, for example, in an aircraft.
- ◆ Please do not use the product when driving or walking in the street, otherwise it might cause traffic accidents.
- ◆ USD is provided for data transmission only.

★ (This product is not waterproof)

※ The Company reserves the right to improve the product, and

the specification and design are subject to change without any further notice!

2 For New Users

2.1 Accessories

Please check if there are the following accessories when you open the packaging box: pad, USB cable, adapter, and headset.

2.2 Guide for Quick Start

- 1) Only licensed software is allowed. Using pirated or illegal software might result in damage or fault, in which case the manufacturer is not responsible to offer free repair service.
- 2) The accessories came with the product may vary due to the software or parts applicable in your area or supplied by the service provider.
- 3) You may purchase other accessories from local distributors.
- 4) The accessories came with the product provide the best support for the pad.
- 5) Accessories except those came with the product may be incompatible with the pad.

2.3 Charging the Battery

The pad has the battery placed inside. It is required to charge the battery before using the pad for the first time.

Only licensed charger is allowed. Any unlicensed charger may cause the explosion of the battery or damage your pad.

In case of low battery, you will hear an alarm and see low battery sign from the pad. Meanwhile, the battery icon will become blank and red. In case the battery is out of power, the pad will be automatically switched off. Please charge the battery immediately to continue to use your pad.

- 1) Please plug the adapter into the power socket.
- 2) You may use the pad while charging it; however, it will need more time to get the battery full of power.
- 3) When charging the pad, the touch screen and keys might not work due to unstable power supply, please plug the charger out from the power socket or the pad.
- 4) It is normal that the pad would become warm when being charged and it will not affect the service life and functions of the pad.
- 5) In case the pad can not be charged according to the standard procedures, please take the pad and charger to customer service center for help.
- 6) When the battery is full of power (the battery icon stops

twinkling), please disconnect the adapter from the pad, and plug the adapter out from the power socket.

2.4 Inserting the SIM or USIM Card

When you have signed the service contract with mobile communication service provider, you will get a SIM card which contains the information relevant to your subscribed service, such as PIN code and optional services. If you prefer UMTS or HSDPA service, you may choose to buy a USIM card.

Inset the SIM or USIM Card:

- 1) Remove the cover of SIM card slot on the side face of the pad.
- 2) Insert the SIM card or USIM card into the slot.
 - ✧ Keep the golden contact point of the SIM card or USIM card downward and then insert it into the slot.
 - ✧ Please do not insert any storage card into SIM card slot.
- 3) Replace the cover of SIM card slot.

2.5 Inserting the Storage Card (Optional Accessories)

- 1) In order to store files, you need a storage card. This pad supports a micro SD card with the maximum capacity of 32GB (depending on the manufacturer and the type of your storage card).
- 2) Though the pad supports all storage cards which are up to standards recognized in the industry, it may be not compatible

with some brands of storage cards, which may cause the damage of the pad or the storage card and loss of the data stored in the card.

- 3) The pad only supports the storage card with FAT file system. When inserting any other storage card with different file system, the pad will reformat it.
- 4) The service life of the storage card will be affected if frequently storing and deleting the data.
- 5) After inserting the storage card into the pad, you will find the file catalog of the storage card in “extsd” folder under the internal storage of the pad.
- 6) Pull out the cover of storage card slot.
- 7) Keep the golden contact point downward when inserting the storage card.
- 8) Slide the storage card into the slot until it is locked in the slot.
- 9) Replace the storage card cover.

Taking out the Storage Card

For the safety, please unlock the storage card before taking it out.

- 1) Press the Menu button, click setting icon → SD Card and Internal Storage → Uninstall the SD Card, and the screen will display “SD card will be uninstalled, and you may view it in

notification area”.

- 2) Pull out the cover of storage card slot.
- 3) Push slightly the storage card to detach it from the pad.
- 4) Pull the storage card out of the slot.

Note: When transmitting data or sharing information, please do not take out the storage card, otherwise it will cause the loss of data or damage of the pad and storage card.

Formatting the Storage Card

- 1) Using a computer to format the storage card may cause the storage card incompatible with the pad. Please use the pad to format the storage card.
- 2) Press the Menu button, click setting icon →SD Card and Internal Storage → Uninstall the SD Card → Format the SD Card →Delete All.
- 3) Please be reminded to backup all important data to the pad before formatting the storage card.

Note: The manufacturer is not responsible to offer free repair service in case of any data loss arising from the operation of the user.

3 Basic Operations

3.1 Power On/Off

Power On: Long press the Power button.

Power Off: Long press the Power button, and click Power Off → OK.

Switching to Flight Mode

Please turn on flight mode when you are in areas such as airplane and hospital where it is prohibited to use wireless communication devices.


- 1) In order to activate the flight mode, please click the setting icon →Wireless and Network →Flight Mode or long press the Power button and then select flight mode.
- 2) In order to deactivate the flight mode and use wireless network, please click the setting icon →Wireless and Network, and clear the select box beside flight mode.


Switching to Mute Mode

In order to switch to mute mode, please long press the Power button and select mute mode.

3.2 About Your Pad

Parts of Your Pad

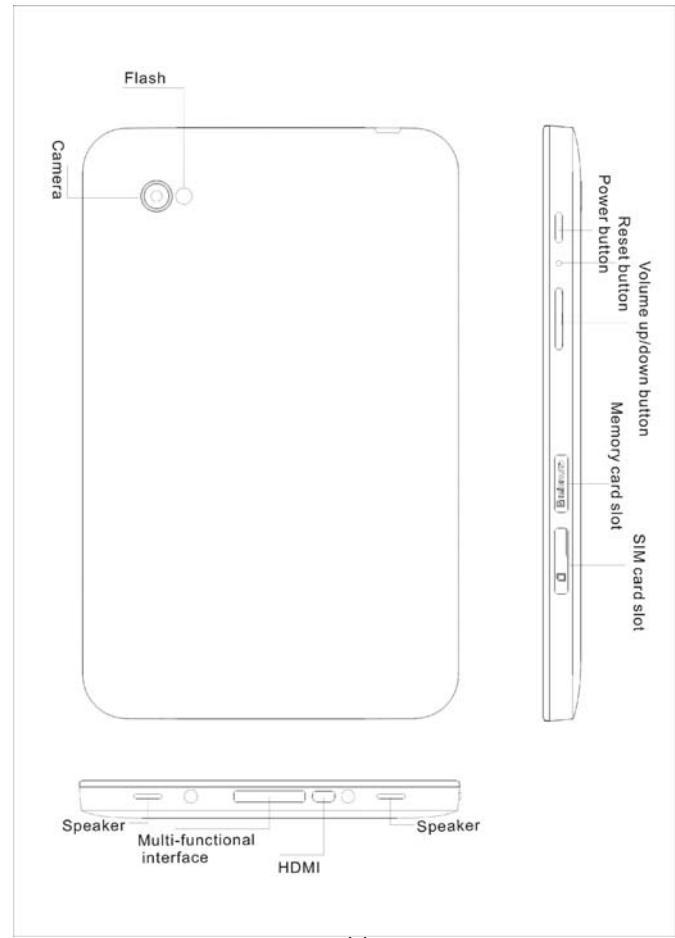

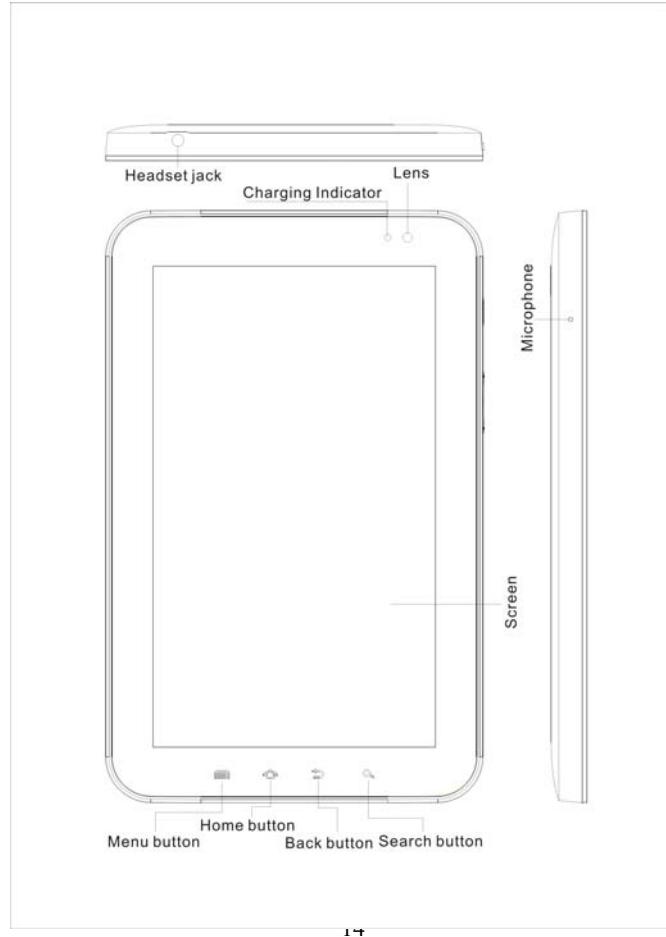

Buttons

Press the Power button “” to power on (long press); or enter quick menu (long press); lock the touch screen.

Press the Volume button “” to adjust the volume.

Press the Menu button “” to display all available options on the screen.

Press the Home button “” to return to home screen; open the list of recently used applications (long press).

Press the Back button “” to return to previous screen.

In standby mode, press the Search button “” to open Google search application; When other applications are in operation, open search input window.

Description of Icons

The icons shown on the screen might vary due to the location and service provider.

Icons	Description
	signal level
	GPRS connected
	EDGE connected
	3G network connected

	WLAN activated
	Bluetooth activated
	Bluetooth headset connected
	receive GPS data
	download data
	computer connected
	USB connected
	no SIM card or USIM card
	new SMS or MMS
	new e-mail
	alarm activated
	mute mode activated
	vibrate and mute
	flight mode activated
	music playing
	error or attention
	battery level
	current time

3.3 Using the Touch Screen

Touch screen helps you to select options and use functions easily.

Please read the following to know the basic operations:

- 1) Please do not let any sharp tool scratch the touch screen.
- 2) Please do not let other electronic equipments contact the touch screen; otherwise it will cause the malfunction of the touch screen due to electrostatic discharge.
- 3) Please keep the touch screen away from water. Humid environment or water might cause the malfunction of the touch screen.
- 4) In order to make good use of the touch screen, please take off the protective film before using.
- 5) The touch screen has a probe layer which is sensible of the feeble charge of human body. In order to better use the touch screen, please tap the touch screen with fingers. Any stylus or pen is not applicable to this touch screen.
- 6) You can have the following operations on the touch screen:
- 7) Click: One click on the screen with your finger to enter menu interface or select items or applications.
- 8) Drag: Slide your finger on the screen upward, downward, leftward or rightward to move any item in the list.
- 9) Tap and Hold: Tap an item and hold it for more than 2 seconds to open the list of this item.

- 10) Drag and Release: Tap and hold an item and slide the finger to move the item.
- 11) Double Click: When viewing photo, please double click the photo twice or drag your fingers together or apart to zoom out or zoom in.

Rotating the Touch Screen

The pad has a motion sensor built-in to perceive the direction of the pad. If rotating the pad, the interface shown on the screen will rotate accordingly.

In order to keep the direction of the interface, please click the setting icon → Display and deselect the autorotation option.

Locking or Unlocking the Touch Screen


In order to avoid unintended operation, the touch screen will be automatically locked if it is not used for a certain period of time.

- 1) To lock the touch screen manually, please press Power button.
- 2) To unlock the touch screen, please press Power button to power on and drag the unlock icon according to the direction of unlock arrow.
- 3) In case the touch screen is already set to be locked, you need to input PIN code or password, or draw the unlocking pattern to

unlock the touch screen.

3.4 About Your Home Screen

In standby mode, you can see the home screen, view the status of your pad and enter menu interface. Flick left or right to switch to your favorite panel for your home screen.

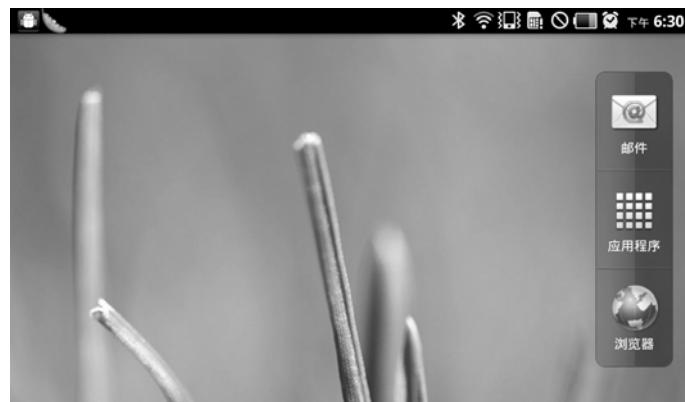

The above photo may vary due to the location or the service provider.

Icons	Functions
	Tap Google Search functional icon to search for the network.
	Enable the application by shortcut.

	Turn on web browser.
	Access Menu interface.
	Select the point at the top of the screen to switch to corresponding panel.
	Activate e-mail application.

Adding Items to the Home Screen

You can add any applications, items, functional icons, shortcuts of file folders on the home screen.

Add Item to Home Screen:

- 1) In home screen interface, long touch the screen until you see the items you want to add to the home screen.
- 2) Select Item Type.
 - ✧ Icon Group: add functional icons. Desktop Tool is an application to provide quick functions and information in standby screen. For example, you can add power control application to directly switch on or switch off 3G on desktop; if no 3G service is needed, please click 3G icon to make it gray to save the flux and power; if 3G service is needed, please click 3G icon again to activate it.

- ✧ Shortcut: Add the shortcut of an item such as an application, bookmark, and contact.
- ✧ File Folder: Create or add contact file folder.
- ✧ Wallpaper: Set background picture.

2) Select the item you want to add to the home screen.

Moving Items on the Home Screen

- 1) Click and move the item until it turns gray.
- 2) Drag the item to expected position.

Deleting Items on the Home Screen

- 1) Tap and hold the item, and the recycle icon will appear at the bottom or the right side of home screen.
- 2) Drag the item to the recycle.
- 3) Release the item when the item and recycle icon turns red.

Adding Shortcuts of Applications

- 1) Press the Menu button and click the application icon. The shortcut icon of the application is added to the home screen.
- 2) Move the icon to expected position or move it to another panel of the home screen.

Using the Shortcut Menu

Please press the Menu button, the shortcut menu will pop up. You may manage applications, set wallpaper, search for information, manage notification, quickly enter setting interface, and add desktop functional icons.

Using the Shortcut Panel

In standby mode or when there is some application in operation, please click the indicator icon and drag it downward with your finger to open the shortcut panel. You may also drag the lower border of the list upward to hide the list.

The available options may vary due to the location and service provider.

3.5 Viewing Applications

- 1) In standby mode, press the Menu button to enter the Menu interface.
- 2) You may flick left or right on the screen to select another Menu interface.
- 3) Select the application.
- 4) Press the Back button to return to previous screen; press the Home Button to return to the home screen.

Viewing Recently Used Applications

- 1) Long press the Home button to open the list of recently used applications.
- 2) Select the application.

Using the Task Manager

You may use the pad to open multiple applications and these operations can operate at the same time. However, it may cause the interruption of communication, system failure, storage problems or more power consumption. For the sake of avoiding these problems, please use task manager to turn off unnecessary applications.

- 1) Press the Menu button and click the setting icon → Application → Application in Operation.
- 2) Please select Close to turn off the application.

3.6 Customizing Your Pad

You may customize your pad according to your preference to have more functions.

Changing Languages

- 1) Press the Menu button and click the setting icon → Keypad and Language → select the region.

- 2) Select needed language.

Setting Date and Time

- 1) Press the Menu button and click the setting icon →Date and Time.
- 2) Select time zone and set the date and time. You may change to select other options.

Selecting the Home Screen Wallpaper

- 1) In standby mode, long touch the screen → Wallpaper.
- 2) Click the picture folder → Wallpaper/Picture Base. Select to save or set the wallpaper, and set the wallpaper panel.

Note: The Company shall bear no responsibility for the use of the default pictures or wallpapers.

Adjusting Screen Brightness

- 1) Press the Menu button and click the setting icon →Display →Brightness.
 - ❖ Drag the slider to select brightness level.
 - ❖ Select OK.

The brightness level of the screen may increase or decrease power

consumption.

Locking/ Unlocking the Touch Screen

You can use unlocking pattern or password to lock touch screen to prevent other persons using your pad without your permission.

- ✧ After setting to lock the screen, it is required to input the password to unlock the screen each time you turn on the pad or unlock the screen.
- ✧ If you forget the PIN code or password, please take the pad to customer service center to reset. Before that, please be reminded to backup important data stored in the pad.

Note: The Company shall bear no responsibility for the loss of safety code or private information or any other damage arising from the use of illegal software.

Setting Unlocking Pattern

- 1) Press the Menu button and click setting the icon → Location and Security → Lock the Screen → Pattern.
- 2) Please pay attention to the prompt on the screen and pattern example and select Next Page if necessary.
- 3) Slide the finger on the screen to connect at least 4 points to draw the pattern.

- 4) Select Continue.
- 5) Draw the pattern again to verify it.
- 6) Select OK.

Setting PIN Code

- 1) Press the Menu button and click the setting icon → Location and Security → Lock the Screen → PIN.
- 2) Input new PIN code (digits) and select Continue.
- 3) Input again the new PIN code and select OK.

Setting Unlock Password

- 1) Press the Menu button and click the setting icon → Location and Security → Lock the Screen → Password.
- 2) Input new password (letters and/ or digits) and select Continue.
- 3) Input again the new password and select OK.

3.7 Inputting Texts

- 1) You can input texts by selecting letters/characters on virtual keypad.
- 2) You may not be able to input texts in some languages. When inputting a text, please choose an available language.
 - ❖ Change the Input Method: Tap and hold the text input field,

long press the screen, and select the input method → Text Input Method (Android keypad or a third-party input method).

❖ Input a text with Android keypad: You may input a text by clicking alphanumeric keys or the following keys.

Keys	Functions
	Switch to uppercase or lowercase.
	Switch to Digit/Symbol mode or ABC mode.
	Insert blank space.
	Clear input errors.
	View keypad setting; change the text input method (tap and hold)
	Input frequently used symbols.

Copying and Pasting Texts

When inputting a text, you may copy or paste the text to other applications.

- 1) Please click at the starting position and the cursor appears.
- 2) Tap and hold the text input field.
- 3) Select letters/characters from the list.
- 4) Click at the position you want to stop inputting the text.

- 5) Tap and hold the text and it displays in reverse.
- 6) Select to copy or cut the text and move it to clipboard.
- 7) Entering the interface of another application, tap and hold the text input field.
- 8) Select Paste to move the text from clipboard to text input field.

4 Basic Applications

4. 1 Networks

In order to access network services, data connection is required. The network operator provides the best data connection plan.

4.2 Browser

Please read the following to know how to view web pages and add bookmarks.

Note:

- 1) There may be additional charges if visiting website or downloading data. Please contact your service provider to know the details.
- 2) The label of web browser menu may vary and depends on the service provider.
- 3) The available icons may vary due to the location and service provider.

Browsing Web Pages

- 1) In main menu interface, click the browser icon to open the home page.
 - ❖ If you want to visit a webpage, please select URL input field to input website address and click Start or the Search icon.
- 2) The following functions are available when visiting webpage:
 - ❖ In order to add a bookmark for the webpage you are viewing, please press the Menu button “” → More → Add a Bookmark.
 - ❖ In order to search current webpage for a text, please press the Menu button “” → More → Search the Webpage.
 - ❖ In order to refresh current webpage, please press the Menu button “” → Refresh.
 - ❖ In order to view the information of current webpage, please press the Menu button “” → More → Webpage Information.
 - ❖ In order to customize browser setting, please press the Menu button “” → More → Setting.
 - ❖ In order to send the website address to someone, please press the Menu button “” → More → Share the

Webpage.

- ❖ In order to stop or go forth from current webpage, please press the Menu button “” → select Stop or Forth.

Opening Multiple Web Pages

You can open several web pages and switch between them.

- 1) In main menu interface, click the browser icon.
- 2) Select the Menu button/ New window.
- 3) Select and open new windows. (Note: 8 new windows at most)
- 4) Visit another webpage in a new window.
 - ❖ In order to switch between windows, please press the Menu button/ New Window, and select the webpage you want to view.
 - ❖ You may add bookmarks for your favorite web pages.
 - ❖ You can also add bookmarks manually if you have website addresses.

Adding Bookmarks

- 1) In main menu interface, select the browser icon.
- 2) Press the Menu button “” and select Bookmark.
 - ❖ In bookmark interface, select to add a bookmark and input the title and address of a webpage. If you want to add a

bookmark for current webpage, please directly click OK.

- ❖ In order to open the bookmark page in current window, please long press the bookmark and select Open.
- ❖ In order to open a webpage in a new window, please long press the bookmark and select to open it in a new window.
- ❖ In order to add a bookmark shortcut to the home screen, please long press the bookmark and select to add shortcut to the home screen.
- ❖
- ❖ In order to share a webpage with someone, please long press the bookmark and select to share the link.
- ❖ In order to copy a website address, please long press the bookmark and select to copy and link with the website address.
- ❖ In order to set a webpage as the home page of your browser, please long press the bookmark and select to set as the home page.
- ❖ In order to delete a bookmark, please long press the bookmark and select Delete.

Editing Bookmarks

Create a Bookmark Folder

- 1) In main menu interface, click the browser icon.
- 2) Press the Menu button “” → Bookmark, and long press a bookmark and select Edit.
- 3) Input the name and address of the bookmark folder and select OK.

Visit Recently Visited Web pages or History

- 1) In main menu interface, click the browser icon.
- 2) Press the Menu button “” → Bookmark, and select Most Visited and History.
- 3) Select the webpage you want to visit.

4.3 Searching

You can search the applications your pad have and designated data on network.

- 1) In main menu interface, select the Search icon.
- 2) Input the first letter or the first word of the data to search.
- 3) Select the name of the item you want to visit.

4.4 Communication

4.4.1 Phone Calls

Please read the following to know how to make calls, answering calls

and use other applications during a call.

When you get through to someone, the loudspeaker will be automatically activated. To avoid any damage to your hearing, please do not put pad too close to your ear. You may choose the headset came with the pad or optional Bluetooth headset to make or answer calls.

❖ In order to protect your hearing, please turn down the volume appropriately when you are using the headset to answering calls. Answering calls of great volume for a long time may cause the damage to your hearing.

❖

Making or Answering Calls

You may use the touch screen to make, answer, end or decline a call.

Making a Call

- 1) In main menu interface, click the dial icon and input the area code and phone number.
- 2) Click the call icon to make a call.
- 3) You may also connect your headset or optional Bluetooth headset to the pad (if necessary).
- 4) To end the call, please select phone icon or press the power button. (the call end when press the power button)

❖ You may save the numbers you frequently dial in your

Contacts.

- ❖ In order to quickly call someone you've spoken to recently, please click the dial icon → Recent Calls.

Answering a Call

- 1) When you have an incoming call, please slide the green answer icon as per given direction to answer the call.
- 2) You may also press the power button to silence the call after which you can still answer it.
- 3) To end the call, please select the phone icon in the screen.

Declining a Call

When you have an incoming call, please slide the red decline icon to decline the call and the caller will hear the busy tone.

Making an International Call

- 1) In main menu interface, click the dial icon and long press 0 key to insert character “+”.
- 2) Please input the complete number (country code, area code and phone number) and click the call icon to make a call.

Options during a Call

You may select the following options when you are on a call:

- ❖ In order to adjust the volume, please press volume button.
- ❖ In order to turn off the microphone so that the caller is not able to hear you, please select Silence.
- ❖ In order to use Bluetooth headset to talk during the call, please select Bluetooth.
- ❖ In order to open the Contacts, send e-mails or use web browser, please press home button to return to main menu interface.

Viewing or Returning a Missed Call

There is an icon shown in status bar when you have any missed call. In order to view numbers of missed calls, please click the status bar and select the prompts, or you may directly click the dial icon in main menu interface → Recent Calls and then select the green call icon next to a missed call to return the call.

Viewing Recent Calls

The user may view the missed calls, answered calls and dialed numbers in the list of Recent Calls.

- 1) In main menu interface, please click the dial icon.
- 2) Select Recent Calls.
- 3) You may select any number from the list of Recent Calls to make

a call, send a message or add the number to your Contacts.

4.4.2 E-Mail

Please read the following to know how to use personal or company e-mail account to send or view E-Mail.

Setting E-Mail Accounts

- 1) In main menu interface, select Send E-mail.
- 2) Input an e-mail address and password.
- 3) Select Next Step (for ordinary e-mail accounts) or Set Manually (for company e-mail accounts).
- 4) Operate according to the prompt on the screen.
- 5) If you want to add e-mail accounts, press the Menu button and select to add e-mail accounts, and repeat step 2, 3 and 4. After finishing setting, E-Mail will be downloaded to the pad.

If you have already created two or more accounts, you can switch between these accounts; in one account interface, press Menu button and select Account to view the account where there are E-Mail you want to edit.

Sending E-Mail

- 1) In main menu interface, select Send E-mail → select E-mail

Account.

- 2) Press the Menu button “” → Edit.
- 3) Add e-mail recipients.
- 4) Manually input the e-mail address and use semicolon or comma to separate if there are multiple addresses.
 - ❖ Press the Menu button and you can add e-mail addresses on the CC/BCC list and add contacts.
 - ❖ Select the subject field to input e-mail subject.
 - ❖ Select Edit to input the text of e-mail.
 - ❖ Press the Menu button → select Attachment to attach pictures, music files or videos.
 - ❖ Select Send to send the e-mail.

Note: If the user is off line or out of the service area, all messages will remain in Outbox until the user is on line or in the service area.

Viewing E-Mail

After opening an e-mail address, you can check e-mails you read before in the offline mode or connect to e-mail server to view new E-Mail. After the pad collects the information of these new E-mails, you can view them again offline.

- 1) In main menu interface, select Send E-mail→ E-mail Account.
- 2) Press the Menu button → Refresh, to refresh the e-mail list.

- 3) Select the E-Mail you want to see.

The following functions are available when viewing E-Mail.

- 1) In order to delete E-Mail, please select Delete.
- 2) In order to reply to the sender or reply to all, please press the Menu button “” → Reply or Reply to All.
- 3) In order to forward an e-mail to someone, please press the Menu button “” → Forward.
- 4) In order to write an e-mail, please press the Menu button “” → Write.
- 5) In order to view an attachment, please click the attachment area.
In order to download an attachment to the pad, please select the attachment and select Save.

4.4.3 SMS

Please read the following to know how to write and send SMS, view or manage sent SMS and incoming SMS.

Note: There may be additional charges if the user sends or receives SMS when he or she is out of local service area. Please contact the service provider to know the details.

Sending SMS

- 1) In main menu interface, select SMS.
- 2) Select New SMS (Write).
- 3) Add SMS receiver. Manually input the phone number and use semicolon or comma to separate if there are at multiple receivers.
- 4) Select Input to input the text.
- 5) In order to insert an emotion icon, please press the Menu button  → Insert an Emotion Icon.
- 6) Select Send to send SMS.

Viewing SMS

In main menu interface, select SMS and all messages will appears and lines in groups according to different contacts.

Select a contact to view the communications with the contact.

4.5 Entertainment

4.5.1 Music Player

Please read the following to know how to play your favorites music and songs with music player.

Adding Music Files to Your Pad

Transmit files to the storage card:

- 1) Download files by way of wireless network/ download files from the computer with the data cable/ receive files by way of Bluetooth.

Playing Music

- 1) Transmit music files to the storage card:
- 2) Press the Menu button and select the music player icon.
- 3) Select music type.
- 4) Select a music file.
- 5) The following functions are available when playing the music file.
 - ◊ Adjust the volume by pressing Volume button.
 - ◊ Drag or click the progress bar to skip to any point you want.
 - ◊ Click the random play icon to activate random play mode.
 - ◊ Click the previous track icon to play previous music file.
 - ◊ Click the list icon to open the list of music files.
 - ◊ Click the repeat icon to switch between repeat play modes (Stop, Repeat Single or Repeat All)
 - ◊ Click the next track icon to play next music file.
 - ◊ Click the Pause/ Play to pause or resume playing.

Creating a Play List

- 1) Press the Menu button and click the music player icon.
- 2) Long press the music file you want to add to the play list → Add to Play List.
- 3) Select Create a Play List
- 4) Input the name of play list and select Store.
- 5) Select the files you want to add and select Add.
- 6) When a music file is playing, you may also press the Menu button → Add to Play List to add music files.

4.5.2 Sound Recorder

Please read the following to know how to record and play audio files.

- 1) Press the Menu button and click the sound recorder icon.
- 2) Click the Record key to starting recording.
- 3) Click the Stop key if you want to finish recording.
- 4) After recording, you can click the Play key to play the audio file.
- 5) After recording, please select to keep this record or not.
- 6) If keeping this record, the audio file will be saved in the record list.
- 7) If you don't want to keep this record, the audio file will not be saved.

4.5.3 Camera

Please read the following to know how to take photos and videos and how to view them.

The capacity may vary due to different shooting conditions and scenes.

Photos

- 1) Press the Menu button and click the camera icon.
- 2) Focus on the target and make the following adjustment if necessary.
 - ◊ Select focus method and shoot mode
 - ◊ Change or keep saving path
 - ◊ Adjust white balance
 - ◊ Open or close flash
 - ◊ Switch to Video
- 3) Select to take a photo.
- 4) Click the image viewer icon to view the photo.
- 5) The photo will be automatically saved.
- 6) You may click the image viewer icon to view all photos.
 - ◊ Flick left or right to view more photos.
 - ◊ Put two fingers on the screen and pinch them apart to zoom in (two fingers together to zoom out) or double click the

screen to zoom in and double click again to zoom out.

- ✧ Press the Menu button → Share to send photos to someone.
- ✧ Press the Menu button → More → Setting to set photos as wallpapers or the icons of incoming callers.
- ✧ Press the Menu button → Delete to delete photos.

4.5.4 Videos

- 1) Press the Menu button and click the camera icon.
- 2) Slide the icon upward to switch to camera.
- 3) Focus on the target and make the following adjustment if necessary.
 - 4) Check the condition and setting of the camera.
 - ✧ Adjust color effect
 - ✧ Adjust white balance
 - ✧ Turn on or turn off the flashlight
 - ✧ Set the quality of the video
 - ✧ Switch to Photo
 - ✧ Start recording the video
 - ✧ Click the image viewer icon to view videos.
 - 5) Click the camera icon to start.
 - 6) Click the camera icon again to stop.
 - 7) The video will be automatically stored. The video might not be

able to be saved in storage card due to low transmission speed.

- 8) After recording, please click the image viewer icon to view videos.
 - ✧ Flick left or right to view more videos.
 - ✧ You can select the image of a video to play the video.
 - ✧ Press the Menu button → Share to send videos to someone.
 - ✧ Press the Menu button → Delete to delete videos.

4.5.5 Picture Base

Please read the following to know how to view images or play videos stored in internal storage or the storage card.

Viewing Images

- 1) Press the Menu button and click the picture base icon.
- 2) Select a file folder.
- 3) Select the photo you want to view.
 - ✧ Click the zoom in icon to scale up the image;
 - ✧ Click the zoom out icon to scale down the image;
 - ✧ Click the play the slide icon to play the slide;
 - ✧ Click the menu icon to pop up submenus such as Share, Delete and More.
 - ✧ Click Share to send all viewed images by means of

Bluetooth or message.

- ❖ Click Delete to delete all viewed images.
- ❖ Click More to pop up some options such as More Information, Set As, Shear, Rotate Leftward, Rotate Rightward, etc.
- ❖ Click Detail to view the detailed information of images, such as titles, types, shooting dates, etc.
- ❖ Click Set As to set viewed images as wallpapers or icons of contacts.
- ❖ Click Shear to shear images, and please save or exit after shearing.
- ❖ Click Rotate Leftward to rotate images counterclockwise 90 degree.
- ❖ Click Rotate Rightward to rotate images clockwise 90 degree.
- ❖ Press the Back button to return to previous interface.

Playing Videos

- 1) Press the Menu button and click the picture base icon.
- 2) Select a file folder.
- 3) Select the video you want to view.
 - ❖ Select Play/Pause key to pause or resume playing.

- ✧ Tap and hold the icon “

5 Applications of the Third Party Software

5. 1 Downloading and Installing Software

User may download software in Apk. format from Internet through wireless network and install them into the product, such as eoemarket, Himarket.

User may check the downloading status at the taskbar.

5. 2 Application of Software

After the software is installed, the system will generate a shortcut icon on the desktop as a link; click the icon to activate the software.

6 Functions

6. 1 Personal Information (Contacts)

Please read the following to know to create or manage personal or

business contact list, and how to store names, phone numbers, e-mail addresses, birthdays and other information of contacts.

Creating Contacts

- 1) In main menu interface, click the contacts icon.
- 2) Press the Menu button “” → add a contact.
- 3) Select the storage position. If you have multiple accounts, please choose one of them to add the contact.
- 4) Input the information of contacts.
- 5) Store the information of the contact to the storage.

Creating Contacts from the Dial Screen

- 1) In main menu interface, click the dial icon.
- 2) Input a phone number and add to Contacts.
- 3) Select to Add a Contact.
- 4) Select the storage position. If you have multiple accounts, please choose one of them to add the contact.
- 5) Input the information of the contact.
- 6) Store the information of the contact to storage.

Finding Contacts

- 1) In main menu interface, click the contacts icon.

- 2) Press the Menu button “” → Search, or directly press the Search button. Input the first letters of a name.
- 3) Select the contact from the contact list and view the information of the contact.
- 4) After finding the contact, you may use the following functions:
 - ❖ You may select the contact and long press it and select to call the contact.
 - ❖ You may select the contact and long press it and select to send a message to the contact.
 - ❖ You may select the contact and long press it and select to send an e-mail to the contact.
 - ❖ You may select the contact and long press it and select to edit the information of the contact.
 - ❖ You may select the contact and long press it and select to delete the information of the contact.
 - ❖ You may select the contact and long press it and select to add to Favorites folder.

Importing or Exporting Contacts

In order to import contacts (in vcf. format) from the storage card to the pad:

- 1) In main menu interface, click the contacts icon.

- 2) Press the Menu button “” → select Import/ Export → Import from SD Card.
- 3) Select the storage position. If you have multiple accounts, please choose one of them to add the contact.
- 4) Select to import one vCard file or import multiple vCard files, or import all vCard files.
- 5) Select OK.
- 6) Select the contact file you want to import and select OK.

In order to export contacts from the pad to the storage card:

- 1) In main menu interface, click the contacts icon.
- 2) Press the Menu button “” → select Import/ Export → Export to SD Card.
- 3) Please select OK in export verification interface to export contacts to SD card.

6. 2 Calendar

Please read the following to know how to create and manage daily, weekly and monthly activities and set alarms to remind yourself of important activities (Please firstly add an Exchange account in order to enter calendar mode).

Calendar Viewing Modes

- 1) In main menu interface, click the contacts icon.
- 2) Select the viewing mode above the calendar icon.
 - ✧ Day: See the appointments and events in a day by hour.
 - ✧ Week: See the appointments in a week.
 - ✧ Month: See the appointments and events in a month by day.
 - ✧ Schedule: See all appointments.

Creating Activities

- 1) In main menu interface, click the calendar icon.
- 2) In calendar interface, press the Menu button “” → More→ Create Activities.
- 3) Input the detailed information of activities.
- 4) Select OK.

Viewing Events

To view the events in a day:

- 1) In main menu interface, click the calendar icon.
- 2) In the calendar interface, press the Menu button “” → Today.
- 3) Select the event and view the details.

Turning Alarms Off: If setting alarms for events, it will sound at the time you set. If you need alarms to sound again or to turn alarms off, you may select Delay All or Turn All Off.

6.3 Connection

6.3.1 Connecting to the Personal Computer

Please read the following to know how to use the data cable came with the pad to connect to the computer and how to transmit the data between the computer and the pad.

Connecting to the Large-Capacity Storage Device

If inserted with T-Flash card, the pad can be used as a portable disk to connect to the computer, and you may visit the file catalog of T-Flash.

- 1) You may insert the storage card into the pad to transmit files to or from the storage card.
- 2) You may use the data cable to connect the multifunctional interface of the pad with the computer.
- 3) After connection, select USB Connected in information column and open USB storage equipment, and you will see the USB storage device in the computer.

- 4) Open the file folder and view a file.
- 5) Copy the file from the computer to the storage card.
- 6) Select to turn off the USB storage device.
- 7) Note: If you need to disconnect the pad from the computer, please click the USB storage device icon shown in the taskbar of the computer and click the option Safely Delete USB Storage Device. Before that, please do not remove the data cable from the computer. Otherwise, it might cause the loss of data in storage card and the damage of the storage card.

6.3.2 Wi-Fi

Please read the following to know how to use wireless network functions to activate and connect to WLAN up to IEEE802.11 a/b/g/n standard.

You may access the Internet or connect to other network device where the access points or wireless hotspots are applicable.

Note: The pad adopts non-harmonic wave frequency which is specially applied in all countries and regions of Europe. In EU, the user can use WLAN indoors without any restriction. However, the user is not able to use Wi-Fi outdoors in France.

Turning On Wi-Fi

- 1) Press the Menu button and click the setting icon → Wireless and Network Setting.

- 2) Select Wi-Fi and turn on Wi-Fi.

Note: The operation of Wi-Fi on the background will decrease the battery power. In order to save the battery power, please turn on Wi-Fi only when you need it.

Network Notification: If selecting and turning on Network Notification, the user will receive the notification if any nearby network is available.

Finding and Connecting to Wi-Fi

- 1) Press the Menu button and click the setting icon → Wireless and Network Setting → Wi-Fi Setting, and the pad will automatically search for available Wi-Fi.
- 2) Select a network from Wi-Fi network list.
- 3) Input the network password (if it is required).
- 4) Select Connect.

Manually Adding Wi-Fi Networks

- 1) Press the Menu button and click the setting icon → Wireless and Network Setting → Wi-Fi Setting → add Wi-Fi networks.

- 2) Input network SSID and select security type.
- 3) Set the security according to selected security type.
- 4) Select Save.

6.3.3 Mobile Network

You may connect the pad to 3G network.

Please insert the USIM card into the pad and turn off the pad. Turn on the pad again and you will see 3G information in status bar when you are able to browse web pages, send messages, make calls etc.

Note: When using a mobile network, you may find there is no signal or the signal is too weak, because the signal depends on the local mobile network coverage.

6.3.4 Bluetooth

Bluetooth is the short-ranged wireless communication technology by which the users can exchange information with each other when the distance is within 10 meters and no physical connection is required. When users send messages by way of Bluetooth, as long as the distance between them doesn't exceed the range as specified, there is no need to connect any cables to their pads even if the users might be in different rooms.

Note: The Company shall bear no responsibility for any loss,

interception or misuse of data arising from sending or receiving the data by way of Bluetooth.

When sending or receiving data, please ensure that there are safety measures to protect your pad and all devices used are reliable. If there is any obstacle between transmitting and receiving devices, it might impair data transmission. Some devices, especially those without the approval of Bluetooth SIG or any test certification, might be incompatible with the pad.

Turning On Bluetooth

- 1) Press the Menu button and click setting icon → Wireless and Network Setting → Bluetooth.
- 2) Select Turn On Bluetooth.

Searching for and Pairing other Bluetooth Devices

- 1) Press the Menu button and click setting icon → Wireless and Network Setting → Bluetooth Setting → Scan and Search for Devices.
- 2) Select one device.
- 3) Input Bluetooth PIN code or PIN codes of other devices (if any) and select OK. You may also select to accept the PIN code to pair the devices. When the device owners input the same PIN

code or accept to connect with each other, devices are paired and are able to automatically search for available services.

Note: Some devices, especially headsets and car kits, may have fixed PIN codes (for example, 000). If pairing these devices, please input correct PIN codes.

Sending Data by Bluetooth

- 1) Select a file or item from applications or My Document, such as a contact, calendar activity, memo or media file.
- 2) Select Share → Select By Bluetooth.
- 3) Search for the device with Bluetooth on and pair with the device.

Receiving Data by Bluetooth

- 1) Press the Menu button and click the setting icon → Wireless and Network Setting → Bluetooth Setting → Discoverable. It takes 120 seconds for the pad to discover other Bluetooth devices.
- 2) Input Bluetooth PIN code according to the prompt on the screen and select OK (if it is required).
- 3) Select Accept to verify you accept to receive data from that device (if it is required).
- 4) The received data will be stored in Bluetooth file folder.

6.3.5 GPS

The pad is equipped with GPS receiver. Please read the following to know how to turn on location-based service.

In order to get strong GPS signals, please avoid using the pad in these circumstances: between high buildings, in tunnel or underpass, within the building; bad weather; high voltage or electromagnetic field.

Note: When using GPS, please do not touch the built-in antenna or cover this area with hand or any other object.

You may not be able to use this function due to the location or the service provider.

Turning On Location-Based Service

In order to receive location information and search the map, it is required to turn on location-based service.

- 1) Press the Menu button and click the setting icon →Location and Security.
- 2) Adjust the following settings to turn on the service.
 - ❖ Use Wireless Network: Set to indicate the location by Wi-Fi and/ or mobile network.

- ❖ Use GPS: Set to indicate the location by GPS.

6.3.6 HDMI

Please read the following to know how to connect the pad to HD display with HDMI cable to view the interface of pad through HD display.

- 1) In main menu interface, please click the setting icon → Display → HDMI.
- 2) Select and enter HDMI mode.
- 3) Turn on the HD display and connect the pad to it with HDMI cable (Plug one end of the cable into the pad and the other end into the HDMI interface of the HD display).
- 4) Adjust the HD display to switch to external input mode.
- 5) The interface of the pad appears on the screen of HD display.
 - ❖ Please select or adjust the HD display to have 16:9 aspect ratio.
 - ❖ Due to different video system and displaying quality, some files might not be displayed on the screen.
 - ❖ You may not be able to use Bluetooth headset in HDMI output mode.

6.4 Toolkit

6.4.1 My Document

Please read the following to know how to find images, videos, music files, sound clips and other files in the storage card.

Supported Files

Types	Formats
Images	BMP、GIF、JPG、PNG
Videos	3GP、MP4、AVI、WMV、FLV、KKV、ASF
Music Files	MP3、3GPP、WMA、OGG、AAC、WAV、AMR

Some files are not supported, and it depends on the software installed in the pad.

In case the file size is large than the storage capacity, there will be an error when opening the file.

- 1) Open a file: Press the Menu button and select My Document.
- 2) Select a file folder. You may press the Back button to return to previous interface. Select the file you want to open.
- 3) Create a file folder: Press the Menu button and select My Document.

- 4) Press the Menu button → New File Folder. Input the name and select OK.
- 5) Copy or cut the file: Press the Menu button and select My Document → Select.
- 6) Select the file folder or file you want to copy or cut. Select Copy or Cut. Find the file folder and select Paste.
- 7) Delete the file: Press the Menu button and select My Document → Select. Select the file folder or file you want to delete. Select Delete.

6.4.2 Clock

You may see the time, watch the slide, play music and set an alarm.

- 1) See the time: Press the Menu button and click the clock icon.
- 2) Watch the slide: Press the Menu button and click the clock icon. Select the slide icon to show images in your picture base.
- 3) Play music: Press the Menu button and click the clock icon; Click the music icon. Select the music file to play.

Alarm

Please read the following to know how to set alarms for important activities and control alarms.

- 1) Set an alarm: Press the Menu button and click the clock icon.

Select the alarm icon; Select to add an alarm; Set the details of the alarm; After finishing the setting, select Finish.

- 2) Turn off an alarm: When the alarm sounds, select Cancel in the prompt box to turn off the alarm. Select Pause/ Sound Again in the prompt box to have the alarm sound again after the specified period of time.
- 3) Delete an alarm: Press the Menu button and click the clock icon. Select the alarm icon and enter alarm interface; Select the alarm you want to delete; select Delete. You may also select the alarm to long press and select Cancel to delete the alarm.
- 4) Change alarm setting: Press the Menu button and click the clock icon. Select the alarm icon and press the Menu button → Setting, and change the alarm setting.

6.4.3 Searching

Please read the following to know how to use the search function to get the information of devices, networks, applications, and contacts.

Press the Menu button and click the search icon.

Input the keyword and search range (All, Network, Application, Contacts)

The pad will search for the information and webpages according to the search range and keyword.

7 Setting

Visit setting menu:

- 1) Press the Menu button and click the setting icon.
- 2) Select setting type, and select the option.

7.1 Wireless and Network

Change the setting for wireless network connection.

Flight mode: Disable all wireless functions and only non-network services are available.

Wi-Fi Setting

- 1) Wi-Fi: Turn Wi-Fi on or off.
- 2) Wi-Fi setting: Turn Wi-Fi on or off.
- 3) Network notification: set the pad to notify the user there is network available.
- 4) Add Wi-Fi network: manually add Wi-Fi access point.

Bluetooth Setting

- 5) Bluetooth: Turn Bluetooth on or off.
- 6) Bluetooth setting: Bluetooth: Turn Bluetooth on or off.
- 7) Device name: Name a Bluetooth device.

- 8) Scan and search for a device: Search for an available Bluetooth device.
- 9) Virtual Private Network setting: Set and manage VPN.

Mobile Network

- 10) Data Enabled: Select this option to use data access function of mobile network.
- 11) Data Roaming: Set the pad to access data service when roaming.

7.2 Sound

Reset the Sound Settings of your pad.

Silent Mode: Activate silent mode to turn off all sounds except media sound and alarm sound.

Vibrate: Select to vibrate in one of these ways, such as all the time, at no time, vibrate in mute mode only, or vibrate in non-mute mode only.

Volume: Adjust the volume of ringtone, media sound, alarm sound and notification sound.

Device Sound: Select the ringtone for incoming calls.

Alert Sound: Select alert sound for events. For example, new e-mail.

Key Sound: Set the pad to sound when you click the dial key.

Selection Sound: Set the pad to sound when you choose applications or options on the screen.

Touch: Set the pad to vibrate when pressing the key.

Emergency Sound: Set the pad to sound when you make an emergency call for help.

7.3 Display

Brightness: Set the brightness of the screen. Change the setting for display.

Autorotation: Set the display screen to automatically rotate.

Animation: Set the pad to play the animation when switching window

Screen Timeout: Set how long the time is before turning off the background light.

7.4 Location and Security

Set the security for changing device, SIM/USIM card and GPS.

Use Wireless Network: Set to indicate the location by Wi-Fi and/ or mobile network.

Use GPS: Set to indicate the location by GPS.

Set Screen Lock: Set unlocking password. If the password is already set, the option will be to change screen lock.

- 1) None: Disable screen lock.
- 2) Pattern: Set the unlocking pattern to unlock the screen.
- 3) PIN: Set PIN code (digits) to unlock the screen.
- 4) Password: Set the password (letters and/or digits) to unlock the screen.

Lock SIM card: Input PIN code to lock the SIM card. You may also change the PIN code.

Password Visible: For the sake of security, the password shown on the screen is • by default. You may set to make the password visible when inputting.

Device Manager: You can select to view the device manager or activate device manager to apply the new strategy.

Security Certificate: Use security certificate to securely use all applications.

Install Encryption Certificate from SD card: To install the encryption certificate stored in the storage card.

Set the Password: Create and verify the password for access.

Clear the Storage: Delete the certificate in the device and reset the password.

7.5 Applications

Change the setting for the management of installed applications.

Unknown Source: Select this option to download any application from anywhere. If not selecting this option, the pad will only be able to download the applications from Android Market.

Manage Applications: visit the list of installed application and view the information. You may also view the applications in operation or stored in the storage card.

Services in Operation: view the services the user is using and manage the services.

Development:

- 1) USB Debugging: Select this option to connect the pad to the computer with data cable. This is used in developing application.
- 2) Keep Awaken: Set the pad to keep in standby status when charging the pad.
- 3) Accept Mock Location: Accept to send mock location and service information to location management service to test. This is used in developing application.

7.6 Accounts and Syncing

Change sync function setting or manage the account you want to sync.

Background Data: Select to use auto sync function and it proceed in

the background without opening applications and sync data.

Auto Sync: Set the pad to auto sync contacts, calendar and E-Mail.

Add Accounts: Inputting e-mail addresses and passwords to add accounts.

7.7 Privacy

Resume Default Setting: Reset all settings to factory default and clear all data in the pad, however, current system software and bundled applications as well as files in SD card such as music files and photos won't be deleted.

7.8 SD Card and Internal storage

Check the storage card and the storage information in the pad: to view the capacity and available space of SD card and the available space of internal storage.

Uninstall SD Card: You need to uninstall the SD card before safely removing it.

Format the SD card: format (clear) the external SD card.

7.9 Searching

Change search setting.

Google search:

- 1) Display Webpage Advices: Set the pad to display the advices when you inputting keywords.
- 2) Searchable Items: Select the types of items you want to search for.
- 3) Delete Shortcuts: Delete recently searched information.

7.10 Language and Keypad

Change text input setting.

Selecting Languages: Select all menus and applications to display in which language.

Selecting Input Methods: Select to use default keypad type to input texts.

Android Keypad

- 1) Vibrate When Clicking the Key: Set the pad to vibrate when you touch the screen to click the key.
- 2) Play Music When Clicking the Key: Set the pad to play music when you touch the screen to click the key.
- 3) Auto Capitalization: Set the pad to capitalize all letters inputted in editing interface.
- 4) Input Languages: Set to slide the finger on space key to switch input languages.

- 5) Display Advices: set to activate smart prompts when inputting texts.
- 6) Auto-Filling: Set to automatically insert highlighted words when clicking the space key and punctuation marks.

Note: (1) You may download third-party input methods via networks, such as Google Pinyin IME and Sogou Input Method etc. In addition, it is suggested to download the input method from official website, since the input method version may be incompatible with the pad.

(2) After downloading and installing input methods, please select an input method when setting the language and keypad, so that the downloaded input methods will not appear as options in editing interface.

❖ User's Dictionary: the user can customize words.

7.11 Auxiliary Function

Press the Power button to end a call: set the pad to end a call by pressing the Power button instead of turning off the screen.

7.12 Date and Time

You may visit and change the following settings to have the pad display the date and time:

- 1) Auto: Set the pad to update the time automatically when you go across the time zone.
- 2) Set Date: Manually set current date.
- 3) Select Time Zone: Set local time zone.
- 4) Set Time: Manually set current time.
- 5) Use 24-Hour Time: Set the pad to display 24-hour time.
- 6) Select Date Format: Select Date Format.

7.13 About the Equipment

You may know the information of your product, such as model and version, check the status of this pad and battery power as well as how to use this product.

The SAR value of 3G radio module is 0.798W/kg.

Federal Communication Commission Interference

Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C.