

Table of Contents

Important Safety Precautions-----	2
The main function -----	3
Preliminary grasp -----	5
Quick guide -----	6
The function icons in children's interface -----	6
Implication notes in parents' interface -----	18
The function icons in parents' interface -----	20
Function setting in parents' interface -----	20
USB disk function -----	29
Plug-in 3G USB dongle function -----	29
Using TF memory card -----	29
APK program installation -----	30
Music player function -----	31
Video player function -----	31
Photo browser function -----	33
Sound recording -----	36
Explorer-----	36
E-reader -----	36
Browser -----	36
E-mail -----	38
Calendar-----	38
Calculator-----	40
Alarm clock-----	42
Photography and camera shooting-----	44
Firmware upgrade-----	48
Technical parameters-----	50

◆Important safety precautions

In order to give full play to over-all properties of the new child tablet PC, and avoid improper operation, please read the operation manual carefully before using it:

1. Do not place the tablet computer in hot, cold, dusty, humid environment.
2. When using this product, do not let the tablet computer fall or make a hard object impact TFT screen, it will scratch the screen and affect TFT normal operation. Please note that the user is responsible for the damage caused by human and other force majeure.
3. Avoid using tablet computer in dry conditions, in order to prevent static electricity.
4. Please charge under the following cases:
 - A) The battery icon shows no power.
 - B) The tablet computer shutdown automatically or reboot but shutdown again.
 - C) Operating without responses.
5. Do not place heavy objects on the tablet computer, or it will damage the tablet computer.
6. Used as mobile hard disk, please follow the correct file

management operation and export file,. Any wrong operation causes the file missed; our company shall not be responsible for.

7. Because the software in the flat computer will use a small part of the space of memorizer and computer storage capacity of hexadecimal is different, so the memory capacity display in the operating system will be less than the standard value, which is in conformity with the relevant provisions.
8. If the memory is changed or damaged, the tablet computer can't work regularly, the user can format the tablet computer in his own computer.

Note: our company reserves the right to improve the product. The performance and function of different hardware and software version of a product may have some differences. Thus, you will not be noticed when the changes happen accordingly.

◆The main function

1. 7 inch 1024*600 resolution,5 point electric capacity touch screen.
2. This tablet computer is equipped with the most potential Android intelligent operating system , built-in Wi-Fi wireless module, support the local access network or WIFI wireless network, can provide Webpage browsing, including news, e-mail, online games, online video, weather forecast, map, children's interesting software, as much as 1000

kinds of application experience.

3. The built-in G-Sensor gravity sensing device, according to the holding direction automatically rotating display content, let you choose the most suitable angle in a variety of applications, G-Sensor gravity sensing game can give you a great experience.
4. Multimedia video format support: the HD 1080P format video decoding, 1080P H.264 video coding, the format of AVI, MKV, FLV, WMV and other video file format.
5. Multimedia audio format support: MP3, WMA, WAV, AAC, OGG and other formats of music files, support multiple EQ modes and multi-task operation.
6. Support HD JPEG, BMP, GIF format image files, support the thumbnail browser, slideshow, picture rotation, picture scaling and other functions
7. Storage equipment: in addition to the built-in memory, also support TF expansion, the biggest support for 16G.
8. Support interface: earphone interface, Micro USB interface, TF expansion slot.

◆Preliminary grasp



1. Click“”: short press for sleep / wake function, long press for open/ shutdown function.

2. Click“”: Click short time for returning; click long time for going back to the main interface.

3. Click“V+ and V-” : Short press for increase and decrease volume.



4. Click “”: long press for the shortcut key to take pictures, then short press for the photography.

5. Click RESET : when crashing, a hard thin short touch in this hole is a system reset function.

6. TF card: slot position.

7. The earphone seat: three earphone line interface.

8. MINI USB seat: MINI_5PIN the connecting line interfaces.

◆ Quick guide

This tablet consisting of children and parents interface is mainly characterized by parents' permission settings, to prevent children being addicted to all kinds of interesting games and other applications, which will affect the children physical and mental health. Parents also can register multiple users, permissions set for release in different age children. Multi educating of one machine, multi use of one machine. This tablet computer is a indispensable friend for children growth.

Application note in children's interface

• Boot: under shutdown state, long press the power button for 3 seconds. The first start, the machine will show the instructions for use in parents' interface after showing the boot LOGO. The user can set the requirements (Note: here password is very important). After the completion of the above operations, the next step is children's interface.



(BOOT

LOGO)



(Children System Interface)

- Unlock: press the lock icon , to drag out the lock ring, then the tablet will automatically unlock.
- Power saving mode and screen lock: after booting, short press the power button, entering the SLEEP system of the power saving mode, the screen is black, but also on the lock screen. Then press the power button, system restore bright screen in 2S.
- Shutdown: in the boot state, long press the on-off key for 3 seconds, the screen display shutdown confirmation screen, select options confirm shutdown, automatic shutdown system namely.

Note: when the power is low, the machine will alarm low power, if not charged, the machine will automatically shut down; if can not boot, please check whether the machine battery has power, premise having certain power in the guarantee, then try to boot.

•**Battery management and charging**

- A. For the first use, you should have the battery charge 8~12 hours to ensure the full power before use.
- B. Insert a miniature end power adapter to the DC socket of the machine, the other end to the power socket. Desktop battery icon as the blue bar  rolling means charging is in progress. Please do not unplug the charge until the battery is fully charged. After finishing charging, desktop battery icon will stop rolling.
- C. When you charge the battery at the state of complete power depletion, please wait for at least one minute then reboot.

Note: in order to ensure the best use of lithium battery, please pay attention to the following matters:

1. Do not charge in a high temperature environment (such as the balcony or expose to sunlight)
2. Lithium batteries do not need to discharge, and do not need to power up and charge, you can charge the battery when it has power.
3. If the product is not used for a long time, please make a full charge at least once two weeks, so as to avoid excessive battery discharge and its impact on the performance of charging.

◆The definition of function icons in children's interface





- Media: select the multimedia icon, and then display those two application icons: audio player and video player.



Select the icon  shown as above Jiugongge mode; select the icon  shown as extended cyclic model; select the icon  the function interface returns to function interface.



(Audio Interface)




(Video Play Interface)

- App Box: select the icon to enter, the machine will enter the application icon downloaded APP display interface, display various applications have been downloaded.




- Games: select this icon to enter, the machine will show the game application installed.

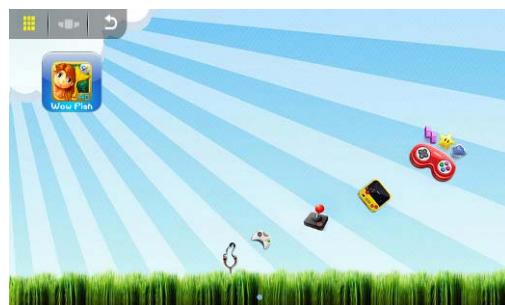

- Painting: select the icon to enter, the machine will show PaintPad application. Entering the drawing board, children can use the tools in drawing board, draw the lovable beautiful pictures, select the icon, can save pictures in the gallery.



- Notes: select the icon to enter, the machine will show the application of Note, open the Note application, handwriting, voice recording are at hand.

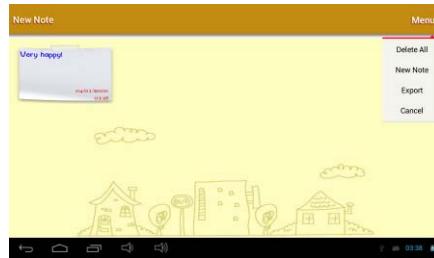

- E-book: select the icon to enter, the machine will display the Book Reader application, open the application, it will display the bookshelf interface, which can collect electronic reading with the formats like PDF, EPUB, TXT, HTML and other formats that children like most.



Touch the icon, it can let the whole picture earth rotate, icon to float up, the whole interface is lively and interesting.



Select the icon, enter the gallery application quickly, display the pictures that the machine storages.



Select the icon, enter the date set interface quickly, convenient for setting.





◆ Select the icon, enter the children setting interface, set up System, Parent, Application, and Browser.




- System: Enter this setting; it will display the WIFI shortcut key, battery power volume, voice volume adjustment and brightness adjustment bar.
- Parent: Enter this setting, enter the password, and select Exit app, it will turn into parents' interface from the children's interface.

Select Manage and enter the following setting interface.



Password: reset password interface for parents

Click : fast into the waiting for interface, when the child's play time exceeds the limited time, it will jump out of the lock interface to remind, children can only enter the application operation with their parents' permission, as shown below:

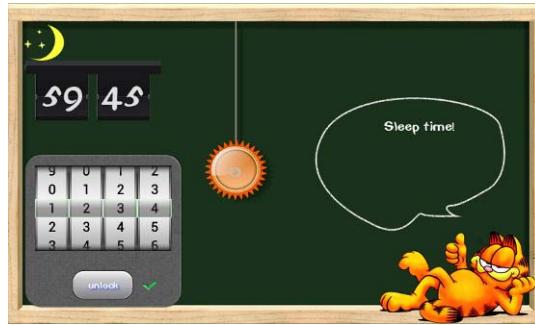

Under Operation list, setting up play time、Rest time、Reward and prompt msg, as Sleep time in the above picture!

This setting is the highlight of the 16 machine; parents can effectively

manage their children's time used on the tablet, so that children can use the electronic products reasonably. Parents can use the custom setup time setting to control the tablet flexibly.

Application: Parents add application options, select a child interface function icon (as shown below), it will show the existing application icon choice interface on parents' interface (see chart two). E-book Reader and Angry Birds is selected to add state, tick the machine to exit setup, this two application will save to children's interface functions of the directory (E-book).



(Chart One)



(Chart Two)

Brower: The machine can also enter the password input interface, input the password to enter, parents can set up children browsing Webpage permission to let their children browse the health website. **Note:** only hook Brower limit mode can set up the permission effectively.



The application notes on parents' interface



(Parents system interface one)



(Parents system interface two)

- Unlock: when screen is locked, you need to click  icon and drag it out

of the locking circle, then the machine will be unlocked automatically.

◆The definition of function icon on parents interface

Parents system interface one: *There are 5 screen display on this interface, which is convenient and prompt to set up the application. Parents system interface two on the 5 screen by using shortcut method. And divided by function, parents can find what application they want quickly. Adjusting the brightness quickly, WIFI, etc. have been built up on the setting function of shortcut.*

◆The function setting on desktop

Set up wallpaper

Long touch the blank space on parents system interface one, photo storage and live wallpapers will pop up. Then you can select the photo you like and just choose “set wallpaper”, which means the new wallpaper has been switched successfully.

- Click the top left corner  icon, and you will enter the searching interface of shortcuts application and quickly access to the application you want.

- Click the top left corner  icon, and you will enter voice searching interface of shortcuts Google and can get the things you want by using voice.

- Click the clock icon and you can proceed countdown with shortcuts, set the clock and stopwatch timing.


- Click the application icon which is added on the interface, and long touch the icon. At this time, you can see  the delete icon showed on the top left


corner, and it will be eliminated on the desktop by choose it.

Choose the icon of parents system interface one , the content of interface 2 of the parents will pop up. Here is all the application function display interface of this machine.

◆Setting


Choose the setting icon, and click the setting icon on the main menu or desktop of wireless and networks, sound , display, location access, security, application and so on.(Press on the screen upward or downward, you can turn the pages.)

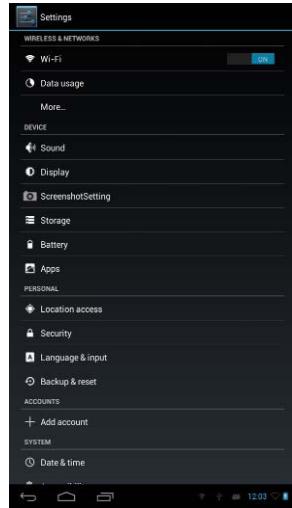

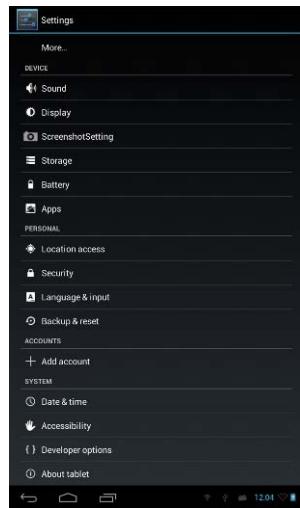

Wireless & networks setting

- choose to open WIFI,

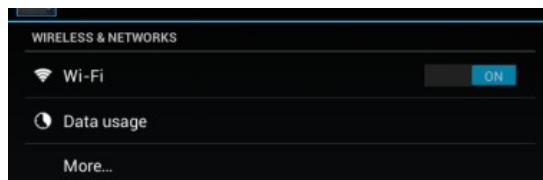


The interface of WIFI scanning IP will be shown, and choose the account number of that can be opened. Input your IP password, then you can open the Internet connecting.

Sound setting

- Click the sound volume of setting22menu and enter the setting interface,

then you can set up the media volume, touch sounds and screen lock

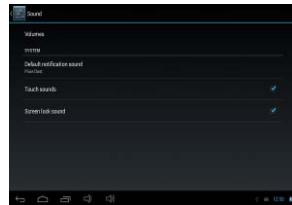


sound.



Display setting:

- Click the display setting on the setting interface then enter the interfaces like brightness, wallpaper, standby time, font size, Wireless display, G-sensor, you can regulate the interfaces as you like them.


Note: G-sensor is set for the case when playing a particular game, direction deflects. Encounter this situation, please keep the machine plane in the desired direction, and calibrate it before use.

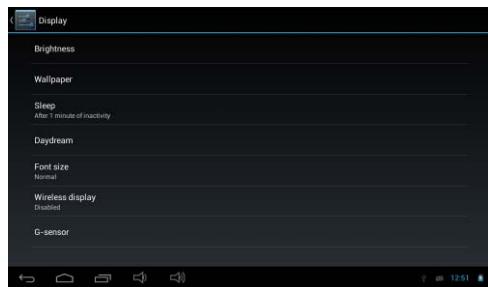

Battery: The battery consumption volume chart

APPS: This option displays the applications the machine installed and their positions. You can uninstall the application or remove the application cache which you don't want.


Language & input: Set up languages and input method.

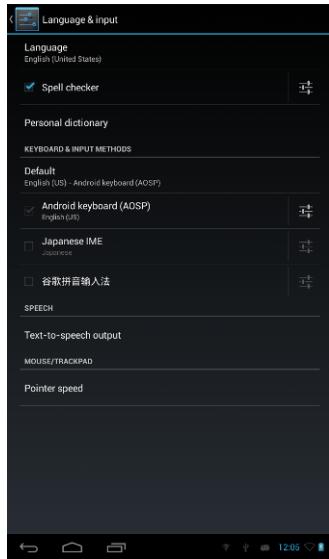

Backup & reset:


Back up app data, Wi-Fi passwords, and other settings to Google servers, set the backup account, Automatic restore, Erases all data on tablet.

You're advised to use the default mode, but do not make any alterations, or it will lead partial functions of the machine to be unused.

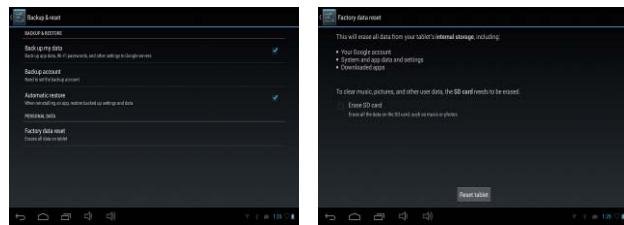


Date and time settings

Click on the settings menu [Date & time] to enter the date and time settings interface, cancel automatic options, click the hook behind "automatic" , you can manually modify the date, time zone, time.

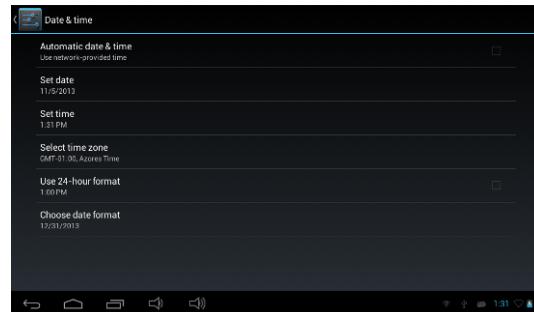


•Date settings

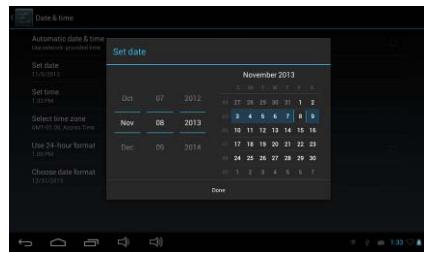


Slide up and down, select the number of year, month, day, click “Done” and date is set.

●Time settings

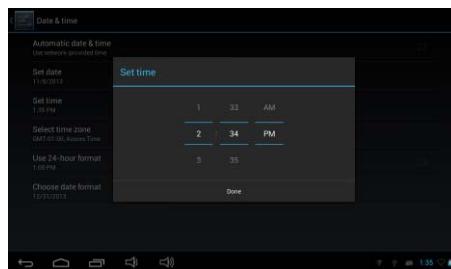


Slide up and down, select the number of time, click “Done” and time is set.

●Select time zone

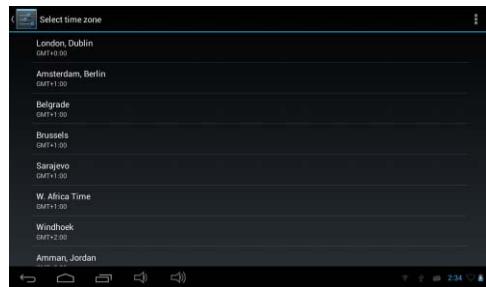

Select your time zone and click.

Developers' options:

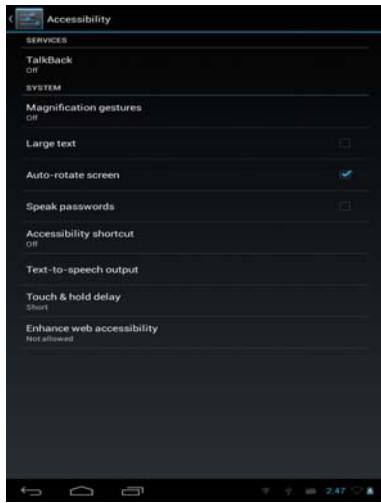

- USB debugging: Open the USB debugging, ADB can be operated.

About the device



- See the information about power consumption, law information, equipment and software version.
 - ◆ Read U disk function.
 - Insert U disk into MICRO interface, click "Explorer" which is on the desktop and then click "USB" to enter the U disk file playlist to play.
 - ◆ Plug-in 3G USB Dongle
 - Use the adapter cable to insert the 3G USB-DONGLE wireless network card into the MICRO interface, and then connect to the internet.
 - ◆ Using TF memory card

This machine has TF memory card slot, and the multimedia files in the TF card can be read. When in use, insert³⁰ the TF card according to the card

groove settings into the machine correctly, push the card inside until you hear a click. When remove the memory, please push the memory card slot a litter inside, then release. The memory card will automatically pop up, then you can remove the memory card.

- A Please insert the card into the card slot which is in the right of the machine correctly.
- B When operating the memory card (such as reading, copying), do not pull out the memory card, otherwise it may make the data wrong.
- C Avoid using and storage the memory card in a high temperature, and high humidity environment.
- D Keep the memory card away from liquids and corrosive materials.

◆APK installer

- This machine support for third party applications based on Android platform, most applications can be obtained from the network, and they can be copied into the flash or TF card, and then install and use.

- Click the APK installer , and then pop up the APK installer interface options: installation, management, exit three options.

Installation: click on the installation, enter the APK installer interface.

Internal Memory and SD Card respectively corresponding to flash memory disk and T-Flash card storage disk;

After entering, choose the APK format on the right box to setup, click “Install”, after the completion of the operation go back to the main interface, namely the installation is finished, and there will be corresponding software menu:

Management : Click “Management”³¹ then enter the third party software

interface.

Start-up: The software is working

Leading-out: Lead out the software to T-Flash.

Unload: Unload the software.

Search: Search the software on software store.

Cancel: Cancel the operation.

Drop-out: Go back to the main interface.

◆Music player

This machine has two music players, one for children, and the other for parents.

The entrance of the children music player is like the entrance of children main interface.

Select the parents' music player, click music icon , and then the music is playing. Double-click the song we like which is on the list then it plays.

Drag the playback progress bar to adjust audio playback progress

Button description


 Artist;  Album;  Song;  Music playlist

 Random play;  Circular play;  Play the last song.

 Play the next song ;  Pause;  Play.

◆Video play

In the main menu or desktop, click the video icon to enter the video list interface, touch your favorite video playback and play:

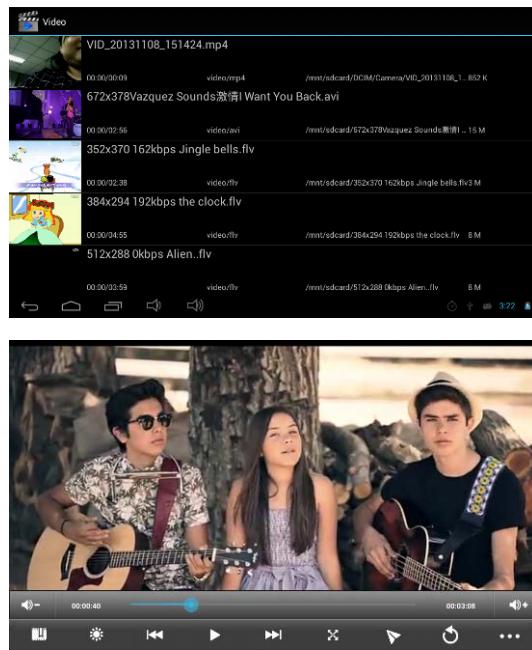

This machine supports video file formats like: MKV、AVI、VOB、MOV、DAT、FLV、3GP, and so on.

Add video bookmarks; Brightness adjustment; Play the last video

video

Play the next video; Pause; Exit.

Video format16: 9 /4: 3/ recovery;

▶: Change the video into a floating window, shown as below:



Long touch the center pause ring, it will display the delete mode, one touch can delete video floating window.

: Decrease video volume; : Increase video play volume.

Touch the volume icon,




the video above shows the progress bar, drag the progress bar can adjust the volume quickly.

When playing the video, click , you can set video clear bookmarks, play mode etc.

- Click play mode, select single player, single cycle, all video circulating a play mode, or click back to return to the previous menu.

◆ Picture browser

In the main menu or desktop, click the picture browser icon to enter the picture browser interface:

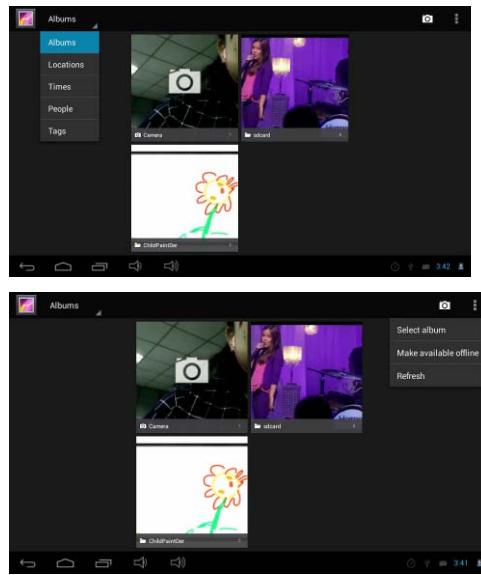


According Locations、Times、People、Tags to select picture gallery

Touch the photo icon  in the upper right corner, can enter the camera mode quickly.


Click icon  to set Select album、Make available offline、Refresh.

Choose a picture to enter, slide from left to right to browse pictures.

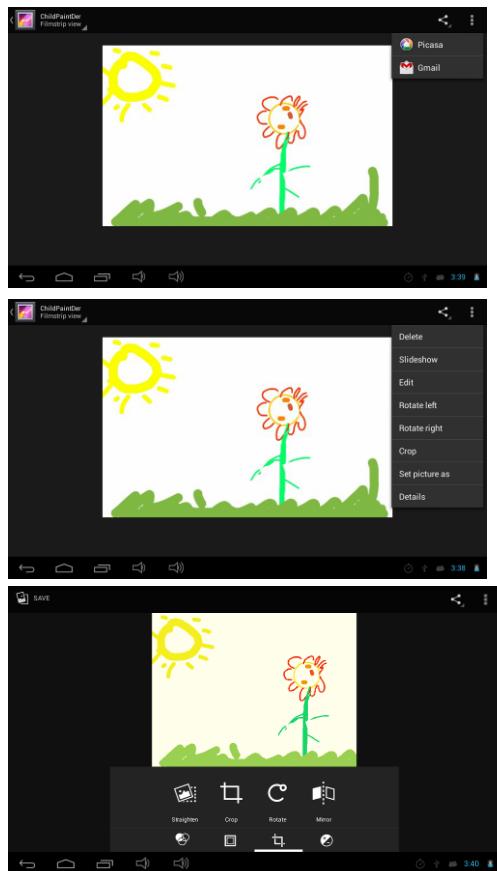

 icon: Share the current pictures.

  icon: Set up the current pictures as the formats like: Delete, Slideshow, Edit, Rotate left, Rotate right, Crop, Set picture as, Details.



The current pictures can be edited as display mode, add a photo frame, picture display mode, color rendering, editing action.

◆ Recording

- In the main menu or desktop, click the icon  to enter the recording interface, click the record button  to start recording. Click the stop button  to stop recording. Click the play button  to play recording. The system automatically prompts the use of recording or abandon, please select. Play the tape: choose to use flat computer audio recorder, first according to the catalogue to choose the recording file, and click to play.

◆ Explorer

- In the main menu or desktop, click the explorer icon  to enter the management interface, click the [SD Card], [Internal Memory] and [U] to display drop-down file and related documents. It can be added, copied, pasted, and deleted. Long press a single folder or file, select "on", "next" or "upper" to find the corresponding path, click the "Edit" in the pop-up window to paste.

◆ E-book reading

In the main menu or desktop, click  the E-book app icon, enter the

E-book reading (Display interface is the same as the children interface)

- According to the situation of your file storage, open the corresponding folder, find the text file and add.

Double click the file to open the E-book and read, click the screen on the left / right side or transverse row can turn page.

- Font scaling: click the zoom button , choose zoom size, scaling options are: S, M, L, XL, XXL.

Skip page settings: click the skip button , then pop-up a dialog box, input the number of pages you want to skip, click "Confirm" then it will automatically skip to the specific page.

- Bookmarks settings: Click bookmark button , to add, delete and display bookmark.

Outline: Click outline button , and you can see the outline of the book.

◆ Browser

Under Wi-Fi normal connection, click IE browser which is on the main menu or desktop to enter the IE interface, click the address bar to input the Website to enter the corresponding Webpage, then you can browse the information:




Note: The browser uses currently popular third party IE browser software, so when operating, please follow the standard operation.

◆ **E-mail**

- Under Wi-Fi normal connection, click the Gmail icon  which is on the main menu or desktop to enter the e-mail interface.

- If you already have a Google mail account, click “login” directly, input the user name and password to login.
- If you don’t have Google mail account, click “set up” to add a Google account.

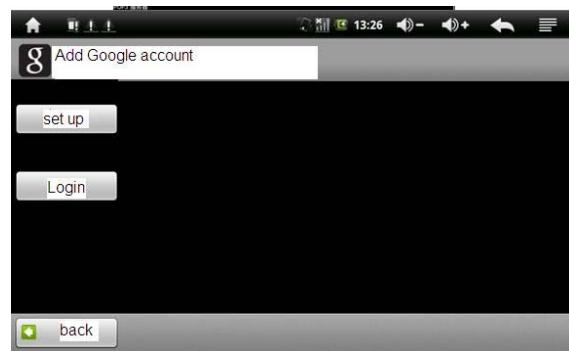

- Click the next step, and it will pop up the following interface. Click the email address, password edit box, and it will pop up the soft keyboard, and then input the corresponding information.




- Setup mailbox type:

Set the mailbox server parameters. 40

◆Calendar

- Click the calendar icon in the main menu or the desktop to enter calendar interface, the machine will prompt to login with an account. Google has this application. Using the existing Google is OK.

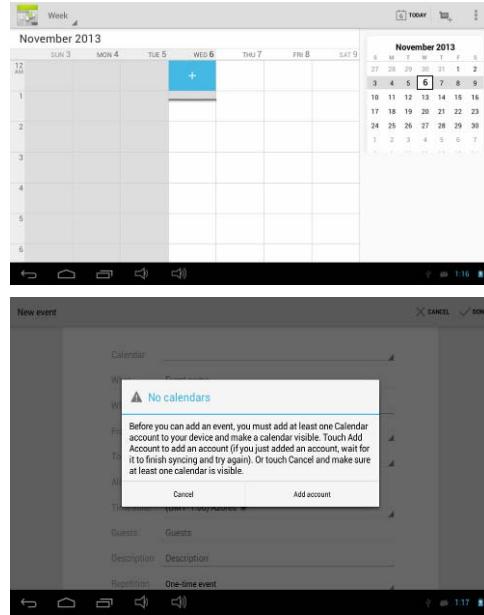

Under the calendar mode, it will display all dates of a month, press the screen and slide from left to right can turn page, and the last month or next month can be checked easily. Touch the remind date  icon, and you can add a notepad, memo.

- A registered account can be used to be a reminder for the account user.
- When the month of the year is more than December or less than January, it will adjust the year and month automatically.
- Click icon  to go back the main interface.

◆ Calculator

Click the calculator icon  in the main menu or desktop to open the calculator.



◆ Alarm clock

- Click the icon in the menu or desktop to enter the alarm clock setting interface.



Click  Countdown with second, and when time is over, it will bell to remind.

Click  The alarm clock setting interface.


Click  Count with second, in this function interface, touch  can also count with split time.



Click  Enter the alarm clock setting interface.

Click  Add multiple alarm clock₄₃ if you like.

Click . The settings menu, can alarm in details: label time alarm, alarm tone, alarm repeat, tag settings.

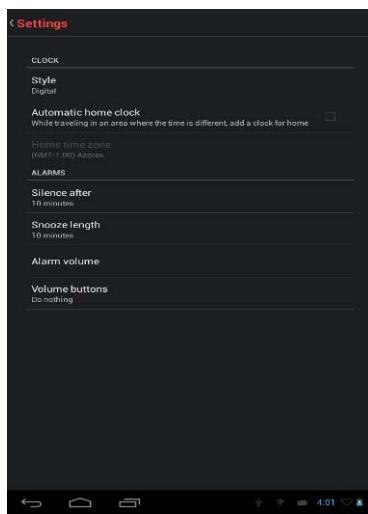

◆Photography and camera shooting

This machine has two cameras, a front facing camera with 30W pixel, rear camera 200W pixel.




(Photography interface one)



(Photography interface two)



(Photography interface three)

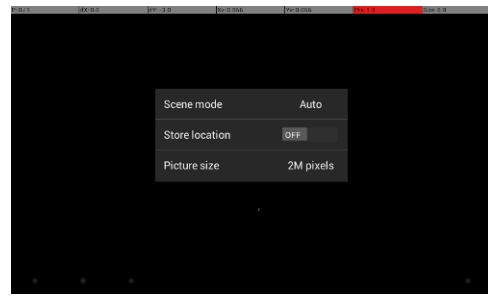

(Photography interface four)



(Photography interface five)

●Photography interface one:

: Function button for photography.

: Setting button for photography mode, can bring up the photography interface two, and set up the photographing mode.

: Function button for taking pictures, camera shooting or panorama mode settings, namely the three options in the lower right corner in photography interface five.

●Photography interface two:

This detailed setting interface is made by pressing the icon .

Click icon , interchange the front - and rear facing cameras.

Click icon , bring out the setting menu, and set up scene mode、store location、picture size in photography interface four.

Click icon , select the following settings based on the photo shooting mode environment in photography interface third: cloudy , sunny , automatic , fluorescent lamp , and incandescent lamp .

•Photography interface five

 : The button icon for the panoramic picture.

: The function shift button icon for taking photos and camera shooting.

: The function button for taking pictures.

◆Firmware upgrade

Before upgrading, shutdown the machine or turn off the power of internal battery, open the upgrade tools directory structure in a computer.

• config.ini

Tool configuration files can be used to set the language tools and upgrade the related attributes. Please check [the common settings in the configuration files](#) for specific setting methods.

• Language

Language file storages directory, all the language files supported are storage in this directory.

• Log

The log directory, log preserves the normal and error output messages during the process of upgrading.⁴⁷the log function can modify the

LOGFLAG in the configuration file to start or shutdown. You're advised to open the log to facilitate future error analysis.

RKDeviceManage.exe

The user instrument program

- Open copy **Demo** function:

Set up: FORMATFLAG=TRUE,

COPYFLAG=TRUE,

DISK_VOLUME= disk volume label

DEFAULT_COPYDIR=The file or directory path need to be copied.

The project Android needs to add a setting:

MISC MODIFY MODE=WIPE DATA; avoid the data in user plate is occupied by “recovery” procedure after copying.

- Erasure steps

Modify configuration files

Insert the waiting upgrading setting, if you're reminded there is a new hardware, please install Rockusb drive procedure.

Start the procedure, select firmware, and to degrade.

- Modify configuration files

Configuration files revision, please check [the common settings in the configuration files](#)

- Install drive procedure

Before upgrading the firmware, please shutdown the player. Keep pressing the upgrade button, and connect the device to the PC port of USB at the same. If it's your 48 first time to install the device driver,

it will pop up the following tips.

Select "Install from a list or specified location (Senior)", click "Next" ..

Select the rockusb.sys in the drive procedure file.

In this way, the USB device driver installation is finished.

•The introduction of promotion interface.

•Operation steps:

Plug the device

Select the firmware

Verify that the device enters into Rockusb state (Rockusb state includes Maskrom state and Loader state)

Description of the error of upgrading or repairing the equipment

"Failed to load configuration information, cannot be operated", since the Config.ini file loading error, you can get the correct Config.ini file to replace from the publishing procedure

"Failed to load firmware and cannot be operated" is caused by the firmware is not selected or firmware cannot be read correctly, so please make sure the firmware is correct.

"Other operations are running, please wait!" is caused by that other operations are in progress currently, so please don't proceed until the

other operations end.

If you find “No equipment is found, cannot be operated”, please confirm whether the device is connected, or is in Rockusb state.

If you find “Failed to create operational process, cannot be operated”, please restart the program before proceeding.

If you find “Failed to create operational object, cannot be operated”, please restart the program before proceeding.

If you find “Does not support this type of equipment, cannot be operated”, please confirm whether the device into the Rockusb state. In addition, if the current state is in the U disk, please switch the state before proceeding.

Precautions

To restart the program of user tools after modifying the configuration file.

Under Vista and win7 operating system, please refer to the "administrator privileges to run the program".

X86 represents 32-bit platform, including 2000, XP, Vista, and Windows 7; while amd64 represents 64-bit platform, including Vista and Windows 7 operating system.

Please select the common drive problems based on the actual situation. After connecting the device, if settings are not be found in user instrument. Please, first, to make sure whether the system is denied to the connected device in the device manager of the operating system.

If the system can recognize the device, you can view the device ID under the detailed information in the device properties, and then configure the VID and PID to the MSC VID and MSC PID in the config.ini file under the user tools.

Dimension	126.5*195.5*14mm	
Weight	Kg	
Display Screen	7.0 inch TFT LCD screen Resolution: 1024*600	
PC Interface	High-speed USB2.0 (FS)	
Internal Memory	Flash Memory: 4G	
System Memory	ROM: DDR3 512MB	
Extended Capability	Support the TF Card; Support capacity to 32GB	
Power Supply	Built-in 3.7V lithium battery, AC Charger: Input: AC110V~240V; Output: DC 5V@2A	
Musical Function	Play format	MP3,WMA,OGG,APE,FLAC,AAC,WA
	Support MP3 bit rate	8Kbps — 392Kbps
	WMA 、 WAV bit rate	5Kbps ~ 192Kbps

	Frequency response	20Hz to 20KHz
	Distortion	<0.05%
Video Function	Play format: MKV, AVI, MOV, VOB, FLV, 3GP, etc.	Maximum resolution: 1280*720
Image Browser	Supported format: JPG, JPEG, BMP, GIF, etc.	
E-book	Supported format: TXT, PDF, EPUB (ADOBE), html, etc. The largest reading file capacity: 20M	
WIFI Function	Main core group: 802.11b/g/n Transmission speed: Max54Mbps Transmission distance: Max100m	
3G EVDO support list	There is a specific list of support. (Note: 3G USB Dongle is not in the package of the device)	
Recording	Support 3GP format recording	
Operating Temperatur e	-5 ~ 40 °C	

Operating Language	Simplified Chinese, Traditional Chinese, English, Japanese, French, German, Spanish, Hungarian, etc. 40 languages
Operating system	Google Android 4.2

◆ Trouble Shooting

Machine cannot boot up

It will cause the machine cannot boot when the battery power is extreme lack, so please recharge the power by using USB computer or power adapter, and then try to boot under the promise of enough power.

Pressing the reset button on the top of the fuselage to make sure whether it resumes normal startup after reboot.

- Please check whether the charger is connected in good condition.

Tablet PC standby time is too short.

- The lithium battery life will vary with the temperature of the environment and the situation. If the environmental temperature is too high or too low, the battery life will be affected. To use the machine at room temperature.

In addition, affected by the volume increase, sound filed special effects, and other factors such as frequent operation, the actual duration may be different from specified one to a certain extent.

Headphones cannot hear voice

- Please check whether the volume is set to 0, or check whether the music file is damaged by playing other music file instead. If the music file is

damaged, it may cause very serious noise or skipping.

Cannot copy file

- Please confirm whether it is right connection between computer and tablet PC, or whether the memory storage space is full.

FCC Warning Statement

FCC Statement This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation .

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

(Note: 3G USB Dongle is not in the package of the device)