

Content

Introduction	1
Safety Instruction	2
Technical Specification	4
About the POS	5
Accessories in Package	5
Quick Start	6
Charging the Battery	6
Startup	6
Open the Screen	6
Close the Screen (Standby)	7
Shutdown	7
Home Page	7
Creat Folder Icon in Desktop	8
Remove the Icones in Desktop	8
Change he Wallpaper of Desktop	9
Wi-Fi Settings	9
Connect Wi-Fi	9
3G	10
Connect 3G	10
Camera	11
Browser	12
Photo Gallery	13
View Pictures	13
File Manager	14
Save Storage	14
Insert Micro SD Card	14
Uninstall and Removed Micro SD Card	15
Connect kiosk to Computer	16
Safety Setting	17
Backup and Reset	20
Swipe Card and Printer	21
Troubles Shooting	25

Introduction

Dear User,

Thank you for purchasing our product. Please read the instruction manual carefully. Do not use the product, if you don't understand instructions included in this manual.

We have done our best to make a complete and accurate manual; however, we cannot ensure that there are no errors or omissions.

We do not assume responsibility for product damage or loss of data due to your improper handling.

We will update this manual if any improvement without notice.

The trademarks and trade names mentioned in this manual belong to their respective companies or organizations.

Safety Instruction

Before operation of the POS, please read this chapter and teach your kids about this information. For further details, please refer to the safety instructions and announcement.

- **Warning:** Please don't disassemble the POS and accessories. Only authorized agent has access to service the POS.
- **Warning:** Never use the POS in rain or other humid environment to avoid fire or electric shock.
- Do not use headphones at high volume; otherwise it will damage your hearing.
- This POS is not waterproof. Do not place the equipment in water (dripping environment) or other objects filled with liquids, such as vases.
- Do not place the product in a hot environment, heating equipment or direct sunlight.
- Do not place this product on an unstable stand or table, lest it fall, causing unnecessary damage and personal injury.
- Do not place heavy or sharp objects on the LCD screen or on the machine.
- Please use the standard power adapter. We do not responsible for damage to your machine caused by using of the other power adapter
- When connecting the power cord, make sure that nothing rests on the power cord, and the location where the power cord will not be stepped on or cause to stumble.
- Please unplug the power cord if not using the POS for a long time.
- There may be explosion if battery incorrectly replaced.
- Please replace only with the same type or equivalent type of battery.
- The battery must not be exposed under sunshine, fire or overheated environment.

Cleaning

- Before cleaning the machine, make sure that the machine is turned off.
- Do not directly spray cleaning fluids or spilled on the LCD screen or plastic case.
- Please use a clean, soft, lint-free cloth to clean the LCD screen. If it is difficult to remove stains, use a clean, soft, lint-free; please wipe the screen with alcohol-free ammonia-based cleaner.
- Please use a soft, dry cloth to clean the plastic case. If the stain is difficult to remove, please use a clean, soft, lint-free cloth, stained with a little ammonia-free non-alcoholic ingredients, and non-abrasive cleaner to wipe the surface of the shell.
- Use a soft, dry cloth to clean the POS.

Disclaimer: All authorized dealers do not recommend that you use any cleaners containing ammonia or alcohol to clean the LCD screen or plastic casing. Cleaners containing these ingredients to cause some damage on LCD screen, which dealers will not responsible for it.

Technical Specification

- Operation System : ANDROID 4.2.2
- Processor: ARM Cortex A7 All-winner A20 Dual Core
- Memory : 1GB DDR3
- Storage: 8GB; External Storage: Micro-SD Card
(Max. support 32GB)
- LCD: 7.0 inch TFT 1024X600 resolution
- Touch Panel: Capacitive touch screen
- Internet Connection: Wi-Fi 802.11b/g/n
- Battery: 7.4V /5000 mAH
- Battery working time: 5~6H
- Head of printer: Three-track magnetic head
- Connected IC Card: ISO7816Smart CPU Card
- Unconnected IC Card: ISO14443 TYPE A Smart CPU Card
- Printer: 58mm Printer
- 3G Function: available
- Camera: Front 2.0 MP
- NFC: available

About the POS

You can connect by below steps:

- Browsing internet through Wi-Fi or 3G;
- Access to online services, such as music and video, social networking services, news, clocks and other services;
- Visit thousands of applications from Android market;
- View photos;
- Take pictures;
- Connected by inserting a Micro SD card (sold separately) extended memory;
- Connect to Financial Card (magnetic stripe card, IC card, and NFC-enabled card);
- Printing.

Accessories in Package

Confirm that you have to accept the following items:

- XPAY Tablet
- Power Adapter
- User's Manual
- Print Paper
- Wrist Strip
- Protective Case
- Warranty Card

Quick Start

Charging the Battery

Please put POS to power outlet by standard DC-in power adapter.

Note: Playing time may vary from actual due to special use and settings.

Startup

Long press power key , for three seconds, you can enter into startup picture. The system enters into screen lock status, please unlock it.

 
Open the screen

Screen will be closed on its own when no operation happens.

If the screen is closed, short press POWER to open the screen.

The screen will be locked.

To open it, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen (showing as below picture).

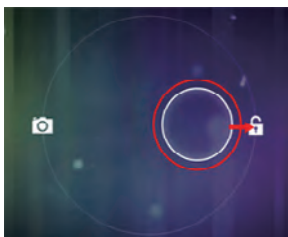

Picture 1

Close the Screen (Standby)

When screen is open, press POWER key  the screen will be closed immediately (standby to save battery power).

Shutdown

1. Long press POWER key , it will popup shutdown window.
2. Shutdown window contains mute mode, airplane mode, reboot mode and shutdown four options.
3. Click Shutdown is the last step.

Home Page

In main interface, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.

The home page can be extended beyond the wideness of screen to provide more space, which you can put new added shortcuts and widgets.

Click the blank space in home page, then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures.

Create Folder Icon in Desktop

1. Drag the icons need to be put together on one icon (can also overlay several Icons) as Picture 2.
2. Then click t he overlaped icons, the applications can be folded, as Picture 3.

Click the unnamed folder in the black box, it will popup the hidden keyboard, the folder name can be renamed (this is similar with Apple IOS system); the icons position can be changed through long press.




Picture 2



Picture 3

 Remove the Icons in Desktop

1. Long press the icons need to be removed, then on the right above of the screen, it will appear  icons.
2. Drag the icon to the above of the remove icon, till the icon become red, and then move your finger to delete the icon.

 
Change the Wallpaper of Desktop

1. In home page, long press any blank space in main screen, it will pop up a window to change the wallpaper.
2. Click the gallery or wallpaper gallery to select the wallpaper.


Wi-Fi Settings

Connect Wi-Fi

1. In the main menu or interface, choose setting application procedure.
2. Click WLAN, open Wi-Fi, POS will automatically search the available Wi-Fi wireless internet as Picture 4.
3. Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect as Picture 5 to use internet.

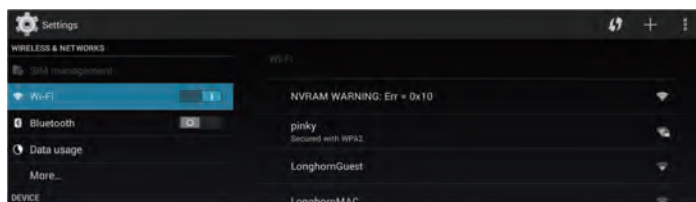

Picture 4

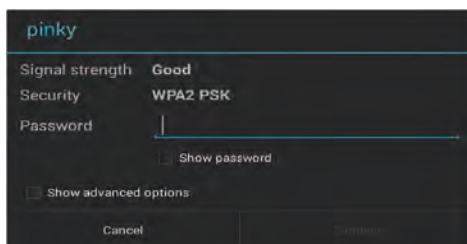 

Picture 5

4. When POS connect to network, the Wi-Fi icon as Picture 6 will showing on Status Bar, and below the selected internet will show “connected”.



Picture 6

Please turn off Wi-Fi when do not need network in order to prolong battery life.

3G

Connect 3G

Insert SIM card into card slot, enter the system main interface.

Camera

In the main interface or desktop, click camera application procedure



enter into camera.

Operation of camera, Switch camera: choose Menu key, click switch front/back camera, as Picture 7.




Camera mode

Picture 7

Browser

 In case of Wi-Fi or mobile internet is connected well (Please refer to wireless and internet setting), click IE browser  in the main menu or desktop to enter the IE interface, as Picture 8

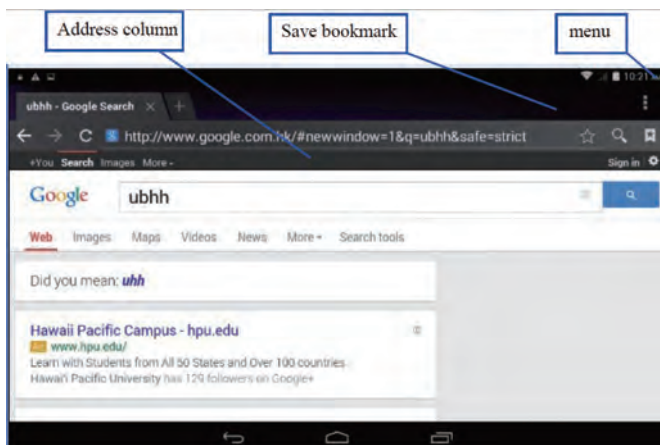

Picture 8

Click address bar to input the website, click start, enter into related webpage, then you can browse the website information, as Picture 9 and you can click the menu you can refresh, save to bookmarks, share page, bookmarks, history and setting the webpage.