 


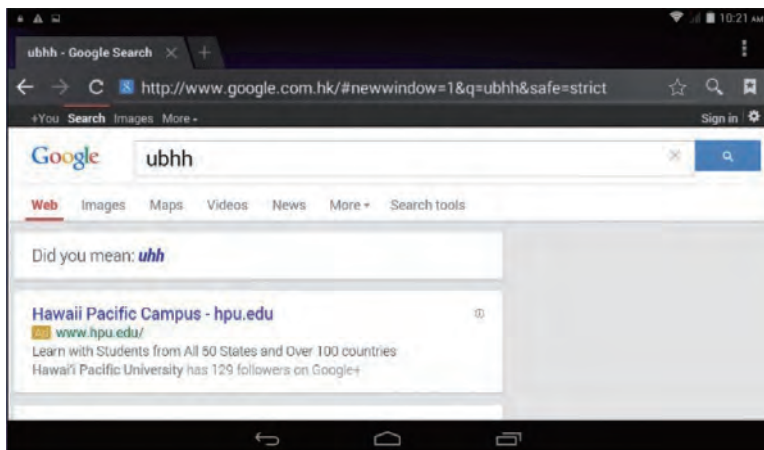

Picture 9

Photo Gallery

Photo gallery  application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View Pictures

1. Click gallery application in main interface.
2. Enter into gallery, click the folder you want to view.
3. Click the picture you want to view; the system will play it in full screen mode automatically.
4. The pictures can be zoom in and zoom out, put two fingers on the screen, the separate the fingers (gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

File Manager

File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc

In the main menu or desktop, click the document manager icon to enter into documents manager.

Save Storage

Strongly recommend that you purchase and install a Micro SD card, then operate POS and download multimedia files.

Tip: transmission and storage of multimedia files such as music, pictures and video to the Micro SD card, and avoid these types of files stored on the memory inside - this will save memory to allow you to download more applications.

Insert Micro SD Card

Kiosk support Micro SD card, Max. 32GB

1. Insert Micro SD card carefully from front side until locked with a click sound.
2. The Icon of Micro SD card as below Picture 10 will showing on status bar.



Picture 10

3. You can visit Micro SD card by choosing the "File Manager"  from application interface.

 
Uninstall and Remove Micro SD Card

You can check storage space, micro SD card available space, uninstall micro SD card and remove micro SD card as Picture 11.

Safely remove micro SD card

- 1.Click setting application.
- 2.Click memory.
- 3.Click uninstall micro SD card.
- 4.Now you can carefully press the SD card and remove it safely.

Note: Removing micro SD card safely can protect micro SD card and increase its lifetime.

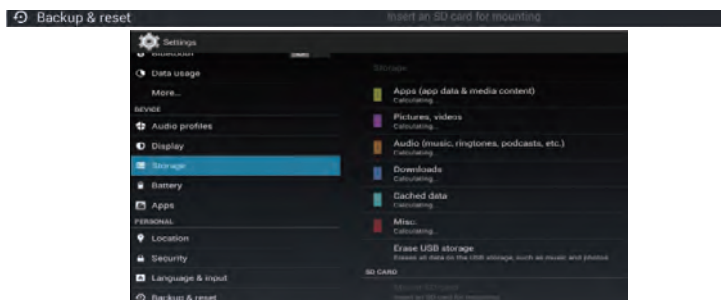

Picture 11

- Micro SD card can only be inserted from front side, do not insert with strong strength.
- Please assure uninstall micro SD card before remove it.

Connect kiosk to Computer




Picture 12

Kiosk storage configuration

Before transmitting documents, you have to conduct storage configuration for your kiosk:

 1. Connect the kiosk and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the kiosk status and reminder to learn how to open the board.
3. In the reminder board, click the “USB Connected”, it will as below Picture 13, then click “open USB storage configuration”.
4. Now the USB is connected successfully.

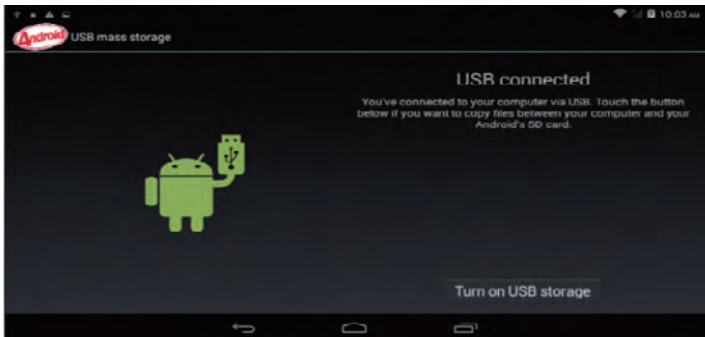

Picture 13

Copy the document into memory card

1. Connect the kiosk to computer with USB cable.
2. As kiosk storage configuration, it is connected with computer successfully.
3. Open the "My computer" in your computer, check the items in "removable disc".
4. Copy the documents you need into "removable disc".
5. After copying finishes, click "shutdown the USB storage configuration" to uninstall.

Notice: When the kiosk is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the kiosk. Only after you detach the USB cable, you can view the memory card in the kiosk.

Safety Setting

Set locked screen

Locks the touch screen by unlock icon or password to protect your Kiosk.

Note: After setting screen locked, you should enter the pass code each time when you startup or screen is locked

Set unlocked picture

1. PClick setting application in main interface.
2. Click safe.
3. Click locked the screen.
4. Choose picture in text setting area.

5. Click next following the remind message.
6. The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction as Picture 13, move your finger from the screen when finish. The system will record your new unlock pattern.
7. Click continue.
8. When you see the reminder, enter the unlock pattern, then click confirm.



Picture 14

Set unlock PIN code

 
1. Click setting application in main interface.
2. Click safe.
3. Click screen locked.
4. Choose PIN in text setting area.
5. Enter new PIN code (numbers) and click continue.
6. Enter new PIN code again and click confirm.

Set unlock password

1. Click setting application in main interface.
2. Click safe.
3. Click screen locked.
4. Set password in text setting area.
5. Set new password (letters and numbers) and then click continue.
6. Enter the password again and then click confirm.

Unknown source

1. In main interface, click setting.
2. Click safety.
3. Click unknown source, as Picture 14

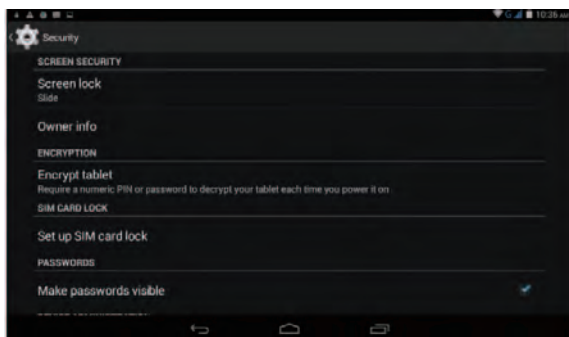


Picture 15

Nota: Manual installing APK files needs to turn on unknown source.

Backup and Reset

If your kiosk cannot work properly or screen stopped, it can backup by turn-off and then turn on.

 If this still not working, then you may need to recovery factory reset, please click reset, as Picture 15, if you need to formulate NAND, please click reset POS.

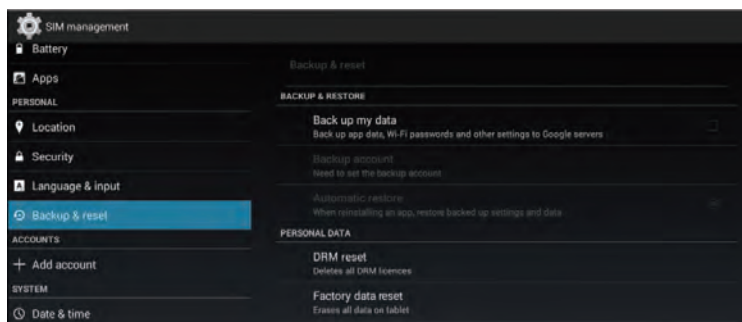

Picture 16

Note: Factory data reset will erase the data stored on the device, so please make sure make the data backup before this operation.

Swipe Card and Printer

1. Swipe magnetic stripe cards

Hold magnetic stripe cards, and swipe from left to right quickly and slightly. Please make sure you face the front side of the magnetic stripe cards, and magnetic stripe in bottom side. Showing as below picture 17.



Picture 17

2. Read card with NFC function

Please make sure you face the front side of bank card with NFC function, and simply put the card to the place with NFC chip, as below picture 18. The distance for NFC to read data is 0~3cm.

Remarks: this NFC only support OS14443 Type A card.



Picture 18