



---

**User's manual**  
**MC300**

Read this manual before installation and use.

**EN**

**Chapter 1 Overview**

Appearance and Interface	1
Connection	2
Main Screen Theme	2

**Chapter 2 Browser**

About Browser	3
Websites	3
Open Webpage	3
Bookmarks	4
Open Multiple Pages	4
Close Page	5

**Chapter 3 Video Player**

About Video Player	6
Play Videos	6

**Chapter 4 Music Player**

About Music Player	7
Play Music	7

**Chapter 5 Gallery**

About Gallery	8
View Pictures	8

**Chapter 6 File Browser**

About File Browser	9
File Edit	9
File Sort	9

**Chapter 7 Settings**


About Setting	10
Wireless Networks	10
Ethernet Configuration	11
Sound	11
Display	12
Language & input	12-13
Backup & reset	13
Date & time	14
Upgrade	14-15

**Chapter 8 Warning**


16
----

## Appearance and Interface


## Front

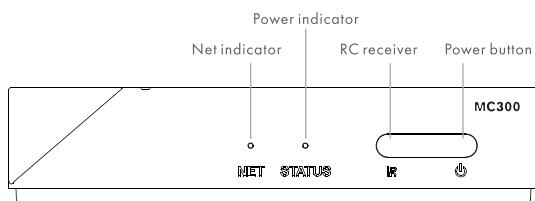


## Rear

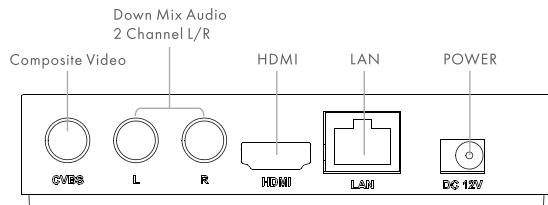

## Right

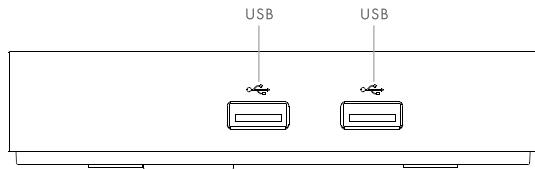

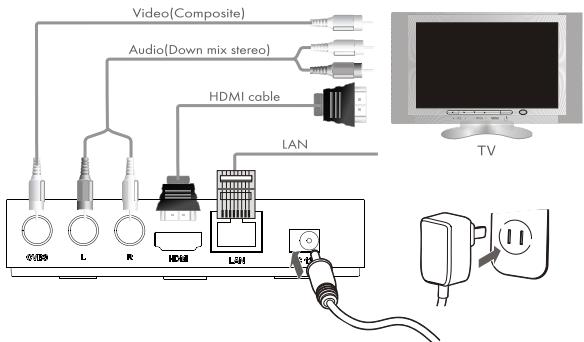**Connection**

It's not necessary to connect TV set with RCA cable and HDMI cable concurrently.  
Choose one of them under your circumstance.

**Note:** HDMI connection is recommended for better picture quality.

**Main Screen Theme**

**Note:** You are suggested to connect a wireless keyboard and mouse for easy navigation.

### About Browser

Use browser on the Media Center to browse the web and visit your favorite websites. Open multiple webpage. Use the Window menu to switch. Create a bookmark in the Browser for quick visit.



### Websites


Use websites on the Media Center. Links on webpage typically take you to different places on the web. Select the link you want to visit, and then click.

### Open Webpage

Open a page: Click on the title bar of the address bar to bring up the on-screen virtual keyboard, type a URL, and then click **Go**.

### Bookmarks

Bookmark a webpage: Open the page and click .

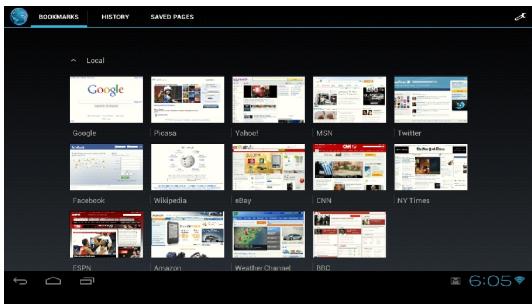

### Open Multiple Pages

You can open up to eight pages at a time. Some links may automatically add a new page to open instead of replacing the current one.

Open a new page: Click .



4 | English

**Close Page**Close a page: Click 

5 | English

**About Video Player**

You can use Media Center to watch movies, listen to music items and view pictures. This Media Center also supports special features such as chapters, subtitles, alternate audio.

**Play Videos**

Click Movie Player, or any other 3rd party video players, select the name of mobile devices such as usb sda, click the video you want to watch.

Pause a video	Click 
Resume playback	Click 
Fast-backward or fast-forward	Click  and click 
Skip to next chapter	Click 
Back to previous chapter	Click 
Show or hide subtitle (if available)	Click  and click  To , and then select a language, or Off from the subtitle list.
Select a audio language (if available)	Click  and click  , and then select a language from the audio list.
Stop watching a video before its whole playback finishes	Click 

**About Music Player**

Use Music Player on the Media Center, you can easily play audio files with diverse audio formats, such as mp3, wma, ogg.

**Play Music**

Browse your music collection sorting by Song, Artist and Album. Listen to your songs and audiobooks .



**About Gallery**

Use Gallery on the Media Center, easily view pictures, and also display an animated slideshow of your images as a photo frame.

**View Pictures**

The Media Center will automatically search all pictures for each storage device and display a list, and then you can select any image to view.

