


PANODIC

QUICK START GUIDE




MD 700

Powered by Android™

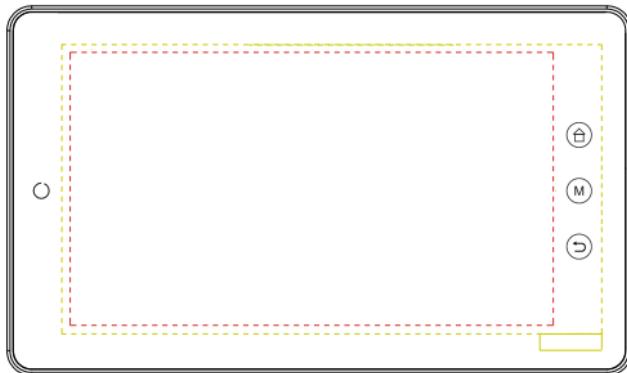

Read this manual before installation and use. English

Your device

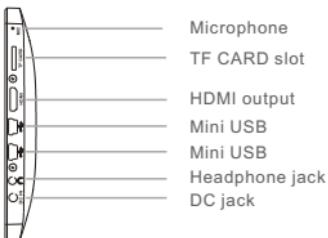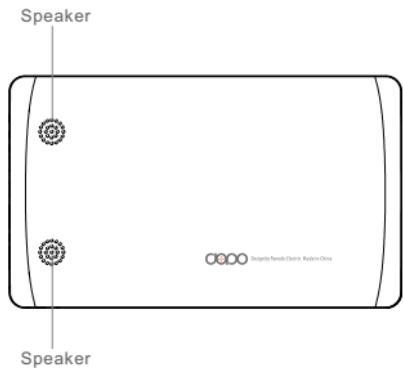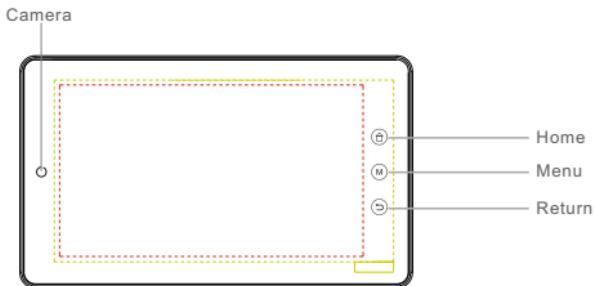

Charge the Device

Ensure that the battery is fully charged before you use the tablet for the first time.
To charge the battery.

Turn the Device On

Press and hold the power button to turn on the tablet.

Connect a Headphone (Optional)

Connect the 3.5 mm headphone to the headphone connector.

Unlocking the Screen

The tablet enters sleep mode automatically after a preset duration of inactivity. To wake up the tablet from sleep mode, press the power button once. To unlock the screen, touch and drag  to the right of the screen.

To set the duration after which the tablet enters sleep mode, touch the Home button → Menu button → Settings → Display → Screen timeout and select the required option



Slide to Unlock

HOME Screen

Touch the Home button 

The Home Screen displays the Calendar, current weather and your most recent applications. Touch the Home button  to go to the Home Screen from any screen.



Application Drawer

The Application Drawer contains all applications and settings. On the Home screen, touch  to display the menu.





Connect to a Wi-Fi Network

To connect your tablet to a Wi-Fi network:

1. Touch the Home button  → Touch  → **Settings**.
2. Touch **Wireless & networks** → **Wi-Fi** to select the Wi-Fi check box.
The device scans for available wireless networks.
3. Touch **Wi-Fi settings**. The names and security settings of available Wi-Fi networks are displayed in the **Wi-Fi networks** list.
4. Flick the **Wi-Fi networks** list and touch the name of the network that you want to connect to.
5. Type the password and other credentials (if required), and then touch **Connect**.


NOTE: When your device is connected to a wireless network, the Wi-Fi icon  appears in the status bar to indicate the signal strength

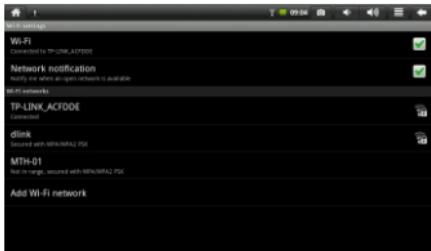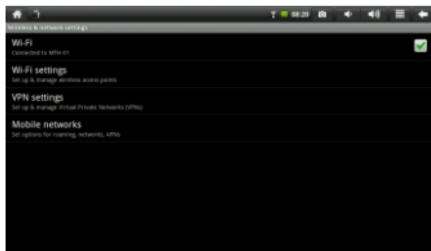

Browse the web

Touch the Home button  → Touch  → Touch 

Tap the address field (in the title bar) to bring up the onscreen keyboard, type the web address, then tap Go. If the address field isn't visible, tap the status bar at the top of the screen to quickly scroll up to the address field.

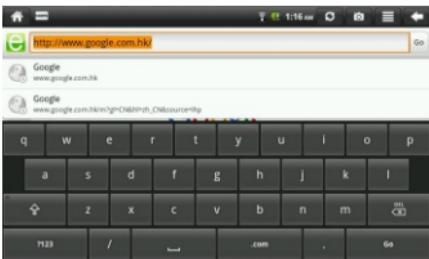

Before Sending Your Tablet for Repair

The service technicians at the service center may reset your Dell tablet to factory settings to resolve the issue with your tablet. It is recommended that you backup your data using the Backup & Restore feature before you send your tablet for repair.

FCC ID: ZU5MD700

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter