# **Table of Contents**

Table of Contents	1
1 Outlook Description	3
2 Power Button Usage	4
3 Touch-Screen Navigation	4
4 Transfer Box	4
5 Using microSD Card	5
6 Getting Started	5
Charge the device	5
Turn the device on	5
Wi-Fi Network Setup	6
7 DESKTOP	6
8 Screen Lock	7
9 Pre-loaded Applications	7
10 Desktop Function Menu	9
11 Application Management	11
Install Android Applications	11
Download Android Applications direct from a Website	11
Uninstalling Android Applications	11
12 WmtWeather	11
13 CLOCK	12
Alarm	12
14 APP MARKET	13
Download Applications	13
App Market Function Menu	13
15 BROWSER	14
16 CALENDAR	14
Add Event	14
17 CAMERA	15
Take Pictures	15
Take Videos	15
18 CALCULATOR	15
19 EMAIL	16
Add Email accounts	16
Email Inbox	16
Edit Email Account	17
Delete Email Accounts	17
20 FILE BROWSER	18
Copy Media between Computer and Tablet	18

Delete files	19
21 MY MUSIC	19
Play Music	19
The Operation with Music and Playlist	19
22 MY VIDEO	20
Play Video	20
The Operation with Video and Playlist	20
23 MY PHOTO	21
Doodle	21
24 CONTACTS	21
Add New Contacts	21
Add Contact to Favorites	22
Edit Contacts	22
Delete Contacts	22
25 PICTURE CAPTURE	22
26 PK MANAGER	23
Stopping Applications	23
Uninstall Applications	23
27 YouTube	23
28 TUDOU	23
29 Wi-Fi Settings	24
31 ADSL Settings	24
32 Ethernet	
33 SETTINGS	
Frequently Asked Questions	
Battery Management	
Important Safety Precautions	

# **1 Outlook Description**

### **Front:**



 
### Right:



### Back:



### Top:



### 2 Power Button Usage

**Turn On:** Press the power button and hold for 2 seconds.

**Turn Off:** Press the power button and hold for 2 seconds,  $\rightarrow$ tap **OK**.

**Sleep Mode On/Off:** Press & release the power button quickly to turn sleep mode on and off.

**Force Off:** If device does not respond, press and hold the power button for 8 seconds.

**Note:** If it is necessary, we don't suggest use **Force Off**. You should follow the steps to perform the shutdown.

**Reset Button:** Press the reset button to reset the device. Reset will erase all data on the device, please caution this feature. (**Note:** Current the reset function can not be restart, so after reset you need to press the power button to re-boot.)

### 3 Touch-Screen Navigation

The touch-screen allows for quick, easy and convenient navigation for all applications.

☆ The smaller the point that comes in contact with the screen, the more precise object selection can be. If you do not have long enough fingers nails to be used for precise tapping, we recommend using the stylus or non-sharp pointed instrument to increase the precision of navigation.



Throughout the User Guide, you are instructed to use the following tap or touch navigation methods:

**Tap:** quick tap & release on an item on the screen.

**Finger slide:** touch & slide your finger across the screen and then release.

 
**Touch & hold:** touch and hold in place approx 2 seconds, and then release to display an options window.

☆ To avoid scratching or crushing, do not place objects on the touch screen surface.

#### 4 Transfer Box

You must use the transfer box if you want to use a USB storage device (U-disk) for accessing/storing your photos, music or video files.





#### **U-Disk**

Insert your U-disk to the transfer box, → insert the transfer box into the Tablet. When ready for use, it's OK.

☆ Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the U-disk.

The transfer box is also used for Ethernet network connections.



Ethernet interface

### 5 Using microSD Card

 
☆ The device supports a maximum 32GB microSD card.

Insert your card into the microSD slot until it clicks into place. When ready for use, it's OK.

#### Remove microSD Card

Use one of the following methods for moving the microSD card.

Close all applications or documents which have been opened on the card. Tap



Press the card lightly; it is partially ejected allowing you to pull the card out.

- ☆ Don't insert and remove the U-disk repeatedly in a short time, as this may cause damage to the card.
- ☆ We recommend using major brands of memory cards to avoid incompatibility.

### **6 Getting Started**

#### Charge the device

- ☆ You cannot charge the battery using the USB cable.
- ★ You can use the device while the battery is charging, although the charging time is longer when operating and charging at the same time.

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (approx. 4hour).

While charging, the battery indicator light is red. When fully charged, the battery indicator light is green.

#### Turn the device on

Press the power button and hold for 2 seconds.

#### Wi-Fi Network Setup

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

- 2. Select **Wi-Fi** to turn on.

The device automatically scans and lists all local Wi-Fi Network found. A indicates secure networks that require login name/password to connect.

- 3. Tap the desired network to which you want to connect, → enter the **Network Password** if applicable, → tap **Connect**.
- 4. Tap to return to the Desktop screen.
- ☆ If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap Add Wi-Fi network and follow the prompts to add your network.

#### 7 DESKTOP



- 1 Return to Desktop from other apps
- **②** Battery charge status
- (3) Current Time
- **4** Picture capture icon
- **(5)** Volume reduction icon
- **6** Volume increase icon
- **7** Function Menu icon

- **8** Back icon
- **9** Tap to view the applications screen
- ☆ Tap on any application icon to launch it.
- $\stackrel{\star}{\mathbf{x}}$  Touch, hold and then slide icons to reposition then on the screen.
- ☆ Touch, hold and slide icons onto to remove them from the Desktop screen.

### **8 Screen Lock**

Can be set to automatically lock screen or quickly press the power button to manually lock screen. Lock screen displays the following:



Tap the icon to enter My Photo to do slide show. And slide the track like the picture to unlock.

# **9 Pre-loaded Applications**



Wmtweather

Display the weather.



Clock

Use as alarm clock with scheduled alarms.

R)	App Market	Downloaded applications quickly & easily.	
	Browser	Access the Internet and "surf the web" whenever desired.	
16	Calendar	Calendar with ability to set events.	
	Camera	Take photos and save to internal memory or your memory device.	
2350 	Calculator	Do calculation.	
	Email	Send/Receive email using your existing email addresses.	
	File Browser	File manager application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.	
J	My Music	Play and manage audio files.	
0	My Video	Play and manage video files.	
	My Photo	View and manage photo files.	
cocco	Contacts	Create a list of personal contacts, which can also be linked with your email.	
	Picture Capture	Capture image of the screen.	
	PK Manager	Application manager for managing processes.	
YouTibe	YouTube	Quick launch to YouTube.com videos.	



Tudou

Quick launch to Tudou.com videos.



**Settings** 

Multiple settings for personalizing and enhancing your Device.



Wi-Fi Settings Set Wi-Fi network.



**ADSL Settings** Set ADSL network.



**Ethernet** 

Configure Ethernet.

- $^{\star}$  To move an icon to the **Desktop** screen, touch & hold on the icon, and then release it when it appears on the **Desktop** screen.
- ☆ Touch, hold and slide icons onto to remove them from the **Desktop** screen.

### **10 Desktop Function Menu**

On the **Desktop** screen, you can tap to display the **Function Menu**.



	The wier1-1	noution of the Doglyton source allows - 1-16!	
	1	portion of the <b>Desktop</b> screen allows only 16 icons. In	
		nore items, finger slide the screen horizontally to	
	_	ble space, and then tap the <b>Add</b> icon again. If the	
	screen is run,	the <b>Add</b> icon won't response.	
		Add quick launch shortcuts on the <b>Desktop</b> to	
		applications, bookmarks or settings.	
	Shortcuts	☆ If you select items that are	
		shortcuts already on the Desktop	
		screen, they will be duplicated,	
		resulting in multiple icons for the	
		same item.	
		Analog clock: Add a round analog clock.	
		Calendar: Add a calendar widget to display current	
Add	Widgets	date & events.	
	l a.g.	Music Player: Add a music widget to quickly begin	
		playing music without launching the music	
		application.	
		New Folder: Add a folder into which you can add	
		applications as desired. To move applications on the	
		Desktop screen into the folder, touch, hold & drag	
	Folders	the icons directly on top of the folder icon.	
		To add applications from the All Application	
		screen, first tap on the folder to open it, open the All	
		<b>Application</b> screen, and then touch & hold on an	
		application icon. It is copied into the folder.	
		Select wallpaper from <b>Picture</b> and <b>Wallpapers</b> .	
Wallpaper		Select wanpaper from Ficture and Wanpapers.	
vv anpaper			
		Perform a quick Google search.	
		Tap in the entry field, → enter the desired search	
C			
Search		text, → tap .	
		List any pending notifications (i.e., new email,	
Notifications		calendar events, etc).	
		See "Settings" on page 26.	
Settings			
8			

### 11 Application Management

#### **Install Android Applications**

☆ There are many interesting and free Android applications that can be found on the web. Just launch your web browser and do a search for "Android applications".

Purchased or free Android applications that you have downloaded to your computer can

be installed quickly & easily on your Tablet using the



File Browser application.

- Copy the .apk files that you want to install onto a SD card or USB device, →
  insert or connect to your Device.
- 2. Tap the File Browser application icon.
- 3. Tap or and locate the folder in which the .apk application files were saved.
- Tap on a .apk file → Install.
   The application is installed and the application icon is added to the Applications

  screen
- Tap Open to launch the application now, or tap Done to return to the File Browser screen.

#### **Download Android Applications direct from a Website**

You can download Android applications directly from websites, and then quickly and easily install them on your device.

- 1. Tap the **Web** application icon to launch the internet browser.
- 2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.
- 3. After the download is complete, touch & hold on the download file (in the **Download history** screen), → tap **Open** → **Install**.

#### **Uninstalling Android Applications**

You can also quickly and easily uninstall the Android applications that you have installed.

- 1. Tap 
  → Settings → Applications → Manage applications.
- 2. Tap the application you want to uninstall, → Uninstall.
- 3. Tap **OK** to confirm the Uninstall.



### 12 WmtWeather



Tap the

WmtWeather application icon.

#### **General setting**

You can set Temperature Unit(°C), Update frequency and Auto Wallpaper.

#### My cities

You can add city and set it to be my city.

You can make the weather displayed on the **Desktop** through adding widget. The way is: tap



→ Add → Widgets → WmtWeather.



#### 13 CLOCK



Tap the

 
Clock application icon. You can see the time and date.

#### **Alarm**

You can use your device as an alarm clock by setting multiple alarms.

↑ This clock icon is displayed at the top of screens indicates that one or more alarms have been set and are active.

#### **Add Alarm**



Clock application icon.

- 2. Tap 

  → Add alarm.
- 3. Set up your alarm as desired.
- ☆ If you don't select a repeat, the alarm is automatically deleted after it is activated.
- 4. Tap Turn on alarm.
- 5. Tap Done.

#### **Shut Off Alarm Alert**

When a scheduled alarm is activated, a pop-up window with the alarm title appears.

Tap Snooze if you want to be reminded again in 10 minutes.

Tap Dismiss to cancel the alert.

#### **Turn Alarm on**

On alarms that you have set to repeat, you may want to temporarily turn on alarms rather than delete them.

- 1. In the Alarm screen, tap on the alarm(s) you want to turn on.
- 2. Tap to turn on again.

#### **Edit Alarm**



 
2. Tap on the alarm you want to edit, → make desired edits.

#### **Delete Alarm**



- 2. Tap on the alarm you want to delete.
- 3. Tap 

  → Delete alarm.





#### 14 APP MARKET

The App Market has many applications that you can quickly and easily download to your Tablet.

### **Download Applications**



- 1. Tap the
- App Market application icon.
- 2. You can select applications from the default **Featured** group, by **Categories**, **Top** (latest, hottest, random), or search by name.
- 3. Tap on an application,  $\rightarrow$  **Download**.
  - ☆ The first time, you are prompted for your App Market login information. If you have not yet registered an account, tap **Register an Account**.

Otherwise, enter your login information and tap Yes.

- 4. After the app is downloaded, tap **Install**.
- 5. Tap **Open** to launch now, or **Done** to return to the **App Market** screen.

#### **History**

After downloading apps, tap on **History** to manage the installed applications. You can add and/or view comments from other users, launch apps, and uninstall them.

#### **App Market Function Menu**

Гар **l** to display the App Market **Function Menu**.

#### **Profile**

Tap to access your profile information. You can change your Password or Email address.

#### Login/Logout

Tap **Login** to quickly launch the login dialog box to login to your account. While logged in, tap **Logout** to exit your account.

#### **Settings**

By default, applications that you download are saved in the internal memory. You can set the applications to save to your SD card if desired.

#### **About**


Displays App store version and support information.



### **15 BROWSER**

Users can connect to the Internet through a browser.

Click the browser icon on the Desktop and then you can open the Web browser.

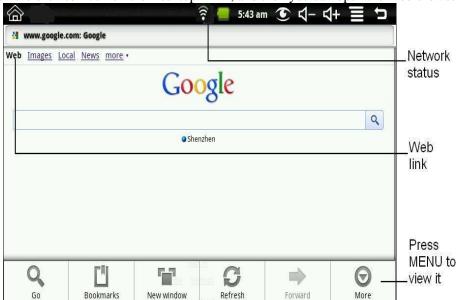



#### **16 CALENDAR**



Calendar application icon.

For the first time using the Calendar, you need to add an Exchange account. Enter account email address and password. Click Next and follow the prompts to complete the account configuration. Then you can use the Calendar.

#### **Add Event**

- 1. On the Calendar screen, tap on the date to which you want to add an event.
- 2. Tap on the event time, → tap in each entry field to enter the desired event information.
- 3. Tap Done.

- 4. Tap to select desired Calendar screen.
- ☆ Dates with green bars indicate scheduled events.



### 17 CAMERA



Camera application icon.

#### **Take Pictures**

- 1. In Camera  $\rightarrow$  tap to take the picture.
- 2. The picture will be saved.
- 3. Tap the picture thumbnail to enter **My Photo** to scan the picture.
- 4. Press **Back** to the **Camera**.
- 5. Tap to exit the **Camera** and back to the **Desktop**.

#### **Take Videos**

- 1. Tap switch to video, and you can take videos.
- 2. Tap to begin and tap to stop
- 3. The video will be saved.
- 4. Tap the video thumbnail to play the video.
- 5. Press **Back** to the **Camera**.
- 6. Tap switch back to camera.
- 7. Tap to exit the **Camera** and back to the **Desktop**.

**Note:** You can tap \_\_\_\_\_ to choose to save the files in the Localdisk or the SD card.



#### **18 CALCULATOR**

1. Tap the Calculator application icon.

- 2. Tap the numbers and sign of operation to do the calculation.
- 3. Tap CLEAR to clear the result one by one, tap and hold CLEAR to clear all.



#### 19 EMAIL

**☆** *POP3* and *SMTP* accounts are supported.

#### Add Email accounts

You can enter one or more personal email addresses that you would like to access through your Tablet.



Email application icon. 1. Tap the

- 2. On the **Your Accounts** screen, tap **Next**.
- 3. Tap in the **Email** address entry field,  $\rightarrow$  enter your email address.
- 4. Tap in the **Password** entry field, → enter your email password.
- 5. Tap Done.
- 6. **Manual Setup** (optional): The server settings are automatically populated based on your email account provider (i.e., gmail.com, etc). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
- 7. Tap Next.
- 8. Optional: Enter a name for the account.
- 9. Enter name for outgoing message,  $\rightarrow$  tap **Done**.
- After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).

#### **Email Inbox**



- Email application icon.
- 2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the Accounts screen.
- 3. Tap on the desired email account,  $\rightarrow$  tap **Inbox**.

#### **Open Email Message**

- 1. On the **Inbox** screen, tap on an email to open it.
- 2. For attachments, tap Open to launch appropriate application, or tap Save to save attachment to a SD card.
- 3. To replay, tap **Reply** or **Reply** all.
  - a. Tap in the Compose Mail entry field to enter your reply message.
  - b. Tap Send to send immediately, Save as draft to save without send or Discard to discard without saving or sending.
- 4. To delete the email immediately, tap **Delete**.

#### **Compose New Email Message**

- 2. Tap in the **To** entry field and then enter the recipient's email address.
- Optionally, if you want to add Cc or Bcc recipients, tap 

   → Add

   Cc/Bcc, and then enter the recipient's email address.
- 4. Tap in the **Subject** entry field to enter your desired subject title.
- 5. Tap in the **Compose Mail** area to enter your personal message.
- 6. If desired, tap 
  → Add Attachment to attach a file.
- 7. When ready to send the email, tap  $\longrightarrow$  Send.

#### **Edit Email Account**

- 1. Tap the Email application icon.
- 3. Set your desired preferences to customize your email account.
- 4. Tap to return to the Inbox screen.

#### **Delete Email Accounts**

- ☆ If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.
- Tap the Email application icon.
- 2. On the **Inbox** screen, tap → **Accounts**.
- 3. Touch & hold on the account you want to delete.
- 4. In the pop-up **Account options** window, tap **Remove account**.
- 5. Tap **OK** to confirm the deletion.

#### **Set Default Email Account**

You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

- 1. Tap the Email application icon.
- 2. On the Inbox screen, tap 

  → Account Settings.
- 3. Tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.



#### **20 FILE BROWSER**

Tap the **File Browser** application icon to view the files on all storage devices (*Internal memory, SD card, USB device*), and to quickly & easily install Android application on your Tablet.

Use the icons across the top of the screen as follows:



Local disk (Internal memory)

 


Your SD card



U-disk/USB flash drive (using the included transfer box)







Display precious folder



Create a new folder



Allows you to multi-select items

#### **Copy Media between Computer and Tablet**

You can use the File Browser to copy files between an external storage devices and your computer. You must first copy the desired files onto a SD card or USB device.

- ☆ The internal device storage is titled "LocalDisk", a memory card "sdcard", and a USB storage device is titled "udisk".
- The instructions below are for copying from a SD card or USB storage device into the device. You can use the same method to copy from the device to a SD card or USB storage device, and then connect the storage device to your computer to transfer the files into the desired folder on your computer.
- 1. Tap the or to display the contents of your storage device.
- 2. Tap and hold in the folder/file you want to copy,  $\rightarrow$  tap Copy.

3. Tap on the Internal Memory, → tap on the folder into which you want to copy the file, → tap Paste.

#### **Delete files**

Tap and hold on the folder/file you want to delete,  $\rightarrow$  tap **Delete**  $\rightarrow$  **OK** to confirm the deletion.



### 21 MY MUSIC

☆ Audio file formats supported: MP2, MP3, WAV, AAC, WMA.

#### **Play Music**

- 1. Tap the **My Music** application icon.
- 2. Select an audio file from All/Albums/Artists/Directories/My Favourites/User Defined Playlists to play it.
- 3. To stop the music, tap the **Pause** icon.
- 4. To leave the music playing and return to previous screens, tap to return to the **Desktop** screen.

Tap the photo on the left corner can enter the Music Player interface. It shows like:



At this interface, you can do: view the lyrics, play / pause, switch to the previous / next, added to favorites, loop and random operation etc.

#### The Operation with Music and Playlist

Add playlist

- 1. Tap + on the left corner.
- 2. Input the playlist name.
- 3. Tap Add.

#### Rename or Delete playlist

Tap and hold in the playlist,  $\rightarrow$  tap **Rename** or **Delete**.

#### Add music

- 1. Tap and hold in the music you want to add,  $\rightarrow$  tap **Add**.
- 2. Click the following item to add music in it (if you don't want to add, tap Cancel).

#### **Delete music**

Tap and hold in the music you want to delete, → tap **Delete**.



#### 22 MY VIDEO

❖ Video file formats supported: MPEG1/2/4、MJPG、H263、H264. In addition to H264 which is supported by (720× 480) resolution, the other video formats are supported (1280×720) resolution.

#### **Play Video**



- 1. Tap the
- My Video application icon.
- 2. Select a video file from All/ Directories/My Favourites/User Defined Playlists to play it.
- 3. Tap on the screen to display video controls (adjust volume, pause/play, previous/next, adjust brightness).
- 4. Tap **Back button** or to return to the **My Video** screen.

### The Operation with Video and Playlist

#### Add playlist

- 1. Tap + on the left corner.
- 2. Input the playlist name.
- 3. Tap Add.

#### Rename or Delete playlist

Tap and hold in the playlist,  $\rightarrow$  tap **Rename** or **Delete**.

#### Add video

- 1. Tap and hold in the video you want to add,  $\rightarrow$  tap **Add**.
- 2. Click the following item to add video in it (if you don't want to add, tap Cancel).

 
#### Delete video

Tap and hold in the video you want to delete, → tap **Delete**.



#### **23 MY PHOTO**

 $\updownarrow$  Photo file formats support: JPG, JPEG, BMP, and PNG.



- 2. To view individual photo, tap on the desired photo.
- 3. Tap Back button to return to the photo gallery screen.
- 4. Tap to make slideshow. There is Normal play, Reminiscently, Activity, Romantic, Tranquil and Fresh.
- 5. Tap to make the picture sort by color.
- 6. Tap to make the picture sort by time.
- 7. Tap to make the picture sort by name.

After entering a group of photos, tap and hold on a picture to enter multiple selections state. In the multiple selection state you can delete photos, and do dynamical switching wallpaper setting.

- 1. Multiselect.
- 2. Delete.
- Dynamical switching wallpaper setting.

#### **Doodle**

In My Photo you can do doodle.

Click the icon to enter doodle interface. You can select different doodle operations, including: word balloons, titles, stickers and brush.



#### 24 CONTACTS

You can create an address book of your personal contacts, including personal notes as desired.

#### **Add New Contacts**

- 1. Tap the Contacts application icon.
- 2. Tap 

  → New Contact.
- 3. Tap in the name fields to enter the contact's first & last name.
- 4. Tap the right of options to reveal additional choices.
- 5. Tap on the option name to reveal choices.
- 6. Tap in the option entry fields to enter the contact's information.
- 7. Tap Done.

#### **Add Contact to Favorites**

- 1. In the **Contacts** screen, tap on the desired contact name.
- 2. Tap in the upper right corner.
- 3. Tap to return to the **Contacts** screen.
- 4. Tap Favorites to view list of favorite contacts.

#### **Edit Contacts**

- 1. In the Contacts screen, tap on the desired contact name you want to edit.
- 2. Tap 

  → Edit Contact.
- 3. Make desired changes,  $\rightarrow$  tap **Done**.

#### **Delete Contacts**

In the Contacts screen, touch & hold on the contact, → tap Delete contact.

OR

In the Contacts screen, tap on the contact you want to delete, tap 

→ Delete

Contact.

2. Tap **OK** to confirm the deletion.



### **25 PICTURE CAPTURE**

You can capture a screen image by tapping at any

Tap the Picture Capture application icon to set options for a screen capture.

- Select a delay timer to automatically capture the screen in desired number of seconds.
- Select the default storage device for saving your images.

After the images are saved, they can be viewed though



My Photo application



#### **26 PK MANAGER**

Use PK Manager to manager applications and widgets.

#### **Stopping Applications**

Android does not automatically stop applications after they are loaded, so you can manually stop the applications as desired.

- PK Manager application icon. The list of applications that are 1. Tap the running is displayed.
- 2. Tap on an application you want to stop,  $\rightarrow$  tap Force stop.

#### **Uninstall Applications**

- PK Manager application icon. The list of applications that are running is displayed.
- → tap **Third Party** or **All** to list more applications.
- Tap on an application you want to uninstall, → tap Uninstall.
- Tap **OK** to confirm uninstall.



#### 27 YouTube

- YouTube application icon to view YuTube.com videos. 1.
- 2. Tap on a video to launch it.
- Tap on the screen to display video controls (adjust volume, pause/play, previous/next, 3. adjust brightness).
- 4. Tap Back button to return to the YouTube screen.



#### **28 TUDOU**

**Tudou** application icon to view *Tudou.com* videos.

- 2. Tap on a video to launch it.
- 3. Tap on the screen to display video controls (adjust volume, pause/play, previous/next, adjust brightness).
- 4. Tap **Back button** to return to the **Tudou** screen.



### 29 Wi-Fi Settings



Wi-Fi Settings application icon.

- 1. Select the box behind to open Wi-Fi;
- 2. All the AP in the vicinity will be listed, click to select the name you want to connect to AP;
- 3. If the AP is connected successful before, the AP information will be saved in the pop-up window, select "Connect" starts to connect, choose "forget" to remove AP information;
- 4. If the AP is not encrypted, in the pop-up window, select "Connect" Start Connection;
- 5. If the AP is encrypted, enter the password in the pop-up window, and click "Connect" Start Connection;
- 6. When internet connections are successful, the wireless connection icon in the status bar appears.





### 31 ADSL Settings



ADSL Settings application icon.

Input name and password then click connect to access the broadband network.



### 32 Ethernet

Make the transfer box connected to the USB switch interface of the devices, and then plug the network cable into the Ethernet port of the transfer box, in the upper right corner of the screen appears "ETH".



The device can automatically access network IP address connection. And you can choose manual setup IP address to get a connection.



### **33 SETTINGS**

	Wi-Fi	Turn on Wi-Fi.
Wireless &	Wi-Fi Settings	Set up & manage wireless access points.
networks	Airplane mode	Disable all wireless connections.
Ethernet		Configure Ethernet.
Pppoe		Do ADSL settings. Input user name and password to
settings		connect.
USB	Mass storage	Configure USB to mass storage.
OSB	ADB	Configure USB to ADB.
	Silent mode	Silence all sounds except media & alarms.
		To adjust the Media volume, Alarm volume and
	volume	Notification volume. Tap & slide
Sound		and then tap <b>OK</b> .
	Notification ringtone	Select desired ringtone sound.
	Audible selection	Select to enable a sound when making a screen selection.
	Screen lock sounds	Play sounds when locking and unlocking the screen.
	Brightness	Tap & slide to adjust the screen
		brightness as desired, and then tap <b>OK</b> .
	Auto-rotate screen	When selected, the orientation of the screen switches
		between Portrait and Landscape automatically when you
		rotate the device.
Display	Screen timeout	Adjust the delay before the screen automatically turns off.
	Suspend timeout	Adjust the delay before the device automatically suspend
		after the screen turn off.
Security	Set up screen lock	Lock screen with a pattern, PIN, or password.
	Visible passwords	Show password as you type.
	Select device	Add or remove device administrators.
	administrators	
	Use secure	Allow applications to access secure certificates and other
	credential	credentials.
	Install from	Local control of CD
	SD card	Install encrypted certificates from SD card.
	Set password	Set or change the credential storage password.

	Clear storage	Clear credential storage of all contents and rest its password.
	Unknown sources	Allow installation of non-Market applications.
Applications	Manage applications	Manage and remove installed applications.
	Running services	View and control currently running services.
	Development	Set options for application development.
		Tap to reset the device to its initial factory state, erasing all data and downloaded applications. Tap <b>Reset Device</b> to
		proceed with reset, or tap to cancel and return to
		previous screen.
		WARNING! The following will be erased during the
Privacy	Factory data reset	factory reset:
	<b>J</b>	~ Google account
		~ System and application data and settings
		~ Downloaded applications
		The factory reset will NOT erased:
		~ Current system software and bundled applications
		~ SD card files, such as music or photos
	Total space,	It values appears when a SD card is inserted in device.
SD card &	Available space	it values appears when a 55 card is inserted in device.
device storage	Unmount SD card	When the SD card is inserted, tap it to safety remove the SD card.
	Format SD card	N/A for this device.
	Select language	Select the language and region according to your location.
Language &	Android keyboard	Onscreen keyboard settings.
keyboard	-	You can add words to a personal dictionary, words that
	User dictionary	may not be included in the default dictionary.
	Set date	Set the date.
	Select time zone	Select the time zone.
Date & time	Set time	Set the time.
	Use 24-hour format	You can choose to use 24-hour format or 12-hour format.
	Select date format	You can select the date format.
About device		View Status (Battery, Wi-Fi, etc), Battery use, Legal
		information, Model number, Android version, Kernel version and Build number.
Touchpanel calibration		Calibrate the touch screen.

# **Frequently Asked Questions**

#### **Android**

#### Q: What Android OS version is on my Device?

A: 2.2

### **Basic Device Functionary**

#### Q: Do I have to charge the battery before use?

A: You should charge the battery for at least 4 hours, but you can use the device while it's charging. Use the include power adapter to charge; this device does not charge via the USB cable.

#### **Email**

#### Q: Can I use any of my personal email addresses to send/receive email?

A: The device supports POP3 and SMTP accounts. Some free email accounts are not supported on mobile devices. Check with your email provider to see if you account is supported.

#### Media Cards

#### Q: Which media cards are compatible with my Device?

A: micro SD cards.

#### Music

#### Q: What type of music files can I play on my device?

A: MP2, MP3, WAV, AAC, WMA

#### Q: How do I add music files to my device?

A: Copy the music files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

#### **Photos**

#### Q: What type of photo files can I view on my device?

A: JPG, JPEG, BMP and PNG.

#### Q: How do I add photo files to my device?

A: Copy the photo files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

### Video

#### Q: What type of video files can I play on my device?

A: MPEG1/2/4、MJPG、H263、H264. In addition to H264 which is supported by (720  $\times$  480) resolution, the other video formats are supported (1280  $\times$  720) resolution.

#### Q: Can I play YouTube videos on my device?

A: Yes. You can tap the YouTube application icon to quick access videos.

#### Q: How do I add video files to my device?

A: Copy the video files from your computer onto a SD card or USB storage device, and then use the File Browser application to copy the files into the device.

#### Q: Do I need a Wi-Fi adapter to connect to the Internet?

A: No. The Wi-Fi adapter is built-in to the device.

### **Battery Management**

The battery is not fully charged out of the box, so it is recommended that you charge the battery for at least 4 hours before you start to use the device.

The rechargeable battery is designed and manufactured to be used and recharged frequently. As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your Tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Always keep the device and the battery away from heat.

### **Charge battery**

Plug the power adapter into an electrical wall outlet, and then connect to the device to fully charge the battery before use (approx. 4hour).

☆ You cannot charge the battery using the USB cable.

When fully charged, the battery icon displays as:



A fully discharged battery takes approximately 5 hours to fully charge, but you can use the device while plugged in when desired.

### **Important Safety Precautions**

Always follow these basic safety precautions when using your Tablet. This reduces the risk of fire, electric shock, and injury.

- Do not expose this product to rain or moisture.
- Keep the device out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked
  on or pinched by items placed on or against them. Pay particular attention to the
  point where the cord attaches to the device.
- Only use the AC adapter included with the device. Using any other power adapter voids your warranty.
- Do not remove the cover. There are no user-serviceable parts inside.

### **Clean your Device**

Treat the screen gently. To clean fingerprints or dust from the screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.