

Dear Customer!

Congratulations on buying this emporia mobile telephone! You have made the right decision.

Included: Mobile telephone, charging device, battery, instructions, table charger.

1 Controls

Speaker

Display (= Screen)

Arrow Keys

- On standby:
- △: Favourites (pre-set: Alarm Settings)
- ▽: Enter phone book contact list
- In menu and phonebook: scrolling

[ok] Pick-up/OK/Call list-Key

- Calling: Enter the number, then press [ok]
- Answering an incoming call: Press [ok]
- In menu: Confirm selection
- On standby: Enter call list (dialed, received, missed)

M1, M2, M3 - quick dial button

- long press or short press + OK for calling

*** - Key**

- In standby:
- Press twice: + (for international prefix, e.g. +44 for UK)
- For SMS: Special characters: (, ., " ? ; : ! " @ _ ~ & + - () < > { } [] % = / \ # * \$ § ...)

0 - Key

- Press and hold to connect with voicemail (= answering machine)
- For SMS: Space

- Key

- SMS: Switch between capital, small letters & numbers
- Silent mode activate/deactivate



Table charger

16 LIMITED WARRANTY

This Emporia product is warranted to be free from defects in materials or workmanship for one (1) year from the date of purchase. In addition, the Emporia batteries used in the product are warranted to be free from defects in materials or workmanship for ninety (90) days from the date of purchase of the product. Within this period, Emporia will, at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost. This warranty does not apply to: (i) cosmetic damage, such as scratches, nicks, and dents; (ii) consumable parts, such as batteries (other than as expressly set forth herein), unless product damage has occurred due to a defect in materials or workmanship; (iii) damage caused by accident, abuse, misuse, water, flood, fire, or other acts of nature or external causes; (iv) damage caused by service performed by anyone who is not an authorized service provider of Emporia; or (v) damage to a product that has been modified or altered without the written permission of Emporia. Further, the battery warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by Emporia for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the Emporia product for which it is specified. In addition, Emporia reserves the right to refuse warranty claims against products or services that are obtained and/or used in contravention of the laws of any country.

This product is intended to be used only for mobile operation and must not be used for any other purpose.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL EMPORIA BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR ANY LOSS OF USAGE, DATE OR INCOME, OPERATION OF THE DEVICE IN VIOLATION OF LAW OR OTHERWISE, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT OR FROM DEFECTS IN THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. Emporia retains the exclusive right to repair or replace (with a new or newly-overhauled replacement product) the device or software or offer a full refund of the purchase price at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contact your local Emporia authorized dealer or call Emporia Product Support for shipping instructions and a tracking number. Securely pack the device and a copy of the original sales receipt, which is required as the proof of purchase for warranty repairs. Write the tracking number clearly on the outside of the package. Send the device, freight charges prepaid, to Emporia.

PartNo: 36233 US AMERICAN V32 C_201205

<http://www.emporiatelecom.com>

17 TECHNICAL DATA

dual band GSM 850/1900MHz
size: 102x52x19mm
weight: 99g

battery: Li-Ion 3.7V / 1000mAh
standby: 300 h
talktime: 320 min

[end] End/Back/Delete/Menu/ On/Off-Key

- In standby: Enter the menu
- In menu: One step back
- Writing numbers or text: Delete
- During a call: Terminate
- On/ Off: Press for 2 sec.

Volume Control

[+ & -]


Control the handset volume

[] incoming call: turn ringer off

turn ringer off

Torchlight

Camera-key -Trigger button

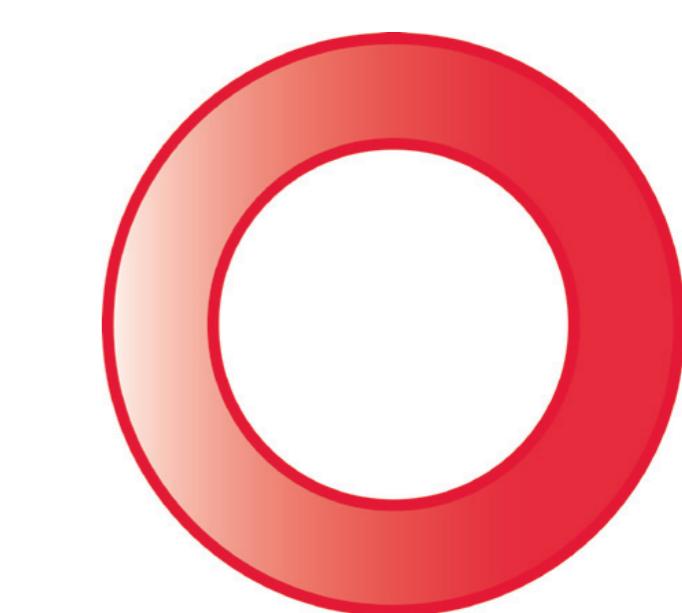

Camera

LED-lamps:

✉ New Message

📞 Missed call

💻 Blinking: Low battery, Charging



Emergency button



Battery cover

distance of

2 INSERT SIM CARD

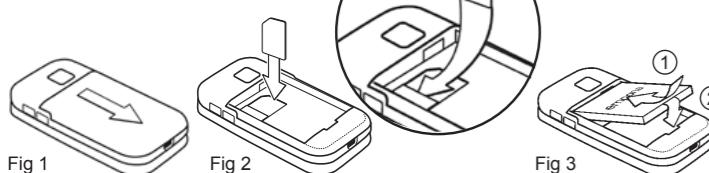


Fig. 1: Remove battery cover (as shown).

Fig. 2: Slide SIM card in with the gold contact facing down.

3 INSERT BATTERY AND CHARGING



Fig. 3: Insert battery (gold contacts on right front side).

Fig. 4: Close battery door: slide cover to closed position with a 'click'.

Fig. 5: Plug charging cable into the socket on the side of the phone

Charging: Battery indication bars in upper right corner of the display are moving and the LED on the upper side of the closed phone is on.

Full battery: Bars in upper right display corner are solid.

Note: Charge battery for at least 2 hours before first use!

4 DISPLAY SYMBOLS (SCREEN)

| | | | | | |
|--|--|--|-----------------------------|--|----------------|
| | battery strength | | signal strength | | roaming mode |
| | new SMS | | alarm on | | call diversion |
| | ringtone off | | missed call | | |
| | Bluetooth on | | Bluetooth headset connected | | |
| | profile "maximum" ON (ringtone volume very loud) | | | | |
| | profile "Meeting" ON | | Active data transfer | | |

5 FIRST STEPS

Switch on: the phone: press power on/off-key for 2 sec.

Switch off: by pressing power on/off for 2 seconds again.

When using a new SIM card, enter the 4 digit PIN Code (Personal Identification Number) and confirm with .

PIN-Code: The PIN-Code is a 4-digit number combination preventing others from switching on your mobile phone.

• Switch off your PIN-Code: In menu: **Settings** → **Security Settings** → **PIN** → **PIN off**.

Standby mode:

In standby mode the phone is turned on, but no active applications (calling, messaging, etc.) are running. To get into standby mode, when you are e.g. in the settings menu, press repeatedly.

Entering Menu:

- Press - key.
- Scroll through menu points: with and .
- Confirm: with .

Note: due to inactivity phone lights and screen turn off after a while. To turn on again, press any key.

Pick up call: Press - key.

End call or Reject call: Press - key.

Dial: Enter the telephone number via the keypad (including area code with 0) - start call with .

Redial list: press - key, scroll through call list with (all dialled, missed and received calls), select a number and start call with .

Handsfree Speaking: To talk without holding the phone to your ear, switch on/off the handsfree function during a call: press .

Handsfree:

Note: if you stay at a menu point without confirming () a help text with explanations pops up. To leave this, press .

6 PHONE BOOK

Save names and numbers (start with international prefix) by entering menu in standby mode (Standby-Mode: chapter 5) with , then → Menu-Points: **Search name**, **Add contact**, **Own Number**, **Emergency numbers** (add, change, delete, status on/off), **Quick dial keys**, **Copy All**, **Edit Contact**, **Delete**, **Send contact by SMS**, **SMS in PhoneBK**, **Settings**; **Storing phone book entries (Name & Number):** Enter menu with → continue to **Phone book**: → continue to **Add contact**: → Enter name via the keypad (See chapter 8 **Write SMS** for text entry) → Enter number, and to **Save**.

Searching phone book entries:

In standby mode: open the phone book with :

- Scroll through the entries with and or:
- Search names: enter the initial letters of the searched name via the keypad (scroll through with). When the requested name is shown, press to start a call.

Add phone book entry via SMS:

In menu **phonebook** → **SMS in PhoneBK** to turn function to receive phonebook entries via SMS message **on/off**, or specify that **only phone book contacts** can send entries to you. The phone number will be saved automatically in your phone book when you receive a SMS with the following content: #name#number# e.g.: #Tom#+491509876543#

Buttons M1, M2, M3:

Store or change your favorite numbers: Enter menu → **Phone book** → **Quick Dial keys** → select M1, M2 or M3 → (OK). To add: enter new name and number or press (Search) to access the contact list and store an existing contact. To edit: Delete and enter new name and number.

7 EMERGENCY FUNCTION

You can store a total of 5 emergency numbers (family, neighbours, friends, emergency services). In case of emergency these preselected numbers will be dialled automatically in a sequence, if the emergency key on the back of the phone gets pressed and held.

A continuous warning tone then starts in "loudspeaker mode" during emergency, so you and people nearby are warned of the emergency! If the first number cannot be reached, the second number will be called automatically.

If the second number in row cannot be reached, the third will be called. (max. 3 rotations of the 5 numbers).

Note: To avoid getting caught on a mailbox, the reached person has to confirm your emergency by calling back.

If no emergency number is saved or if your calling card has expired or you have no access to a foreign network (e.g. roaming not permitted), 911 will be dialled.

Saving emergency numbers: Enter Menu → **Phone book** → **Emergency numbers** → **Add Emerg. No.** → choose Emergency number (1-5) → set if it's a private number or a help organisation → pick contact from phone book → done

Note: select emergency number: private number (has to confirm as explained above) or official service number, e.g.: ambulance, police, etc. (no confirmation call required).

Switch emergency function On / Off: Enter menu: **Settings** → **Emergency numbers** → **On/Off**.

Note: If you want to save numbers from official services, police, fire department, etc. as emergency numbers, you have to clarify this with these institutions. No liability will be assumed for possible costs incurred if you dial accidentally.

8 SMS MESSAGES

SMS (Short Message Service) are written messages.

Receive SMS: A short signal and a written information on the display inform you about a new, incoming SMS message. Read the message immediately by pressing or see a list of messages which have already been received in the menu → **Messages** → **SMS** → **Received SMS**.

Write SMS: With Enter menu: → **Messages** → **SMS**

→ **Write new SMS:** The text entry is done by the keypad.

| | | |
|--------------------------|-------------------------|---|
| 1 . ! ? ‘ “ @ : 1 | 5 j k l 5 £ | 9 w x y z 9 ý þ |
| 2 a b c 2 ä å ö ö | 6 m n o 6 ö ö | 0 space; 0 |
| 3 d e f 3 è è | 7 p q r s 7 ß \$ | * special character: , . ? ; : ! |
| 4 g h i i i i | 8 t u v 8 ü ü | “ ’ @ _ ~ & - () < > { } [] ... |

Each button has several characters, which appear by pressing several times: (e.g. 2x**4**, 1x**2**, 3x**5**, 3x**5**, 3x**6** for hello).

Switch between different entry methods by pressing **#** **abc**: only small; **Abc**: first letter capitalised; **ABC**: all CAPITAL; **123**: Numbers

Send SMS: Select **Send** with 2x and enter number or select from phone book (2x , select contact with). Press to send SMS.

9 MMS MESSAGES

MMS (Multimedia Message Service) are messages incl. pictures, audio, etc.

First time use: Menu → **MMS** → **MMS Settings** → **MMS account** → **choose operator**

Send MMS: enter Menu with **Messages** → **MMS** → **Create new MMS**:

1. (Edit) → Add number: Enter number/ select phone book entry → .

2. to **Subject** (this will be the headline of the message) → (Edit) → Insert message text → (Done).

3. **Edit content:** 1x → (Edit) → Insert text or picture: (Options) → to **Add picture**: → scroll to picture with → choose picture with (done).

If you have problems at the first time sending MMS, contact your operator to check MMS settings.

10 CAMERA:

Take picture: press camera-button to start camera → press to take picture, store with .

Camera settings: : shutter sounds, image size, white balance

Picture gallery: menu → **select Pictures**, scroll to next picture with and view with 2x .

- Pictures: → **Option: View, Send as MMS, Use as background, Use for contact**, (choose the phone book entry, [note: only contacts from phone memory, not from SIM-card]). Calls to/from this contact will then show the linked picture on the display), **Rename, Delete, Delete all pictures**.

11 UTILITIES:

Bluetooth:

• Switch on: In menu → **Settings** → **Bluetooth** → **Bluetooth on/off** .

• Pairing: menu **Settings** → **Bluetooth** → **Connections** → **Search for new device** → select the device you want to pair, . Next time you turn on Bluetooth, connection will start automatically.

Alarm:

Standby mode 1x → **Status** On/Off: to switch Alarm clock on or off → , **Time**: set the time, **Repeat**: set repetition (once, daily, customised). If the alarm rings, end with . Use mute function with to reactivate the alarm after 1 minute.

12 OTHER FUNCTIONS IN SETTINGS

Enter menu with → continue to **Settings**: →

- **Sound & Alert:** To choose a phone profile (e.g. silent) and configure your personal settings.

- **Call waiting:** You can activate/deactivate and check status to get a notification about an incoming call while having a phone talk.

- **Network settings:** Choose **automatic** (automatic boot in a network) or **manual** selection (select a network manually).

- **Favorites** : your favorite functions pressing 1 button

- **Auto power on/Auto power off**.

- **Voicemail number:** Change the voicemail number.

- **Security settings:** Activate, deactivate or change PIN and phonecode (default phone code: 1234).

- **Restore Factory:** Reset the phone to factory settings.

• 13 DISPOSAL

• **Disposal of packaging:** Packaging materials are recyclable and shall enter the recycling process.



• **Disposal of battery:** Do not insert battery into household waste for disposal! You are obligated to return used batteries. These can be handed into local collection areas or to specialty shops.



• **Disposal of Device:** Take care of the environment: When this product is taken out of service, do not throw it into the household waste, but dispose of it, where old devices are accepted and brought into an eco-friendly disposal/recycling procedure.



14 FREQUENTLY ASKED QUESTIONS

• Screen shows "Insert SIM card! Only emergency call 1