

MiTraveler

by **Michley Tivax**

7" Tablet User Manual
Model: MiTraveler 748



Contents

| | |
|---|----|
| 1. Appearance and keys..... | 1 |
| 2. Basic operation..... | 1 |
| 2.1 Switch on..... | 1 |
| 2.2 Unlock the screen..... | 2 |
| 2.3 Lock the screen..... | 2 |
| 2.4 Switch off..... | 2 |
| 2.5 Charge the battery..... | 2 |
| 2.6 Use the keyboard..... | 3 |
| 2.7 Use a micro SD card..... | 3 |
| 2.8 Connect to a computer..... | 4 |
| 2.9 Browse files in the device..... | 4 |
| 2.10 Start programs..... | 5 |
| 2.11 Close programs..... | 5 |
| 2.12 Screen operation..... | 5 |
| 2.13 Home screen..... | 5 |
| 2.14 Security settings..... | 7 |
| 2.15 Display settings..... | 8 |
| 2.16 Wireless and network settings..... | 8 |
| 3. Technical specifications..... | 10 |

Disclaimer

1. Thank you for purchasing the MiTraveler 748. Before using your new tablet, please read this manual carefully. We will assume that you have read the manual when you use this product.
2. Michley Tivax is not responsible for any damage or loss of personal data caused by misuse of software or hardware, abuse, accidents, or removal of batteries. To avoid data loss, please back up your personal data.
3. Michley Tivax is not responsible for any misunderstanding of the manual, incorrect operation not according to the manual, or accidental losses that occur while using the manual.
4. Please do not try to repair the tablet by yourself, as this will void the warranty.
5. Michley Tivax reserves the final right to interpret and explain this manual and other relevant information.

Safety information

Please carefully read this important safety information before using your product.


- Please do not drop your tablet, place objects on the screen, or allow hard objects to strike it. This may cause scratches, cracks, data loss, or other damage.

- Never expose this product to water or damp environments, as water may leak in and damage it beyond repair.
- To avoid permanent hearing damage, please do not use headphones with excessively loud volume for prolonged periods.
- To avoid data loss and system errors, please do not turn off your tablet abruptly during software updates or downloads.
- Please do not turn on the device in places where wireless equipment is not allowed or when using the device will cause interference or danger. Please observe any relevant restrictions.
- Please use only the original accessories and batteries. Do not use incompatible products with the device.
- Please do not use this product at gas stations or near fuel and chemicals.
- To avoid accidents, please do not use this product while driving or walking in the street.
- Please do not scrape or damage the screen, or it may no longer work.
- Never clean the device with chemicals or detergent. This may damage the surface and corrode the paint.

What's in the box

MiTraveler 748 tablet – 1 pc
 Micro USB cable – 1 pc
 Adapter – 1 pc
 User manual – 1 pc

1. Appearance and keys

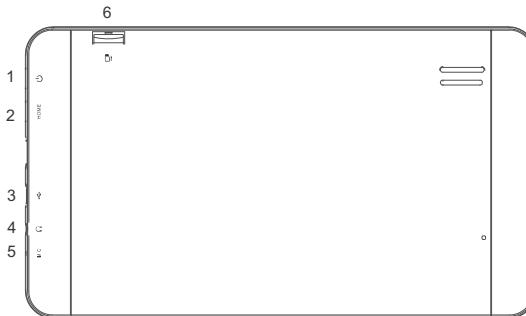

| Number | Name | Description |
|--------|----------------|--|
| 1 | Power button | Long press to turn ON/OFF; short press to enter or exit sleep mode |
| 2 | Home button | Return to home screen |
| 3 | Micro USB port | Charge the device or connect to other devices |
| 4 | Headphone port | Plug in headphones |
| 5 | MIC | Microphone |
| 6 | TF card port | Insert TF card (micro SD card) |

2. Basic operation

2.1 Switch on

When the device is in the OFF mode, press and hold the power button to turn it ON.

2.2 Unlock the screen

Press and drag the padlock  icon toward the right to unlock the screen.



2.3 Lock the screen

When the device is in the ON mode, short press the power button to lock the screen and enter power saving mode. This turns off the screen, but the system is still running.

2.4 Switch off

When the device is in the ON mode, press and hold the power button for about 3 seconds. Choose the Power off option on the screen. Press OK to confirm and shut down the system.

2.5 Charge the battery

Insert the small end of the USB adapter into the micro USB port on the device, and connect the other end to a power outlet to charge the device.

Note: For best results, charge the device for at least 8-12 hours the first time you use it to make sure it is fully charged.

While charging, the blue indicator light on the device turns on, and the battery icon on the screen  shows a lightning bolt.

2.6 Use the keyboard

The tablet has a soft keyboard that appears automatically when you tap the place on the screen where text is to be entered.



To change the keyboard language, hold down the comma (,) key for one second, then release. Choose Input languages, and select the language you want.

Note: You can also change keyboard settings by going to Settings > Language and input.

2.7 Use a micro SD card

Insert a micro SD card into the slot. The metal contacts on the SD card should face the front of the tablet. To browse files in the SD card, go to the File Manager app and choose the SD card icon at the top. Before removing the SD card, close any open files on the SD card and choose Settings > Storage > Unmount SD card.

Tips:


1. Do not insert the micro SD card by force. The card can only be

inserted in one direction.

2. If the SD card is write-protected, please remove the write protection before formatting and writing data.
3. Major brand SD cards are recommended to help ensure the card is compatible with the device.
4. Please note that apps are installed to the device by default, not to the SD card.
5. The tablet also has an internal SD card that cannot be removed.


2.8 Connect to a computer

To move files between the tablet and a computer, insert the small end of the USB cord into the tablet and the other end into the computer. Tap “Turn on USB storage” on the tablet screen. The files on the tablet will appear on the computer. Use the computer to copy files between the devices. Before unplugging the USB cord, press and drag down the small USB icon in the upper left corner of the tablet screen and turn off USB storage.

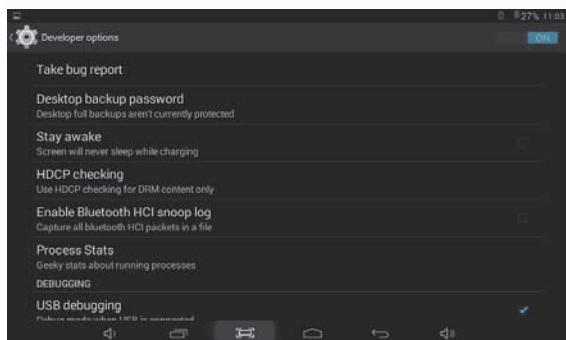

2.9 Browse files in the device

To browse files in the device’s internal storage, go to the File Manager app and choose the second icon from the left at the top of the screen.

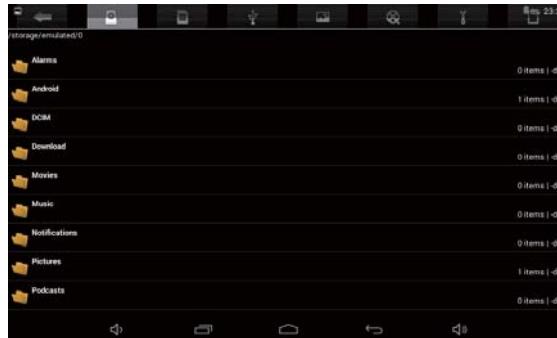

2.10 Start programs

Tap on the application icon of your choice, and it will start. To see all apps in the tablet, press the menu icon on the home screen (six dots inside a circle).

2.11 Close programs

To close an application and return to the home screen, press the Home button or the Home icon on the screen.

2.12 Screen operation

- **Zoom:** In some applications you can zoom in and out by sliding two fingers together or apart on the screen.
- **Press:** Tap an item on the screen briefly to choose it.
- **Scroll:** In some applications you can scroll the screen contents up, down, or sideways by sliding a finger on the screen.
- **Rotate:** The screen contents will rotate automatically when the tablet is rotated. To turn off this function, go to Settings > Accessibility and uncheck Auto-rotate screen.

2.13 Home screen

- **View different home screens**

The home screen is made up of five screens. To view another

screen, scroll to it by sliding your finger sideways.

● **Change wallpaper**

Press a blank area on the home screen for a few seconds, and an option to choose wallpaper will appear.

● **Move application icons**

Press an icon for one second, and it will grow slightly larger and allow you to drag it to another position.

● **Move application icons to another screen**

Press an icon for one second and drag it to the left or right edge of the screen to drop it onto a different screen.


● **Remove icons from home screen**

Press an icon for one second and drag it to the × in the upper left corner. When the icon turns red, release it. It will disappear from the home screen but still exist in the menu of apps.

2.14 Security settings

Go to Settings > Security > Screen lock to change the lock that appears each time you turn on or wake up the tablet.

Warning: We recommend using only the default slide lock. If you choose a password, PIN, or pattern and forget it, the only way to unlock your tablet is to send it back to the manufacturer.

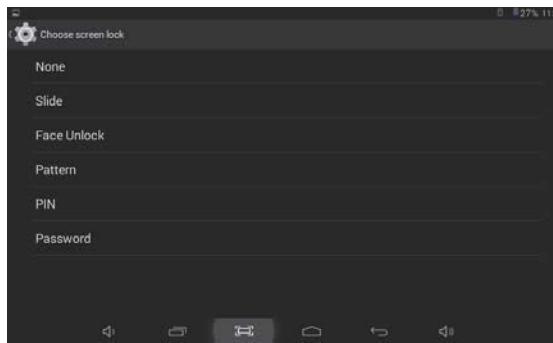


2.15 Display settings


Go to Settings > Display to set the screen brightness, wallpaper, font size, and length of idle time before the tablet goes to sleep.

2.16 Wireless and network settings

To connect your tablet to Wi-Fi, go to Settings > Wi-Fi and slide the Wi-Fi switch to the ON position. The device will show a list of available wireless networks on the right side of the screen.

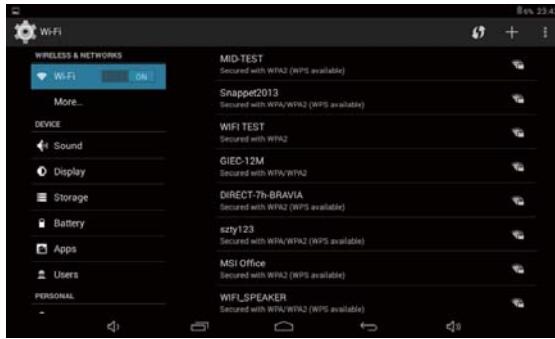

Tap the desired wireless network. Depending on your network security settings, the tablet will either automatically connect to Wi-Fi or ask you to enter your network password. Please consult your wireless network company for the password.

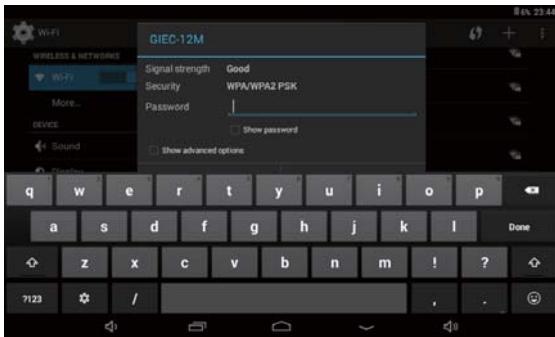

3. Technical specifications

| | |
|----------------------------|--|
| Size | 189x107x9.5mm |
| Weight | 0.26Kg |
| LED Display | 7.0 inch 800*480 multi-point capacitive touch screen |
| PC Interface | High speed micro USB |
| OS | Android 4.4 |
| RAM | 512MB |
| Storage | 8GB |
| Capacity Expansion | Supports micro SD card 32GB max |
| | Formats Mp3, WMA, OGG, AAC, WAV etc. |
| Music Function | Max. Resolutions 20Hz-20KHz |
| | Formats Mp4, RMVB, AVI etc. |
| Video Function | Max. Resolutions 1920 *1080 |
| | Screen Ratio 16:9 |
| Photo browse | JPG/BMP/JPEG. |
| | Support 802.11b/g/n |
| WIFI | Transmission rate Max 54Mbps |
| | Work Frequency 2.412-2.462GHz |
| Camera Function | Front 0.3 megapixel camera |
| Recording Function Support | Support |
| Languages | Multi-language |

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.