



Tablet PC
Model : V7023D



Contents

1 Overview	1
1.1 Appearance and Keys.....	1
1.2 Basic Operation	2
1.2.1 Power ON.....	2
1.2.2 Unlock Screen.....	2
1.2.3 Lock Screen.....	2
1.2.4 Power OFF.....	2
1.2.5 Battery Charging.....	2
1.2.6 Onscreen Keyboard.....	3
1.2.7 T-Flash card / Micro SD card.....	3
1.2.8 Connect to PC.....	4
1.2.9 Browse Files.....	4
1.2.10 Startup Program.....	5
1.2.11 Home Screen.....	5
1.2.12 Touch Screen.....	6
1.2.13 Security Setting.....	6
1.2.14 Display Setting.....	9
1.2.15 Wireless And Network.....	9
1.3 Technical Specifications	11
Warranty	13

Disclaimer

Thank you for purchasing our product! Before using this product, please read the manual carefully.

We will presume that the manual has been read before using the product.

1. The functions information of this manual is subject to the product itself; we will keep developing new functions. Information in this manual is subject to change without any prior notice.
2. The Company will not be responsible for any loss of personal data and/or damage caused by incorrect operation of software/hardware, artificial damages, replacement of batteries or any other accident. To avoid loss of personal data, backup data to PC at any time.
3. The company can not control any controversy from users misunderstanding or incorrect operation against the manual, the company will not take any relevant responsibility for any accidental loss or potentially occurring in the process of using this manual.
4. Do not do any repairs. Otherwise manufacture warranty will be null and void.
5. The company reserves the final explanation right to this manual and other relevant information

Preface

This device has built-in high performance Wi-Fi receiver module, supporting external 3G USB DONGLE wireless network card, turning on the broadband wireless networks, breaking through the restraint of network cable; it will bring the portable media player world and fulfill the entertainment needs. It also support picture browsing, E-book Reader, games, online chat, and various other functions and settings that will fully show individuality.

Safety notices

To avoid accidents please adhere to the manuals instructions.

- Do not let the tablet fall, rub, or be compressed with hard objects, or it may cause surface damage of the tablet, loose battery, data loss or damages of other hardware
- Never let this product become exposed to humid environment or rain as the water that leaks in may disable it to the extent beyond maintenance.
- Do not use the headset with high volume continuously. Please adjust the volume to an appropriate and secure volume and control the usage time to avoid any damage to hearing, as excessive volume will cause permanent hearing damage.
- Do not cut off the power abruptly during software update or download. It may cause data loss and/or system error.
- Do not turn on the device where wireless equipment is forbidden or when usage of the device will cause interference or danger. Observe any relevant restrictions.
- Do not use incompatible products. Only use original accessories and battery.
- Do not use the device at gas station or nearby fuels or chemicals.
- Do not use product while driving or operating heavy machinery.
- Do not clean the device with any chemicals or detergent, it will damage the product surface and corrode the paint.

Packing list


The following is included within your package. Carefully unpack the box and remove the contents.

Item	Components	Quantity
1	Tablet Device	1
2	Micro USB Cable	1
3	User Manual	1
4	Adapter	1
5	Service card	1

Attention: Accessories of this product can change without notice.

1 Overview

1.1 Appearance and Keys

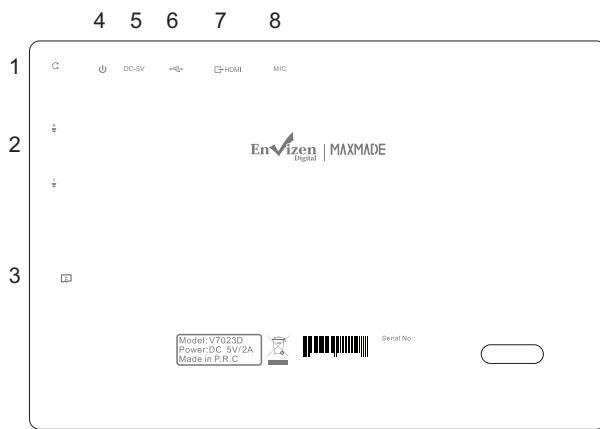

Symbol	Name	Description
1	Headphone	Connect to Stereo headphone
2	VOL+/VOL-	VOL+/VOL-
3	TF Card	Micro SD Card slot
4	Power	Press quick to enter sleep/wake mode, hold 1 down to switch ON/OFF
5	DC-5V	Power socket for charging the device
6	Micro USB port	Connect with PC and OTG function
7	Mini HDMI	Connect to a mini HDMI cable
8	MIC	Microphone


1.2 Basic Operation

1.2.1 Power ON

When the device is OFF , press and hold POWER key, then the device powers on and enters Android system.

1.2.2 Unlock the screen

Press and drag the  icon to the  . The LCD will automatically unlock.

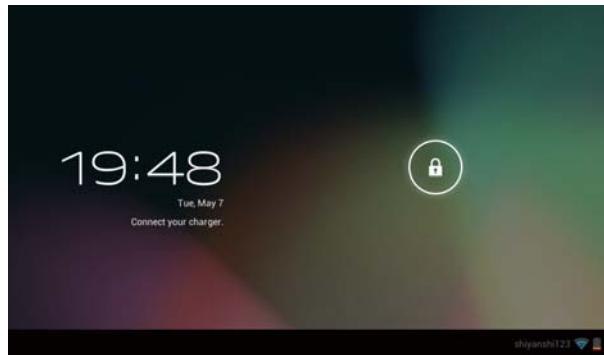

1.2.3 Lock screen

When the device is “ON ”, press the Power key, the system will lock the screen. The device is now in sleep mode.

1.2.4 Power OFF

When the device is “ON ”, press and hold the Power key for 5 seconds, the screen will display the power off screen.

Confirm Power off by selecting it. The system will shut off automatically.

1.2.5 Battery Charging

Connect the DC-in jack to the tablet and plug the AC adapter into any AC outlet. There will be a blue light indicating the tablet is charging. Charge the battery for at least 8 hours to make sure the battery is fully charged at the first time.

[Note] The USB port does not charge the tablet. Use the power adapter provided for charging.

1.2.6 Onscreen Keyboard

The device support: handwriting, number, letter, Chinese Pinyin etc.

To switch methods:

Click on any text input area available. The onscreen keyboard will display, as shown below:



Press **[#]**, then Input method switch options will appear. Select the input desired.

[Note] To permanently select the option go to Settings> Language & Input> Keyboard & Input Methods

1.2.7 T-Flash card / Micro SD card

Install a memory card to increase personal storage space.

• Insert T-Flash card / Micro SD card

Insert the T-Flash / Micro SD Card into the slot located on the bottom of the device. A click will indicate it is inserted.

[Note] Do not insert the TF card by force, this card can only be applied in one direction

• Browse files in SD Card

View and use the files needed. File Manager> SD card

• Remove T-Flash card / Micro SD card

Close all open files from the T-flash. Enter Settings> Storage> Click Un-Mount SD card.

1. Do not remove the TF card before un-mounting, or files may become corrupted and the card may become damaged.


2. If the TF card is “write-protected”, data will not be formatted and written. Remove the write protection before operations.

[Note] The APK, Android application package file, such as application software and games etc. are installed to the device. Not in the memory card.

1.2.8 Connect to PC

Transfer files from PC and MID.

One end of the USB cable connects to the computer, the other end connects to the tablet device. Select Settings > Developer options > USB debugging. The device will connect to the computer, once connected copy files to the device.

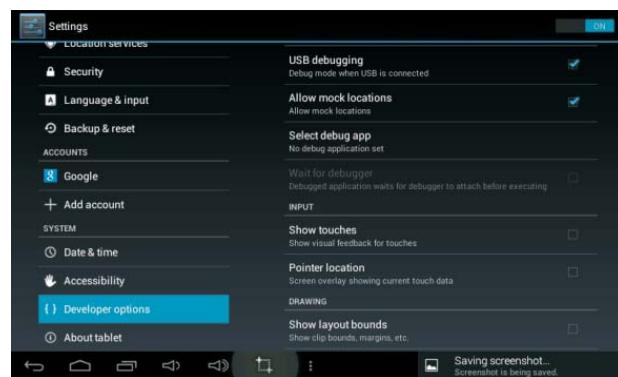

1.2.9 Browse file

Press and hold the file down until appears.
Choose the desired function to edit.



1.2.10 Startup programs

Click on the application icon desired to start, or open.

1.2.11 Home screen

- **View extended home screen**

To view the extended home screens just slide finger left or right.

- **Customize Wallpaper**

Press and hold blank regions on the home screen for a few seconds. A pop up menu will appear. Choose wallpaper from menu. Confirm by selecting "Set Wallpaper"

- **Move application**

Press and hold desired icon to drag and release to desired destination.

- **Move application screen to screen**

Press and hold the desired icons, drag to the end (left or right) of the home screen to change page destination. Place icon on any other extended home screen pages.

- **Delete applications**

Press and hold the application wanted to delete and drag it to the “X” located at either the top or bottom of the screen. Enter Settings>Apps>Select particular Apps>Opens and click Uninstall, or Remove.

1.2.12 Touch screen

The tablet has a capacitive touch screen. Use the following gestures to select item or enter information.

- **Pinch:**

Zoom in and zoom out: In applications which support zoom, such as: photo, IE browser, mail, and map etc. Zoom in by opening two fingers. Zoom out by pinching, or closing two fingers.

- **Scroll:**

Scroll through the screen content by sliding finger on the screen. (up, down, right, or left) To stop the scroll, simply touch the screen.

- **Tap:**

Touch the screen to open items, select options, or to begin typing characters/symbols in a text box.

- **Drag:**

To drag an item, press and hold the icon, once its highlighted, drag it to desired location.

- **Rotation:**

● Change the screen orientation by turning the device.





1.2.13 Security Setting


To set or remove lock pattern, go to Settings > Security > Screen lock, choose your preference.(None, Slide, Face Unlock, Pattern, PIN, Password)






Pattern:

1. Ensure that four-point connect when drawing the un-lock pattern.
Enter desired pattern pass code.

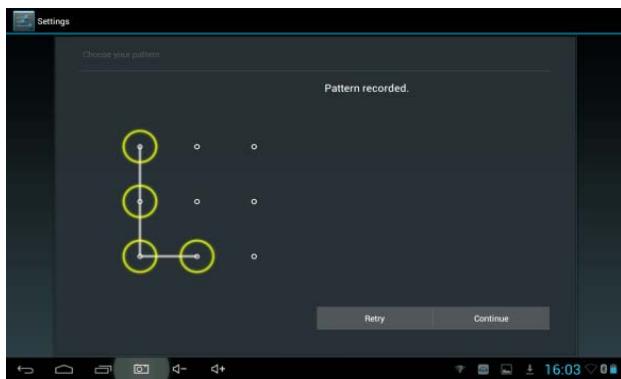

2. Re-enter Pattern

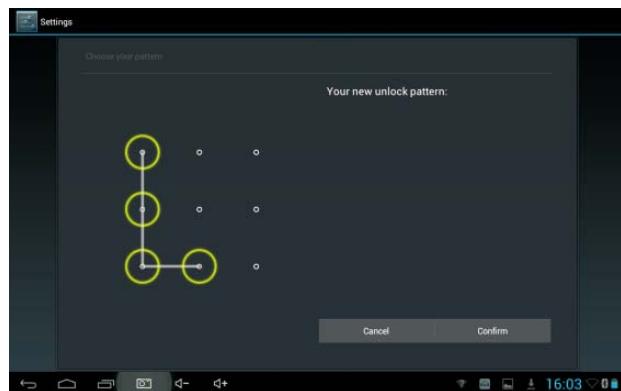

3. Click confirm to complete unlock pattern.
The device now has Pattern Lock. To access the device, or unlock, use the pattern code it was assigned.

1.2.14 Display

Click Settings>Display. To set: Brightness, Wallpaper, Auto-Rotate Screen, Sleep, and Font Size of the screen.

1.2.15 Wireless And Network Settings


a).Wi-Fi

- 1). Click Settings > Wi-Fi, the device will find surrounding available wireless networks.



- 2).Select the appropriate wireless network. The system will directly connect to the network or pop up the password input window, if a password is required.

[Note] Please consult with wireless network administrator for the password.

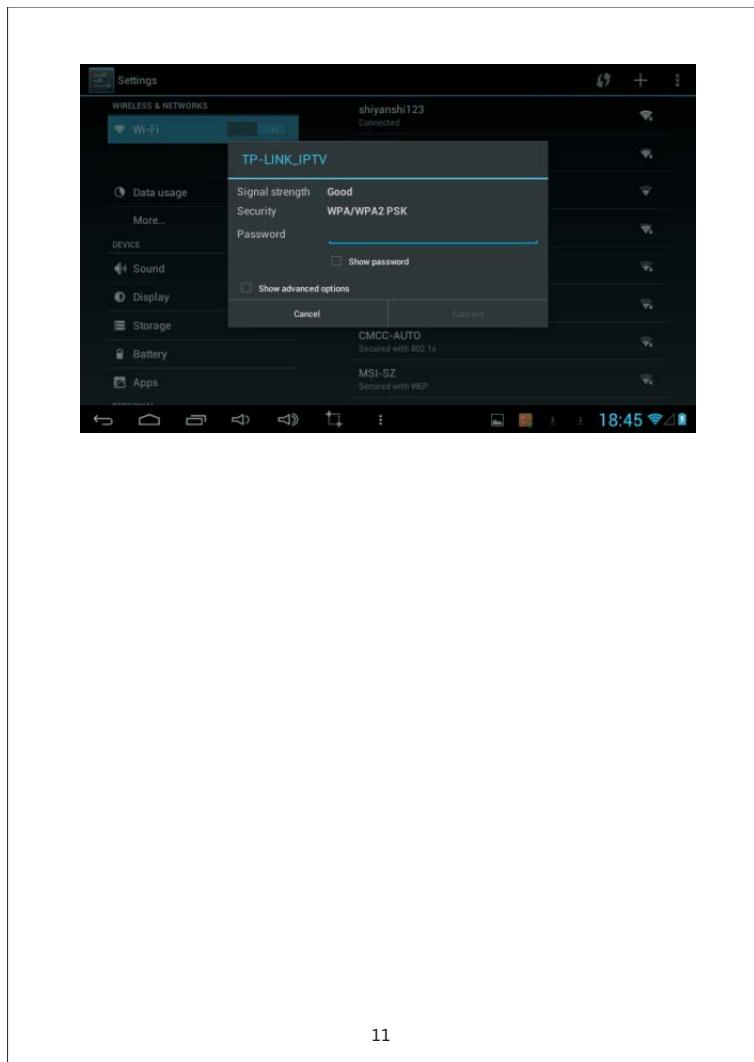

1.3 Technical specifications

Size	L 7.0 x W 4.7 x H 0.4 inches	
Weight	0.6lbs	
LCD Display	7.0 inch 800*480- Multi-point capacitive touch screen	
PC Interface	High speed Micro USB	
OS	Android 4.1	
Hard Drive Capacity	4GB	
System Memory	512MB DDR3	
Capacity Expansion	Micro SD card 32GB(max)	
Music Function	Format	Mp3, WMA, OGG, AAC, 3GP, WAV etc.
	Max. Resolutions	20Hz-20KHz
Video Function	Format	Mp4, MKV, RMVB, AVI etc.
	Max. Resolutions	1920 *1080
	Screen Ratio	16:9
Photo browse	JPG/BMP/JPEG/GIF.	
Wi-Fi	Support	802.11b/g/n
	Transmission rate	Max 54Mbps
	Work Frequency	2.4GHz
Camera Function	Front 0.3 megapixel camera, rear 0.3 megapixel	
Recording Function		
Support	Support	
Temperature	Room temp -50-100°F	
Languages	English/French/Spanish/German/Simplified/Chinese	

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (A) This device may not cause harmful interference.
 - (B) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the manufacturer or an experienced radio/TV technician for help.

Warranty

Warranty Terms and Conditions

Envizen Digital("Envizen") warrants your Envizen products against defects in material and workmanship during the warranty period from the original date of purchase, subject to the following terms and conditions. If a product proves to be defective in material or workmanship during the warranty period, Envizen will, at its discretion, repair or replace the product with the same model provided the purchaser adheres to certain return authorization procedures and guidelines.

Warranty Period

All Envizen televisions/media players/DVD players/speaker systems/digital photo frames/2.4G wireless devices/Tablet PC are warranted for one (1) year for parts and ninety(90)days for labor, starting from the original date of purchase/invoice. After warranty period, the customer is responsible for parts and labor charges. Rechargeable batteries are warranted for ninety (90) days for parts and labor.

Non-rechargeable batteries are not covered by warranty.

A new warranty does not start with the replacement of a new product.

This Warranty Does Not Apply to:

1. Any product, on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
 - a) Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
 - b) Repair or attempted repair by anyone not authorized by Envizen.
 - c) Any damage of the product due to shipment.
 - d) Removal from or installation to the product.
 - e) Causes external to the product, such as electric power fluctuations or failure.
 - f) Use of supplies or parts not meeting Envizen's specifications.
 - g) Normal wear and tear.
 - h) Any other cause which does not relate to product defect.
3. Cosmetic damage by purchaser, such as marking, discoloration, scratches, dents, gouges or any other defacement.
4. Physically damaged products by purchaser, such as broken PCB, Housing, damaged LCD Module.
5. No Defect Found (product returned to Envizen as defective but failure is not duplicated by Envizen's test method).
6. Product without proof of purchase. (The proof of purchase should be one of the following documentations: purchase receipt, gift receipt, sales invoice, and packing list that contains the product model number, price, vendor, and purchase date.)
7. Any damage caused by battery leakage.
8. This warranty does not apply to customers outside the Continental US states.

How to Get Warranty Service

1. To obtain the warranty service, you will be required to reach Envizen's Customer Service by phone at **1-866-709-1999** or by email at service@envizendigital.com for assistance.
 - a) Customer information (name, day-time phone number, e-mail address and/or residential address)
 - b) Proof of purchase (purchase receipt, gift receipt, sales invoice, order No#, And/or packing list)
 - c) Product model number
 - d) Product serial number
 - e) A description of the problem
 - f) Payment information (If any payment is required, you will be asked to provide this information beforehand. At this moment, we only accept personal check, money order, credit card or cashier's check. Sorry for the inconvenience.)
2. We will issue you an RMA number for your returned item. Please take or ship product with the RMA number to Envizen service center. All products should be returned in secured packaging, preferably in the original package, with the complete set of accessories.
3. Upon receiving the product, depending on the condition of the defects, Envizen will repair or replace product, and ship it back to the customer within 2-4 weeks.
4. For additional information, please contact Envizen Customer Service.

Out of Warranty Repair

For additional information on obtaining an extended warranty service, contact Envizen Customer Service Department by e-mailing service@envizendigital.com or call **1-866-709-1999**. Products out of warranty requiring replacement will be reviewed individually, but all will require the shipping and handling fee. During the period of product warranty, We will answer your basic configuration, setup and troubleshooting questions; and when necessary, we will provide you with all the instructions on how to return your product for repair. For more customer service and support inquiries, please call **1-866-709-1999** or e-mail us at service@envizendigital.com.

The radiated output power of this device is below the FCC radio frequency exposure limits. Nevertheless, the device should be used in such a manner that the potential for human contact is minimized during normal operation. The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/Kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. To avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna should be minimized.