材质: 128g铜版纸,尺寸: 216*279.5MM,单面印刷

下面

216MM

BLUETOOTH® MUSIC STREAM MICROPHONE

CONTENTS

- Microphone **FEATURES**
- USB Charging Cable
- · Auxilliary Cable

- Built-in rechargeable battery
- · Auxilliary out connection
- · Compatible with bluetooth® devices

CHARGING MICROPHONE


- 1. Attach the small part of the USB Charging Cable to the microphone.
- 2. Attach the other portion of the cable to a USB port.
- 3. The power button will light up red indicating the microphone is charging.
- 4. Remove the USB cable when the red LED light turns off.

NOTE: It takes approximately 6 hours to fully charge microphone.


PAIRING YOUR MICROPHONE

Your device must have BLUETOOTH® capability. Consult your device manufacturer or user manual if you are unsure if your device has this feature. Turn off any devices that may have been previously paired to your device.

- 1. Turn on the microphone by holding down the On/off button.
- 2. Place your device within 3 feet of the microphone (Fig. 1).
- 3. Enable BLUETOOTH® on your device and search for new BLUETOOTH® devices. Refer to your device's manual on how to enable and operate BLUETOOTH®.
- 4. Select BT_Microphone from the list of BLUETOOTH® available devices (Fig. 2).
- 5. A tone coming from the Microphone's speaker will notify you when pairing is successful.
- 6. You can now stream music wirelessly from your device to your Microphone.

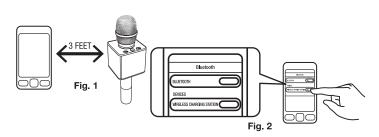

- This product contains batteries that are non-replaceable
- There is a risk of fire and personal injury if battery is punctured, damaged, or misused
- Do not dismantle, crush, incinerate or short-circuit battery.
- Never expose battery to extreme temperatures or moisture
- Keep away from flammable materials and direct sunlight
- Only charge using the provided charger, cable, and/or adapters
- Rechargeable battery is only to be charged by an adult.
- Adult Supervision of the battery while it is charging is required
- Allow battery to cool to room temperature before charging. • Charge on a non-flammable surface and keep away from flammable products
- Discontinue charging if battery becomes hot, swells, smokes, or gives off a strong odor.
- Battery chargers used with the product are to be regularly examined for damage to the cord, plug, enclosure, and other parts, and in the event of such damage, they must not be used until the damage has been repaired.
- Recycle or dispose of battery according to federal, state, and local laws
- Keep these instructions for future reference.

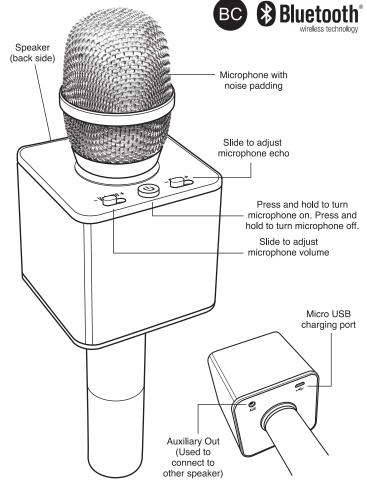

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no quarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

©2017 MerchSource, LLC, All rights reserved, Model: LD-BT-MP2017,

Distributed by MerchSource, LLC, Irvine, CA 92618.

For technical support, please visit www.merchsource.com or call

The artwork and design of this manual are protected by US copyright law and may not be reproduced, distributed, displayed, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notice forms on this manual is not permitted.

The BLUETOOTH® work mark and logos are registered trademarks owned by Bluetooth SIG Inc

Printed in China

- ▲ SAFETY WARNING
 INSPECT THE PRODUCT BEFORE EVERY USE. IF THE PRODUCT APPEARS WORN, FRAYED, CRACKED, OR BROKEN IN ANY MANNER, DISCONTINUE USE AND DISCARD IMMEDIATELY.
- DO NOT DISASSEMBLE.
- DO NOT USE FOR ANYTHING OTHER THAN ITS INTENDED PURPOSE.
- THIS IS NOT A CHILDREN'S PRODUCT. KEEP OUT OF REACH OF CHILDREN.
- PRODUCT IS NOT DESIGNED FOR ALL WEATHER USE. KEEP AWAY FROM MOISTURE AND EXTREME TEMPERATURES.