


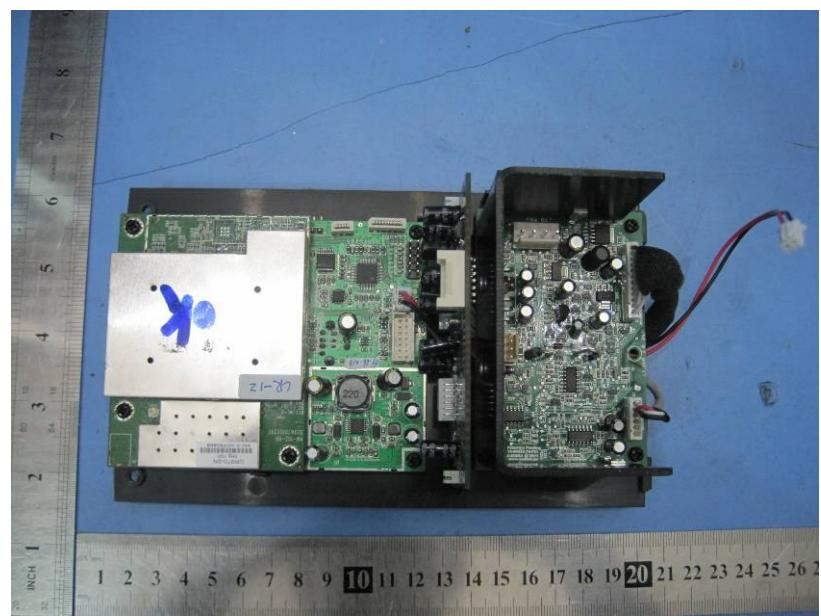



2.1 EUT-Open View

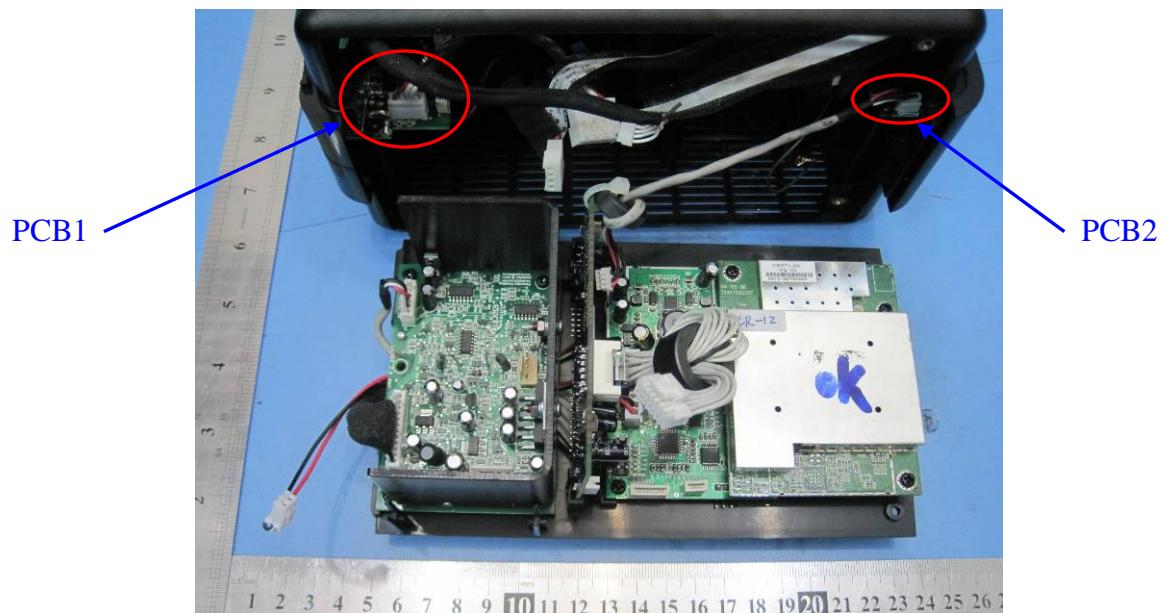

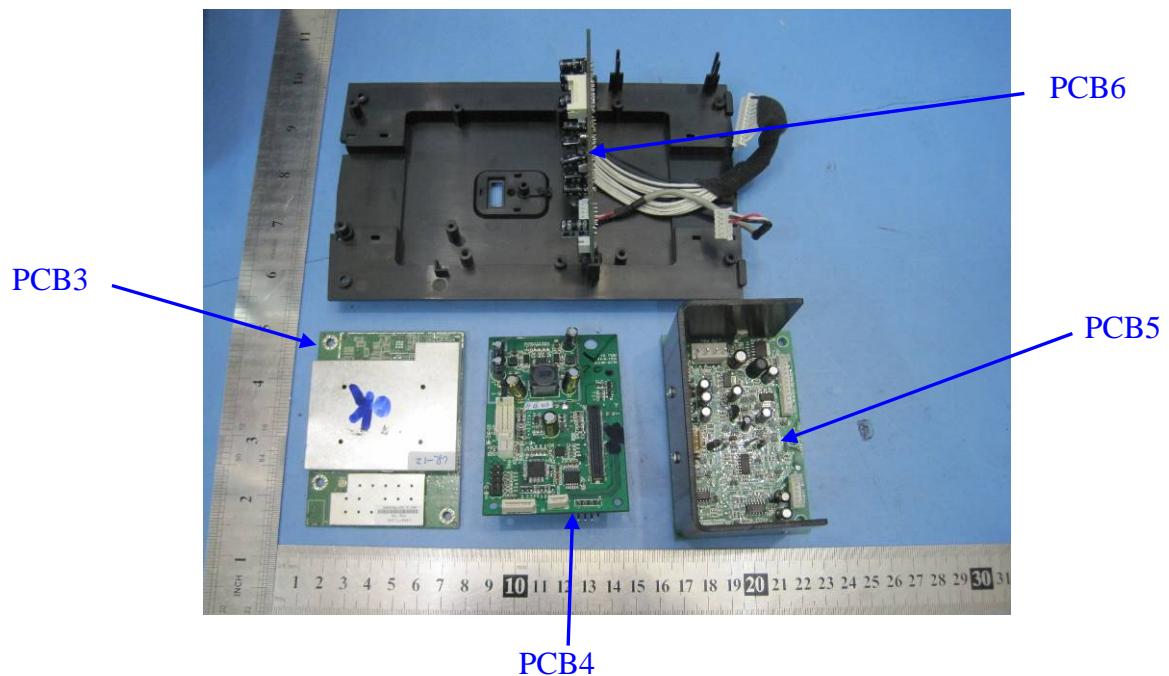



2.2 PCB1 - View

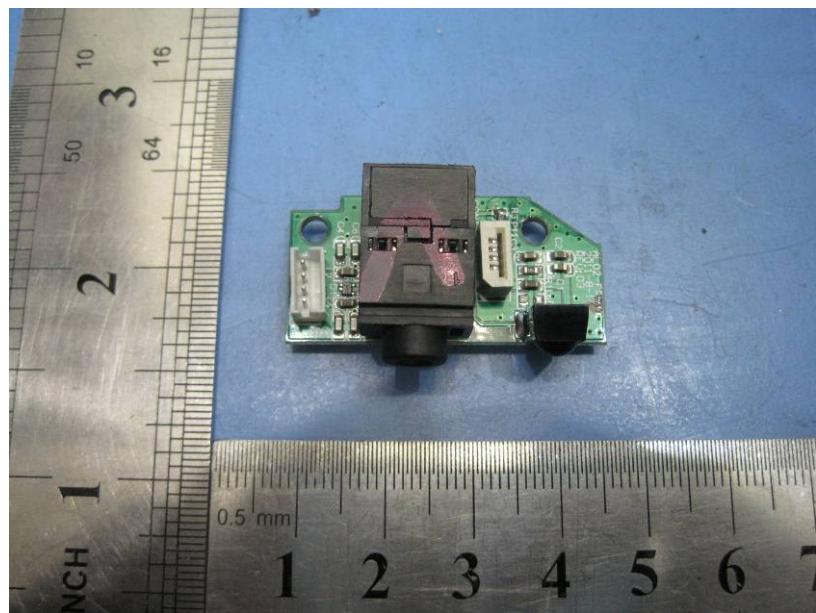

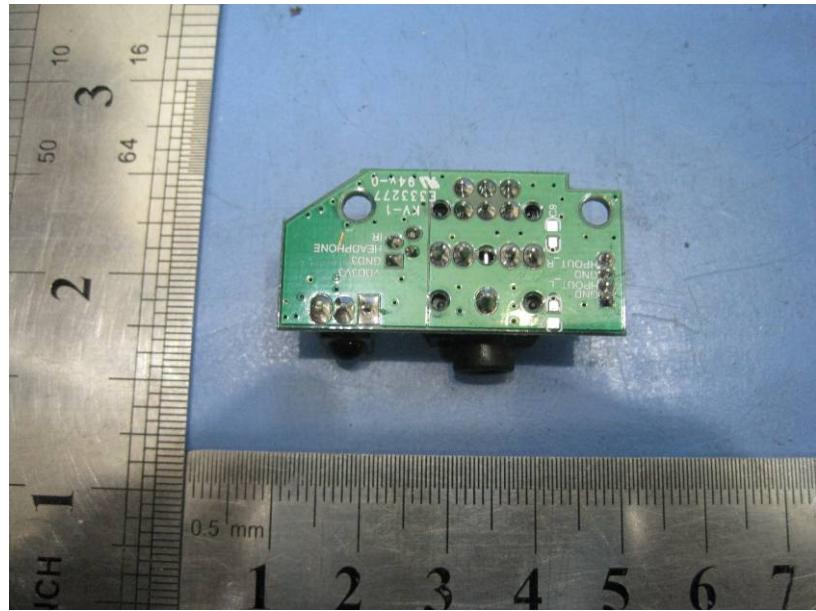




2.3 PCB2 - View

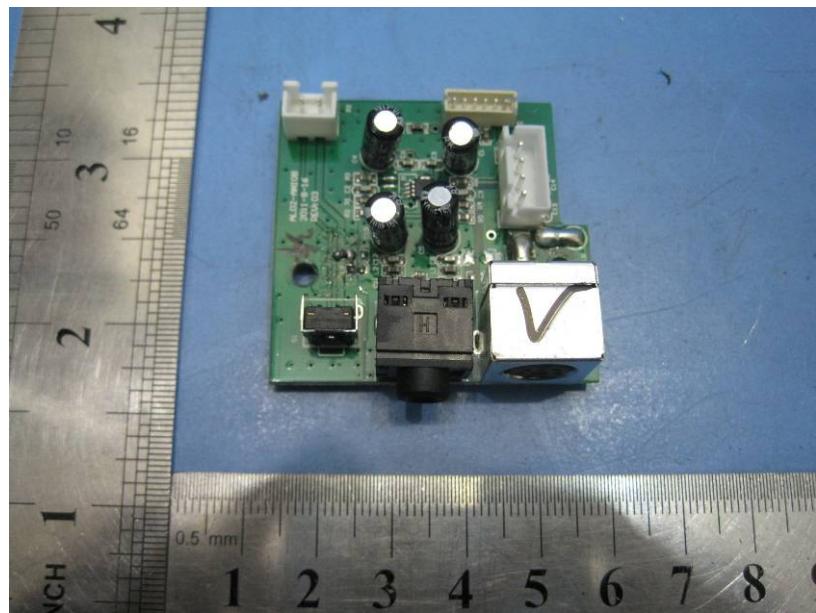


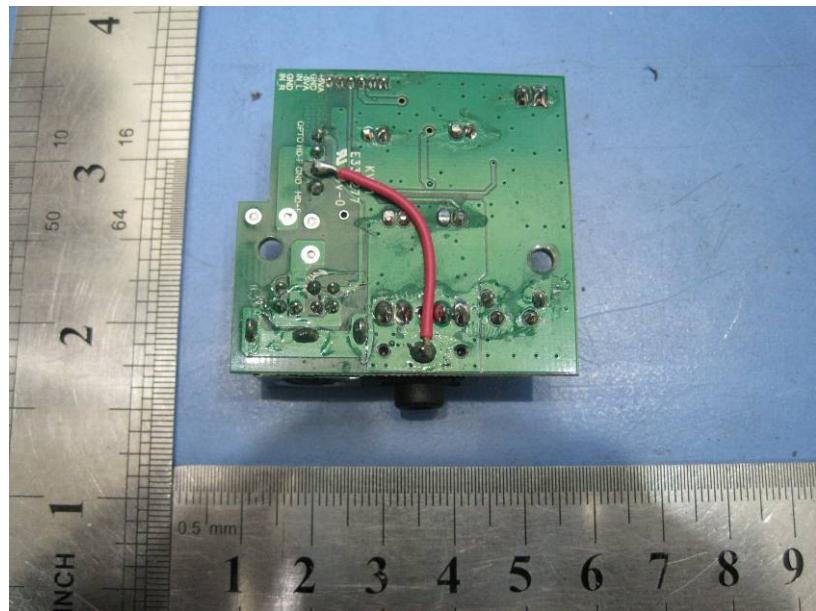



2.4 PCB3 - View

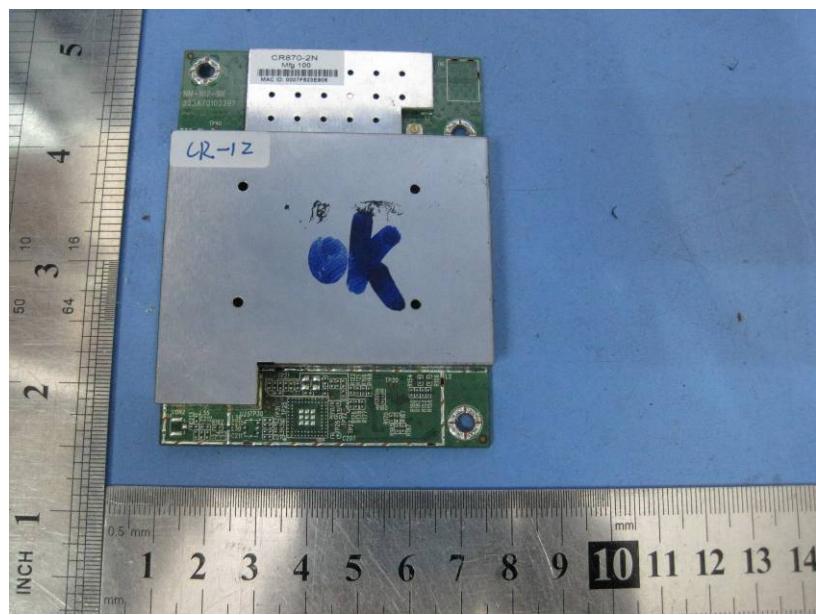

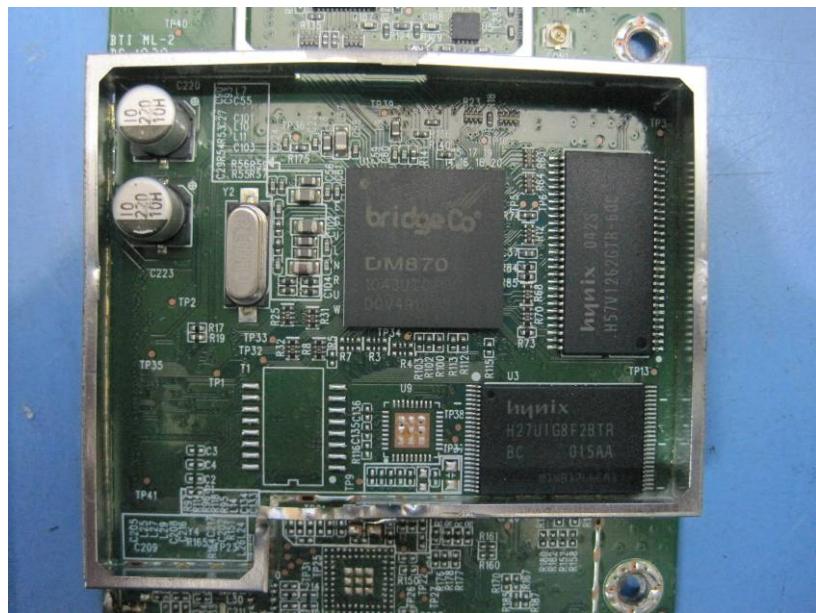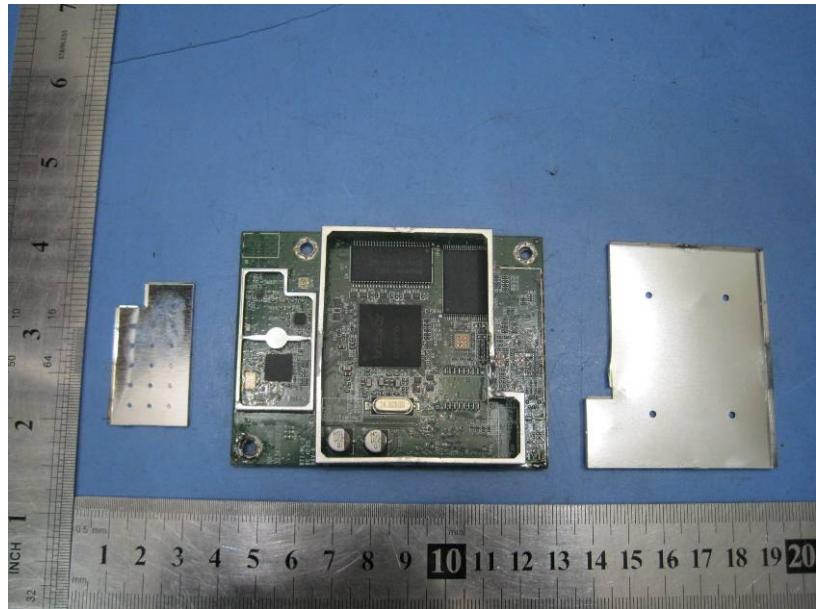



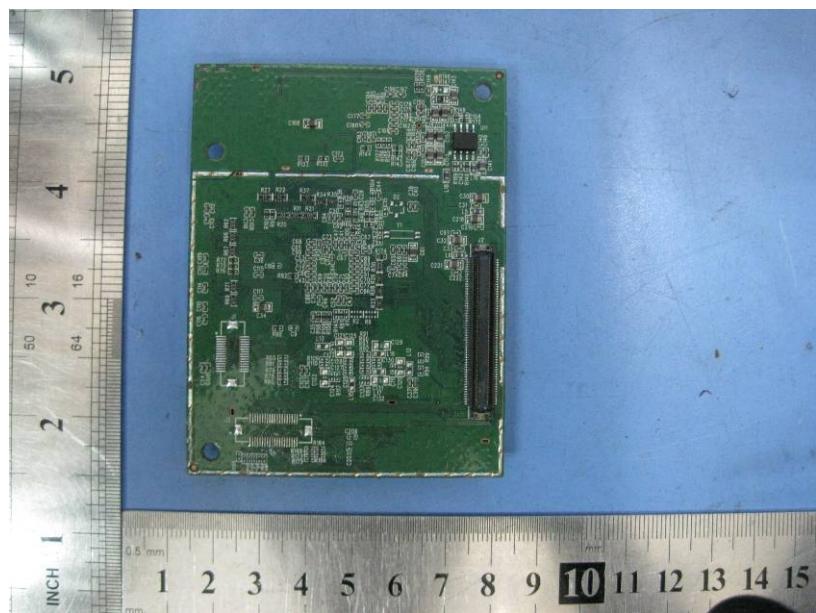


2.5 PCB4 - View

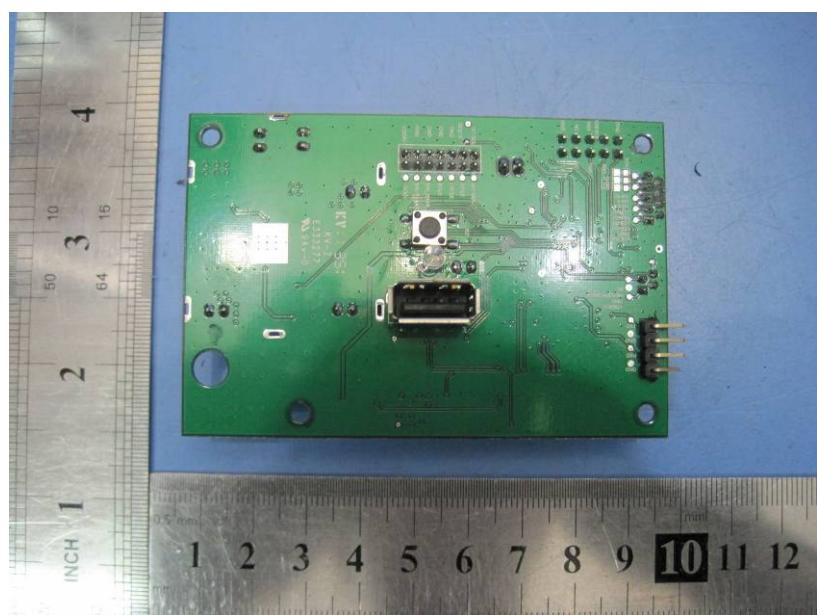
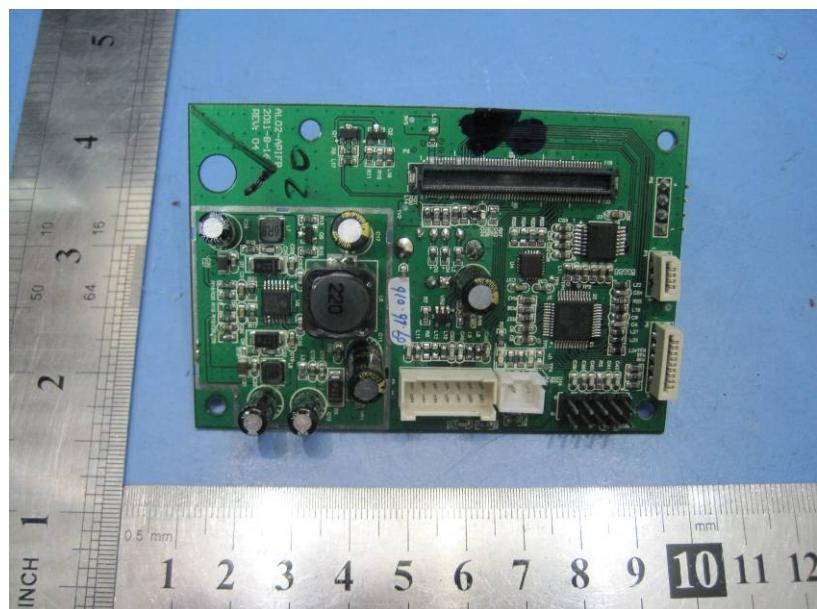


2.6 PCB5 - View


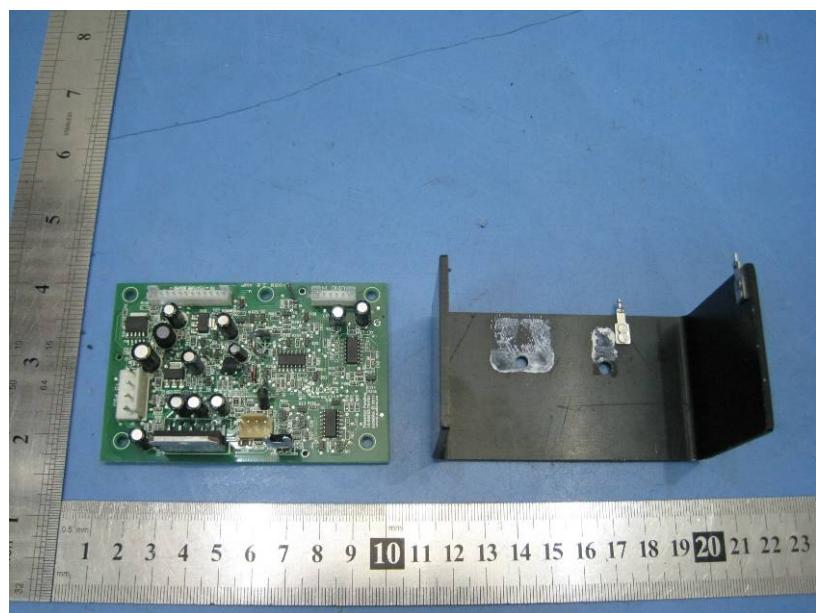


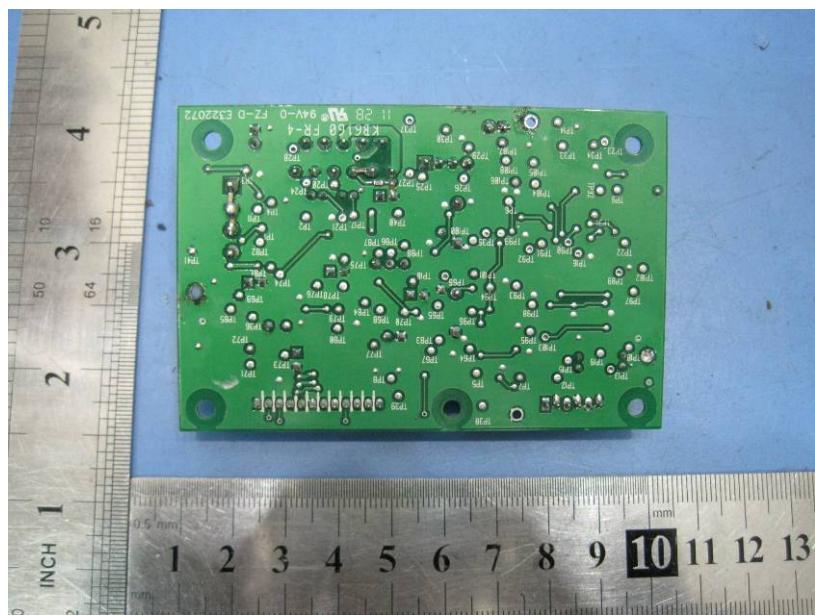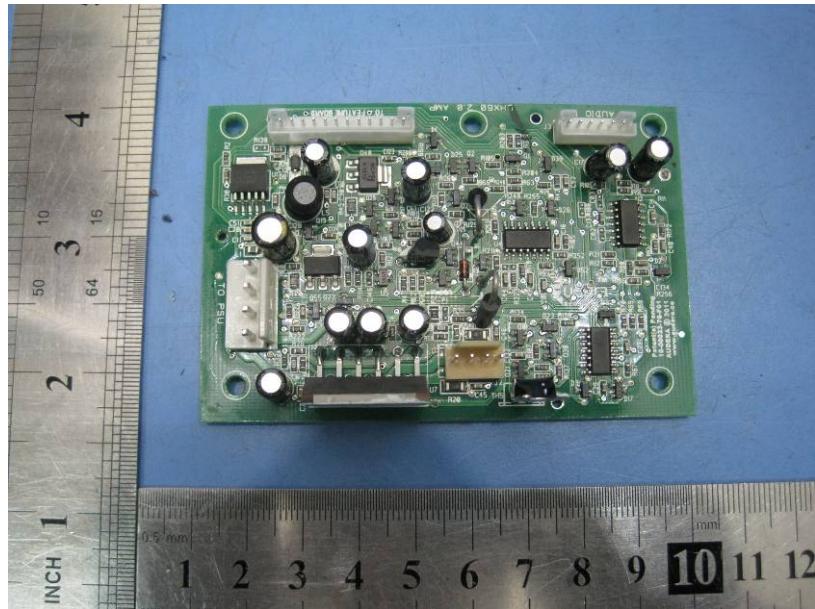


2.7 PCB6 - View

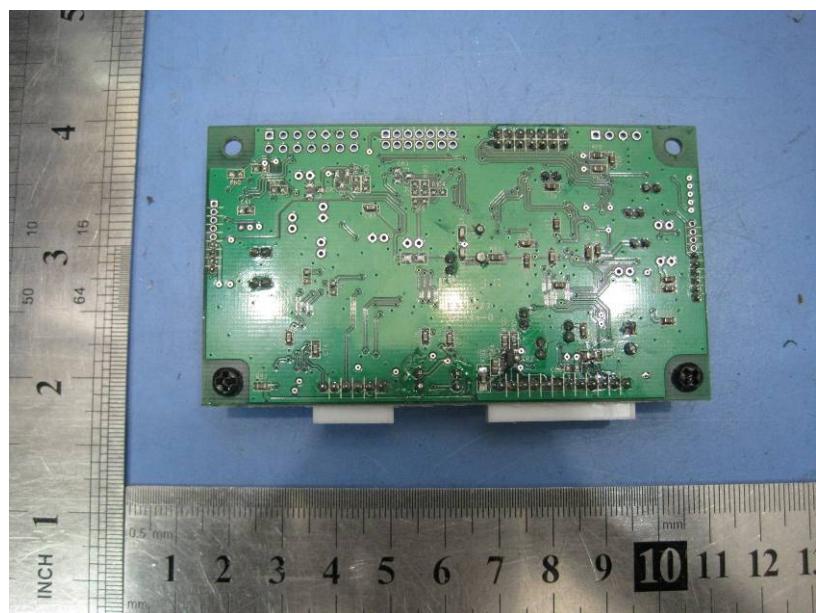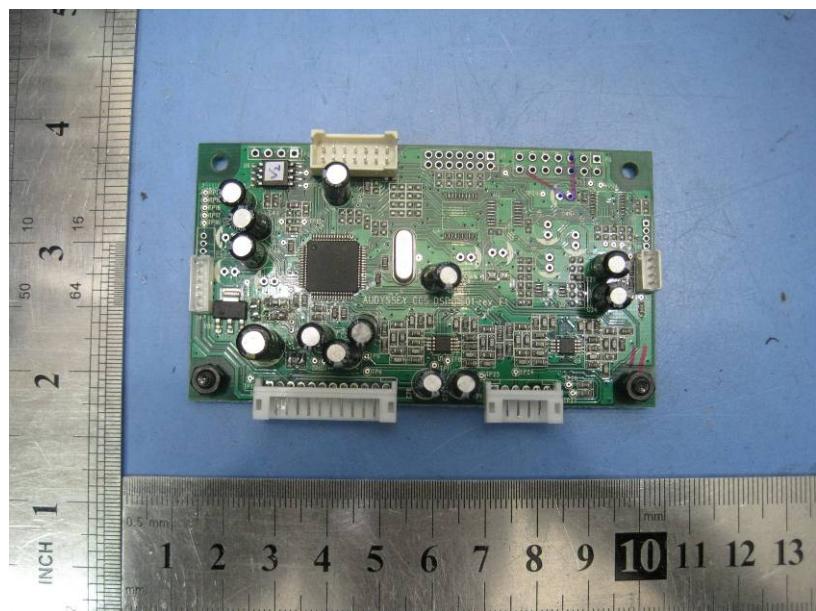


2.8 PCB of Volume control - View

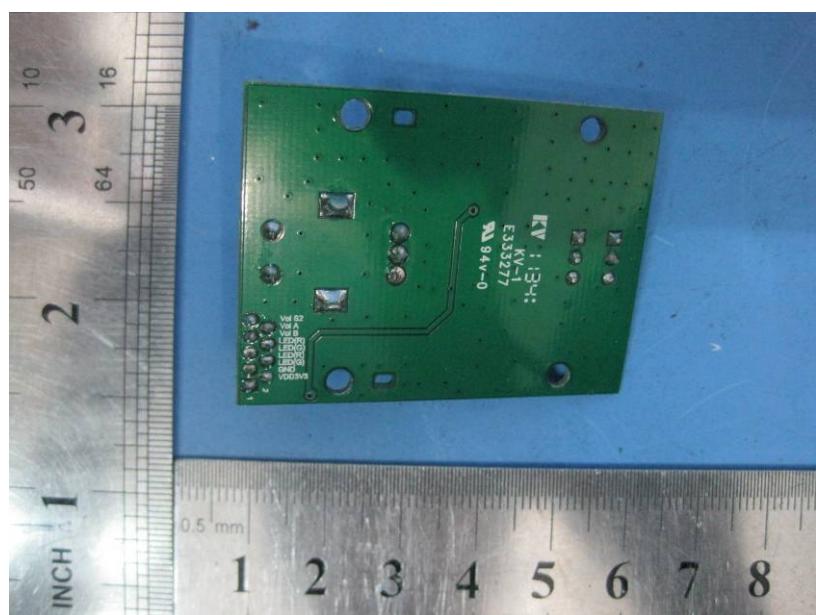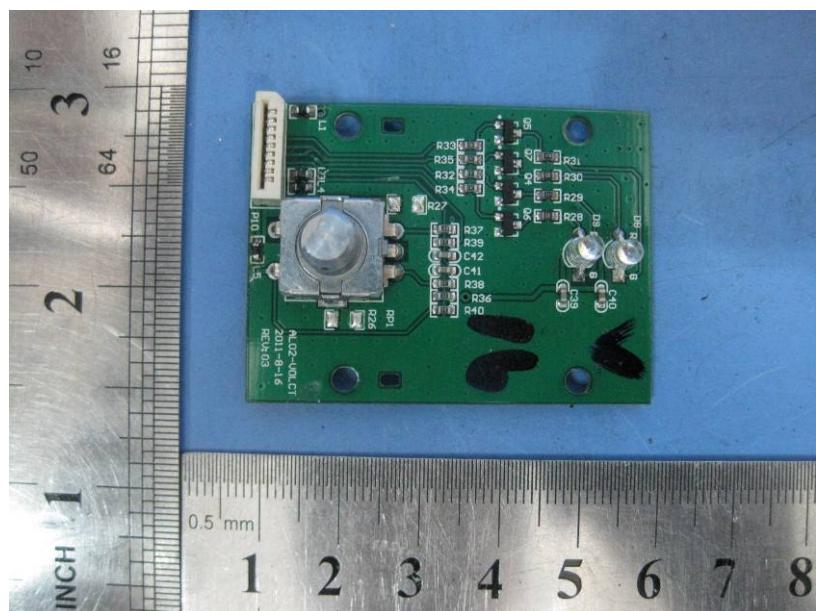


2.9 Antenna View

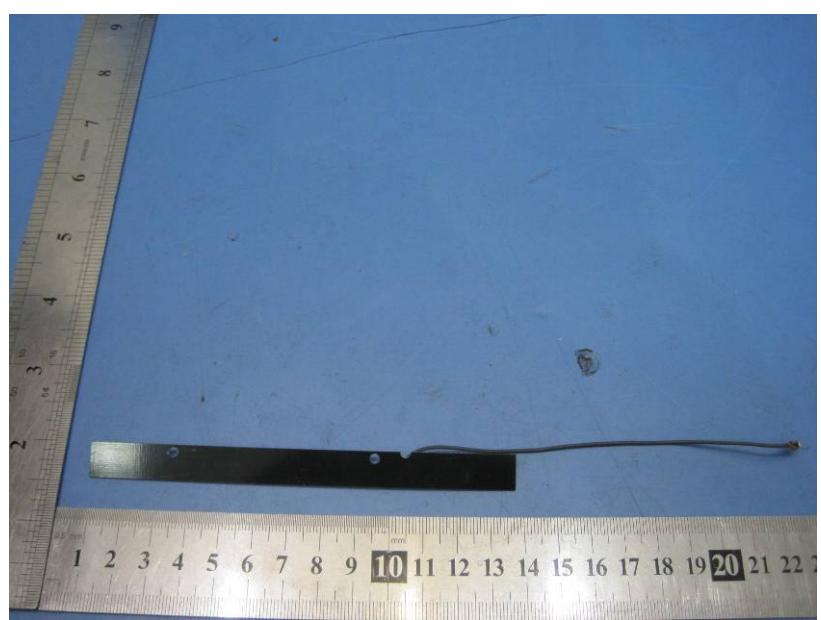

2.10 Adapter - Open View

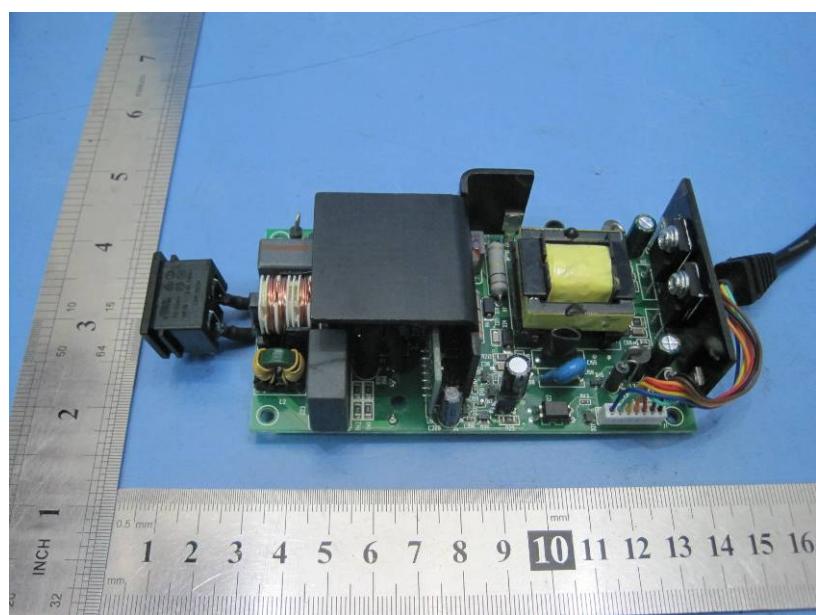

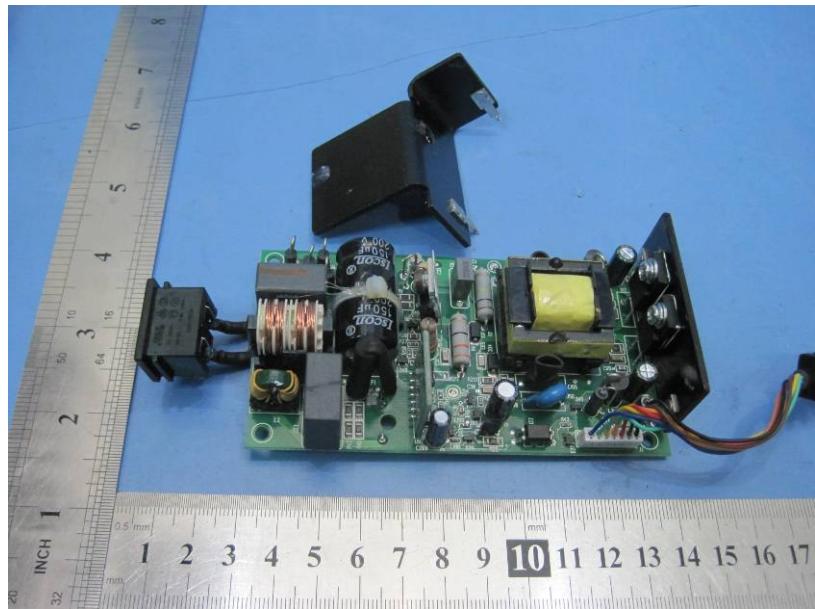

2.11 PCB of Adapter - View



