

# Maylong Mobility™ Tablet

---

## User's Manual



MAYLONG

## Table of Contents

<b>1. Getting Started .....</b>	<b>3</b>
1.1 Power On/Off .....	4
1.2 Battery Charging .....	4
1.3 Desktop Screen.....	5
1.4 Internet Access with Wi-Fi Interface.....	8
1.5 How to Use Micro SD Card .....	11
1.6 Familiar with Touch Screen .....	12
<b>2. Pre-installed Application</b>	
2.1 Internet Browser.....	13
2.2 YouTube .....	14
2.3 App Market(Pending, to be edited) .....	15
2.4 E-mail.....	16
2.5 File Browser .....	16
2.6 My Photo.....	21

2.7 My Video.....	21
2.8 My Music .....	22
<b>3. Adjust M-260 Settings.....</b>	<b>23</b>
3.1 Wireless controls .....	23
3.2 Sound & display.....	24
3.3 Application settings.....	27
3.4 Date and Time .....	27
3.5 Select Locale .....	27
3.6 Security & location .....	27
3.7 Install and Uninstall Applications .....	28
<b>4. Limited Warranty .....</b>	<b>31</b>

# 1. Getting Started

The first thing you probably want to do when you get Maylong M-260 Mobility™ Tablet is to familiarize yourself with a few basics.

Unpack M-260 box and identify the key items included. You should have:

1. M-260 device: The device includes a touch-sensitive LCD screen, a Micro SD memory card slot, a network/USB dongle slot, a power switch button, a MENU button, and speaker volume adjustment buttons etc.
2. A/C home adapter: This is used to charge the M-260. M-260 has a built-in chargeable battery.
3. A Stylus.
4. User Manual: You're holding this in your hands.

Warning: Don't use the device in the hot environment.

## 1.1 Power On/Off

**Power On:** Press and hold the power switch button for 2 seconds to turn on the M-260. You may have to charge the M-260 by using the A/C home adapter before the M-260 can be powered on, if battery power of the M-260 is very low.

**Power Off:** Press and hold the power button to turn off the M-260. A dialog box with options may be available for your selection.

## 1.2 Battery Charging

Maylong M-260 Tablet has a built-in chargeable battery. Please charge the battery using the A/C adapter included when the battery power indicator on the status bar shows low.

### **Warning:**

It is important to use the A/C home adapter included in the package for charging your M-260. Please contact Maylong customer service at 1-888-403-9477 for purchasing extra

A/C home adapter. M-260 may be damaged if you use incompatible A/C adapter to charge your M-260 Tablet.

### 1.3 Desktop Screen

The desktop screen is displayed after M-260 Android operating system is started.



The icons on the top of the desktop screen are named below.


	Home Screen		Last Screen
	Wi-Fi Signal		Battery Status
	Speaker Volume Down		Speaker Volume Up
	Command Menu		

Touch Home Screen icon  from any screen to go back to the Desktop screen.

Touch Command Menu icon  from some screens to display a command menu on the bottom of the screen.

## 1.4 Internet Access with Wi-Fi Interface

M-260 has a built-in Wi-Fi interface for accessing the internet. To enable Wi-Fi interface, touch Wi-Fi Settings icon from the Desktop Screen to display the Wi-Fi Settings screen.

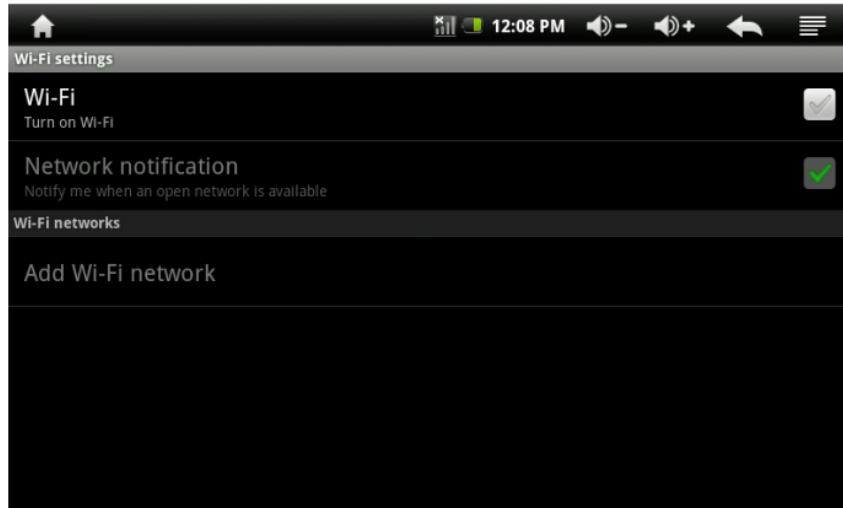




Touch “Turn on Wi-Fi” icon to enable the Wi-Fi interface. After the Wi-Fi interface is enabled, M-260 will automatically scan and list local Wi-Fi networks that it finds. A lock



image indicates a secure network that requires a password for access.

Tap the network that you would like the device to connect to. If a password is required, a notification screen will appear to allow you to enter the password. Tap the Wireless password box to access the keyboard and enter the password. Tap “Done” when finished.

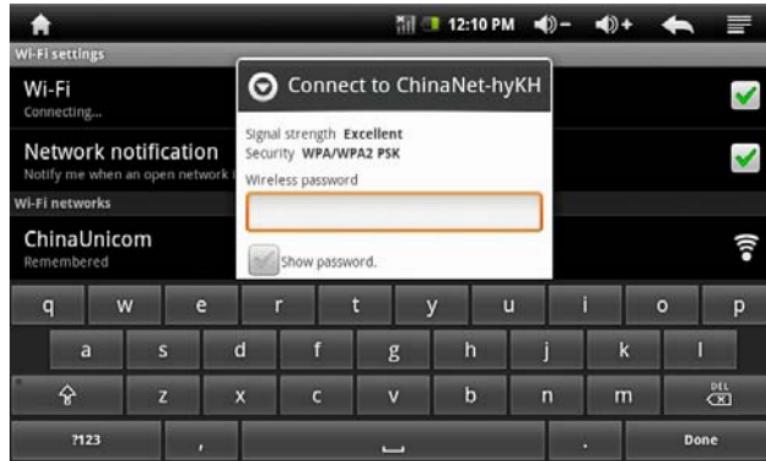

A wireless icon will appear in the toolbar to indicate that you are connected to the wireless network.



Touch icon to disable the Wi-Fi interface. It is recommended that you disable Wi-Fi

interface if you want to extend the battery usage time when you work with M-260 without Internet access.

## **1.5 How to Use Micro SD Card**

The Micro SD card is used for transferring files between M-260 and your personal computer, downloading applications, and playing stored media. There is no Micro SD card included in the M-260 package. Micro SD card can be purchased from local electronics stores.

### **Insert SD memory card:**

Insert SD card into the SD card slot until a “click” sound is heard. Once the SD card is

inserted properly, “Preparing SD card” will show on the left top of the screen next to



icon.

### **Browsing files in SD card:**

Touch on the File Browser icon from Desktop screen and then touch icon from the File Browser screen. The File Browser screen will show all the files & folders under the root directory of SD card.



### **Remove SD memory card:**

To remove the SD memory card, please close all applications or documents which have been opened from the SD card. Push the card lightly to eject the SD card.

## **1.6 Familiar with Touch Screen**

M-260 uses touch screen for you to interface with the device. Using the stylus included in the package would give you a better experience than using your fingers to operate the M-260.

If a network/USB dongle is available, you can connect a computer mouse with the dongle to operate the M-260.

## **2. Pre-installed Application**

M-260 comes with some pre-installed applications. A few M-260 core applications are introduced below.

### **2.1 Internet Browser**

Access the internet and surf the web. Touch Internet Browser icon  From Desktop screen to start surfing of the internet.

## 2.2 YouTube




View and share popular videos online. Touch YouTube icon from Desktop screen to start YouTube application.

**Note:** Some YouTube video format may not be supported by M-260 YouTube application.

## 2.3 App Market

Application store: Choose great applications to use on your Tablet.

Note: Not all applications work for Tablet.

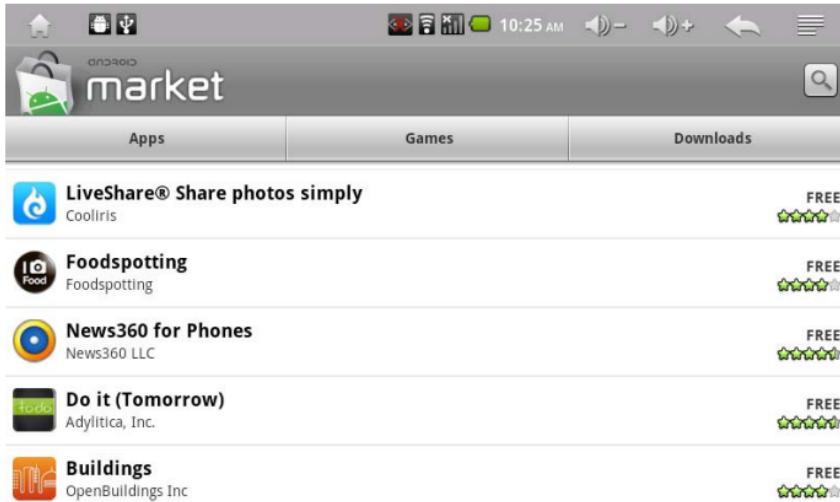

## 2.4 E-mail



To set up Email, tap Email icon  on the application home screen panel. Enter your email address and password. Tap Next. This will be your default account unless you add another email address. After you have more than one account set up, you can select a different address as the default account.

**Note:** M-260 uses Google Android operating system which may not support some email services.

## 2.5 File Browser

Manage files stored on the SD card or on local memory.



Touch the File Browser icon  to explore the files available in internal memory disk or SD card. From File Browser screen,



Touch **LevelUp** icon to go up one level in folder directory.



 
Touch **Multi** icon to enable selecting multiple files.



Touch **SD** icon to access files available in SD card.



Touch **U S B** icon to access files available in a USB drive that may be connected with a Network/USB dongle.



Touch **Internal Memory** icon to go back to LocalDisk folder in the internal memory disk.

## **Transfer files between internal memory disk and SD card**

You can transfer files between M-260 internal memory disk and SD card. An example of copying a file from TF card to internal memory disk is provided below.

1. Make sure a SD card is inserted into the SD card slot properly.



2. Touch SD card icon from File Browser screen to display the files in the SD card.
3. Select the file you want to transfer and then touch & hold the file name, a command window will be displayed.



4. Touch Copy command. The command window will be disappeared.
5. Touch internal memory disk icon  to switch to LocalDisk folder.
6. Touch & hold a blank area in the File Browser screen to display the command window.



7. Touch Paste command to copy the file from SD card into the internal memory disk.

### Delete files from internal memory disk

1. Select the file you want to delete and touch & hold the file to display a command window.

2. Touch & hold the command window and move up to see the Delete command
3. Touch Delete command to delete the selected file.

## 2.6 My Photo



Touch My Photo icon  from Desktop screen to start digital picture viewer application.



Press MENU button or touch Command Menu icon  to display the command menu on the bottom of the screen. You can select storage device for the digital pictures by touching Select Storage Device command from the command menu.


## 2.7 My Video




Touch My Video icon  from Desktop screen to start the built-in video player.

Press MENU button or touch Command Menu icon  to display the command menu on the bottom of the screen. You can select storage device for the digital video content by touching Select Storage Device command from the command menu.

## 2.8 My Music

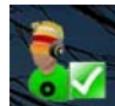

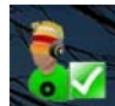Touch My Music icon  from Desktop screen to start the built-in music player.

Press MENU button or touch Command Menu icon  from My Music screen to display the Command Menu on the bottom of the screen. You can select storage device for the digital music content.

Speaker volume can be adjusted by pressing the volume adjustment buttons or Speaker Volume icons.

### 3. Adjust M-260 Settings



Touch the Settings icon from Desktop screen to display the Settings screen. You can use your fingers or the stylus to touch & hold the screen and then move up or down the screen to view all setting options available.

#### 3.1 Wireless controls


Settings for M-260 wireless communication can be configured from the Wireless Controls screen. Wi-Fi interface can be enabled or disabled and Wi-Fi network setting can be managed from the Wireless Controls screen.

M-260 supports some 3G dongles for mobile data communication. 3G network settings can be managed if a 3G dongle is connected with your M-260.

Airplane mode is available with M-260. If Airplane mode is enabled, all M-260 wireless communication interfaces are disabled. You should see  icon shows up next to the battery icon once airplane mode is turned on.

### **3.2 Sound & display**

Touch Sound from Settings screen to manage the settings related to sound.

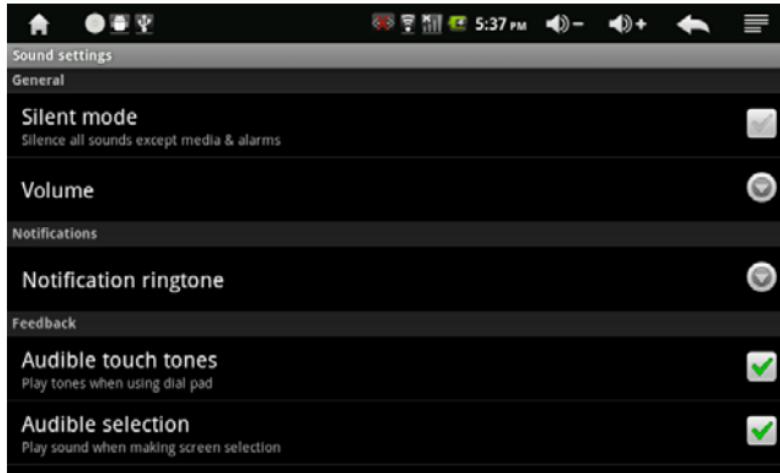


You can personalize the M-260 Sound settings as your preference.

Under display settings, enabling Orientation setting will allow switch of display orientation (vertical or horizontal) when rotating the M-260 device. When Orientation setting is enabled,

Screen Orientation icon

Otherwise, the Screen Orientation icon

will be displayed on the top of screen.

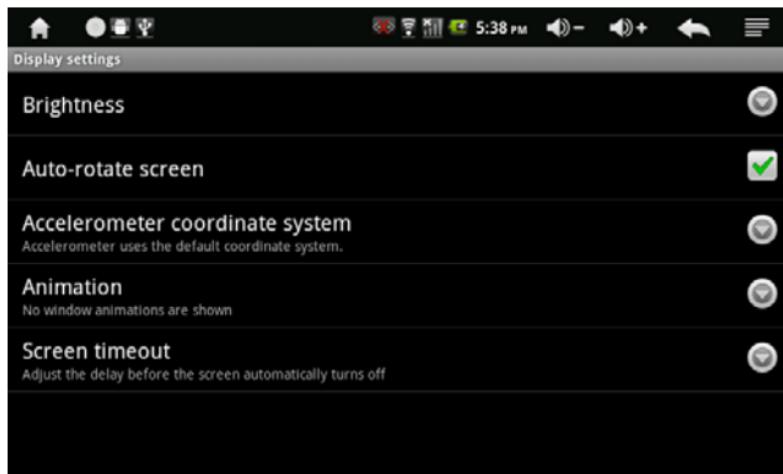

### **3.3 Application settings**

You can find all application related settings here. Un-installation of applications is part of the Application settings.

### **3.4 Date and Time**

Date, time, time zone, and time format can be configured from this setting.

### **3.5 Select Locale**

You can select language for M-260 user interface from this setting.

### **3.6 Security & location**


Security related settings are configured here. Security settings protect access to your M-260 from unauthorized users.

**Note:** M-260 does not have GPS included. My Location settings can be ignored.

## 3.7 Install and Uninstall Applications


### Install Application

To install third-party applications, touch File Browser icon from Desktop Screen and then find the APK file from the SD card or internal memory disk. Touch the APK file to start the installation.

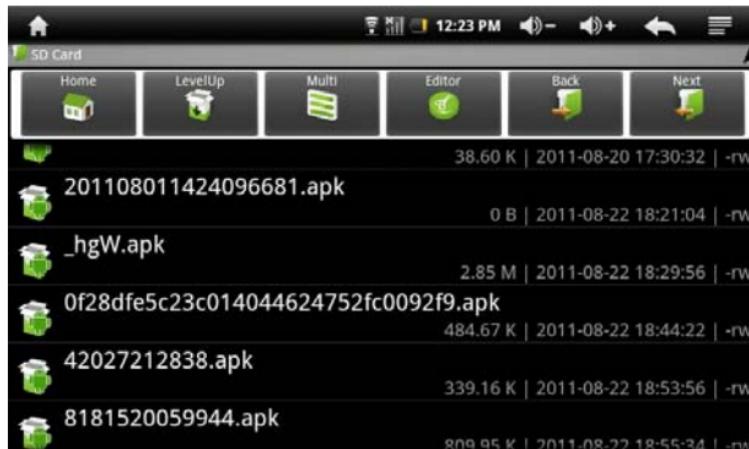


## Uninstall Application

To uninstall or remove an application from M-260, touch Settings icon from Desktop Screen to bring up the Settings screen.

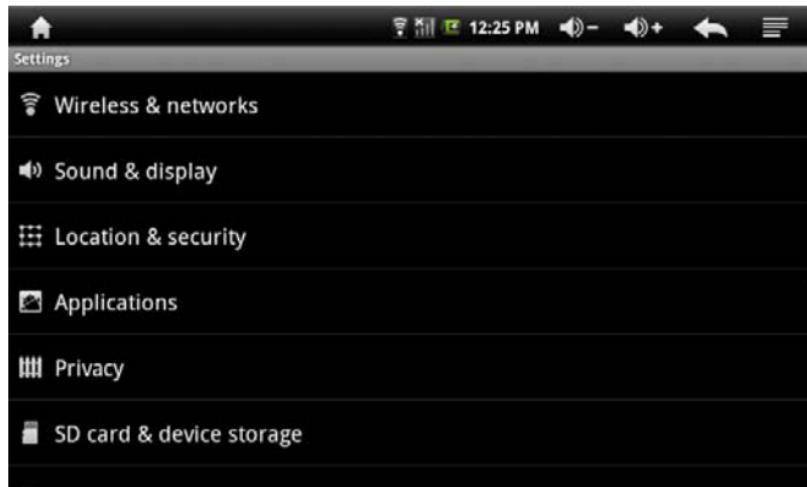

From Settings screen, touch Applications to display the Application Settings screen and then touch Manage Applications to start the un-installation process.

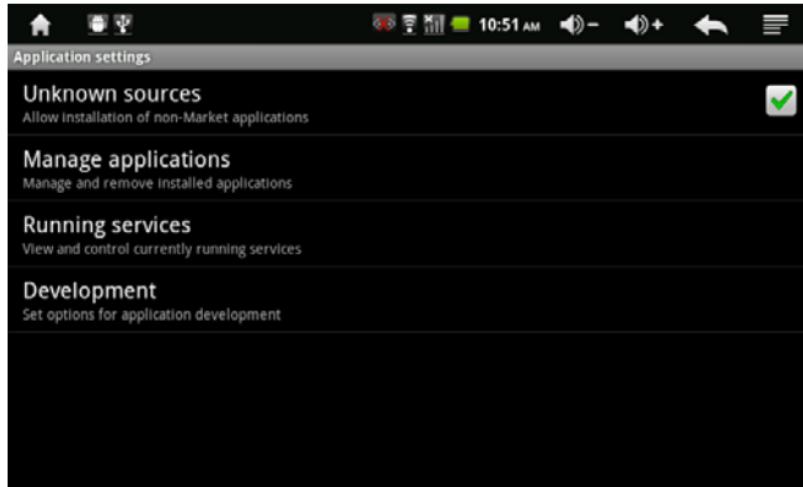

## **4. Limited Warranty**

All Maylong products and services are warranted to be free from defects in materials or workmanship for one year from the date of purchase. Within the one-year period of time, Maylong Group LLC will, at its sole option, repair or replace any components which fail from normal use. Such repairs or replacement will be made at no charge to the customer for parts or labor, provided that the customer shall be responsible for any transportation cost related to the repairs or replacement.

This warranty does not apply if the product or part thereof, has been damaged or rendered defective through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). The opinion of Maylong's customer service advisors with respect to this matter shall be final.

**THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN**

LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL MAYLONG BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE OR INABILITY TO USE THE PRODUCT OR FROM DEFECTS IN THE PRODUCT. SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

No person or representative is authorized to assume for Maylong any liability other than expressed herein in connection with the sale of this product. Maylong shall not be liable for any delay, loss, damage or injury caused by Acts of God, governmental order or regulation, restraining imposed by governmental action, war, war-like situation, hostilities, governmental

disposal, mobilization, blockage, embargo, custody, revolution, fire, earthquake, tornado, explosion, storm, flood, or for any other cause beyond its reasonable control (“Force Majeure”). Maylong retains the exclusive right to repair or replace the product at its sole discretion. **SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.**

## **Warranty Repairs**

We have one year limited warranty for the products purchased from our authorized seller and retailers. Please call our technical support at 1-888- 403-9477. If you have done any troubleshooting on your own, please be prepared to provide this information to our technical support representatives. We will also require a proof of purchase that shows date, model number, and location.

RMA Procedure:

1. Call Maylong customer service at 1-888-403-9477
2. Troubleshoot problem over the phone

3. Request for RMA number & return instruction. You may be asked to fill out a RMA form at our Web site.
4. Return product in a secure and durable package to prevent damage during transit
5. Please make sure to include the following information along with the return package:

Your name & mailing address

Telephone number

A short description of problem

Model number and serial number (S/N number)

RMA number

6. Please mark your assigned RMA number visibly and clearly on the outside of the box
7. Your claim will be evaluated by our technical specialist. Repair services will be performed as soon as possible.

Note: Repairs have a 45 day warranty. If the unit sent in is still under its original warranty, then

the new warranty is 45 days or to the end of the original one year warranty, depending upon which is longer.

## **Copyrights**

For Dummies, the Dummies Man logo and related trademarks and trade dress are registered trademarks of Wiley Publishing, Inc. Any use of such trademarks by Maylong Group is under license. These trademarks may not be used without the express permission of Wiley. Let's GO! is a registered trademark of Maylong Group LLC in the United States and/or other countries.

© 2010 Maylong Group LLC

## FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE 3: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

- No any ad hoc function