

# INSTRUCTION MANUAL

7-IN-1 TURNTABLE MUSIC CENTER

VHRP-1400

# WARNING

 <p>The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<p><b>CAUTION</b></p> <p><b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b></p> <p><b>CAUTION: TO PREVENT RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</b></p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
--	---	---

**CAUTION:** To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical grounding.

## Important Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, power outlets, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lighting storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
15. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
16. The use of the equipment in moderate climate.
17. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
18. Do not place open flame sources, such as lighted candles, on the apparatus.
19. The symbol with  $\sim$  indicates AC voltage.
20. CAUTION, These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Caution: For pluggable equipment, the socket-outlet shall be easily ACCESSIBLE.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



# TABLE OF CONTENTS

FEATURES .....	4
SPECIFICATIONS .....	4
PRODUCT OVERVIEW .....	5
REMOTE CONTROL .....	6
SETUP & BASIC OPERATION .....	8
LISTENING TO THE RADIO .....	9
LISTENING TO AUX DEVICE .....	10
LISTENING TO BLUETOOTH® DEVICE .....	10
LISTENING TO A RECORD .....	11
LISTENING TO A CD/CD-MP3 .....	11
PLAYING MUSIC FROM USB DEVICE .....	13
CD ENCODING .....	15
PHONO/AUX/BLUETOOTH ENCODING .....	15
MAINTENANCE .....	16
TROUBLESHOOTING .....	16
FCC NOTICE .....	16
CAUTION ON MODIFICATION .....	16
SUPPORT .....	18

# FEATURES

DINER 7-in-1 Turntable Music Center is loaded with modern features within a great 1950's Diner Design. The built in 3-Speed Turntable, CD & AM/FM Radio are ready to play all your favorite songs! The Dual Bluetooth feature allows streaming of your vinyl records to an external Bluetooth Speaker or plays music from your Smart Device through the Diner's built in Speakers. The Aux Input allows for even more additional Playback options!

- 3-Speed record player will play 33 1/3, 45, 78 RPM records
- Bluetooth® In connectivity allows you to stream music from another source up to 33 feet
- Bluetooth® Out connectivity allows you to stream vinyl playback through any external Bluetooth® speakers
- CD/MP3 Player
- USB input for Playback & One Touch Recording of your favorite music
- AM/FM Radio
- Includes Aux Input & Headphone Jack for additional connectivity options
- Built in Stereo Speakers for playback convenience

# SPECIFICATIONS


Product Name	DINER (7-IN-1 Turntable Music Center)
Turntable Speed	33 1/3, 45, 78 RPM
FM Frequency Range	87.5 to 108 MHz
FM Station Memory	Up to 9
AM Frequency Range	520 to 1710 KHz
AM Station Memory	Up to 9
Bluetooth® Version	5.0
Bluetooth® Frequency	2.402 GHz-2.480 GHz
Bluetooth® Operating Distance	Up to 33 Feet (10 Meters)*
Input	USB, Line In/Aux in
Output	Line Out, Headphone x 1
Built-in Speakers	3" x 2
Speaker Output Power	2W x 2
Power Consumption	25W
Power Source	AC 120V 60Hz
Accessories Included	Remote Control, RCA cable, User Manual, Quick Set Up Guide

*\*Distance may vary depending on any objects or interference between devices.*

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE

# PRODUCT OVERVIEW

Front View

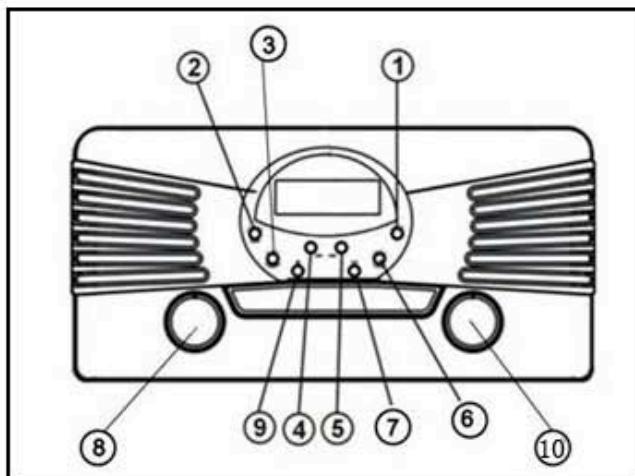

1. **FUNCTION:** select a source (CD, AM, FM, BLUETOOTH, PHONO, USB or AUX)
2. **OPEN/CLOSE/DELETE:** In CD/CD-MP3 mode, use to open and close the disc tray/ In USB mode, Use this button to delete an USB track.
3. **REC:** In CD, CD-MP3, PHONO, BLUETOOTH and AUX-in mode, short press to enter record mode. Press again to end of the recording.
4. **PREVIOUS TRACK/REWIND(◀◀):** In CD, CD-MP3 mode, press (◀◀) once to restart the current track, press (◀◀) twice in succession to return to the beginning of the previous track. In USB mode, press once to skip to previous track. Long press fast rewind. In radio mode, short press to tune a station. Long press to auto search the station. In radio preset mode, press to select a location where you want to preset.
5. **NEXT TRACK/FAST FORWARD(▶▶):** In CD, CD-MP3 or USB mode, press (▶▶) once to skip to the next track. Press and hold to fast forward. In radio mode, short press to tune a station, Long press to auto search the station. In radio preset mode, press to select a location where you want to preset.
6. **PLAY MODE/PROGRAM:** In CD, CD-MP3 or USB mode, press to select a repeat mode. In CD, CD-MP3 or USB stop mode, press to program tracks. In radio mode, long press to manually save the station. Short press to view and select station.
7. **PLAY/PAUSE/PAIR:** In CD/CD-MP3/USB/Bluetooth mode, press to start playback and pause. In Bluetooth mode, long press to disconnect the Bluetooth connection.
8. **VOLUME+ or ON/OFF:** Turn to adjust volume. Press to turn on/off the unit. (Volume ranges from 0 to 32.)
9. **STOP:** Press to stop playback.
10. **TUNING/SCAN/PAIR:** In AM/FM mode, turn to tune in a station/Long press to auto search the station. In Bluetooth transmitter state, press about 2 seconds to disconnecting Bluetooth or start pairing.

## Rear View

### 1. FM wire antenna

While tuned to a station in FM mode, extend the wire and reposition to adjust for best reception.


### 2. LINE- IN (Aux In) jack

For audio source with RCA jacks, use plug on end of the RCA cable into these jacks and the other into the audio sources.

### 3. Line out jack.


### 4. AC power cord

Plugs into a wall outlet.

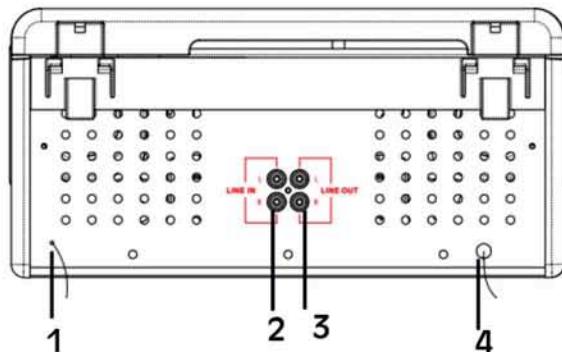

## Parts of the Turntable

1. Turntable
2. Spindle
3. Adapter for 45 RPM records
4. Cue-lever
5. Speed control switch
6. Tone arm
7. Tone arm rest
8. Stylus
9. Headphone jack
10. USB recording indicator
11. USB jack

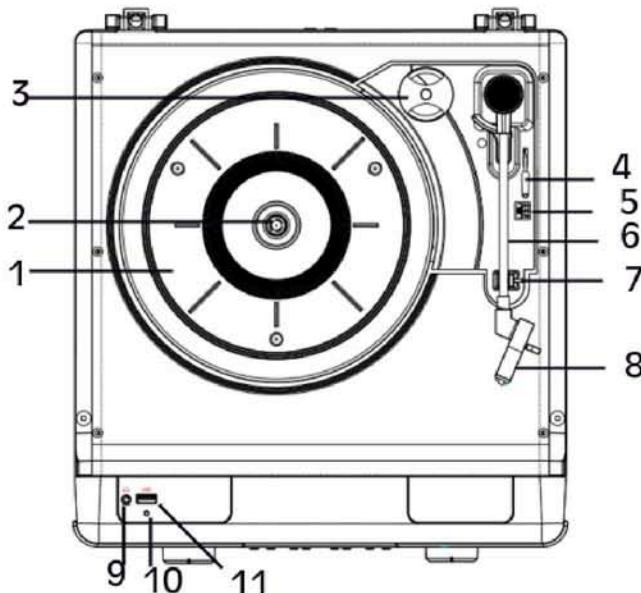

# REMOTE CONTROL

When using the remote control, point it towards the remote sensor on the front panel of the unit.

### Notes:


- Even if the remote control is operated within the effective range, remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote control unit is operated near other devices which generate infrared rays, it may not function properly. Conversely, the other devices may not function incorrectly.

### Battery Installation

1. Remove the battery compartment cover.
2. Insert 2x "AAA" batteries. (batteries not included) Note: Make sure that they are oriented so their polarity markings, "+" and "-" match the remote's markings.
3. Replace the battery compartment cover.

## Battery Replacement

When the distance required between the remote control unit and main unit decreases, it is necessary to replace the battery with new ones.

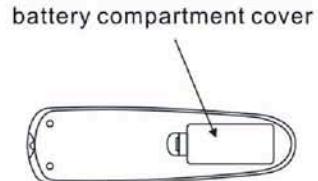


## Battery Precautions

Be sure to insert the batteries with correct positive "+" and negative "-" orientation. ALWAYS use batteries of the same type. Never mix different types of batteries together. When using rechargeable batteries, refer to the precautions on their labels. When the remote control unit is not to be used for a long time (more than a month), remove the batteries to prevent them from leaking. Do not heat or disassemble batteries, and NEVER dispose of old batteries by throwing them in a fire.

## Remote Control Button Functions

1. **POWER:** Press to turn on the unit.
2. **MUTE**
3. **PROGRAM:** In CD/CD-MP3/USB mode, press to program tracks. In radio mode, press to preset a station.
4. **RADIO:** Press to listen to the radio. Press again to switch between AM and FM modes
5. **USB:** Press to switch to USB mode.
6. **STOP:** Press to stop playback.
7. **PLAY/PAUSE/PAIR/SCAN:** Press to play/pause track.  
In radio mode, long press to auto save the station.  
In Bluetooth mode, long press to disconnecting pairing.
8. **CH- / PREVIOUS TRACK / REWIND:** In CD/CD-MP3 mode, press once to restart the current track, press twice in succession to return to the beginning of the previous track. In USB and Bluetooth mode, press to skip previous track. In radio preset state, press to select a location where you want to preset.
9. **VOL-:** Press to adjust the volume down.
10. **FOLDER DOWN:** In CD-MP3/USB mode, press to choose folder. In radio mode, press to view or selector saved station.
11. **OPEN/CLOSE:** Press to open/close the disc tray.
12. **DELETE:** Use this button to delete the USB tracks.
13. **REPEAT:** In CD/CD-MP3/USB mode, press to select repeat mode.

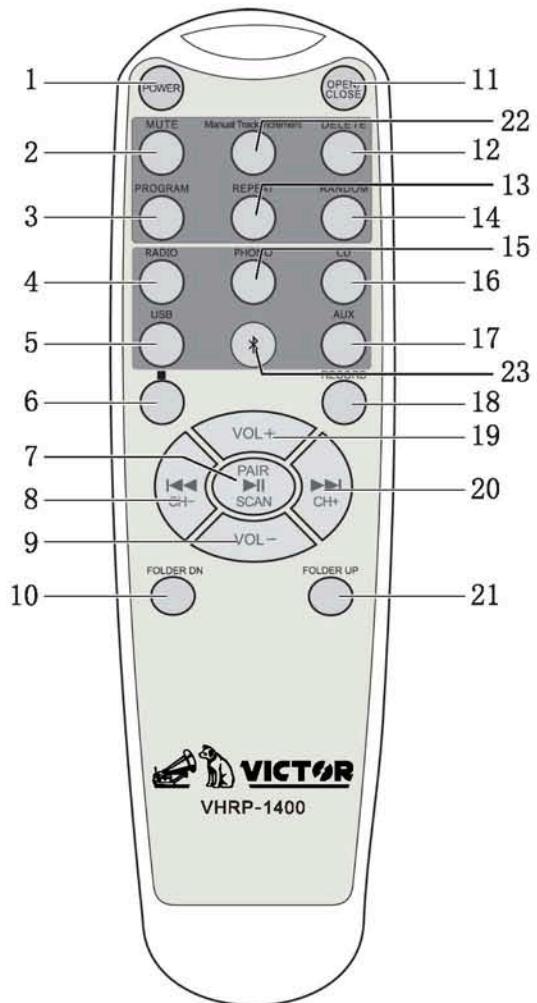

14. **RANDOM:** In CD,CD-MP3,USB mode, press to enter the random play
15. **PHONO:** Press to play a vinyl record.
16. **CD:** Press to play a CD/CD-MP3 mode.
17. **AUX:** Press to listen to an external source connected to the LINE IN jack.
18. **REC:** In CD, CD-MP3/PHONO/AUX, Bluetooth play mode, short press to enter record mode. Press again to end of the recording.
19. **VOL+:** Press to adjust the volume.
20. **CH+ / NEXT TRACK / FAST FORWARD:** In CD, CD-MP3, USB mode press to skip to the next track. Press and hold to fast forward. In Bluetooth mode, press to skip to the next track. In radio preset state, press to select a location where you want to preset
21. **FOLDER UP:** In CD-MP3/USB mode, press to choose folder. In radio mode, press to view or selector saved station.
22. **MANUAL TRACK INCREMENT:** In Bluetooth, AUX, PHONO recording mode, press to divide the music.
23. Press to enter Bluetooth® mode.


## SETUP & BASIC OPERATION

### SETUP

1. Connect the power plug into the wall outlet. **Note:** To prevent interference, avoid bundling audio signal cables together with the AC power cord.
2. Extend Antenna: For optimal FM reception, be sure to stretch the FM antenna wire located at the lower back of the unit and move it around until the station you have tuned in is being received clearly.

## BASIC OPERATION


1. Press the ON/OFF button to turn the unit on. Press the ON/OFF button again to turn the unit off.

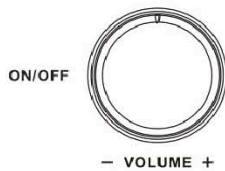

2. Select the source.



3. Rotate the VOLUME knob to adjust to the desired sound level.
4. Listening through Earphones / Headphones (not included). The sound from all speakers is cut off.

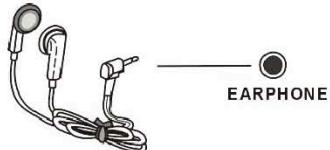


The sound from all speakers is cut off.

## LISTENING TO THE RADIO

1. Press the FUNCTION button to select the AM/FM tuning function. The display will show "AM" or "FM".



2. Tune to the desired frequency.

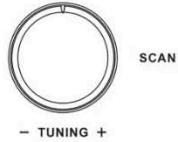

3. Or press the  $\blacktriangleleft\blacktriangleleft$  and  $\blacktriangleright\blacktriangleright$  button to select a frequency, and you can press and hold this button to auto search the station.
4. **Save a station:**

You can save your favorite stations. It can save 9 stations in FM, 9 stations in AM.

### Auto save a station:

1. Long press SCAN button or long press the scan button on the remote control to auto search and save the stations.

2. Press "Program" button on unit or press "Folder UP" or "Folder DN" button on remote control to view or listen the saved station.

**Manually save a station:**

1. Select a radio station that you want to save.
2. Long press "PROG" button, the "P-" will flash on the screen.
3. Press the  or  button to select a position. Note: If you save a new station at the location where one was already saved, the previous station will be overwritten.
4. Press "Program" button to confirm.
5. After the preset is complete, press the "Program" button on unit or press "Folder UP" or "Folder DN" button on remote control to view or listen the saved station.

## **LISTENING TO AUX DEVICE**

An external (auxiliary) audio source (i.e., personal CD player or MP3 player) can be connected to this unit and heard through the speakers.

**LINE IN (AUX IN):**

1. Connect an external device using the LINE IN socket on the back of the unit.
  - a. Plug the RCA red and white jack (included) into the LINE IN socket with the same color on the back of the unit.
  - b. Plug the other end of the cable into the headphone or Line Out socket of the external source.
2. Press the FUNCTION button to select the AUX function, and the display will show "AUX".

**LINE OUT:**

1. Connect to external speakers or entertainment system (Optional) using the LINE OUT jacks on the back of the unit:
  - a. Connect the red RCA cable to the red jack and the white RCA Cable to the white jack on the back of the unit.
  - b. Plug the other ends of the RCA Cable into the auxiliary input (AUX) on your home entertainment receiver or other music system, again being sure that the correct color-coded jacks are used.
  - c. Do not turn up the volume on your Unit. Instead adjust the volume on your TV or home entertainment receiver.

## **LISTENING TO BLUETOOTH® DEVICE**

External devices which have a built-in Bluetooth® feature can be connected to this apparatus and play through the speakers.

## GETTING CONNECTED

1. Press the Function button to select the Bluetooth mode.
2. Set the Bluetooth function of your external device ON.
3. Set to search Bluetooth device on your external device. Note: The effective distance between your external device and this apparatus is up to 33 feet (10 meters).
4. Wait for a while then find the "VICTOR VHRP-1400" on the paired devices list on your external device.
5. If a window asks you a password. Fill in "0000" or "1234" then press "OK" on your external device.
6. A few seconds later your Bluetooth connection should be achieved.

## BLUETOOTH® OUT

1. In CD, AUX IN, PHONO mode, you can use Bluetooth transmitting function to play music from the device on an external Bluetooth speaker.
2. In CD, AUX IN, PHONO mode, Bluetooth will emit automatically. If you want to use an external Bluetooth speaker to connect to the unit, just set the Bluetooth speaker to pairing mode.
3. Press TUNING/SCAN button about 2 seconds to disconnecting paired Bluetooth speaker or start pairing.
4. After Bluetooth connection, the unit will be silent. You can adjust the volume of the external Bluetooth speaker through the VOLUME knob on unit or VOL+ /VOL - buttons on remote control.
5. When you switch to other function mode (Bluetooth, USB, Radio) Bluetooth will disconnecting.

**Note:** Make sure that Bluetooth is off on any devices in the vicinity that will automatically connect to your speaker. And the effective distance between your external device and this apparatus is up to 33 feet (10 meters).

## LISTENING TO A RECORD

1. Press the FUNCTION button to select the PHONO function, and the display will show "PHONO".




2. Select player speed (33 1/3, 45, OR 78 RPM).
3. Put a record onto the turntable (use the 45 RPM adaptor provided when playing a single record).
4. Use cue-lever to raise the tone arm.
5. Move the tone arm over the record.
6. Use the cue-lever to lower the tone arm so that the stylus contact the record. The record start to play.
7. When the record has finished playing, the TONE ARM will stop at the center of the record and must be returned to the arm rest manually.

**Note:** After you play 45 & 78 RPM vinyl record, it will stop in about 60 seconds.

# LISTENING TO A CD/CD-MP3

1. Press the FUNCTION button to select CD function, and display will show "CD".

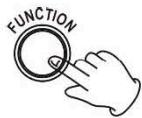

2. Open the CD door by pressing OPEN/CLOSE button, and then put the CD disc on the tray.




3. Close the tray and the "CD READ" will flash for few seconds on the display. The CD disc will start playing from the first track automatically.

4. Press the FF (▶) button once to go the start of the next track.



5. Press the FR (◀) button once to go back to the restart of the current track. Press the FR button twice to go back to the start of the previous track.

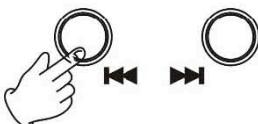

6. Press and hold the FF (▶) button or FR (◀) button reverse or forward to any point in a selected track. *Note:* Do not push both buttons together as this may damage the unit. As the unit is tracking quickly, forward or backward you will hear your selection playing at a distorted speed. Simply release the depressed button to continue playing at normal speed at the desired position in the selected track.

7. Play mode

Each time the REPEAT button is pressed, the repeat mode will cycle through the following options:

**A. REPEAT 1:** The current track will be played repeatedly. If you press the (◀◀ or ▶▶) button to select another track, the track you select will be played repeatedly.

**B. REPEAT:** In CD-MP3 mode, you can select the folder to play repeatedly.

**C. REPEAT ALL:** The entire CD/CD-MP3 will be played repeatedly.

**D. RANDOM:** Press PLAY MODE/PROGRAM button for the four times to random play, and the "RANDOM" will show on the display

**Clear play mode:**


Press PLAY MODE/PROGRAM button repeatedly until "repeat" or "random" disappear on the screen.

8. In stop state, press the PLAY MODE/PROGRAM button, the LCD display will show PROG, then press the F.F or F.R button to select the tracks, press the PLAY MODE/PROGRAM button to repeat this step to program, and it can be up to 20 songs in CD mode, 99 songs in CD-mp3 mode. When play programmed tracks, press STOP button twice, you can delete program function.

9. Pausing the CD play.



10. Pressing the PLAY/PAUSE button will restart the CD where it was paused. Do not switch the unit off while playing a CD as this will damage the unit.
11. Pressing the STOP to stop the CD play.

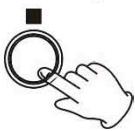

**Note:** Press the Folder DN or Folder UP button on remote control can select folder in CD-mp3 disc.

## COMPACT DISC FORMAT

This unit has been designed specifically for sound reproduction from compact discs bearing the mark. No other discs can be used.


1. Always place the CD in the tray with the label facing upward. (Compact discs can be played only on one side.)
2. Fingermarks and dust should be carefully wiped off the disc recorded surface with a soft cloth (not included).
3. Never use chemicals such as: record sprays, anti-static sprays or fluid, benzene or thinner to clean compact discs. Such chemicals will do irreparable damage to the disc's plastic surface.
4. CD should be returned to their cases after use to avoid serious scratches that could cause the laser pick up to skip.
5. Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperature can warp the disc.
6. Do not stick paper or write anything with a ballpoint pen on the surface of the label side.
7. Do not use irregular shaped CD's (octagonal, heart-shape, etc.), all of which can damage the unit.
8. To remove a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edge.

## PLAYING MUSIC FROM USB DEVICE


The system can decode and playback MP3 files which stored in the USB flash disk via the USB port.

**Note:** When connecting the system to MP3 player via the USB socket, there are variances in MP3 encoding format, therefore some MP3 files cannot be played (or copied) via the USB socket. This is not a malfunction of the system. Furthermore, the system does not support iPod devices.


1. Press the FUNCTION button to select the USB Function, and the display will show "USB READ".

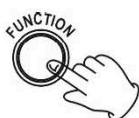

2. Insert an external audio source (ie. MP3 player) into the USB jack, and the unit will ready and play the music automatically.
3. Press PLAY (▶ II ) button to play the external audio source.

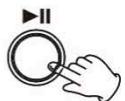

4. Press the FF (▶▶ ) or FR (◀◀ ) button once to go the start of the next track or previous track.

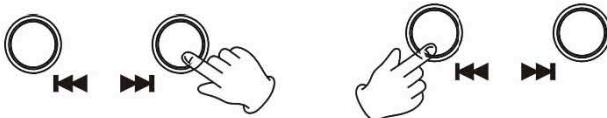


#### 5. Play mode


- a. Each time the REPEAT button is pressed, the repeat mode will cycle through the following options:
  - b. **A.REPEAT 1:** The current track will be played repeatedly. If you press the (◀◀ or ▶▶) button to select another track, the track you select will be played repeatedly.
  - c. **B. REPEAT:** you can select the folder to play repeatedly.
  - d. **C. REPEAT ALL:** The entire USB will be played repeatedly.
  - e. **D. RONDOM:** Press PLAY MODE/PROGRAM button for the four times to random play, and the "RANDOM" will show on the display
  - f. Press PLAY MODE/PROGRAM button repeatedly until repeat or random disappear on the screen.
  - g. **Clear play mode:**
  - h. Press PLAY MODE/PROGRAM button repeatedly until "repeat "or "random" disappear on the screen.
6. In stop state, press the PLAY MODE/PROGRAM button, the LCD display will show PROG, press the F.F or F.R button to select the folder number, press the PLAY MODE/PROGRAM button to confirm, and press the F.F or F.R button to select the tracks, then press the PLAY MODE/PROGRAM button to repeat this step to program, and it can be up to 99 songs.



7. When play programmed tracks, press STOP button twice, you can delete program function.
8. Pausing the playing.

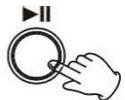

9. Stopping the playing.

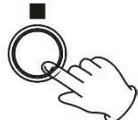

#### DELETE A TRACK

When USB playback, press the OPEN/CLOSE/DELETE button briefly can delete current track.

## **REMOVING USB DRIVE**

To remove the USB device, turn off the power or switch the function mode to either CD, Radio or Aux first, don't pull out the USB device during playing the files of USB device.

## **CD ENCODING**

The system is able to encode a normal CD to MP3 format and recording onto a USB flash drive via the USB port.

1. In CD/CD-MP3 play mode, insert an USB device into USB jack.
2. Press REC button, then " REC " will appear on the display. The red USB recording indicator flashing.
3. Press REC button again to end the recording.

NOTE: CD recording will automatically split music.

## **PHONO/AUX/BLUETOOTH ENCODING**

The system can encode Bluetooth, AUX input, or Turntable (Phono) to MP3 format and recording onto a USB flash drive via the USB port.

1. Set the function to PHONO, Bluetooth, or AUX mode, insert an USB device into USB jack.
2. Play audio from the turntable, connected Bluetooth device or the AUX input device you want to record, press the REC button begin the encoding, The red USB recording indicator flashing.
3. During encoding, press "Manual track increment" on remote control to divide the music.
4. Press REC button again to end the recording.

NOTE: If no audio input, recording will pause.

# MAINTENANCE

## REPLACING THE STYLUS ON THE RECORD PLAYER

### Remove Old Stylus

1. Set a screwdriver at the tip of the stylus and push down to the direction "A".
2. Remove the stylus by pulling it down and forward.



### Install New Stylus

1. Hold the tip of the stylus and insert the other edge by pressing in the direction "B".
2. Push up in the direction "C" until it locks at the tip.



Guide Pins (inside)

# TROUBLESHOOTING

In case of trouble with the unit, please look through and see if you can solve the problem by yourself before calling your dealer.

### Beware of Condensation

When the player (or a compact disc) experiences a sudden temperature change, there is a danger of condensation. Water vapor could condense on the mechanism or the laser pickup. If droplets of water form on these parts, correct playback will be impossible because the laser cannot read the information from the disc correctly. If you are going to use the player in a condition where condensation could occur, you should leave the player for 1 or 2 hours after plugging it into an AC outlet depending on the amount of condensation. If this is done, the player will stabilize at the temperature of its surroundings.

Unit	Problem	Solution
Whole Unit	Power does not come on.	Connect the unit to the AC power supply and switch it on.
	No sound comes out of the speakers.	Adjust the volume or re-select the desired input source.
	The sound is noisy.	Turn off interfering TV set or other appliance or relocate the unit.
	The appliance fails to respond.	External factors such as ESD (Electro-static Discharge) affect the unit. Disconnect the power cord and all power supply devices and re-plug the unit after one minute.
Tuner Unit	Cannot listen to any station or signal appears weak.	Properly tune in the desired station. Or turn off the interfering TV set.
	The sound is distorted.	Re-orient the antenna until the reception improves.
CD Player	CD stops immediately after starting, or unit pauses or stops during play.	Insert the CD with the printed side right-side up. Or carefully clean and dry the dirty CD.
	No sound.	Press the PLAY/PAUSE button to play or adjust the volume.
	Specific CD is noisy, or playback stops or skips.	The CD might be scratched, damaged or warped and need to be changed. Or carefully clean the dirty CD.

# FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**WARNING:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

# IC STATEMENT

This device complies with RSS247 of Industry Canada.Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

The device must not be co-located or operating in conjunction with any other antenna or transmitter. L'appareil ne doit pas être localisé ou fonctionner avec d'autres antennes ou transmetteurs.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment. Cet appareil est conforme aux limites d'exposition aux rayonnements de la IC établies pour un environnement incontrôlé.

The device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

L'appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.