

INSTRUCTION MANUAL

7-IN-1 TURNTABLE MUSIC CENTER
VWRP-4500

WARNING



CAUTION: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.



WARNING: Invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to laser beam.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Important Safety Instructions

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at the plugs, power outlets, and at the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
15. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall not be placed on apparatus.
16. The use of the equipment in moderate climate.
17. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths, curtains, etc.
18. Do not place open flame sources, such as lighted candles, on the apparatus.
19. The symbol with  indicates AC voltage.
20. **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Caution: For pluggable equipment, the socket-outlet shall be easily ACCESSIBLE



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within and equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.



TABLE OF CONTENTS

FEATURES	4
SPECIFICATIONS.....	4
ASSEMBLY	5
PRODUCT OVERVIEW	7
REMOTE CONTROL	9
SETUP & BASIC OPERATION	11
LISTENING TO A CD/CD-MP3	12
CONNECTING TO BLUETOOTH®.....	13
CONNECTING TO AUX DEVICE.....	14
LISTENING TO USB DEVICE.....	14
USING THE RADIO	15
CD ENCODING.....	15
PHONO/AUX/BLUETOOTH ENCODING	16
CARE & MAINTENANCE.....	17
TROUBLESHOOTING GUIDE.....	19
FCC NOTICE	20
CAUTION ON MODIFICATION.....	21
SUPPORT	21

FEATURES

BOYLESTON 7-in-1 Turntable Music Center features a chair height design with built in LP Storage holding over 30 of your favorite Albums. The built-in 3-Speed turntable, CD & AM/FM Radio are ready to play all your favorite songs! Bluetooth In allows streaming of your music from your smart device through the Boyleston's built in Speakers. Placing a Thumb Drive into the USB Slot allows Recording and Playback from your Albums & CD's.

- 3-Speed record player will play 33 1/3, 45, 78 RPM records
- Bluetooth® In connectivity allows you to stream music from another source up to 33 feet
- CD Player and AM/FM Radio
- USB Input for Playback & One Touch Recording of your favorite Music
- Includes a 3.5mm Aux input & Headphone Jack for additional connectivity options
- Built in Album Storage safely holds over 30 of your favorite LP's
- Built in Stereo Speakers for playback convenience and solid Wood construction

SPECIFICATIONS

Product Name	BOYLESTON (7-IN-1 Turntable Music Center)
Turntable Speed	33 1/3, 45, 78 RPM
FM Frequency Range	87.5 to 108 MHz
FM Station Memory	Up to 9
AM Frequency Range	520 to 1710 KHz
AM Station Memory	Up to 9
Bluetooth® Version	5.0
Bluetooth® Frequency	2.402 GHz – 2.480GHz
Bluetooth® Operating Distance	Up to 33 Feet (10 Meters)*
Input	Aux In, USB
Output	Line Out, Headphone x 1
Built-in Speakers	2" x 2
Speaker Output Power	4.5W x 2
Power Consumption	35W
Power Source	AC 120V 60Hz
Accessories Included	Remote Control, 45RPM Adaptor, RCA Aux-In & Line Out Cable, Set Up Tooling Kit, User Manual, Quick Set Up Guide

 
**Distance may vary depending on any objects or interference between devices.*

SPECIFICATIONS AND ACCESSORIES ARE SUBJECT TO CHANGE WITHOUT NOTICE


ASSEMBLY

Contents


- a. Main Unit
- b. Metal Bracket
- c. Side Panels (x2)
- d. Back Panel
- e. Bottom Panel
- f. Screws (x8)
- g. Nuts (x2)
- h. Washers (x4)
- i. Acorn Nuts (x2)
- j. Wrench
- k. Screwdriver

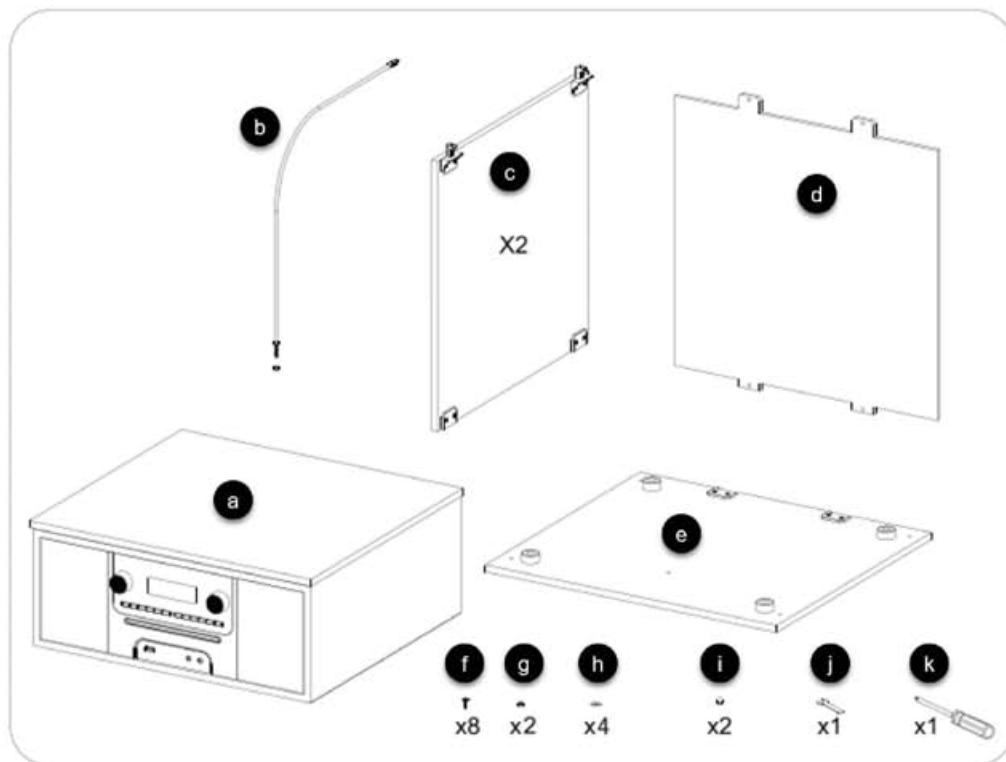

 
1. Place the main unit (a) face down on a soft cloth. Slide the side panels (c) into connectors on the bottom of the main unit.

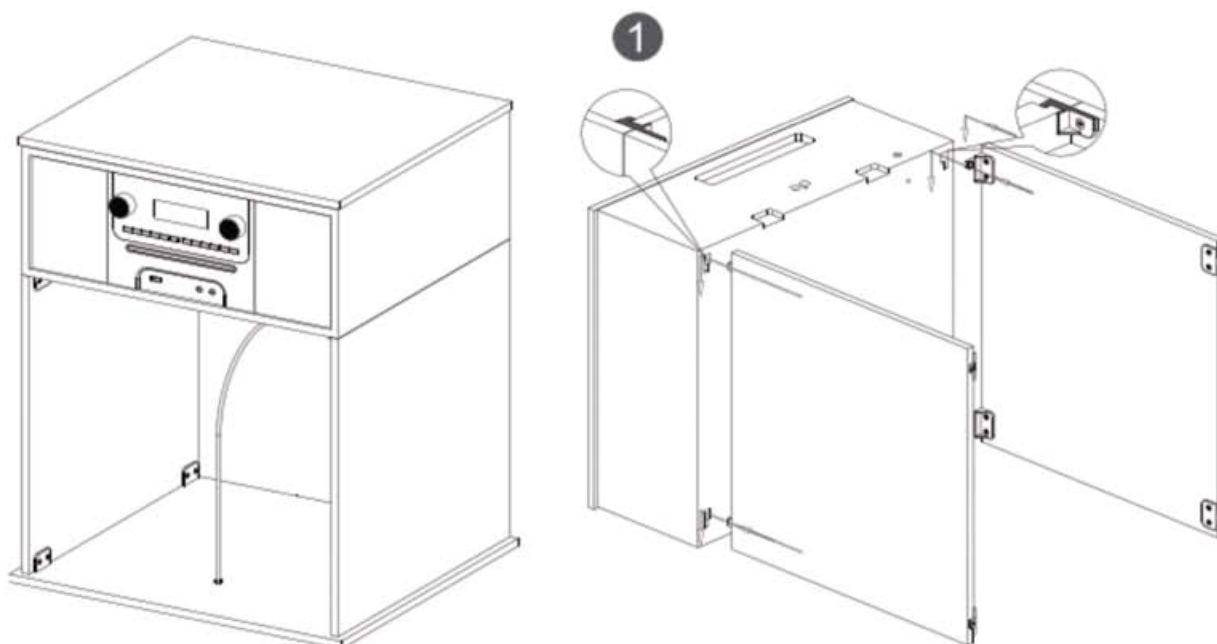

 
2. Align the bottom panel (e) with the side panels (c). Attach with screws.
3. Align the back panel (d) with the bottom panel and side panels. Attach with screws.

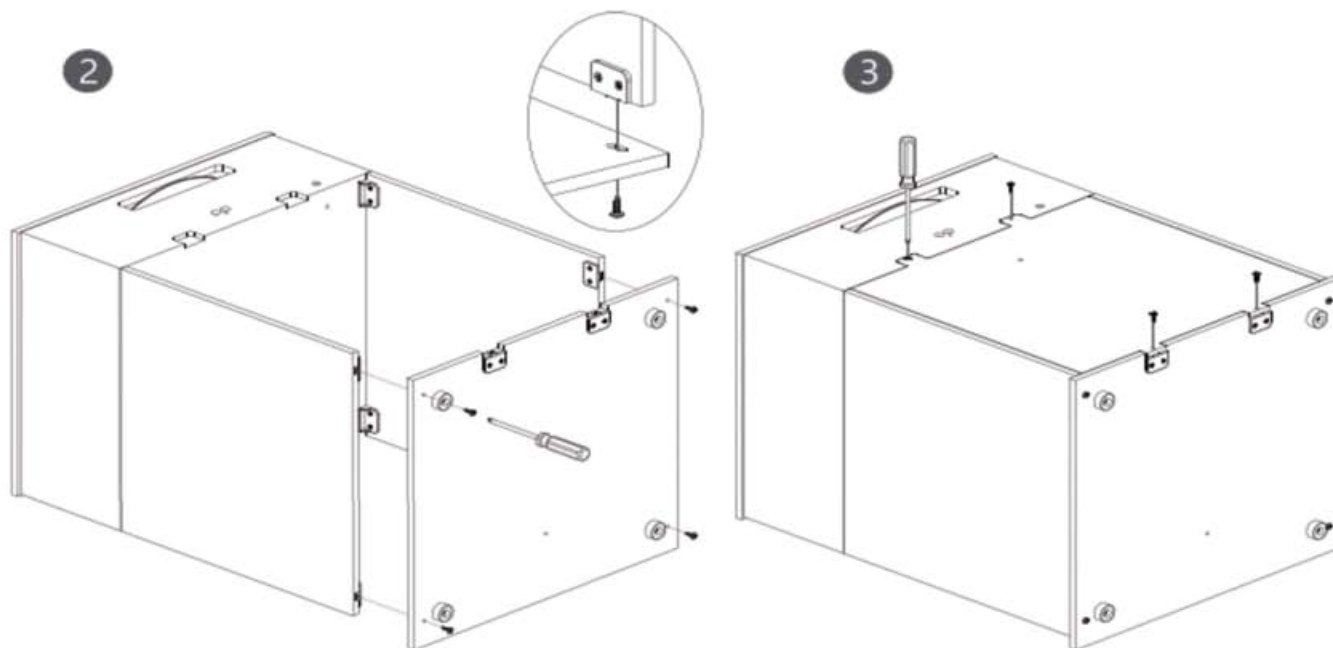

4. Attach the metal bracket (b) to the back panel and bottom panel with washers and acorn nuts. Use the wrench to tighten the nuts.

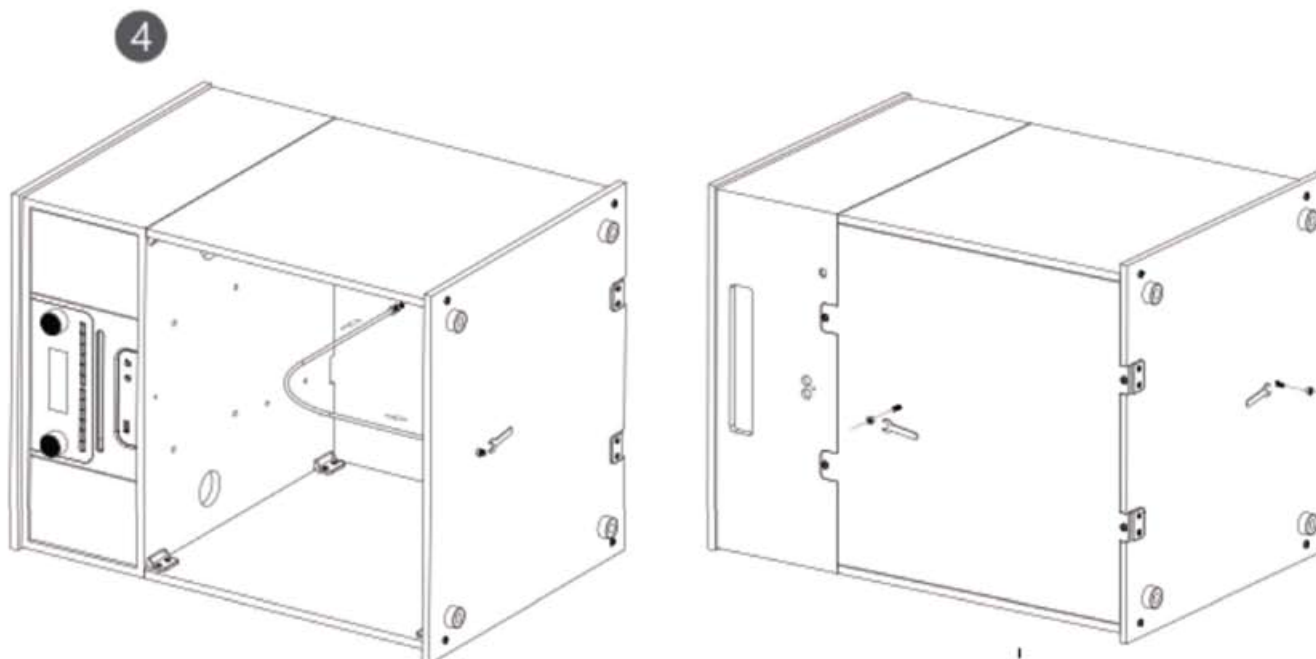 

PRODUCT OVERVIEW

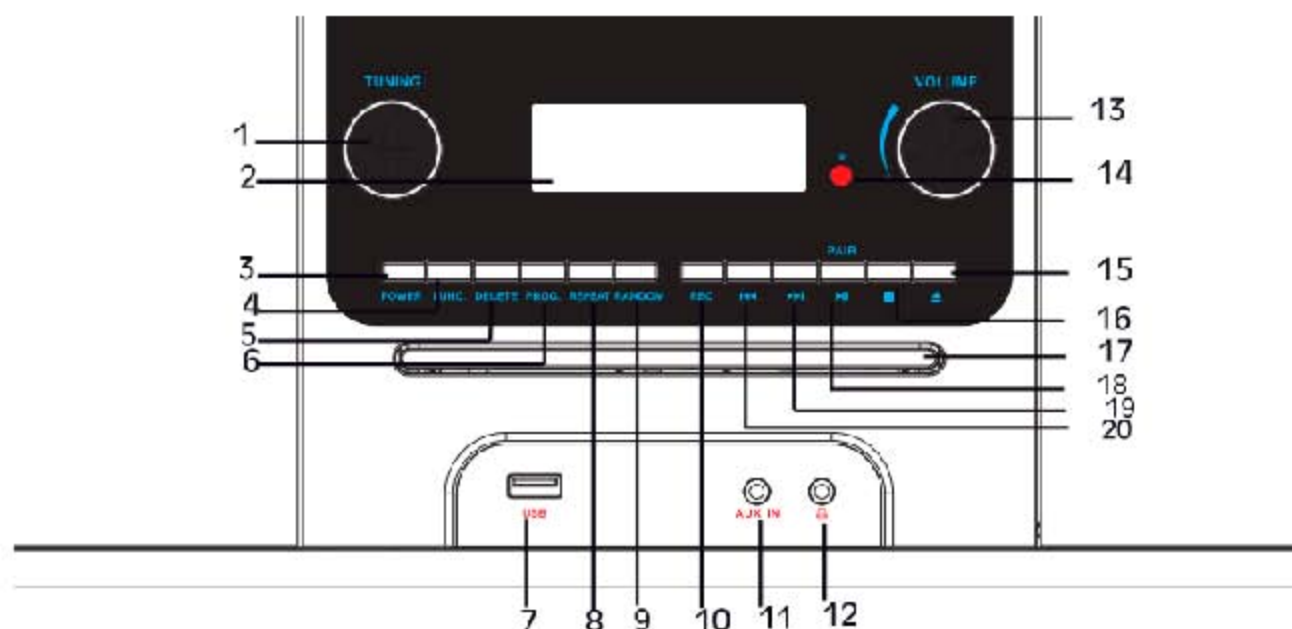 


FRONT VIEW

1. **RADIO TUNER:** In AM/FM mode, turn to tune to a station.
2. **LCD DISPLAY**
3. **POWER:** Press to turn the unit on or off.
4. **FUNC:** Press to select the source (AM/FM,AUX,PHONO,CD,USB)
5. **DELETE:** Use this button to delete USB tracks.
6. **PROG:** In CD/CD-MP3 or USB mode, press to program tracks. In radio mode, Long press to manually save the station, short press to view and select stations.
7. **USB Port**
8. **REPEAT:** In CD/CD-MP3/USB mode, press to select a repeat mode.
8. **RANDOM:** In CD/CD-MP3/USB mode, press for Random playback.
10. **REC:** In CD, CD-MP3, PHONO, Bluetooth and AUX-In play mode, press to enter record mode.
11. **AUX-IN JACK:** Connect an external source to the AUX IN socket.
12. **3.5mm JACK:** Accepts headphones.
13. **VOLUME KNOB:** Turn to adjust volume. (Note: volume ranges from 00 to 32.)
14. **REMOTE SENSOR**
15. **EJECT:** In CD mode, use to Open/Close disc tray.
16. **STOP (■):** Press to stop playback
17. **DISC TRAY**
18. **PLAY/PAUSE (▶||)/PAIR:** Press to play/pause playback. In Bluetooth mode, long press to disconnecting pairing.
19. **NEXT TRACK (▶▶):** In CD/CD-MP3 or USB Mode, press once to skip to the next track. Press and hold to fast forward/In radio mode, long press auto to search station. In radio preset state, press to select a location where you want to preset. In Bluetooth mode, press to skip the next track.
20. **PREVIOUS TRACK (◀◀):** In CD, CD-MP3 mode, press (◀◀) once to restart the current track, press (◀◀) twice in succession to return to the beginning of the previous track. Press and hold to fast rewind/ In radio mode, long press auto to search station. In radio preset state, press to select a location where you want to preset. In USB and Bluetooth mode, press to skip the previous track.


REAR VIEW

 21. **FM ANTENNA:** While tuned to a station in FM mode, extend the wire and reposition to adjust for best reception.
22. **LINE OUT:** For audio sources with RCA jacks, use plug on end of the RCA cable into these jacks and the other into the audio source. Be sure to connect the white plug to the white jack (Left) and the red plug to the red jack (Right).
23. **AC POWER CORD:** Plugs into a wall outlet.

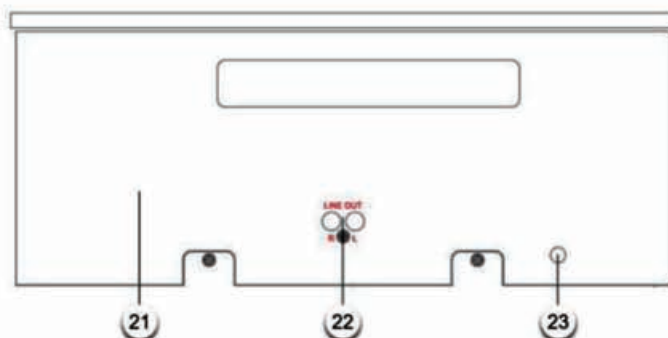

PARTS OF THE TURNTABLE

 1. Turntable
2. Spindle
3. Adapter for 45 RPM Records
4. Cue-lever: Use this lever to lift the tone arm.
5. Speed Control Switch
6. Tone Arm: Before use, completely loosen the fixed rope on the tone arm and uplift tone arm.
7. Tone Arm Rest
8. Stylus

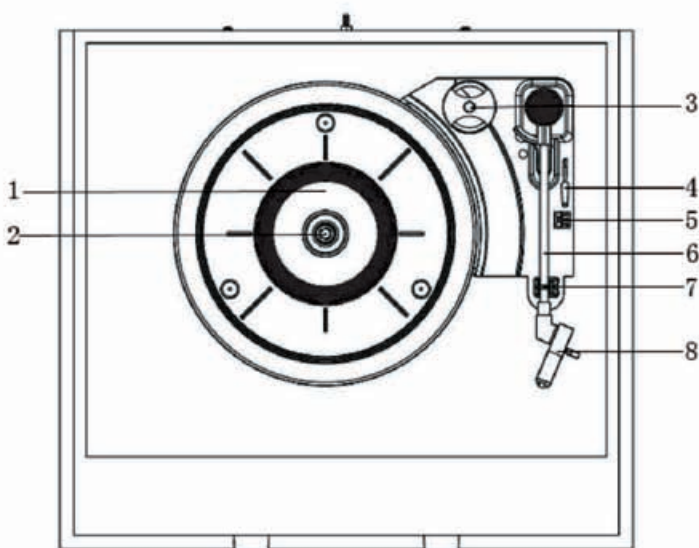


REMOTE CONTROL

When using the remote-control, point it towards the remote sensor on the front panel of the unit.

Remote Control Button Functions

 1. **POWER:** Press to turn on the unit.
2. **MUTE**
3. **PROGRAM:** In CD/CD-MP3/USB mode, press to program tracks. In radio mode, press to manually save the station
4. **RADIO:** Press to listen to the radio. Press again to switch between AM and FM modes
5. **USB:** Press to switch to USB mode.
6. **STOP:** Press to stop playback
7. **PLAY/PAUSE/PAIR/SCAN:** Press to play/pause track. In radio mode, long press to auto save the station. In Bluetooth mode, long press to disconnecting pairing.
8. **CH- / Previous Track / Rewind:** In CD/CD-MP3 mode, press once to restart the current track, press twice in succession to return to the beginning of the previous track. In USB and Bluetooth mode, press to skip previous track. In radio preset state, press to select a location where you want to preset. In radio mode, press to tune station.
9. **VOL-:** Press to adjust the volume down.
10. **Folder Down:** In CD-MP3/USB mode, press to choose folder. In radio mode, press to view or select saved station.
11. **OPEN/CLOSE:** Press to open/close the disc tray.
12. **DELETE:** Use this button to delete the USB tracks.
13. **REPEAT:** In CD/CD-MP3/USB mode, press to select repeat mode.
14. **RANDOM:** In CD, CD-MP3, USB mode, press to enter the random play.
15. **PHONO:** Press to play a vinyl record.
16. **CD:** Press to play a CD/CD-MP3 mode.
17. **AUX:** Press to listen to an external source connected to the AUX IN jack.
18. **REC:** In CD, CD-MP3/PHONO/AUX play mode, short press to enter record mode. Press again to end of the recording .
19. **VOL+:** Press to adjust the volume.
20. **CH+ / Next Track / Fast Forward:** In CD, CD-MP3, USB mode press to skip to the next track. Press and hold to fast forward.

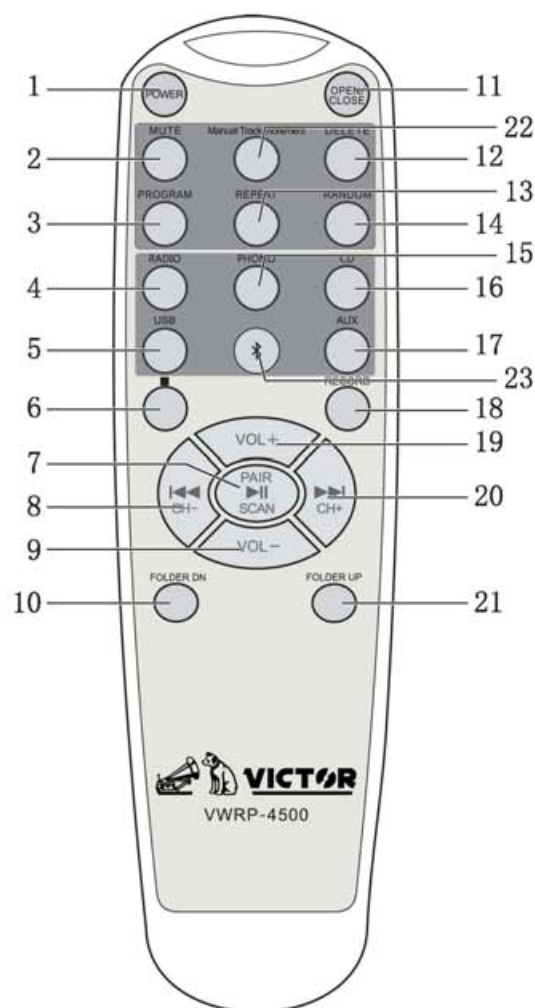

In Bluetooth mode, press to skip to the next track. In radio preset state, press to select a location where you want to preset. In radio mode, press to tune station.

21. Folder Up: In radio mode, press to view or select saved station.

 
22. Manual Track Increment: In Bluetooth, AUX, PHONO recording mode, press to divide the music.

23. Press to enter Bluetooth® mode.

Battery Installation

1. Remove the battery compartment cover.
2. Insert 2x AAA batteries. (batteries not included)
Note: Make sure batteries are oriented so their polarity markings, "+" and "-" match the remote's markings.
3. Replace the battery compartment cover.

battery compartment cover

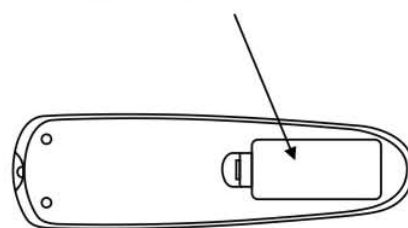

Battery Replacement

When the distance required between the remote-control unit and main unit decreases, it is necessary to replace the battery with new ones.

Battery Precautions

- Be sure to insert the battery with correct positive + and negative - polarities.
- Refer to the precautions on the battery labels.
- When the remote-control unit is not to be used for long periods of time (more than a month), remove the battery from the remote-control unit to prevent it from leaking. If it leaks, carefully wipe away the liquid inside the battery compartment and replace the battery with a new one.
- Do not heat or disassemble batteries and never dispose of old batteries in a fire.
- Do not mix old and new batteries.
- Use only the same type of batteries.
- Do not dispose of the batteries in fire, battery may explode or leak.
- Do not recharge a non-rechargeable battery.

Note:

- Even if the remote-control is operated within the effective range, remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the remote-control unit is operated near other devices which generate infrared rays, it may not function properly. Conversely, the other devices may not function incorrectly.

SETUP & BASIC OPERATION

Setup

- Remove packaging materials from the unit.
- Remove stylus/needle cover from the unit.
- Check that the voltage on the rating plate on the back of the main unit is the same as the voltage in your area.
- Unwrap the FM antenna and extend it fully. You may need to adjust the position of the antenna to get optimum reception.
- Plug the electric plug into the wall socket and press the POWER button on the unit. The unit is now ready for use.

Note: When leaving the unit unattended for long periods (such as vacations), please disconnect the power plug from the power socket.

 
Basic Operation

1. Press the POWER button on the unit or remote-control to turn the unit ON.
2. Select the audio source by pressing the corresponding function button (AUX, PHONO, etc.).
3. Turn the VOLUME KNOB or use volume buttons on remote to adjust the volume. The volume level will be shown on the display.

Listening through Earphones/Headphones (not included)

For private listening, first reduce the volume level to minimum.

Insert your headphones' plug into the HEADPHONES jack, then adjust the volume up by turning the VOLUME knob.

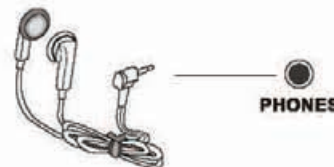

Note: The speakers will automatically be deactivated while headphones are plugged in.

Random Playback

In CD, CD-MP3, USB mode, you can use a random play mode.

- In CD, CD-MP3, USB playback state, press RANDOM button enter random play mode.
- Pressing (▶▶) during Random playback will randomly select the next track.
- If one of the following buttons is pressed, Random mode will be cancelled : OPEN/CLOSE, POWER, FUNC.
- When the Random playback of all the tracks has been finished, the unit stops and the Random mode is cancelled.
- A track cannot be repeated during Random playback.
- Random playback doesn't work during programmed playback.

Repeat Playback

In CD,CD-MP3,USB mode, you can use different repeat modes to listen to music.

Each time the REPEAT button is pressed, the repeat mode will cycle through the following options:

REPEAT 1: The current track will be played repeatedly. If you press the (◀◀ or ▶▶) button to select another track, the track you select will be played repeatedly.

REPEAT : In CD-MP3 and USB mode, you can select the folder to play repeatedly.

REPEAT ALL: The entire CD/CD-MP3 ,USB will be played repeatedly.

Note:

- If one of the following buttons is pressed, the repeat mode will be cancelled: OPEN/CLOSE, POWER, FUNC

CD/CD-MP3, USB Programmed Playback

Program play must be set when the CD/CD-MP3 ,USB is stopped. You can program up to 20 tracks for CD disc and program up to 99 tracks for MP3 disc and USB

1. Press the STOP button to stop the music.
2. While the music is stopped, press the **PROG** button enter program mode.
3. "P01" appears on the display.
4. Press ◀◀ or ▶▶ to select a track number.
5. Press the **PROG** button to confirm.
6. Follow these steps to continue programming others tracks.
7. When the selection of track numbers has been finished, press the **PLAY** button ▶▶ to start program playback.
8. To cancel the program mode, press the STOP ■ button twice.

LISTENING TO A CD/CD-MP3

1. Press the **FUNC** button to select CD mode. *Note:* When no disc is set, "NO DISC" will appear on the display.
2. Press the **EJECT** button (⬆) to open the tray. *Note:* This button will not work in AM/FM mode.
3. Place a disc on the tray with the printed label face up.
4. Press the **EJECT** button (⬆) to close the tray. "CD READ" will appear for a few seconds and then the unit will begin playback from the first track automatically.
5. To temporarily pause playback, press the **PLAY/PAUSE** button (⏮). Press again to resume.

6. To skip tracks backward or forward, press the corresponding skip button (◀◀ or ▶▶). Pressing (◀◀) once will restart the current track. Pressing (◀◀) twice in succession will return to the beginning of the previous track. Pressing ▶▶ button to skip to next track.



7. To fast forward/ rewind a track, press and hold ◀◀ or ▶▶ until the desired position is reached.
8. To stop playback, press the **STOP ■** button

Important:

- Never place more than one disc on the tray.
- The disc must be placed in the center of the disc tray. An incorrectly loaded disc can permanently damage the tray door mechanism.
- Do not push the CD tray closed – always use the **OPEN/CLOSE** button.
- It takes a moment for the unit to load a disc, during which all buttons will be temporarily deactivated.

CONNECTING TO BLUETOOTH®

In Bluetooth mode, this unit can play music from external devices which have a built-in Bluetooth® feature.

Getting Connected Using Bluetooth®

1. Press FUNC button repeatedly choose Bluetooth mode, the unit will start the pairing mode automatically. Bluetooth icon will flashing on screen.
2. On your external device turn ON the Bluetooth® function. *Note:* The effective distance between your external device and this apparatus is 33 feet (10 meters).
3. Wait a moment for “**VICTOR VWRP-4500**” to appear on the devices list. Select “**VICTOR VWRP-4500**” to connect to the unit. Sometimes a window will ask you for a password. Fill in “0000” then press “OK” on your external device.
4. Once the Bluetooth® connection is successful the Bluetooth icon will stop flash.
5. You can press the **BACK** or **NEXT** button to skip the previous/next track or control on your device.

Note:

- The **PAIR** Button will allow you to disconnect from your external while remaining in Bluetooth® mode. Simply press the PAIR button to disconnect and search for a new device. Follow the pairing directions above to connect to the new device.
- Fast Forward / Rewind is only available on your external device.

CONNECTING TO AUX DEVICE

In AUX (auxiliary) mode, this unit can play audio from an external audio source (iPod, MP3 Player, Portable CD Player, etc.)

1. Plug one end of the **AUX IN** cable (not included) into the AUX IN (on the front of the unit) jack.
2. Plug the other end of the cable into the headphone jack (or RCA jacks) of the external audio source.
3. Press **FUNC** button to select **AUX-IN** function
4. Begin playback on your external device.
5. Rotate the **VOLUME** knob to adjust the sound level.
6. You can control the playing process by operating your external device.

Note: All operations are only available on your external device.

LISTENING TO USB DEVICE

1. Press **FUNC** button repeatedly to switch to **USB** mode. *Note:* When no USB is set, "NO USB" will appear on the display.
2. Connect the USB memory stick into the USB slot and then the unit will begin playback from the first track.
3. To temporarily pause playback, press the **PLAY/PAUSE** button (▶||). Press again to resume.
4. Press the Folder down or Folder up button on remote control to choose your desired folder.
5. To skip tracks backward or forward, press the corresponding skip button (◀◀ or ▶▶).
6. To fast forward / rewind within a track, press and hold down the corresponding skip button until the desired position is reached.
7. To stop playback, press the **STOP** ■ button.

Note:

- Do not push ◀◀ and ▶▶ buttons together as this may damage the unit.
- As rewind or fast forward, you will hear distorted audio. Release the depressed button to continue playing at normal speed at the desired position in the selected track.

Delete Track on USB Device

- When USB playback, press the **DELETE** button briefly can delete current track.

Removing USB Device

To remove the USB device, turn off the power or switch the function mode to either CD, Radio or Aux. Do not remove the USB device while playing files on the USB device.

Note: When connecting the system to MP3 player via the USB socket, there are variances in MP3 encoding format, therefore, some MP3 cannot be played (or copied) via the USB socket. This is not a malfunction of the system. Furthermore, the system does not support IPOD.

USING THE RADIO

1. Press the **FUNC** button to select AM or FM
2. Tune to the desired station using the Radio Tuner Knob.
3. Or press and hold the **◀◀** or **▶▶** button to auto search the stations.
4. Press the **PLAY/PAUSE** **▶||** button to auto search and save the stations.
5. Long press **PROG** button on unit or press **FOLDER UP/ FOLDER DOWN** button on remote control to view or select listen to a saved station.

Preset Stations manually

1. Select your desired station (AM or FM).
2. Long press **PROG** button and the display show P01
3. Tune the Radio Tuner Knob to select the preset station from P1 to P9(FM).
4. Press the **PROG** button to confirm.
5. According to the above way, you can store 9 stations in FM, 9stations in AM.
6. Press **PROG** button on unit or press **FOLDER UP/ FOLDER DOWN** button on remote control to view or select listen to a saved station.

Adjusting for Best Reception

- AM broadcast: Rotate the unit to find the best position.
- FM broadcast: Extend and reposition the FM antenna.

CD ENCODING

The system is able to encode a normal CD to MP3 format and recording onto a USB flash drive via the USB port.

1. In CD/CD-MP3 play mode, insert an USB device into USB jack.
2. Press **REC** button, then " **REC** " will appear on the display.
3. Press **REC** button again to end the recording.

NOTE: CD recording will automatically split music.

PHONO/AUX/BLUETOOTH ENCODING

The system can encode Bluetooth, AUX input, or Turntable (Phono) to MP3 format and recording onto a USB flash drive via the USB port.

1. Set the function to PHONO, Bluetooth, or AUX mode, insert an USB device into USB jack.
2. Play audio from the turntable, connected Bluetooth device or the AUX input device you want to record, press the REC button begin the encoding.
3. During encoding, press "Manual track increment" on remote control to divide the music.
4. Press REC button again to end the recording.

Note: If no audio input, recording will pause.

Note: After you play 45 & 78 RPM vinyl record, it will stop in about 60 seconds.

CARE & MAINTENANCE

General Care

- When unplugging the power plug, always pull directly on the plug. Never pull the cord.
- To keep the laser pickup clean, do not touch it, and do not forget to close the disc tray.
- Do not attempt to clean the unit with chemical solvents. Use a clean, soft, dry cloth.
- Be sure to unplug the unit if you will not intend to use it for an extended period of time.

Compact Disc Handling

- Depending on the quality of the disc, and the condition of the recording, some CD-R/CD-RW discs may not be playable.



How to remove the disc

 


How to hold the disc



How to clean the disc

- Always place the CD in the disc tray with the label facing upward.
- To move a disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- To clean a disc, wipe the surface from the center to the outer edge with a soft, dry cloth.
- Cleaning a disc with harmful chemicals such as record spray, antistatic sprays, etc. will do irreparable damage to the disc's plastic surface.
- Discs should be returned to their cases after use to avoid scratches that could affect playback.
- Do not expose discs to direct sunlight or high humidity and temperature for extended periods. Long exposure to high temperatures will warp the discs.
- Using writable (CD-R) and rewritable (CD-RW) discs are not recommended.
- Never use a ball-point or hard-tipped pen to write on a disc label, as this may cause damage.
- Using CDs with an irregular shape can damage the unit.

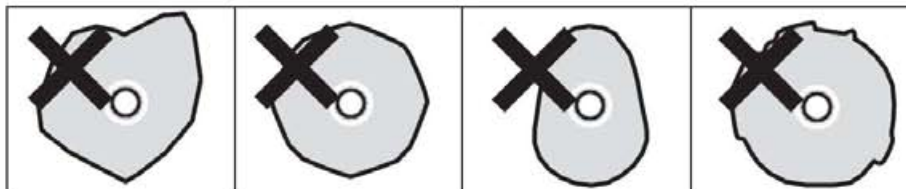

Handling Vinyl Records

- Do not touch the record's grooves. Only handle records by the edges or the label with clean hands. Touching the record surface will cause your record's quality to deteriorate.
- To clean a record, use a soft anti-static cloth to gently wipe the record surface.
- Keep records in their protective sleeves when not in use.
- Always store records upright on their edges.
- Avoid placing records in direct sunlight, close to a heat source (radiators, stoves, etc.), or in a location subject to vibration, excessive dust, heat, cold or moisture.

How to Replace the Turntable Stylus

The stylus should last about 50 hours under normal use. However, it is recommended that the stylus be replaced as soon as you notice a change in sound quality. Prolonged use of a worn-out stylus may damage the record. The higher speed of 78 RPM records wear out the stylus more quickly.

Removing the old stylus:

1. Set a screwdriver at the tip of the stylus and push downward (A).
2. Remove the stylus by pulling it simultaneously downward and forward.

Installing a new stylus:

1. Hold the front tip of the stylus and insert its rear edge (B) first.
2. Push the stylus upwards (C) until the tip locks into place.



Caution:

- Do not remove or bend the stylus.
- Do not touch the needle to avoid injuring your hand.
- Turn off the unit's power before you replace the stylus.
- Keep out of reach of children.

TROUBLESHOOTING GUIDE

If you experience any issues with the unit, please review the possible solutions below before returning or calling for maintenance.

	Symptom	Possible Cause	Solution
GENERAL	Unit will not power on.	Unit is unplugged.	Connect the unit to the AC power supply.
	No sound output from speakers.	- The volume level is set too low. - The input selector does not match the playback source.	- Adjust the volume. - Select the correct input source.
	Noise/Distortion in sound output.	The unit is too close to a TV set or another interfering device.	Turn off the TV or other appliance and relocate the unit.
	Unit fails to respond.	It might result from external factors such as ESD (Electro-static discharge).	Disconnect the power cord and external audio device. Re-plug the power cord after one minute.
FM RADIO	Cannot listen to any station, or signal appears weak.	- The station is not tuned-in properly. - A TV set is being used nearby and is interfering with the radio reception.	- Properly tune-in the desired station. - Turn-off the interfering TV set.
	The sound is distorted.	The antenna is not oriented properly.	Re-orient the antenna until reception improves.
CD PLAYER	CD stops immediately after starting, or unit pauses or stops during play.	- The CD is inserted upside down. - The CD is dusty, dirty, or there is condensation on the CD.	- Insert the CD with the printed side right-side up. - Carefully clean and dry the CD.
	No sound.	The CD player is paused.	Press the PLAY/PAUSE button.
	CD playback is noisy, or playback stops or skips.	- The CD is scratched, damaged, or warped. - The disc is very dirty.	- Replace CD with an undamaged one. - Carefully clean the CD.
	Buttons are not functioning correctly.	- The unit is processing information ("-- Busy" is displayed) - The unit needs to be restarted	- Wait until the unit finishes processing. - Turn the unit off, then on again.
PHONO	Decline in turntable audio quality	The turntable stylus is worn out	Replace the stylus.
AUX	No sound output with external audio device plugged into rear AUX in jack.	Unplug the front AUX in Jack.	plug the front AUX in Jack.
USB	The USB drive does not play	- The USB drive is not inserted properly. - The USB drive has no MP3 files	Insert the USB drive correctly.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected .
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

The device must not be colocated or operating in conjunction with any other antenna or transmitter.

To maintain compliance with the FCC's RF exposure guidelines, place the product at least 20cm from nearby persons.

IC STATEMENT

This device complies with RSS247 of Industry Canada. Cet appareil se conforme à RSS247 de Canada d'Industrie. This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. appareils radio exempts de licence.

Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

The device must not be co-located or operating in conjunction with any other antenna or transmitter.

L'appareil ne doit pas être localisé ou fonctionner avec d'autres antennes ou transmetteurs.

This device complies with IC radiation exposure limits set forth for an uncontrolled environment.

Cet appareil est conforme aux limites d'exposition aux rayonnements de la IC établies pour un incontrôlé environnement.

The device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

L'appareil doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.