

目录 Contents

产品介绍 Introduction to Products	1	夹物机器人左手臂组装 Clamp robot left arm assembly	26
安全警告 Safety Warning	1	夹物机器人右手臂组装 Clamp robot right arm assembly	27
操作规范提示 Operating Specification Tips	2	夹物机器人前轮组装 Clamp robot front wheel assembly	28
电池安全信息 BATTERY INFORMATION	2	足球板与足球组装 Football board and football assembly	29
提示: Caution:	3	足球手臂组装 Football arm assembly	32
准备工具 Preparing the Tools	4	阻击神射手清单 List of sniper shooters	33
零件清单 Parts list	4	阻击神射手合成组装 Sniper Shooter Synthesis Assembly	33
拆卸技巧 Removal techniques	6	夹物小能手清单 List of clamp robots	39
夹物小能手拆卸技巧 Clamp master removal technique	6	夹物小能手合成组装 Synthetic assembly of clamp robot	39
足球小健将拆卸技巧 Football player disassembly skills	7	足球小健将清单 List of young football players	44
阻击神射手拆卸技巧 Sniper shooter disassembly skills	8	足球小健将合成组装 Football player synthetic assembly	44
遥控器组装 Remote control assembly	9	遥控信号对频教程 Signal frequency tutorial	50
左齿轮箱组装 Left gearbox assembly	11	遥控教程-阻击神射手 Remote Control Tutorial Sniper Shooter	50
右齿轮箱组装 Right gearbox assembly	13	遥控教程-夹物小能手 Remote Control Tutorial - Clamp Robot	51
中齿轮箱组装 Middle gearbox assembly	16	遥控教程-足球小健将 Remote Control Tutorial - Football Player	52
头部安装 Press the head	19	编程教程-阻击神射手 Programming Tutorial Sniper Shooter	52
电池盒组装 Battery box assembly	21	编程教程-夹物小能手 Programming Tutorial Clip Robot	54
发射炮组装 Launcher assembly	23	编程教程-足球小健将 Programming Tutorial Football player	56
钢珠轮组装 Steel ball wheel assembly	25	操作方式 How to operate	59
手臂组装 Arm assembly	25	更换电池方式 Battery replacement method	59
轮胎贴纸 Tire sticker	25	简易故障排除 Simple troubleshooting	61

3合1智能编程机器人

3IN1 SMART PROGRAM ROBOT

产品介绍 Introduction to Products

对于机器人只能走来走去感到无趣吗？编程一定要用计算机吗？编程是不是很难？3合1遥控编程机器人以简单、直观的方式解决以上烦恼！通过遥控器五个按键，大、小朋友们就能轻易的设计出机器人的动作-前进、后退、左转、右转、旋转、踢足球、发射子弹、夹取物品，即便是初学者也能轻易上手！模型由220件零件构成，让您搭建出不同的机器人造型做出丰富多彩的动作，锻炼您的创造力、观察力、逻辑能力，做出您的阻击神射手、足球小健将和夹物小能手吧！

Walking up and down for a robot can only feel boring? Programming must use a computer? It is difficult to programming? 3 in 1 remote control programming the robot in a simple and intuitive way to solve the above troubles! Five through remote control buttons, big, the children can easily design a robot moves - forward, backward, turn left, turn right, rotate, playing football, firing bullets, picking up goods, even beginner can easily! Model is made up of 220 parts, allowing you to build different modelling of robot to make colorful movement, exercise your creativity, observation, logical ability, make your sniper sharpshooter, Soccer Boy and Clamp master

安全警告 Safety Warning

1. 在组装前阅读并充分理解本说明书。如果是由儿童进行模型组装，则监管的成年人也应阅读本说明。
2. 本产品需要成年人监督下使用。
3. 仅适合年龄在8岁以上的儿童使用。
4. 不适合3岁以下儿童使用，本产品含有小部件，存在绳索缠绕或不小心吞服造成窒息危险，如不慎吞咽或吸入，请即刻就医。
5. 本产品包含功能性尖角，位于组件引线上以及塑料件的边角上，远离三岁以下儿童。
6. 在组装模型时，需要使用工具，包括刀。因此需格外小心，以防造成人生伤害。
7. 使用切割工具除去浇注口的熟料部件，确保无锋利或锯齿状边缘。
8. 小心使用套装内的金属零件，因为这些零件含有尖角和/或锋利边缘。

1. Read and fully understand this manual before assembly. If the assembly is carried out by children model, the regulation of adults also should read the instructions.
2. This product need to use under adult supervision.
3. Only suitable for children between the ages of eight years of age or older.
4. Not suitable for children under 3 years old, this product contains small parts, there are cords or accidentally swallowed cause asphyxia danger, such as accidentally swallowed or inhaled, please go to a doctor immediately.
5. This product contains functional sharp corner, on the component lead and plastic parts, on the edge of away from children under the age of three.
6. In the assembly model, you need to use tools, including the knife. Therefore need to take care all the more, in case the life damage.
7. The use of cutting tools to remove the sprue gate clinker components, to ensure that no sharp or jagged edges.
8. Be careful with the metal parts inside the suit, because these parts with sharp corners and sharp edges.

操作规范提示 Operating Specification Tips

1. 在组装本产品之前, 请仔细检查并确认您所做所有电线连接是正确的。请在插入电池和接通电源之前纠正错误, 因为故障可能会导致部件或产品损坏。
 2. 实验结束后, 请确保断开电池开关关闭设备。
 3. 不要锁住电机或其他活动部件, 否则可能会导致部件温度过热。
 4. 本产品所连接的电源数量不能超过建议的数量。
1. Before assembling this product, please carefully check the well to confirm that all the wire connections you have made are correct. Please correct the error before plugging in the battery and plugging in the power supply, because failure may cause damage to parts or products.
 2. After the experiment, make sure to disconnect the battery switch and turn off the device.
 3. Do not lock the motor or other moving parts, otherwise it may cause the parts to overheat.
 4. The number of power supplies connected to this product cannot exceed the recommended number.

电池安全信息 BATTERY INFORMATION

1. 为了获得最佳性能, 请始终使用新电池, 不使用时请取出电池。
 2. 电池必须以正确的正负极装入。
 3. 使用不可充电电池。
 4. 充电电池只能在成人监督下充电。
 5. 充电电池必须在充电前从玩具中取出。
 6. 不同类型的电池或新旧电池不得混合使用。
 7. 将耗尽的电池从玩具中取出。
 8. 电源端子不允许短路。
 9. 请勿将电池放入火中。
 10. 请勿将碱性电池/碳性电池和可充电电池混合使用
1. For the best performance, always use the new battery, and when not in use, remove the battery
 2. The battery must be installed at the correct positive and negative electrodes.
 3. Use a non-rechargeable battery.
 4. Rechargeable batteries can only be charged under the supervision of adults.
 5. The rechargeable battery must be removed from the toy before charging.
 6. Different types of batteries or old and new batteries should not be used together
 7. Remove the depleted battery from the toy.
 8. The power terminal does not allow short circuit,
 9. Do not put the battery into the fire.
 10. Do not mix alkaline batteries ,carbon batteries and rechargeable batteries


提示: Caution:

请在开始之前详细阅读下面的提示, 并在组装和使用过程中遵循这些提示
Please read through the tips below before starting and follow them during assembly and usage.

请依照组装步骤所需的零件剪下, 事先全部剪下会在组装时造成混淆。
Please cut off the required parts according the assembling procedure. It wiu cause confuse during assembling if you cut it you cut it all off in advance.

零件剪下时请将毛刺剪切干净, 以免组装时产生间隙。
Please cut burrs of the parts cleanly when cutting off the parts to avoid gap during assembling.

去除毛刺 Chip removing

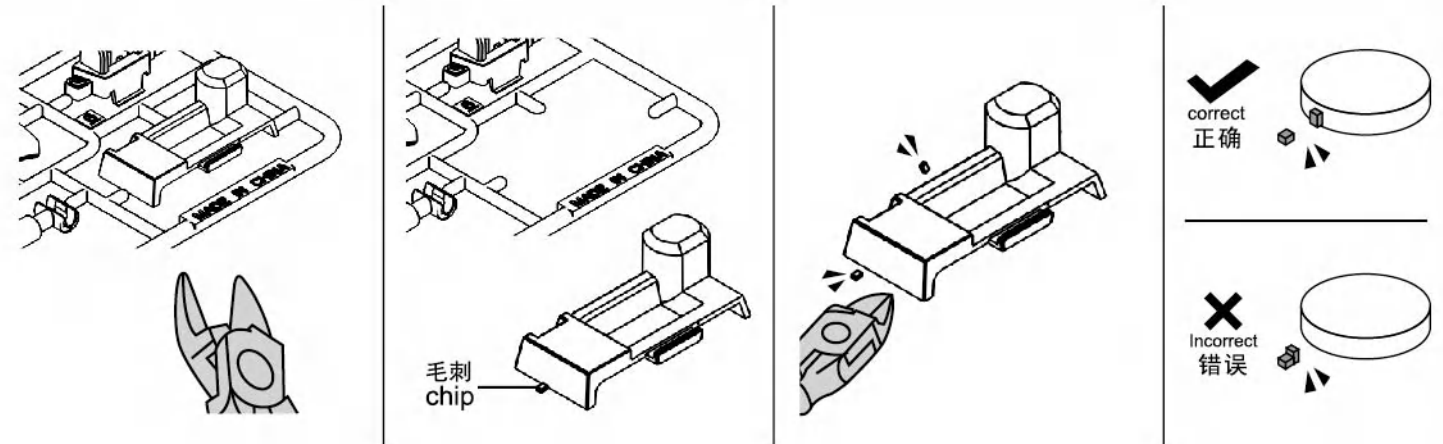

紧固螺丝 Fastening screws



请使用正确的螺丝刀头型, 依照下面的步骤将螺丝锁紧
Use the correct bit type and follow the steps below to Screw locking





将螺丝刀头对准螺丝
Align the screw bit

- (1) 开始拧转
 - (2) 锁固感越来越紧绷
 - (3) 继续拧转
- (1) Start twisting.
 - (2) The lock is getting tighter and tighter.
 - (3) Keep twisting.

重复动作直到无法再拧动螺丝为止
Repeat until the screws can no longer be screwed.




准备工具 Preparing the Tools

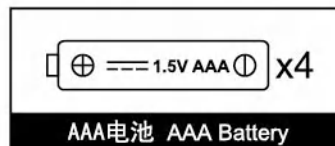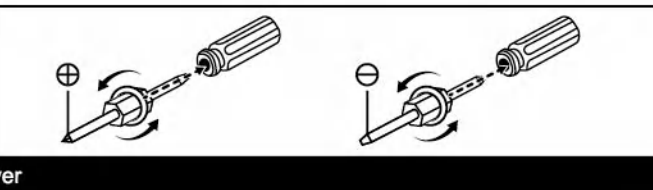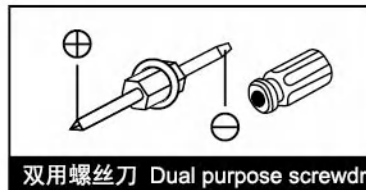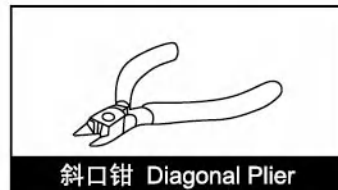


零件清单 Parts list

 
A

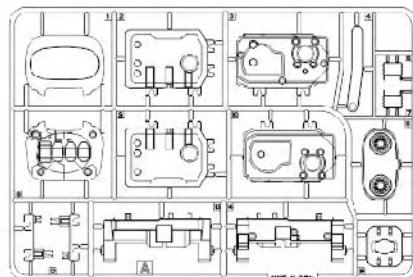


B

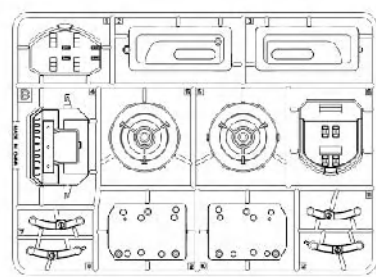 


C

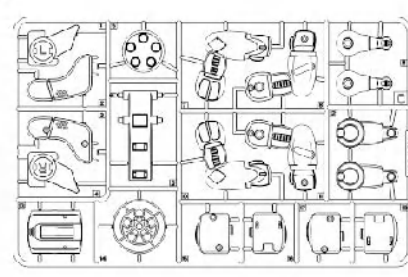 


D

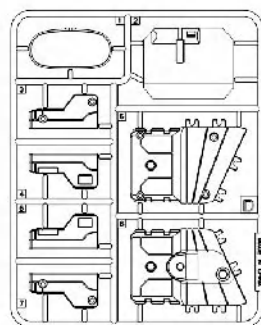 













E

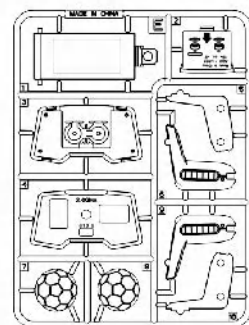 

F

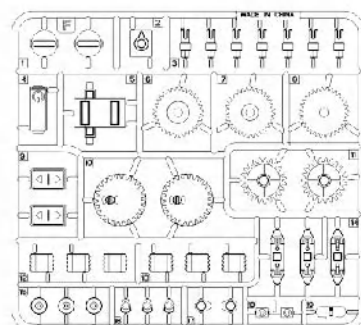 


零件清单2 Parts list2

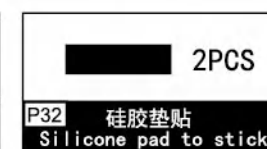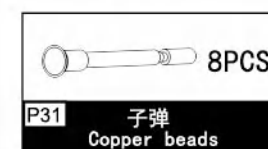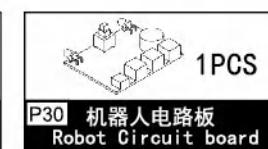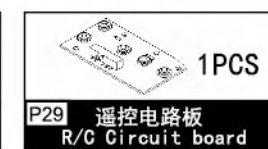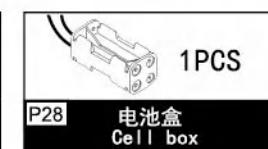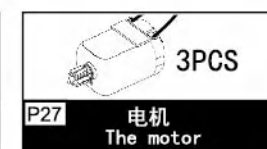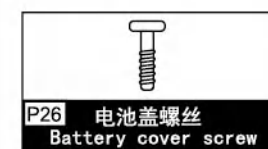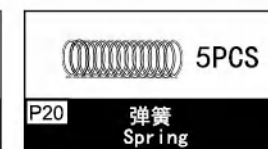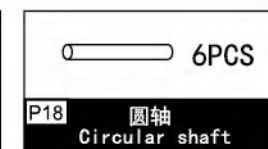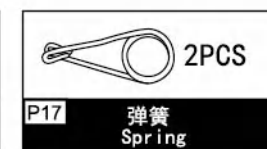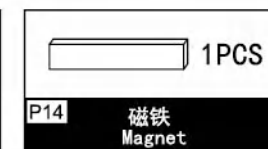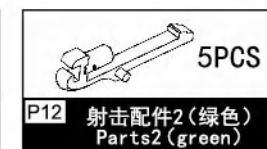            

拆卸技巧 Removal techniques




1

 如图示拔开端子
Unplug the terminal as
shown in the figure

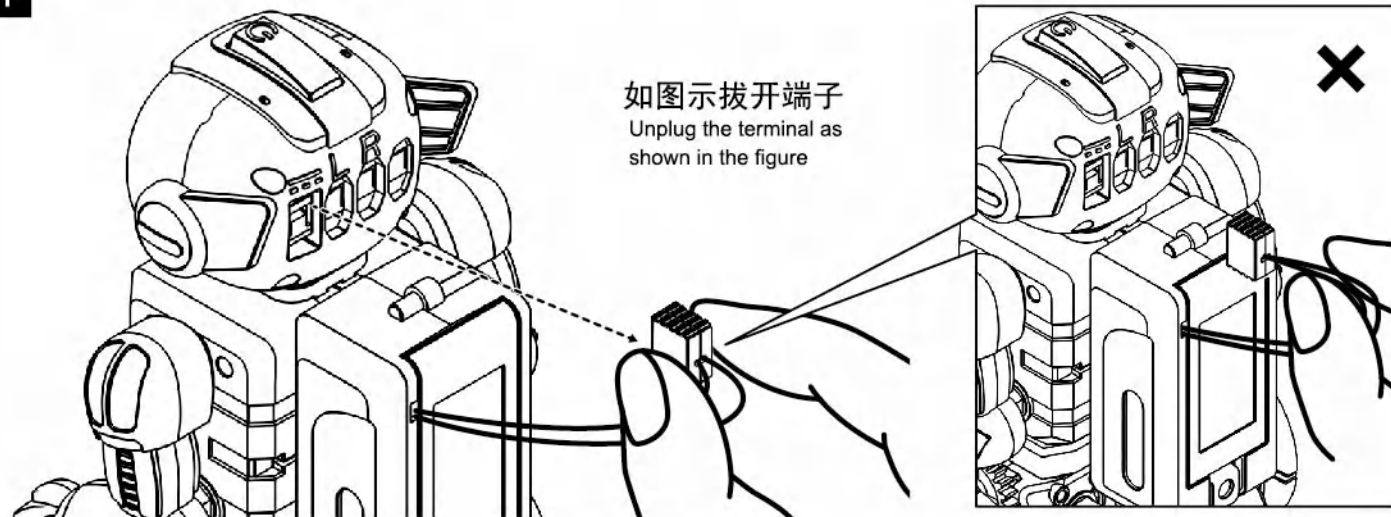

夹物小能手拆卸技巧 Clamp master removal technique

 
 
 
1

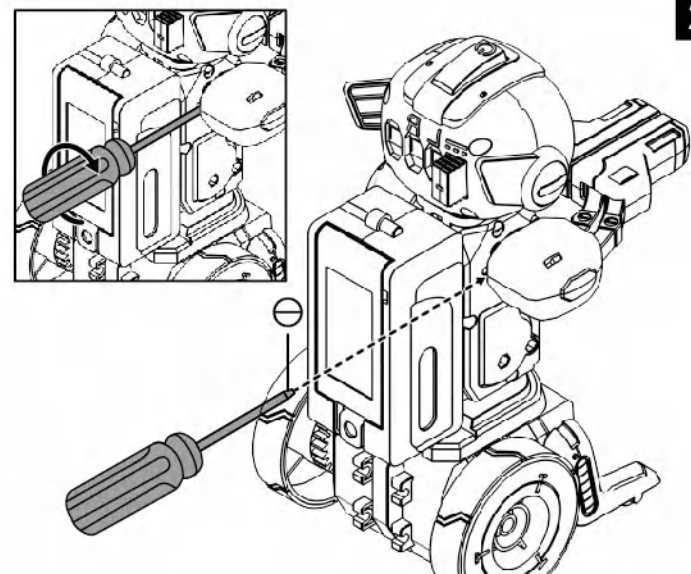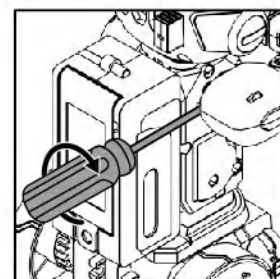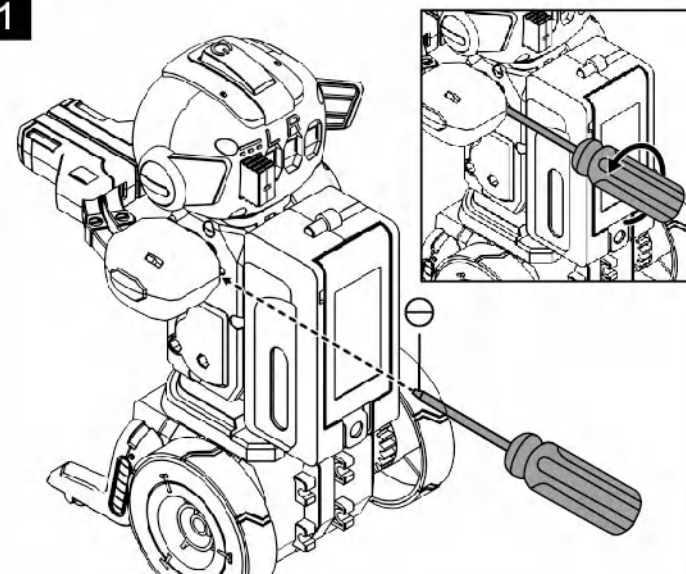

2

6


 
 
 
3

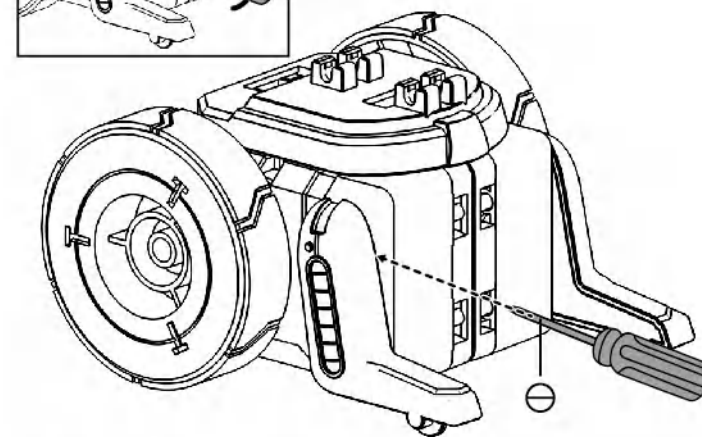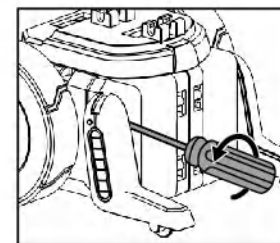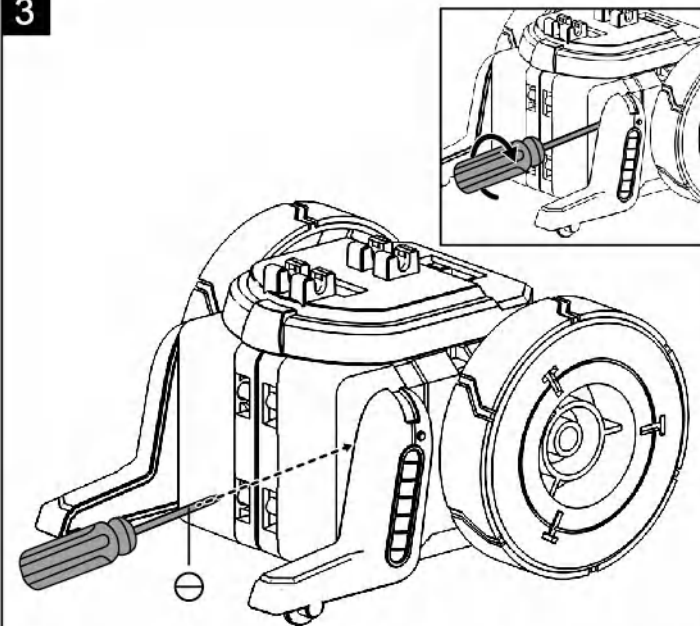

4

足球小健将拆卸技巧 Football player disassembly skills

    
1

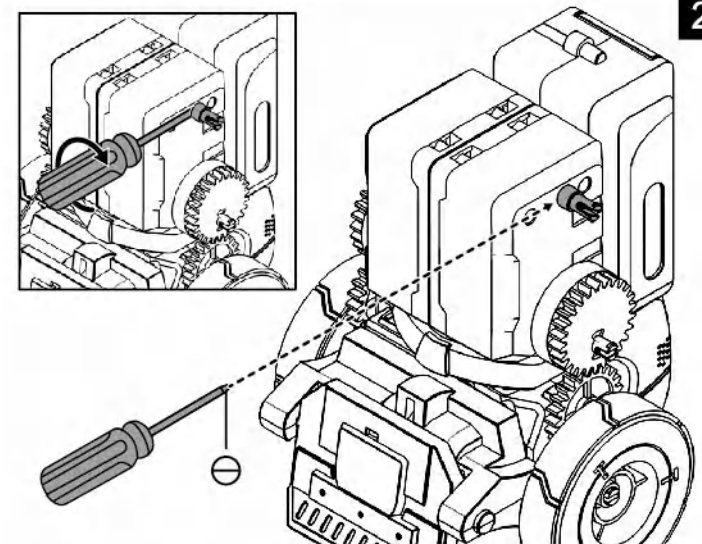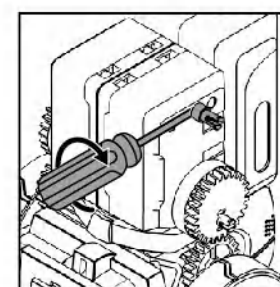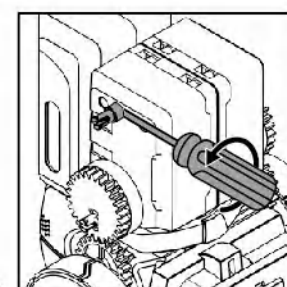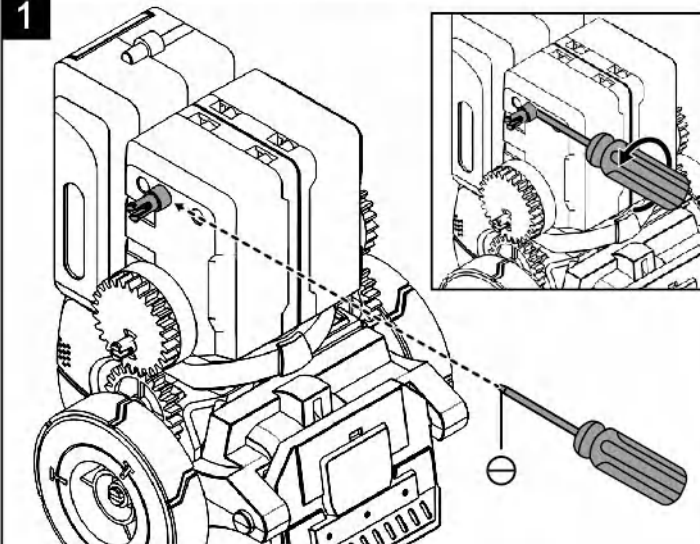

2


7

 3

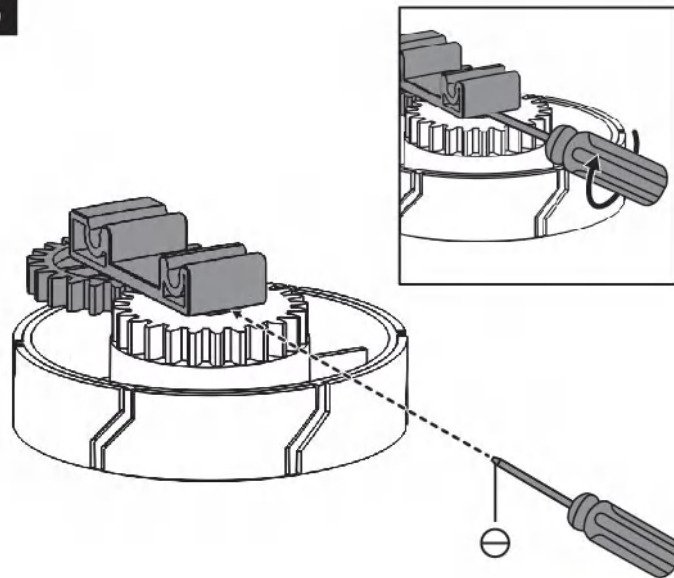


狙击神射手拆卸技巧 Sniper shooter disassembly skills

 1

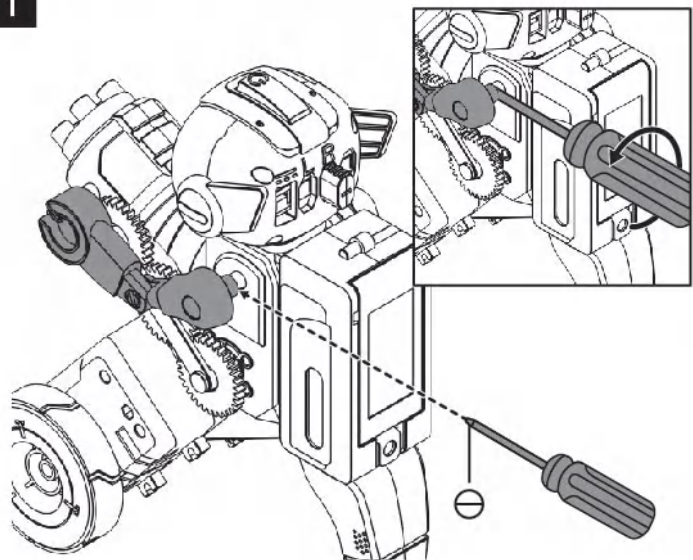



8

 4

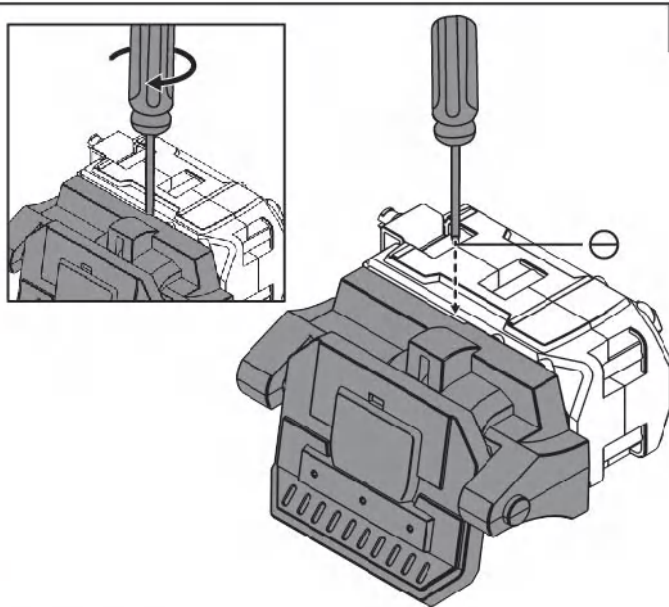


遥控器组装 Remote control assembly

  1

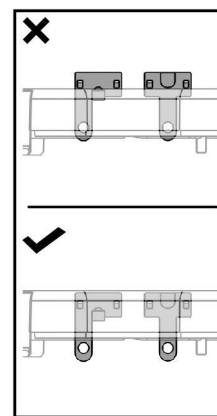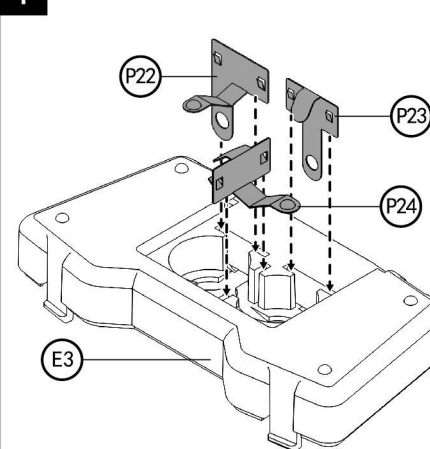


2

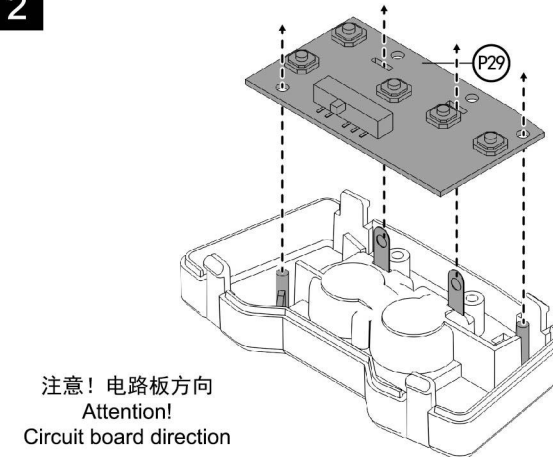 


注意！电路板方向
Attention!
Circuit board direction



 
3

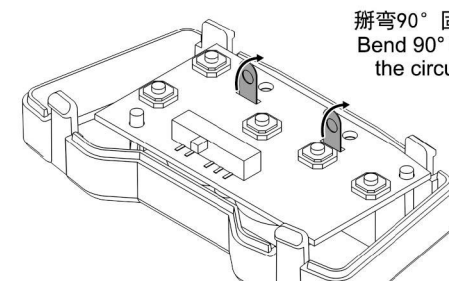

 掰弯90° 固定电路板
Bend 90° to secure
the circuit board


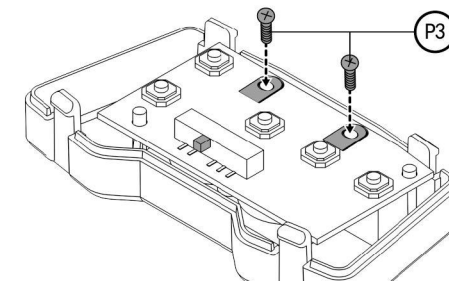


4

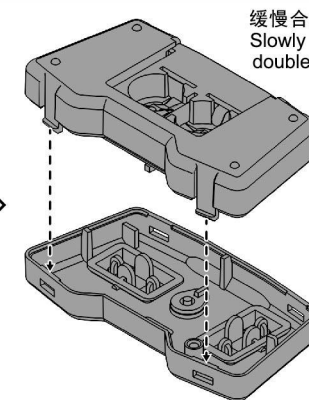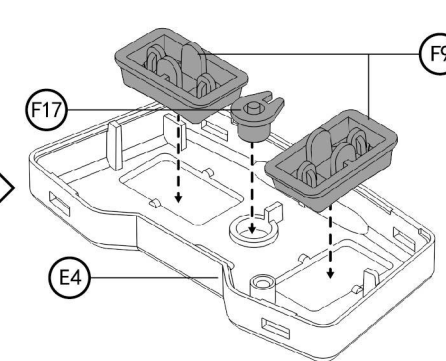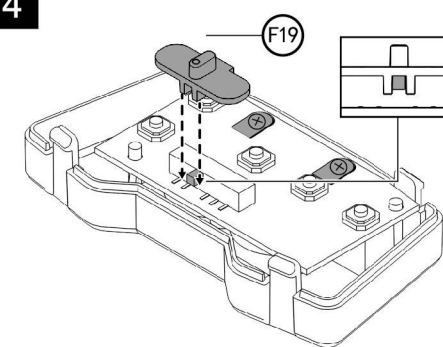   


缓慢合并双面
Slowly merge
double-sided

  9

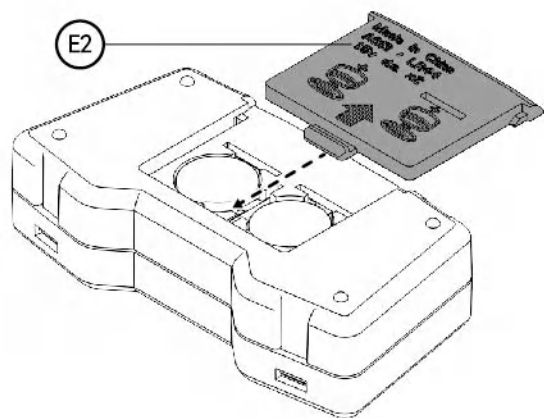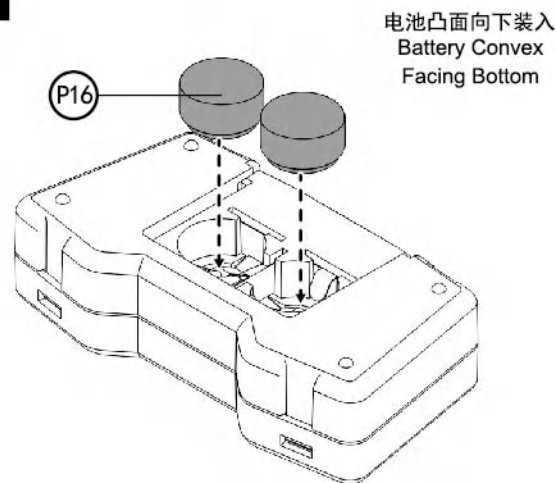

- 电池移除或更换应由成人或在成人监督下进行。
- 请避免电池或电池连接器端子短路。
- 电池长期不用或电力耗尽时请取出以避免电池漏液。
- 请勿混用新旧电池及不同厂牌、种类的电池，以免造成危险或电器损耗。
- 请勿混合碱性、碳锌电池或充电电池使用。
- 电池放入前请先确认正确正负极性方向。
- 请勿试图对非充电电池进行充电。
- 充电电池应在成人监督下进行充电。
- 本产品不能连接多于一个电源。
- 充电电池在充电前应从玩具中取出。

 - Battery removal or replacement should be performed by an adult or under an adult meal.
- Avoid short circuits from battery or battery connector terminals.
- Remove the battery when it is not used for a long time or when power runs out to avoid leakage.
- Do not mix new day batteries with different brands and types of batteries, so as not to Causing danger or electrical loss.
- Do not mix shouting, carbon-zinc batteries or rechargeable batteries.
- Please confirm the correct direction of positive and negative polarity before placing the battery.
- Do not attempt to charge a non-rechargeable battery.
- Rechargeable batteries should be charged under adult supervision.
- This product cannot be connected more than A power supply.
- The rechargeable battery should be removed from the toy before charging.

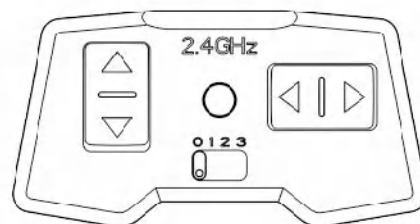


使用时请将开关拨到对应的1/2/3档位，使用完成将开关拨向0档位关机状态


When using it, please dial the switch to the corresponding 1/2/3 gear, and after using it, Switch to 0 gear shutdown status

左齿轮箱组装 Left gearbox assembly


1

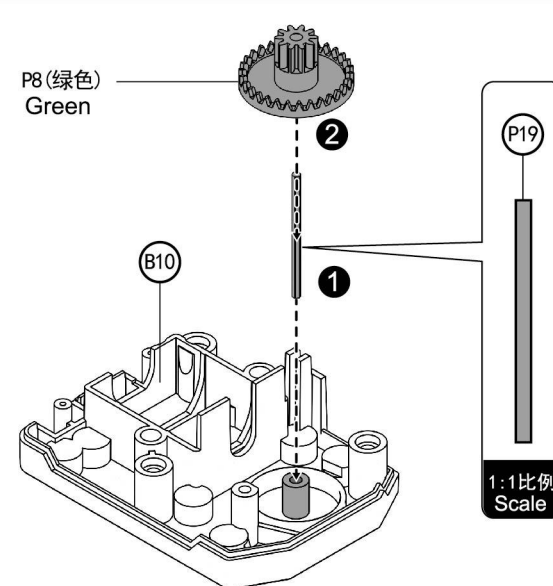


2

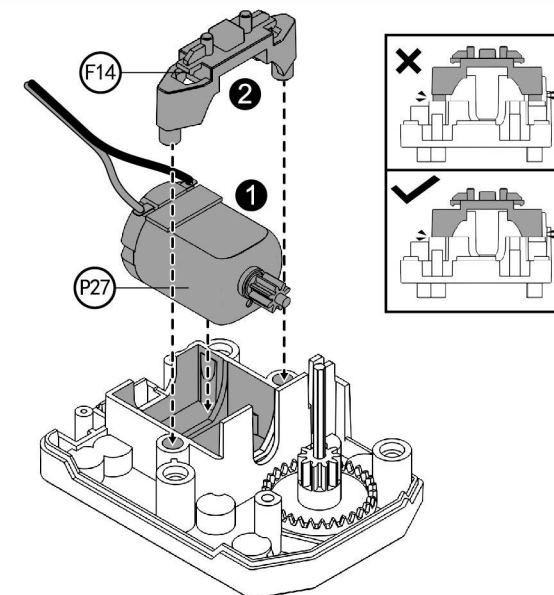



3

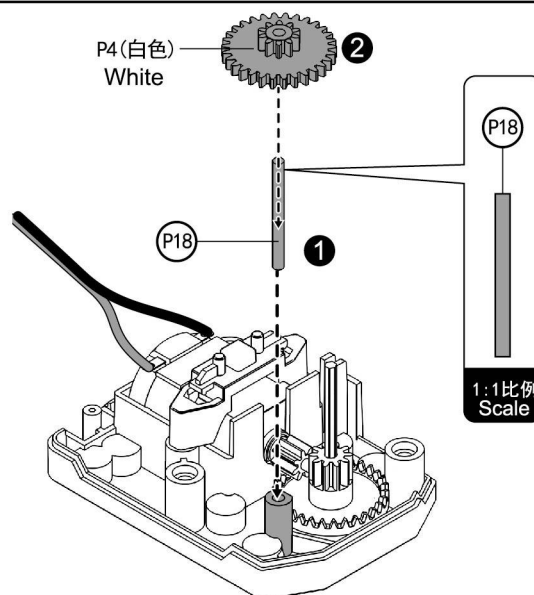 



4

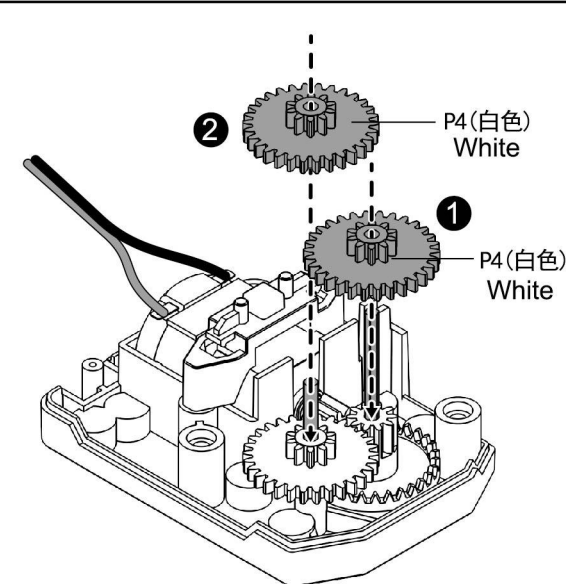 

5


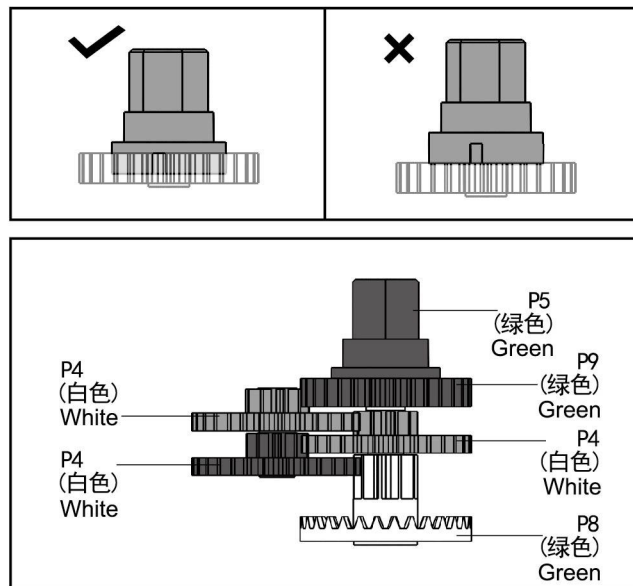 
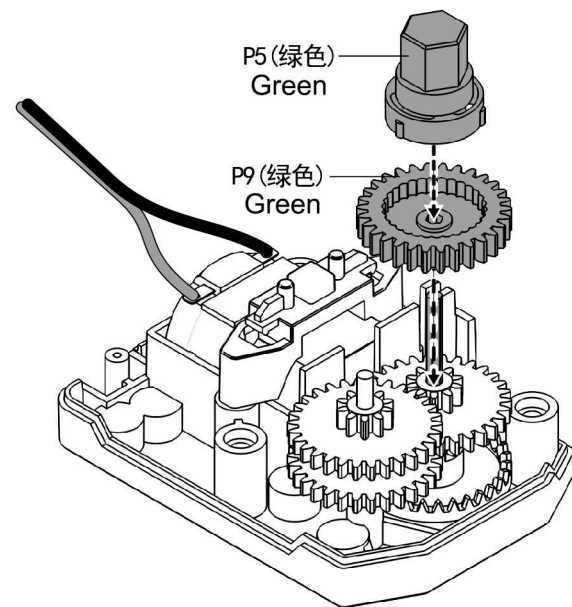 


6

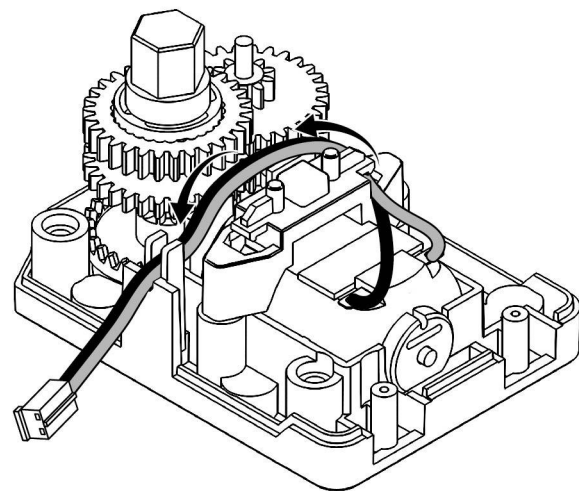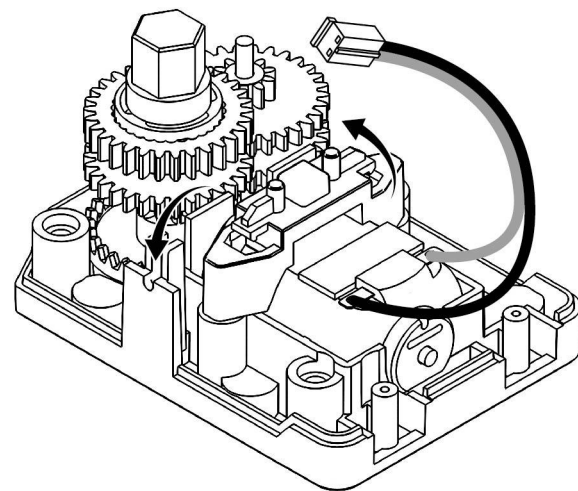  



12

   7

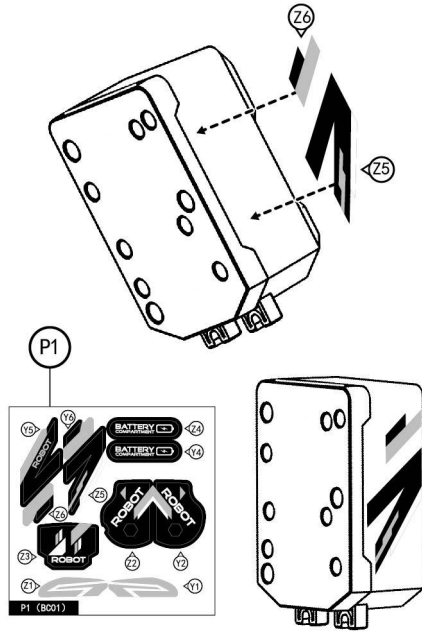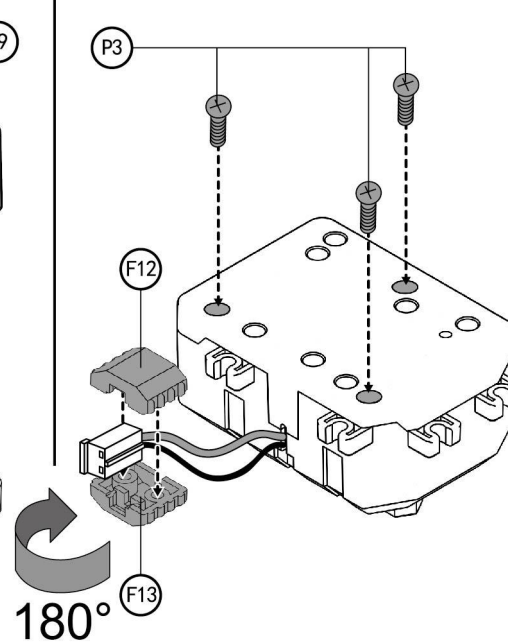
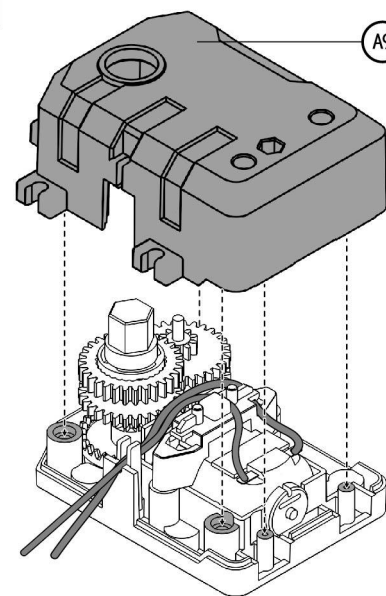


右齿轮箱组装 Right gearbox assembly

  1

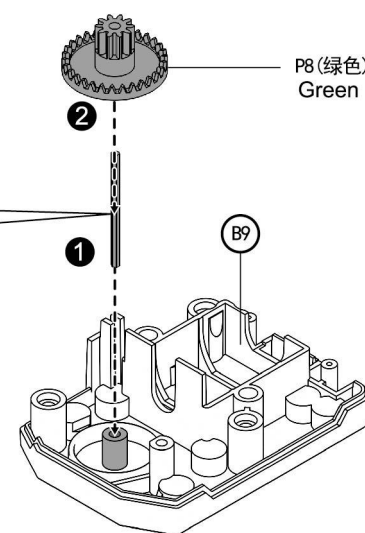


2

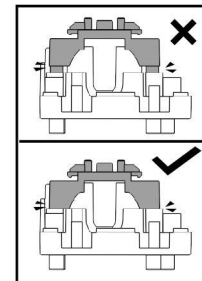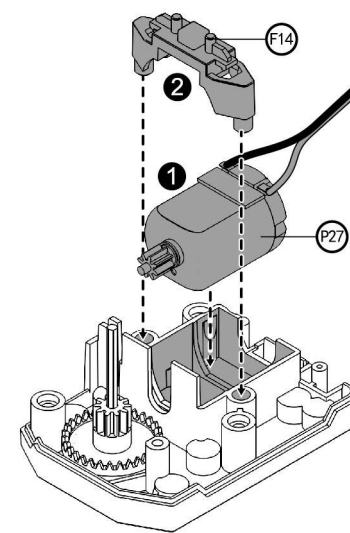  


13


 
3

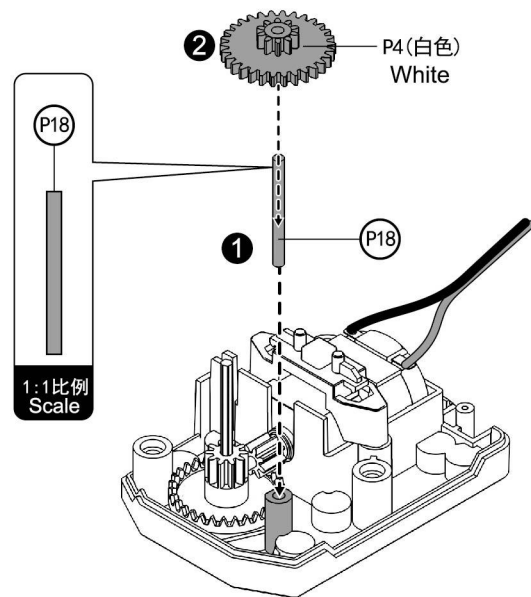


4

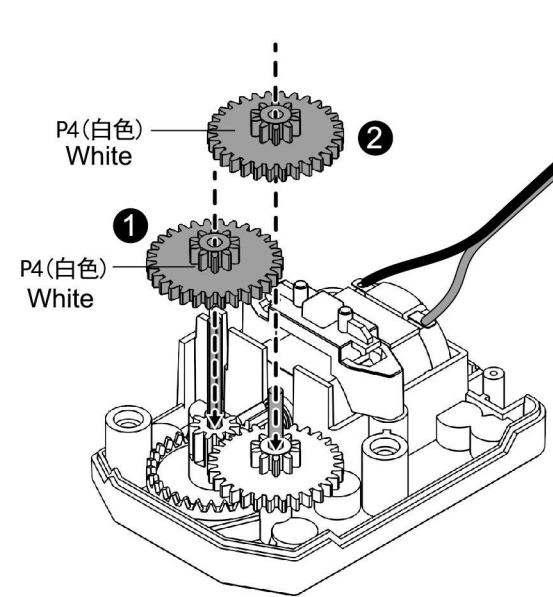 


5

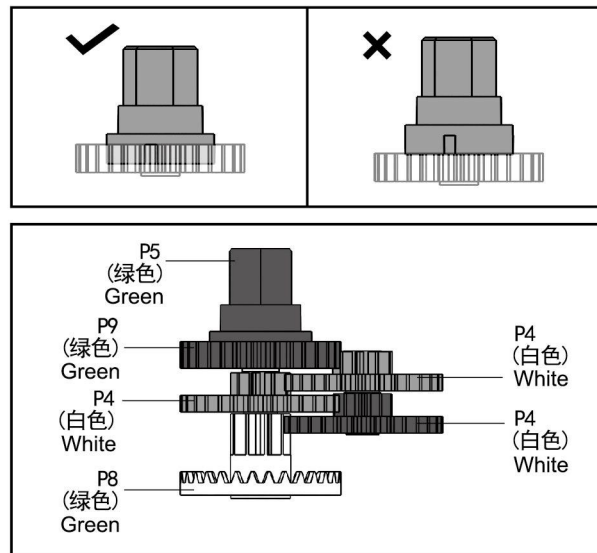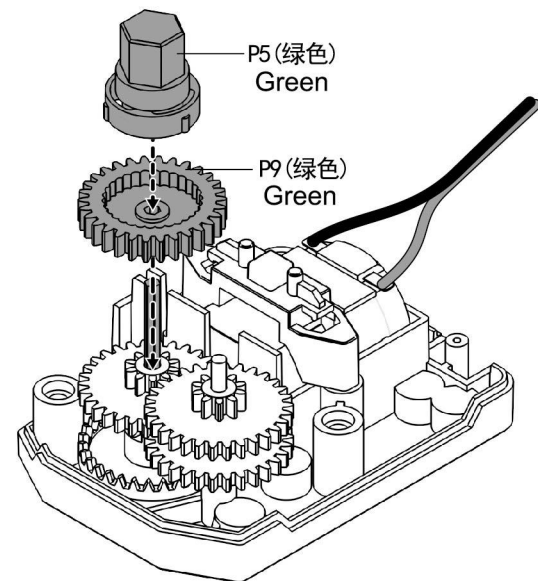  



6

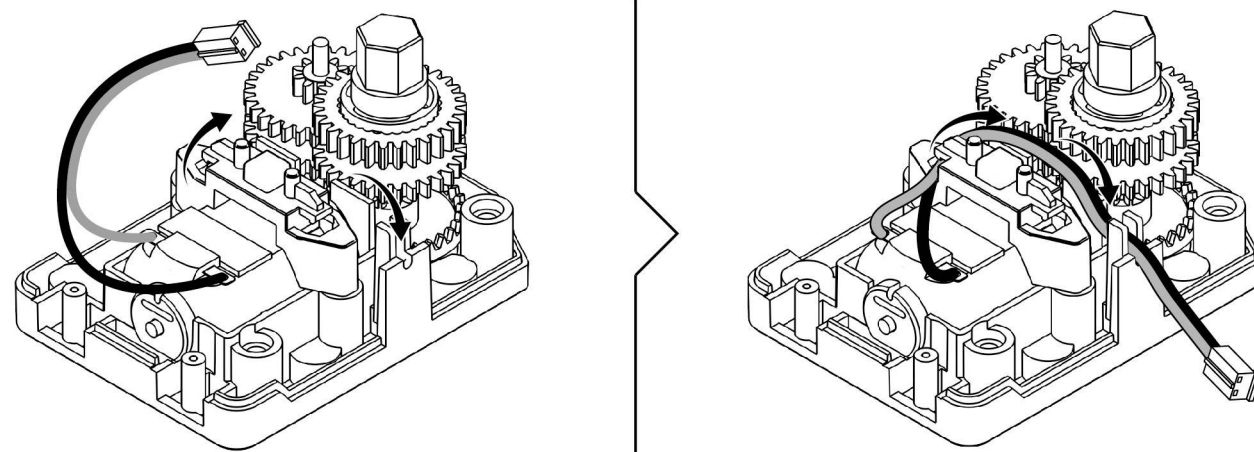 









7

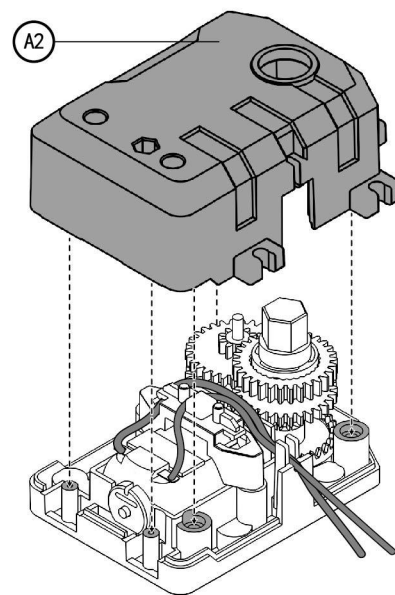 





180°

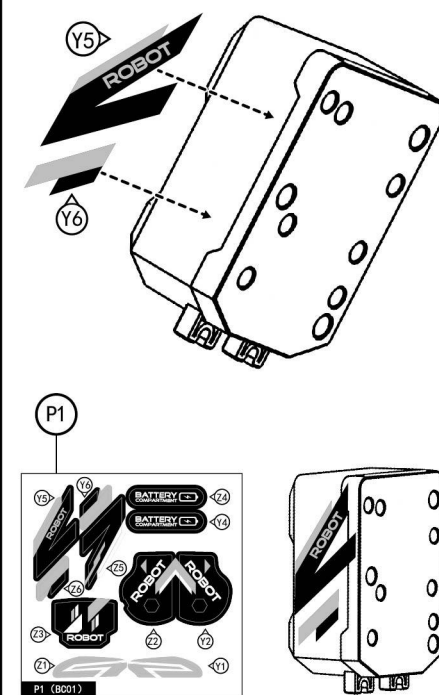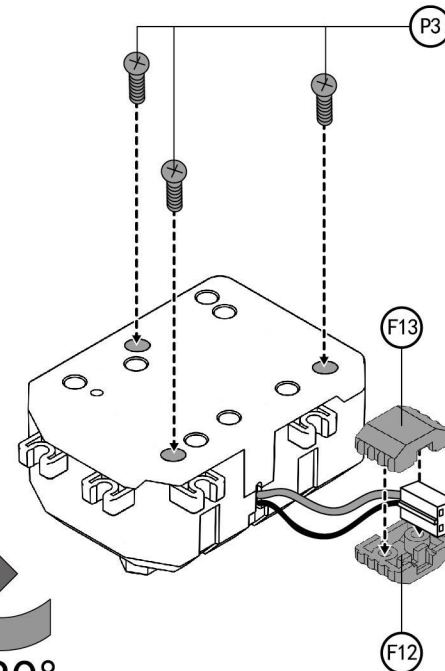  


中齿轮箱组装 Middle gearbox assembly

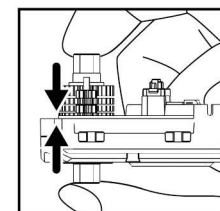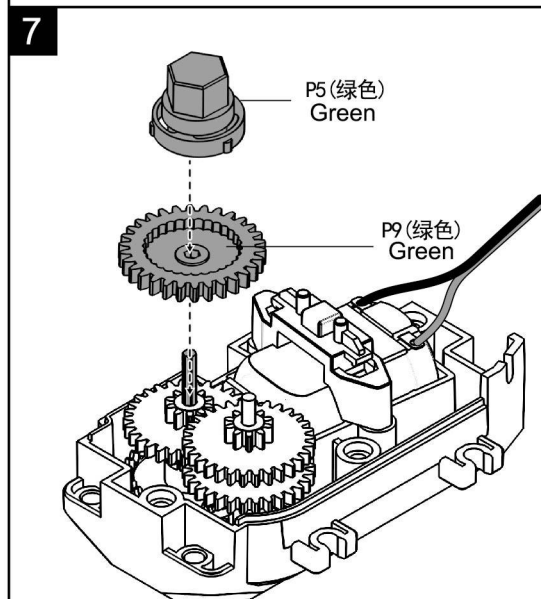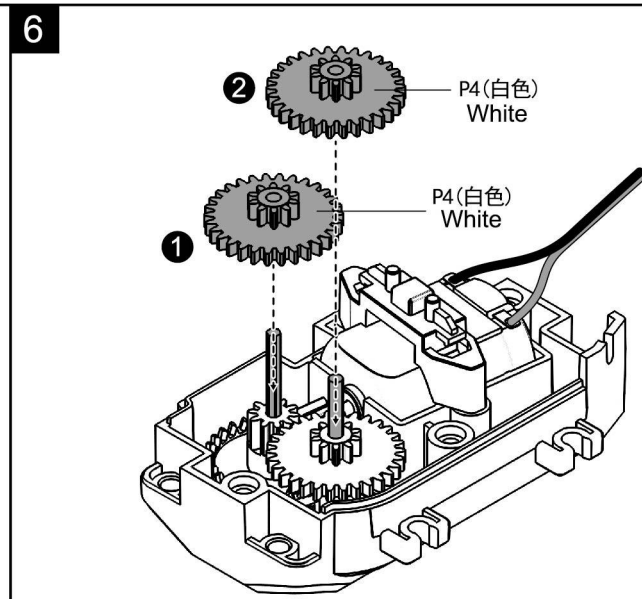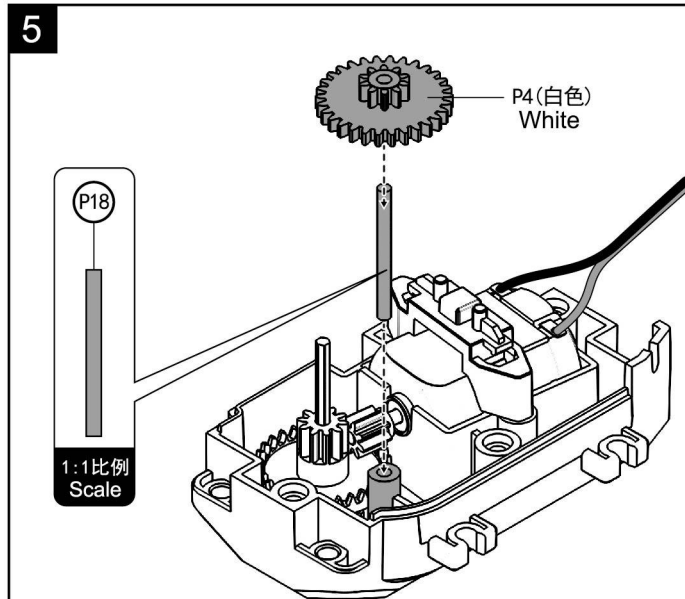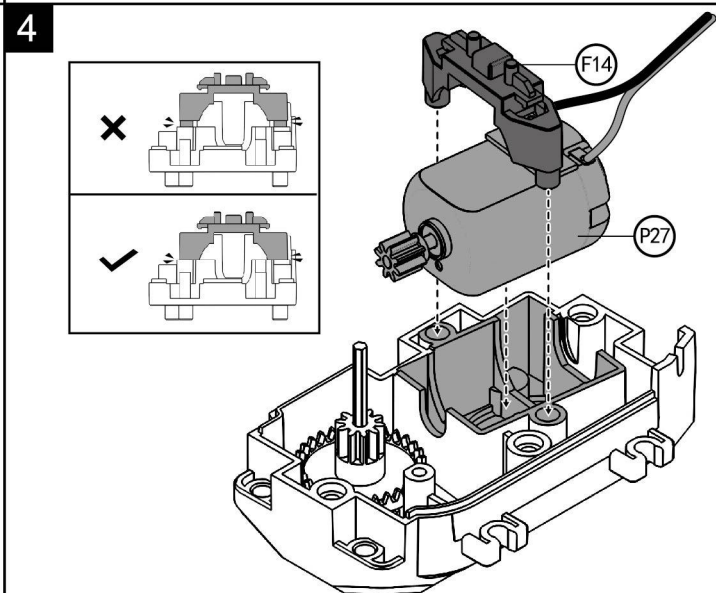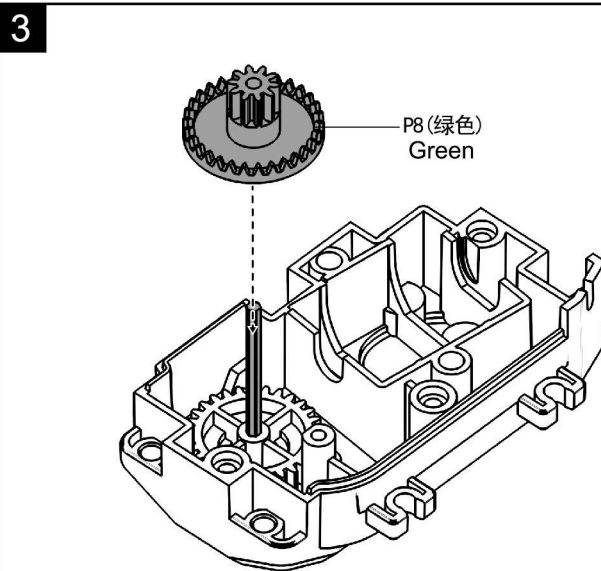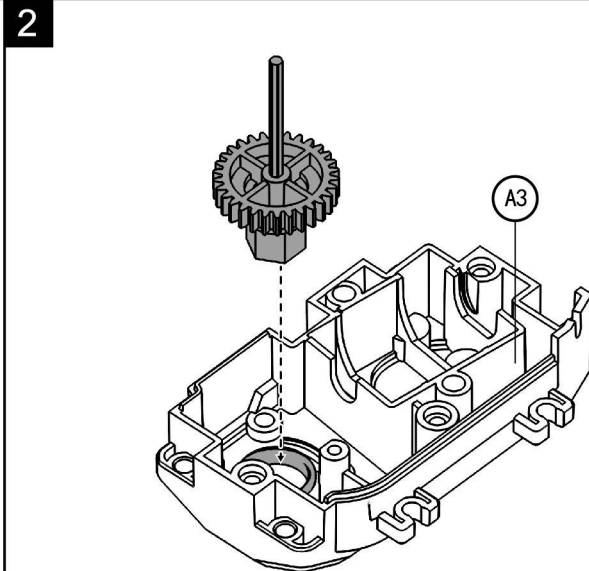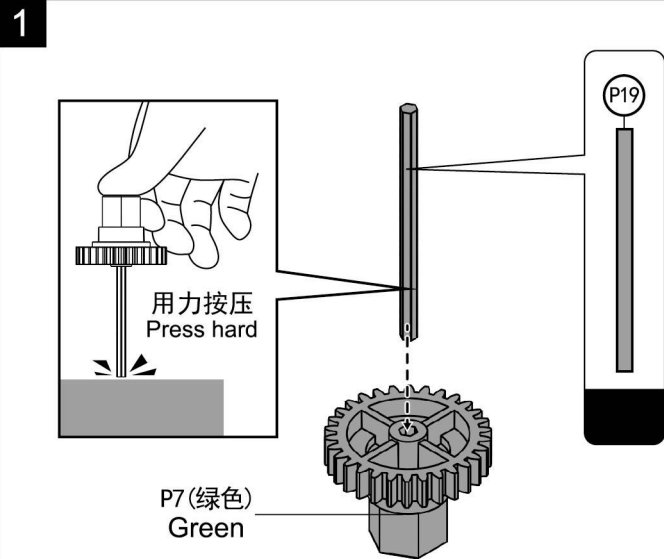        


上下同时用力按压
Press hard at the same time.

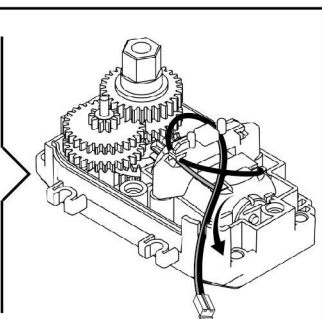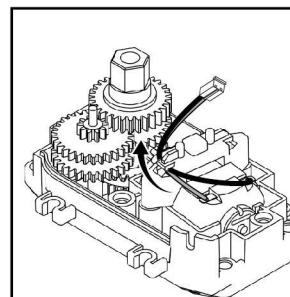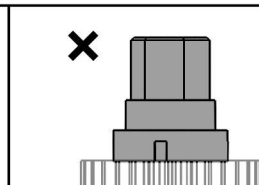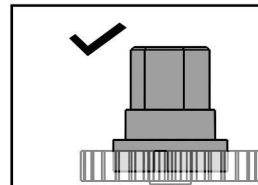    

7

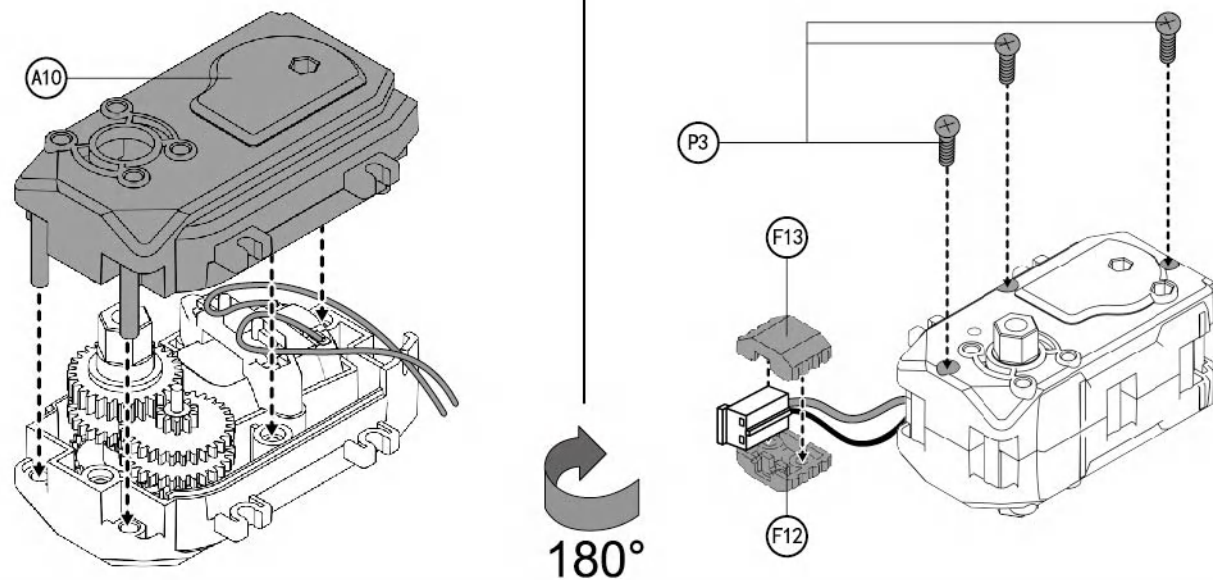 


8

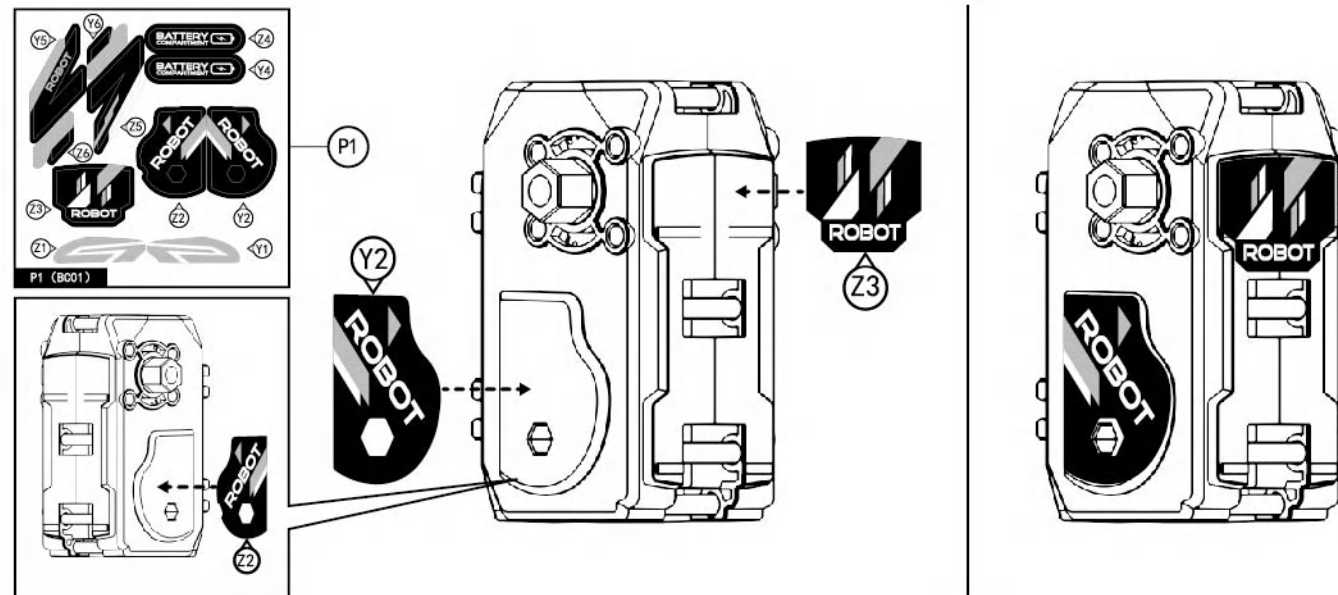 


头部安装 Press the head

 
1

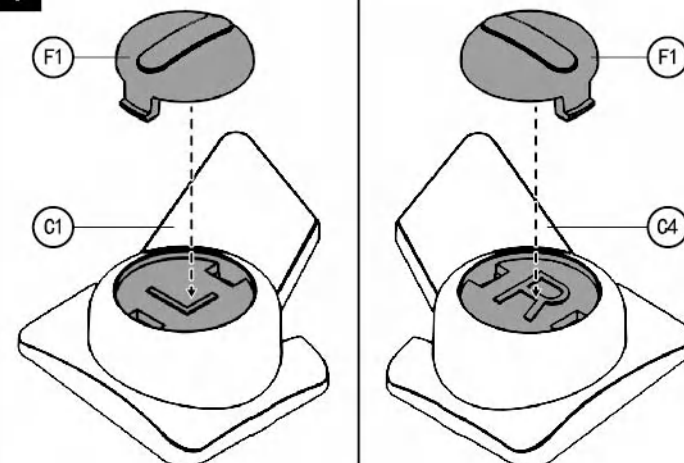

2

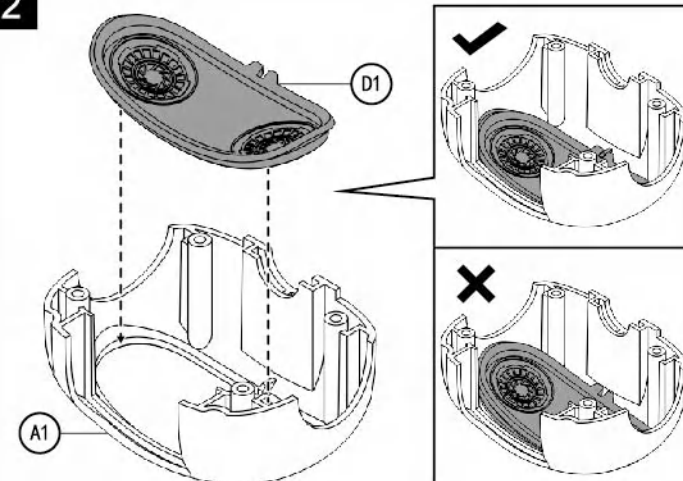 

3

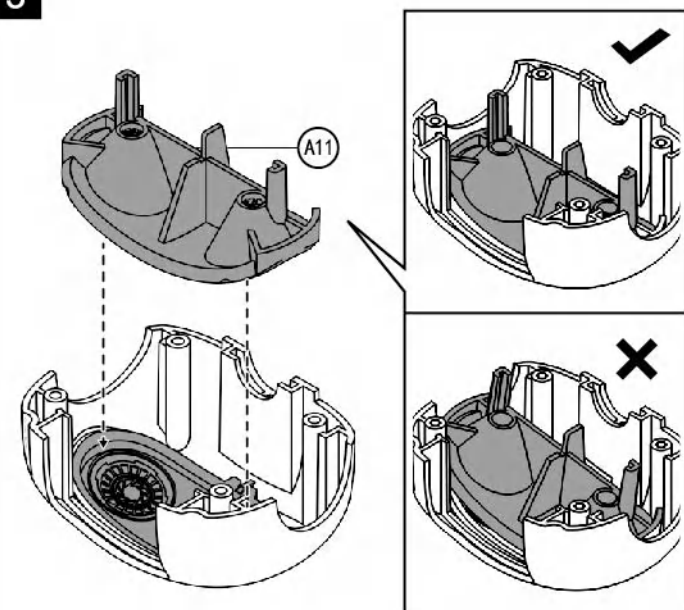 

4

