



# 1:28 INSTRUCTION



Thank you for choosing our toys! Please read through this instruction manual before use as it contains all the information you need to know about how to correctly, joyfully use this product.

## ⚠ PRECAUTIONS :

### • Electric Product

Do not give this product to children aged 6 or below. Like other electric products, this product is also to be used in a safe way to avoid electric shock.

### • Adult's Supervision Required

Warning! Do not try to modify this product, which may void your right to use it.

## CHARGING


(1) The new Ni-Cd battery pack included in this set needs to be charged before use.

(2) Please charge for at least 8 hours for the first 2 times. Then, it's enough to charge for 5-6 hours during normal use.

(3) Do not overcharge as it will not fill the battery with more power.

(4) Please check on a regular basis the wire, plug and other electric parts on the toy, batteries and charger. If any damage is found, please repair it before use.

## TRANSMITTER & TRIMMER


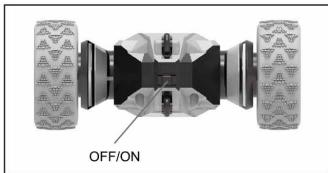


## INSTALLATION OF BATTERIES & ANTENNA

(1) Replace the battery cover.

(2) Correctly install the rechargeable battery pack in the battery compartment and replace the battery cover.

(3) Fasten the screw with a plus driver.

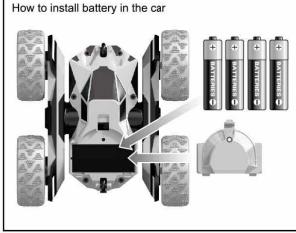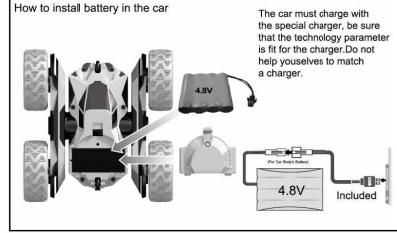

## BASIC OPERATION PICTURE SHOWING HOW TO USE THIS PRODUCT



Push both the control levers of the transmitter toward upward, the car will run forward.



Push both the control levers of the transmitter toward downward, the car will run backward.



Push the left control lever of the transmitter upward while pushing the right control lever downward, the car will spin on the spot.



Push the left control lever of the transmitter downward, the car will spin on the spot.



Push the left control lever of the transmitter upward, the car will swing forward.



Push the left control lever of the transmitter downward, the car will swing backward.

## BASIC OPERATIONS

(1) Turn on the car and set the band selectors on the transmitter and the chassis to the same position.

(2) Use the 2 control levers on the transmitter to control the car to run forward/backward or to turn left/right.

(3) If the car can't run along a straight line, please use the trimmer on the chassis for adjustment.

(4) Remember to turn off the car and the transmitter after use.

## BATTERY SAFETY

1) Adult's supervision is required for charging.

2) To charge the rechargeable battery pack in the car, first remove it from the chassis.

3) Timely remove exhausted batteries from the car and the transmitter.

4) Make sure the main switch is set to OFF before installing the battery pack into the car body.

5) Note polarity marks in the battery compartments when installing the batteries.

6) Do not try to charge non-rechargeable batteries.

7) Do not short-circuit the batteries.

8) If you plan to stop use for a long time, remove the batteries from the transmitter and the car body to avoid leakage.

9) Never throw the batteries into fire to avoid explosion or leakage.

10) Do not mix batteries from different producers or new and old batteries.

11) Use only recommended batteries or equivalent ones.

12) Check the batteries on a regular basis to avoid leakage.

13) Keep this manual well for future reference as it contains important information about this product.

## CARE & MAINTENANCE

(1) If you plan to stop use for a long time, remember to remove all the batteries.

(2) If necessary, use a wet towel to gently wipe the car body clean.

(3) Do not expose this toy to high temperature, high humidity or direct sunlight.

(4) Do not put this toy in water to avoid damaging its electronic components.

## USE CAUTIONS

• When the car is in motion, do not touch the wheels by hand to avoid damages to the car.



Do not play by the roads or in any other dangerous places to avoid accidents.

Do not bend the antenna or point it at other people or articles to avoid hurts.

## FCC statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



# 1:28 说明书

# 扭臂特技车

欢迎您使用本公司生产的玩具，为了确保操作感到愉快，在使用前请您先读熟以下说明，将使您对本产品有足够的了解，并能正确使用。

## ⚠ 注意：

### • 电控产品

不要给6岁及其以下的孩子使用。所有的电子产品在使用的时候都要留意和预防电击。

### • 请在成人监督下使用

警告：请遵守不要改变和修改这个产品，修改产品就无权使用这个产品。

## 如何充电？

1. 这个新的镍-镉电池包是没有充电的。

2. 把USB充电插头插上室内USB插座上，把电池插头接入充电线的SM插头里。

3. 在首两次充电的时候，充电的时间最少要6个小时，之后的充电时间是4-5小时。不要过量充电，过长时间的充电也不会使电量增加。

4. 定期检查玩具和电池，充电器的电线，插头和别的零件。这些件如果有损坏就不可以再使用，需要修好才可以使用。

## 遥控器和车仔的操作




## 电池的安装方法

1. 依照电池盒里的正负电极的指示来安装电池。

2. 根据上图的箭头所示安装电池盖。

3. 把可充电的电池包装入电池箱里。

4. 用十字螺丝刀拧紧电池盖。

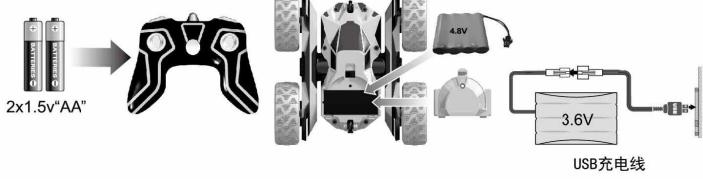

## 产品使用基本操作图



1. 遥控器双杠都向上推，车子向前行走。



2. 遥控器双杠都向下推，车子向后行走。



3. 遥控器左杠向上推，右杠向下推，车子原地旋转。

## 如何玩遥控车？

1. 遥控车打开开关。

2. 操作遥控器的遥控杆来遥控车仔向前，或者向后，和向左，或者向右。

3. 如果车仔不能走直线，请调节车底的前轮定位杆。

4. 使用后要关好车仔和遥控器的开关。

## 电池的安全使用

1. 请在成人管理下进行充电。

2. 请从车底取出可以充电的电池来充电。

3. 把没有电的电池从车仔，和遥控器里取出来。

4. 在确定关上车仔开关的情况下，再装上电池。

5. 要按照电池盒里的指示来装电池，要注意不要装错电池的(+)和(-)电极，和确定电池的电极装的正确。

6. 不要用不是可充电的电池来充电。

7. 不要使电池的电极短路。

8. 如果长时间不用遥控车，请把电池从遥控车和遥控器里取出来，预防电池漏液。

9. 不要把电池放在火里，这样电池可能爆炸或者漏液。

10. 不要使用不同供应商的电池或新的和旧的电池一起用。

11. 只用被推荐的电池，或者是同样质量的电池。

12. 要定期检查电池是否有漏液的情况。

13. 请保管好这个说明书用于有需要的时候使用。这个说明书有重要的资料。

## 保养与维修

1. 长时间不玩，就要取出电池。

2. 用湿布来轻轻地来抹车。

3. 不要把玩具放在高温，高潮及阳光直射的地方。

4. 不要把玩具放在水里，这样会损坏电子元件。

## 温馨提示

• 当车移动时，请不要用手触摸遥控车的四个车轮，以免损坏遥控车。



不要在马路边或危险地方玩，以防发生意外。



不要随意折断天线，或对准其它的人和物，以免受伤。