



HB TOYS



WILDERNESS

R/C 4WD TRAIL CRAWLER MANUAL

遥控四驱攀爬车说明书



Whether you are a beginner or professional, carefully read the ENTIRE instruction manual and inspect all the components are setting correctly before operating, to avoid unnecessary losses.

无论您是初学者或专业人士，在开始使用该产品前，请务必先认真阅读说明书，检查完各部件设定正常，以减少不必要的损失。

V2023.12

Precautions 注意事项

1. Play away from the crowd, children need to be under adult supervision, need to be more than 14 years old.
玩车远离人群，儿童需在成人监护下使用，需大于14周岁。
2. If there is any overheating deformation when the battery is charging, it will be interrupted immediately.
Do not out of watching for a long time when is charging.
电池充电时有任何过热变形, 立即中断。不得长时间无人看守充电。
3. When the battery is low, it should be replaced in time. After running the car, you need to power off to store.
电池电量不足时要及时更换，跑完车需要断电存放。
4. The remote control system has a variety of different functions and settings, ensuring that all function settings are fully understood before initial contact. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury. This is a sophisticated hobby product. It must be operated with caution and common sense and requires some basic mechanical ability.
遥控系统有各种不同的功能和设置，初次接触前确保所有的功能设置完全理解。未能正确操作产品可能会导致损坏产品，个人财产和造成严重伤害。这是一个复杂的爱好产品。它必须谨慎和常识操作，并需要一些基本的机械能力。

Product specification 产品规格参数

Length 车长:	559mm	Tyre Diameter/Width 轮胎:	118mm/48mm
Width 车宽:	247mm	Wheelbase 轴距:	313mm
Height (chassis) 车高:	252mm		

 
Repair service 维修服务

1. The vehicle needs regular maintenance, especially the parts of the activity. Every time the sports car is finished, it will remove the dust and debris.
车辆需要经常保养，特别是活动的零件部位，每次跑车完及时清除上面的尘土杂物。
2. Regularly check the screws on the car and tighten them if necessary.
定期检查车上有螺丝的地方，有必要就拧紧加固。
3. Always check the place where the car is easy to wear, and replace it if necessary.
经常检查车上面容易磨损的地方，有必要就换掉。
4. All parts can be found as parts on the exploded map. Damage can be ordered at the retailer. If you have any questions, you can ask for help at the retailer.
所有的零件都可以作为散件在爆炸图上找到编号，有损坏可以在零售商订购更换。有任何问题，都可以在零售商寻求帮助。

The characteristics of this model 本模型特性

Simulation car lighting effect 全新独特设计，仿真车灯光效果	Imported High Precision sealed ball bearing 全车采用进口高精度轴承
High and low speed switch 全新独特设计，高低速任意切换	Metal frame 金属大梁
Strong 550 motor 强劲550马达	Hardened steel universal drive shaft 6pcs 全车金属万向传动轴*6
Aluminum adjustable motor mount and metal pinion gear 铝合金可调马达座，机加工马达钢齿	Aluminum alloy hydraulic adjustable shock absorber 铝合金液压可调避震器
6kg gear Servo *1, and 9g Servo *1 6kg伺服器*1，9g小伺服*1	Unique steering shock absorber design 独特设计，转向避震器
Free to lock and unlock front and rear differential mechanism 可自由锁定、解锁前后差速器	

Transmitter function 遥控器按键功能图

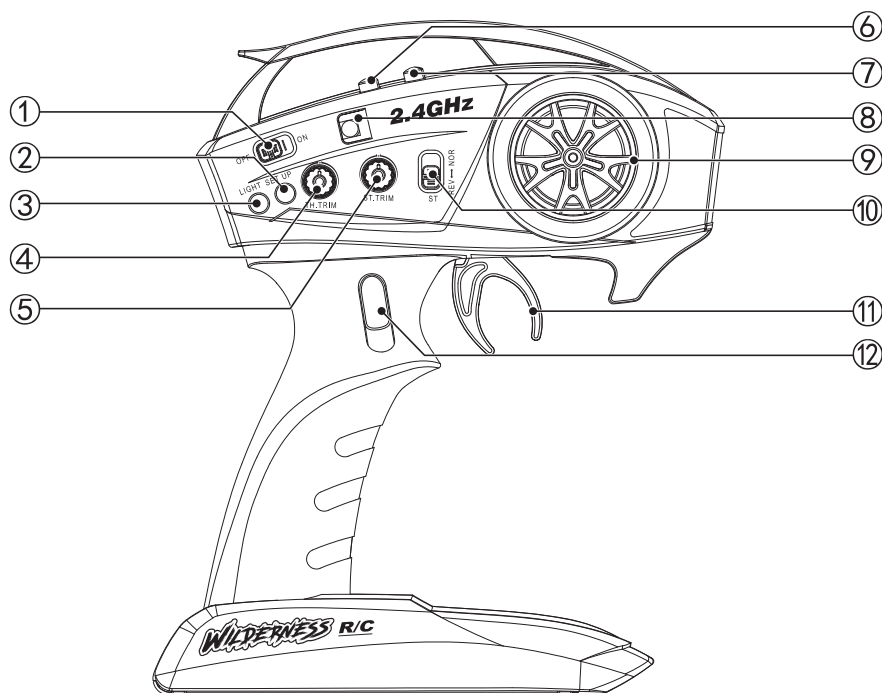

1. Power switch
电源开关
2. Set button
设置按键
3. Light control
灯光控制
4. Cruise control
定速巡航

5. Steering servo trimmer
转向舵机微调
6. Rear differential lock button
后差速锁按键
7. Front differential lock button
前差速锁按键
8. Indicator light
指示灯

 
9. Steering wheel
转向轮
10. Steering reverse switch
转向正反开关
11. Throttle/Brake trigger
油门/刹车扳手
12. High and Low speed shift
高低速度档

Note: The rear differential lock is button (CH6), on indicates that the rear differential lock is locked, off indicates that the rear differential lock is not locked. The front differential lock button (CH4). If on, the front differential lock is locked. If off, the front differential lock is not locked. By default, the differential lock is not locked when the power is on after matching frequency.


注：后差速锁按键(CH6)，灯亮表示后差速锁锁定，灯灭表示后差速锁未锁定；前差速锁按键(CH4)，灯亮表示前差速锁锁定，灯灭表示前差速锁未锁定；开机对频默认前后差速锁未锁定。

Install batteries in the transmitter 遥控器电池安装

1. Slide in the direction of the arrow to remove or install the transmitter battery cover.
按箭头方向滑动，拆下遥控器电池盖。
2. Insert 4*1.5V AA batteries according to the indicated positive and negative direction, close the battery cover.
按照遥控器指示的正负极，正确装入4节1.5V AA电池，再重新盖上电池盖。

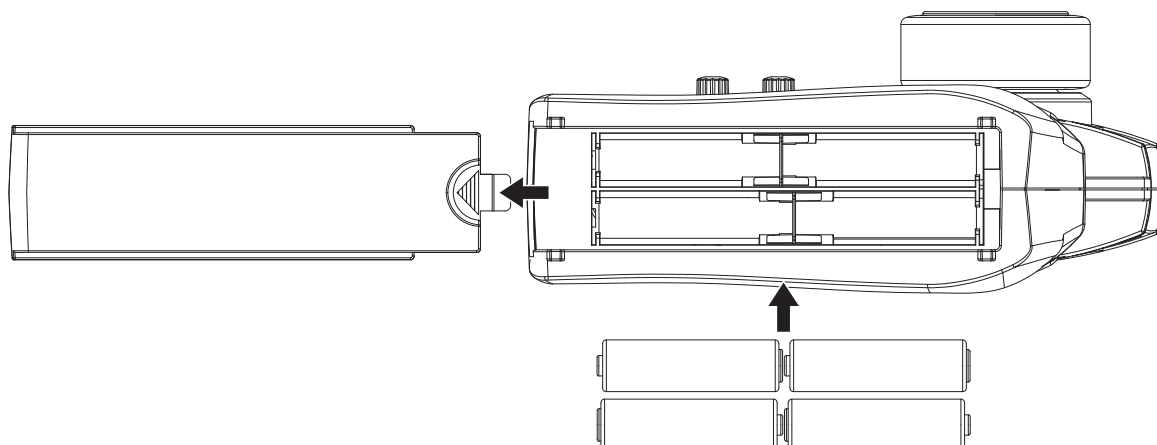

Battery charging 电池充电

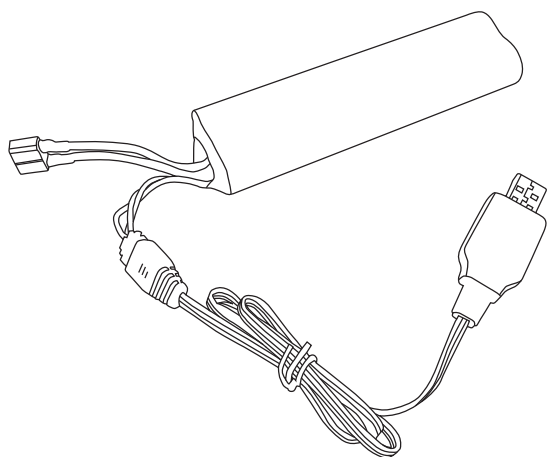 







NOTE: Charging time for battery is around 5 hours.
注：电池充电时间约为5小时。

Steering 转向

Middle
中位


Turn left
左转

      Turn right
右转

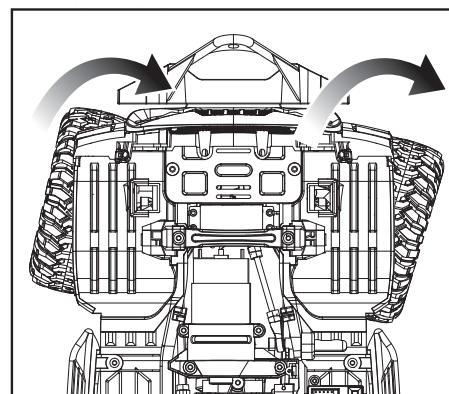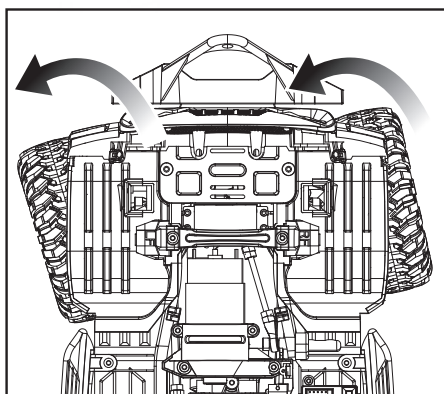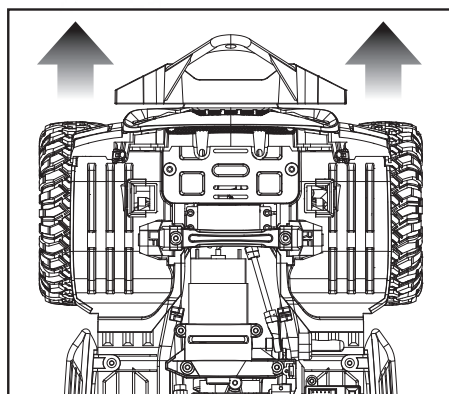
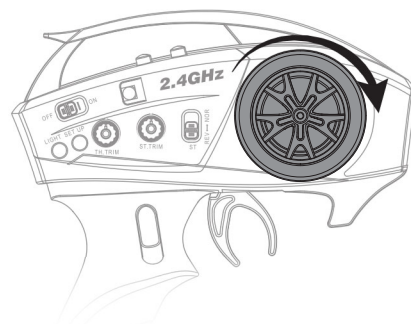
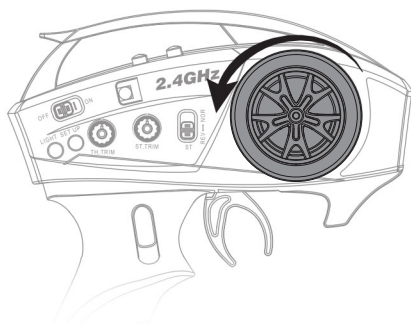
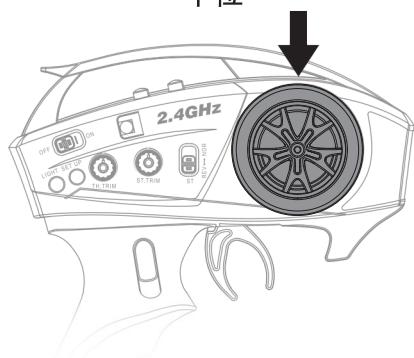


Steering trimming 转向微调

 If the car cannot go straightly during driving, it can be adjusted through the steering trimming.
车辆行驶过程中如无法直线行驶，可通过此微调进行调整。

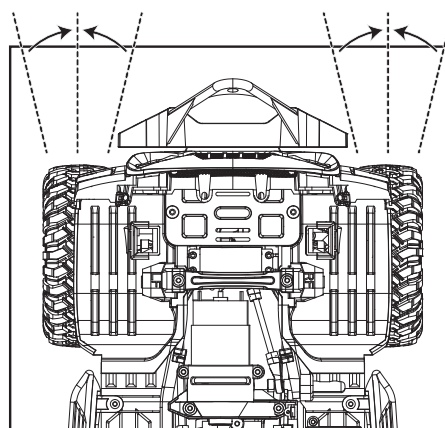


Throttle 油门

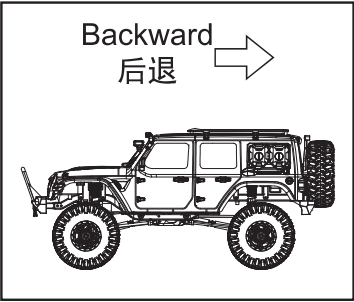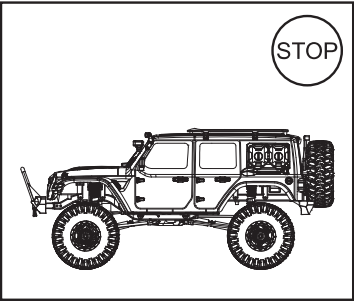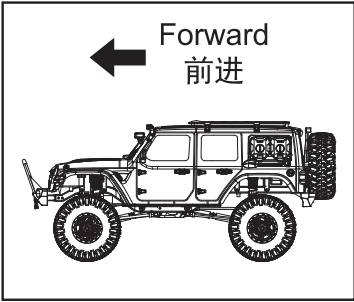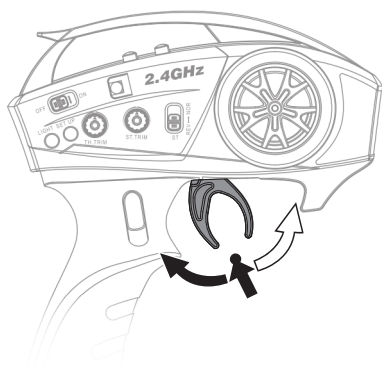    


Cruise control 定速巡航

 Which maintains vehicle speed for more comfortable long-distance travel.
该功能可以维持车辆行驶速度，使长距离行驶时更舒适。

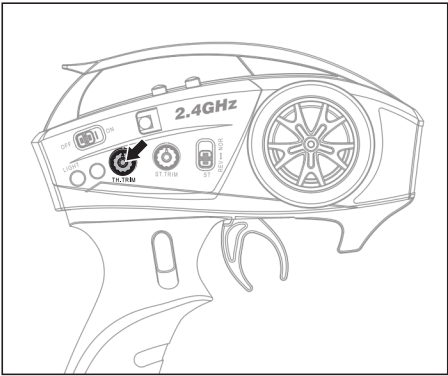


To operate Cruise Control, accelerate to your desired speed and adjust the knob on the transmitter to lock the speed in. Your model will continue at the set speed until you apply the brakes.
使用巡航控制时，先将车辆加速至所需的速度，然后调节遥控器上的旋钮以锁定车速。车辆会以设定的速度行驶，直到您刹车为止。

 Receiver 接收器

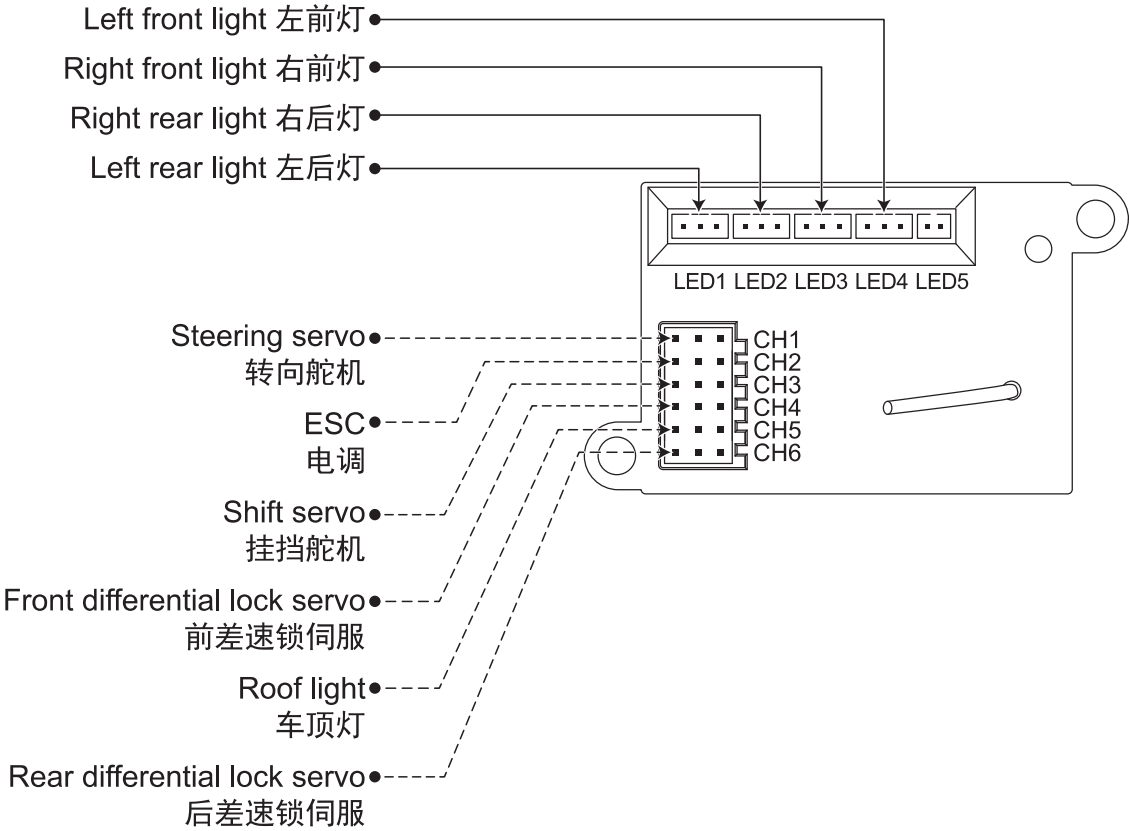


High and Low speed shift switch 高低速度档开关

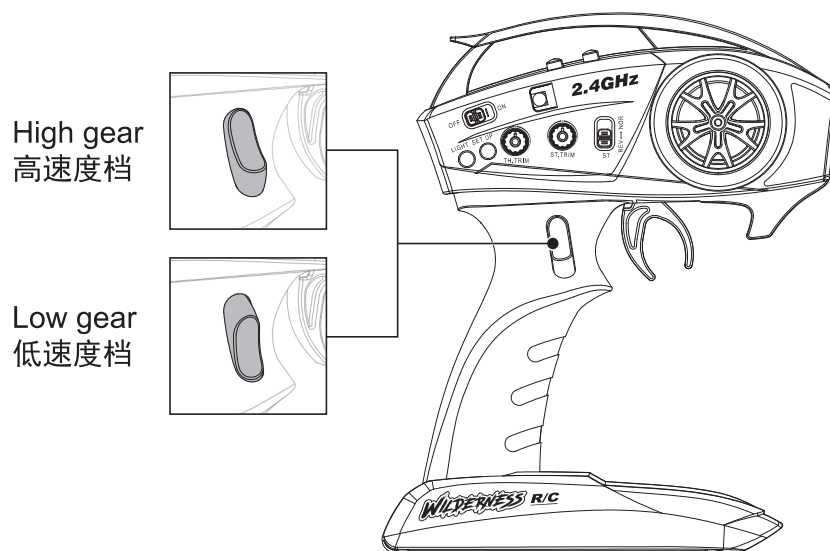 


Light control 灯光控制

 
Click to turn on the front and rear lights, and press twice in succession to turn on the roof lights.
按一下开启前后车灯，连续按两下开启车顶灯。

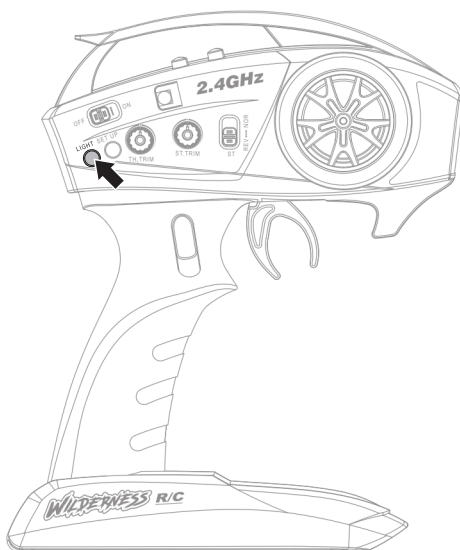




Power switch 电源开关

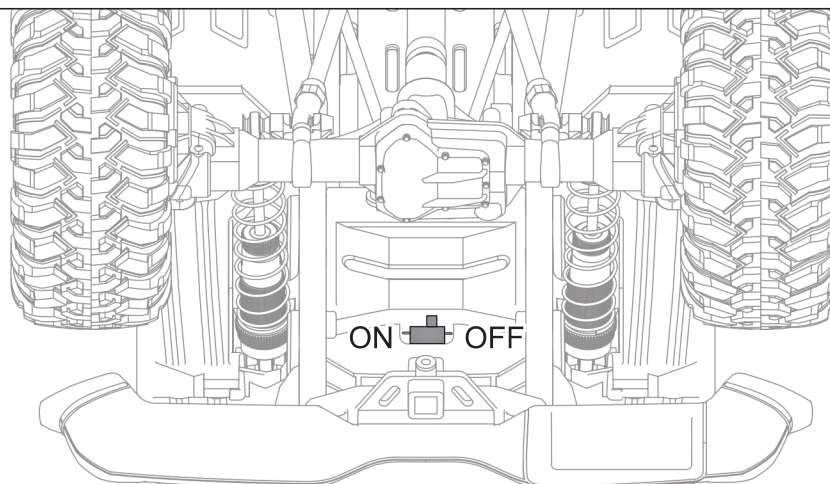 


Front Assembly




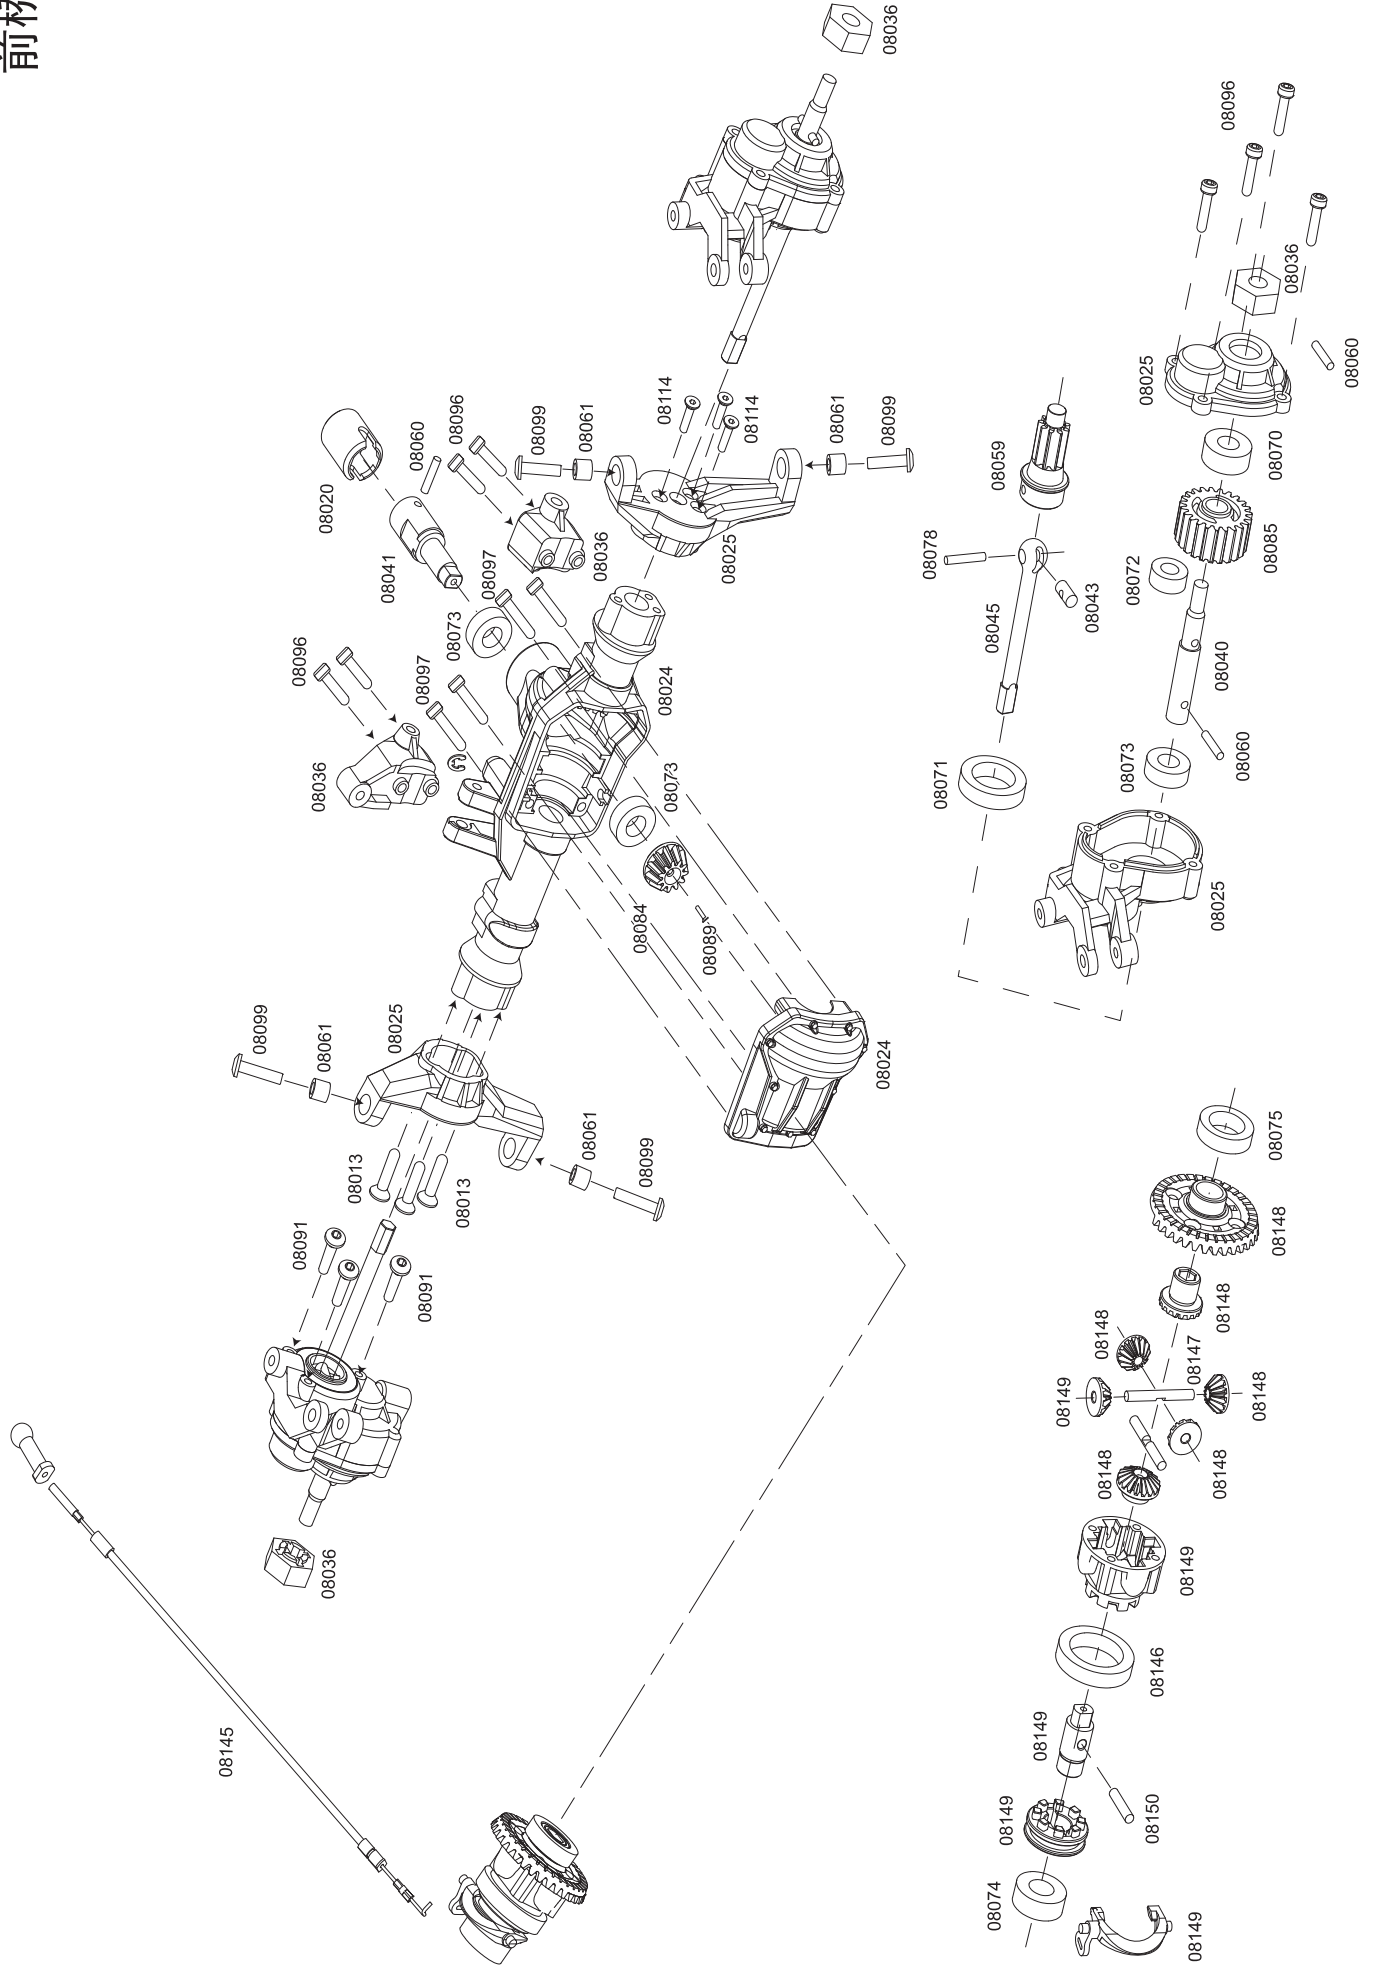 


Front Assembly 前桥组

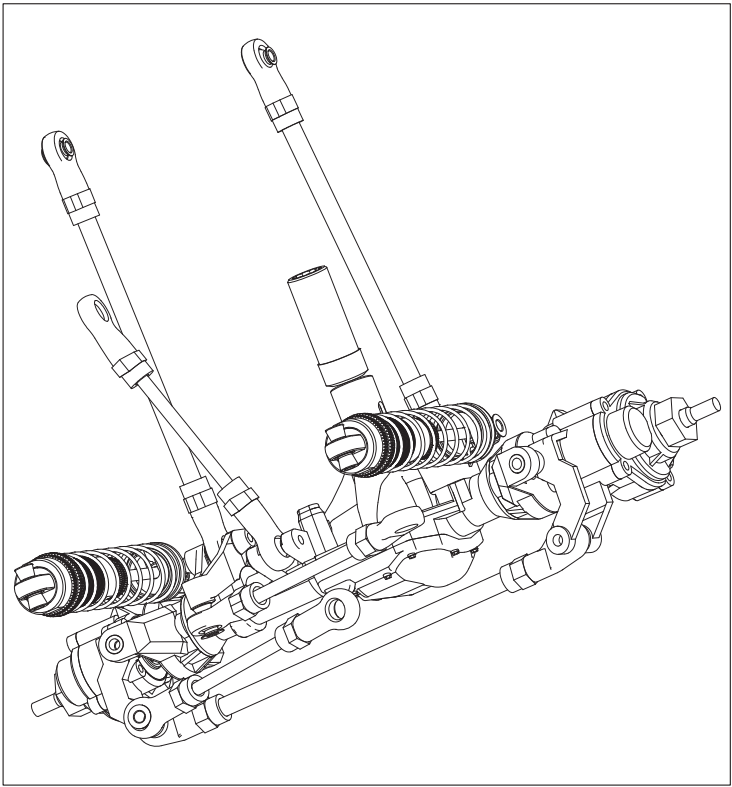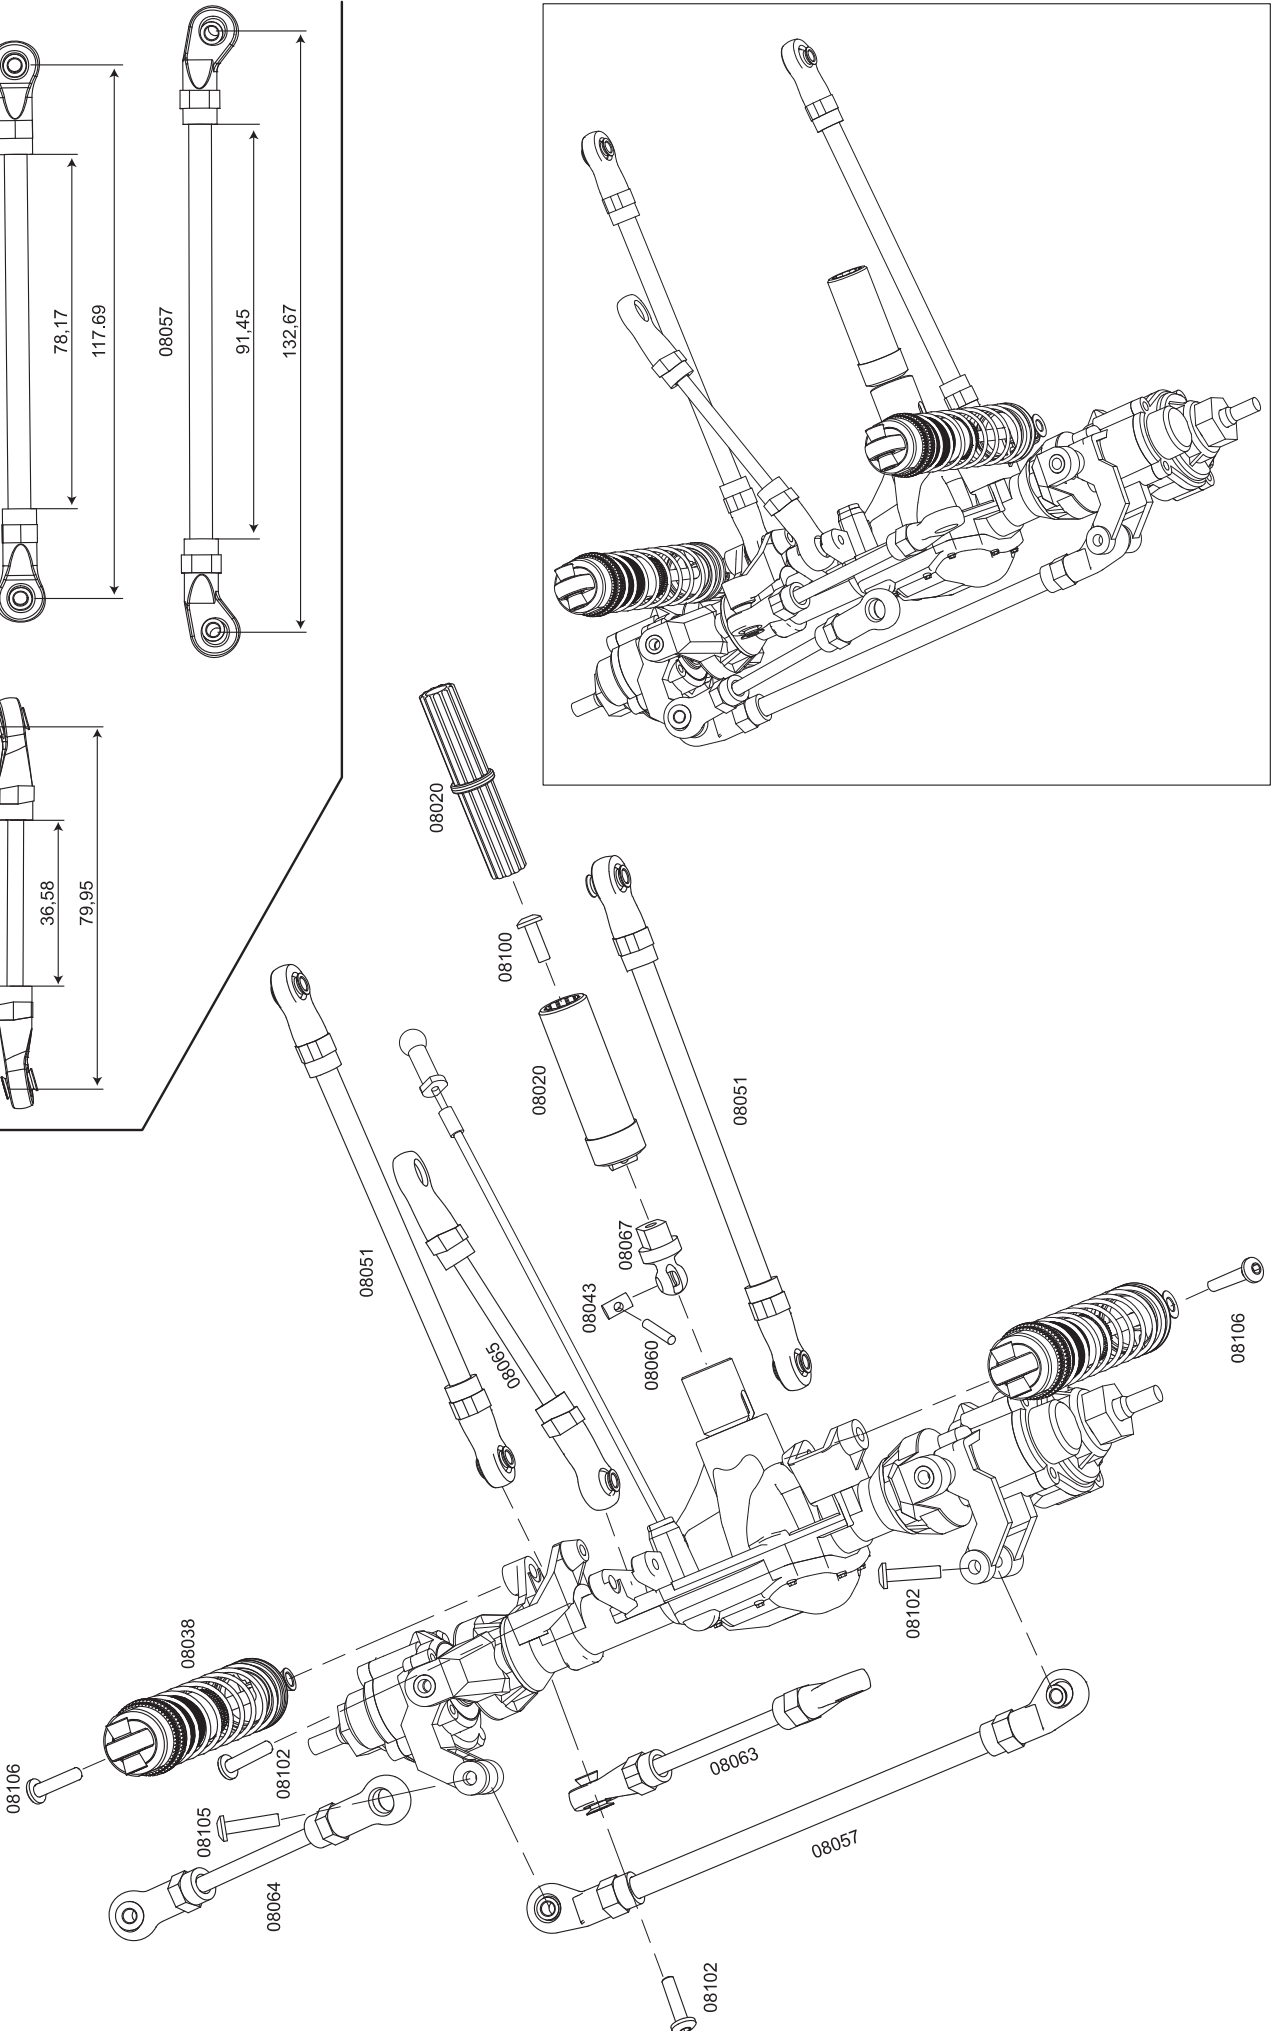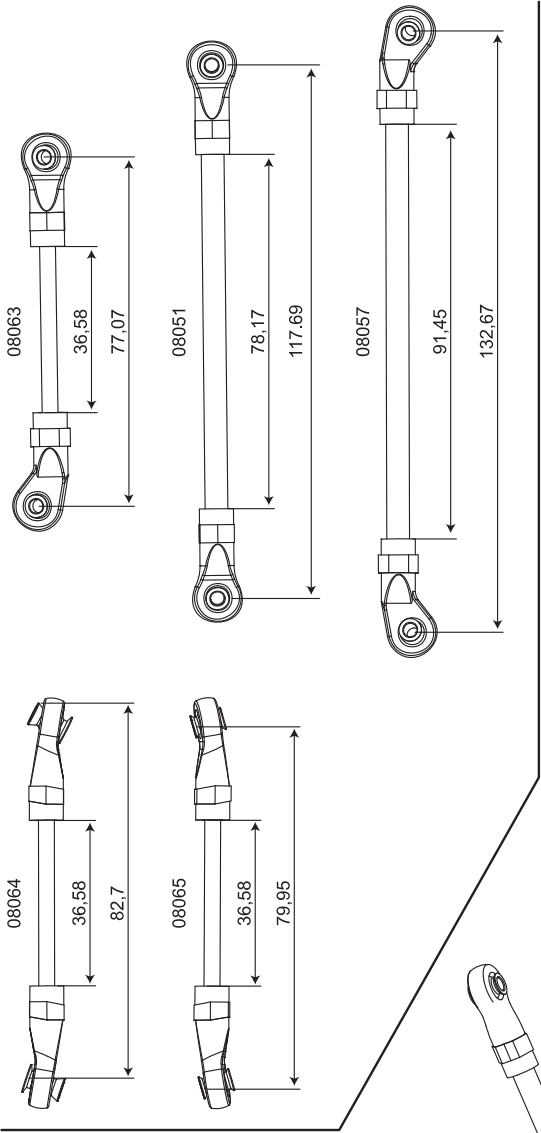   

Rear Assembly

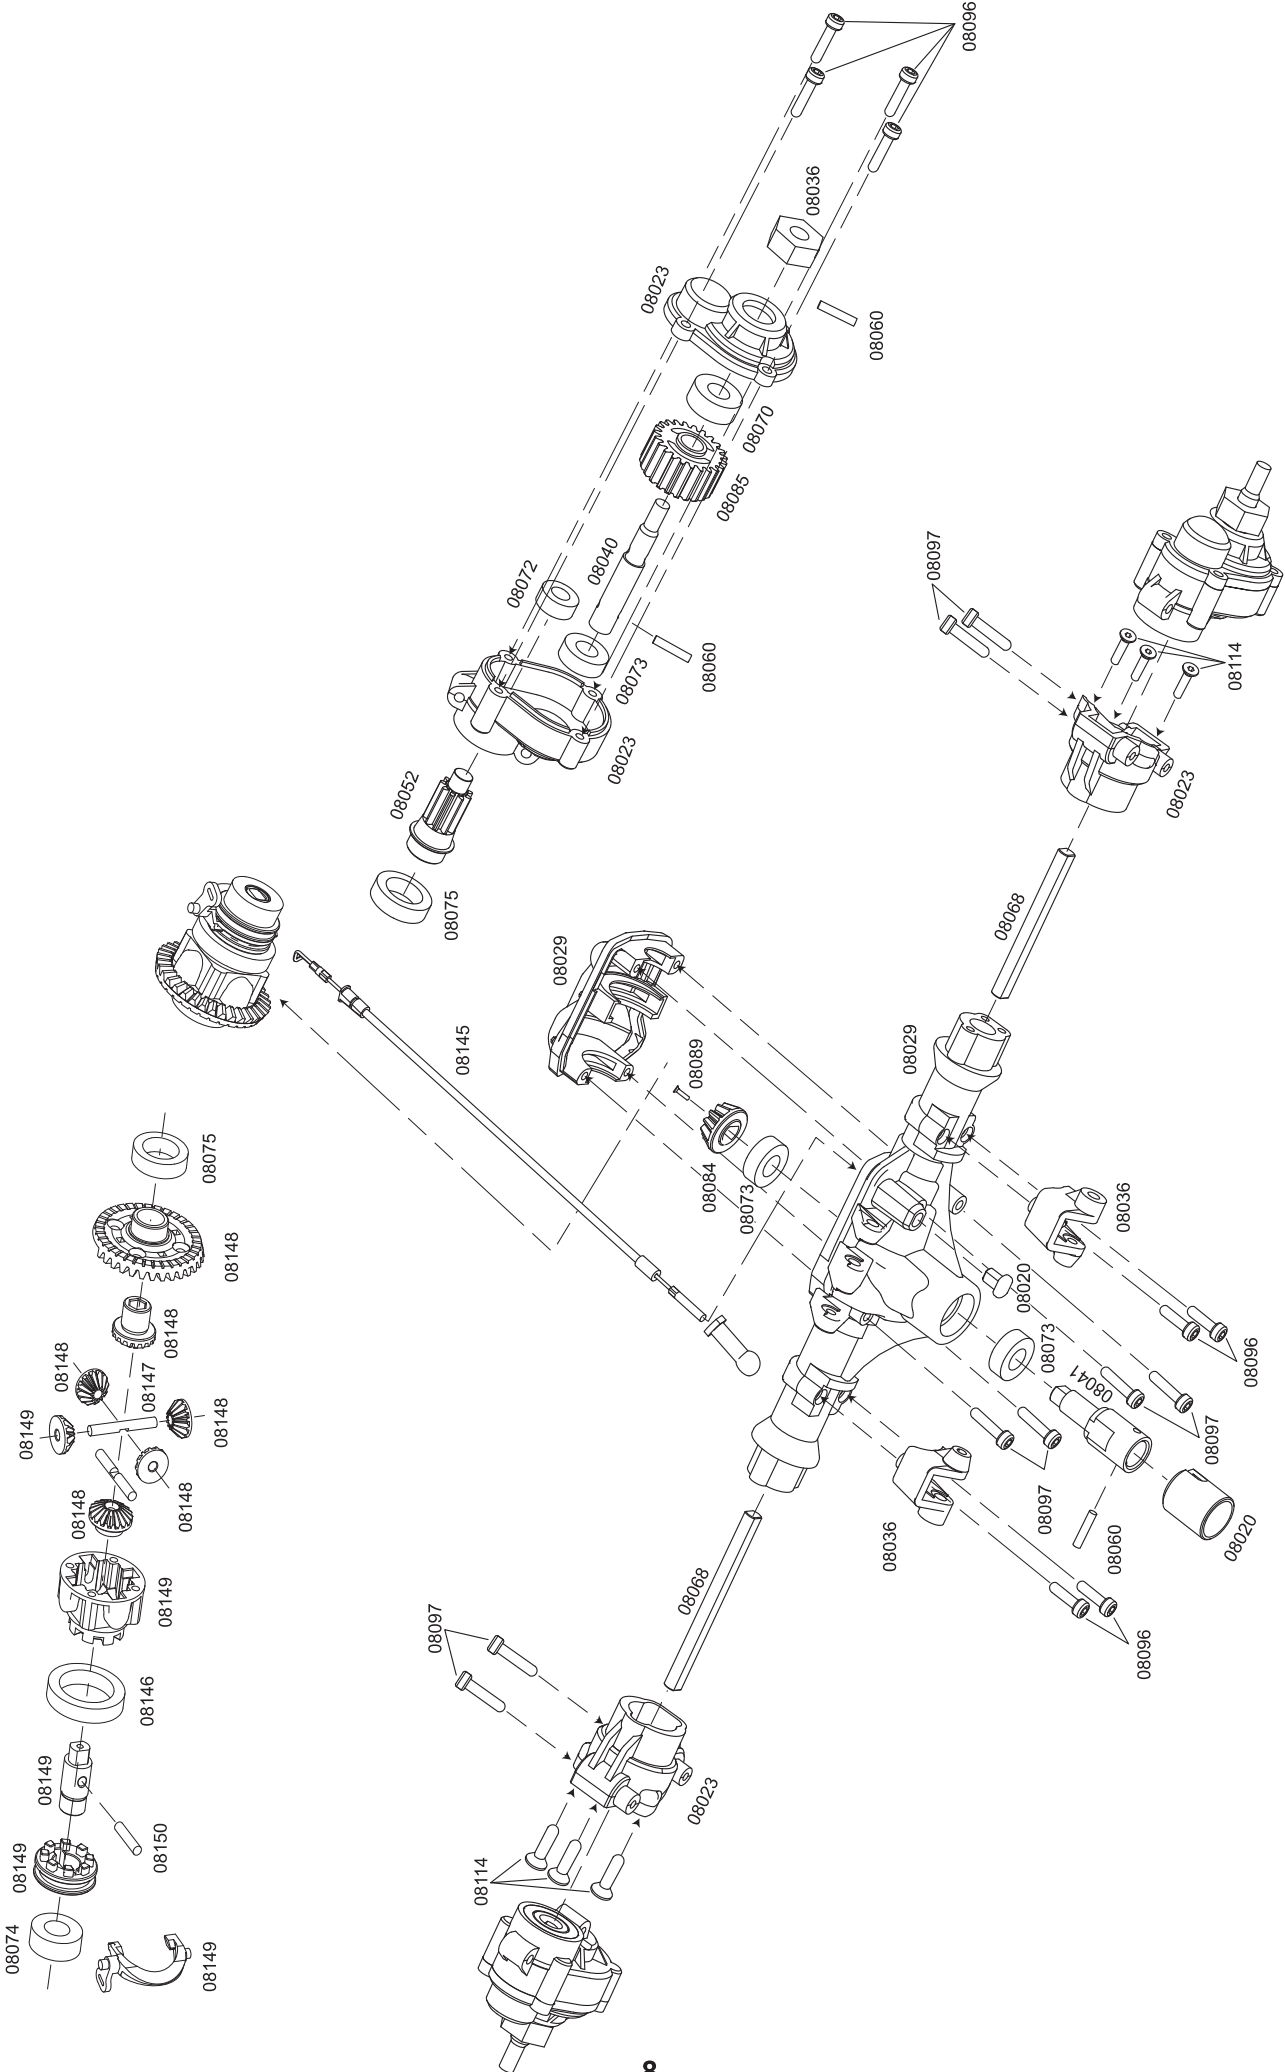 

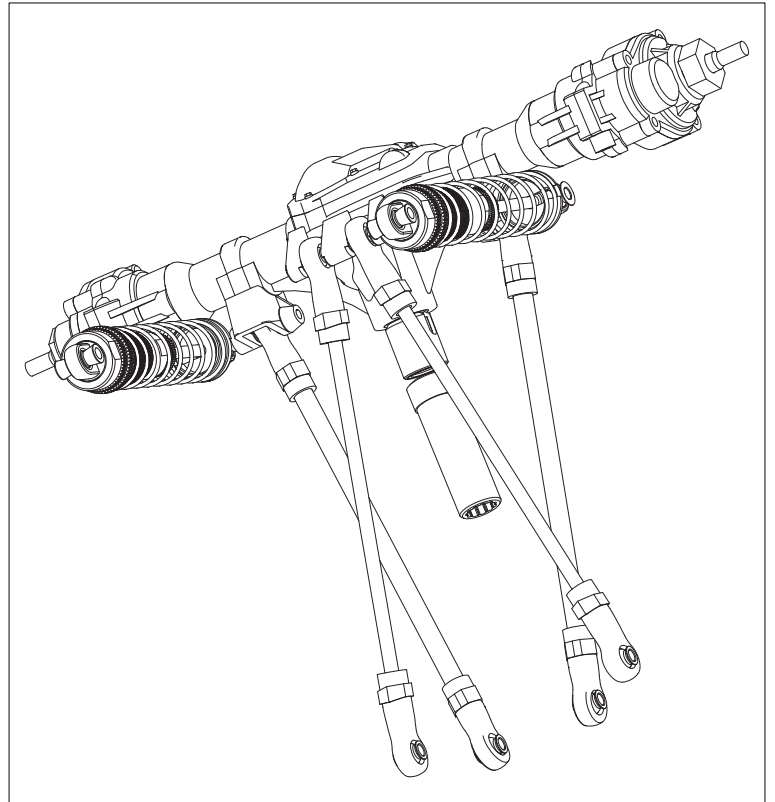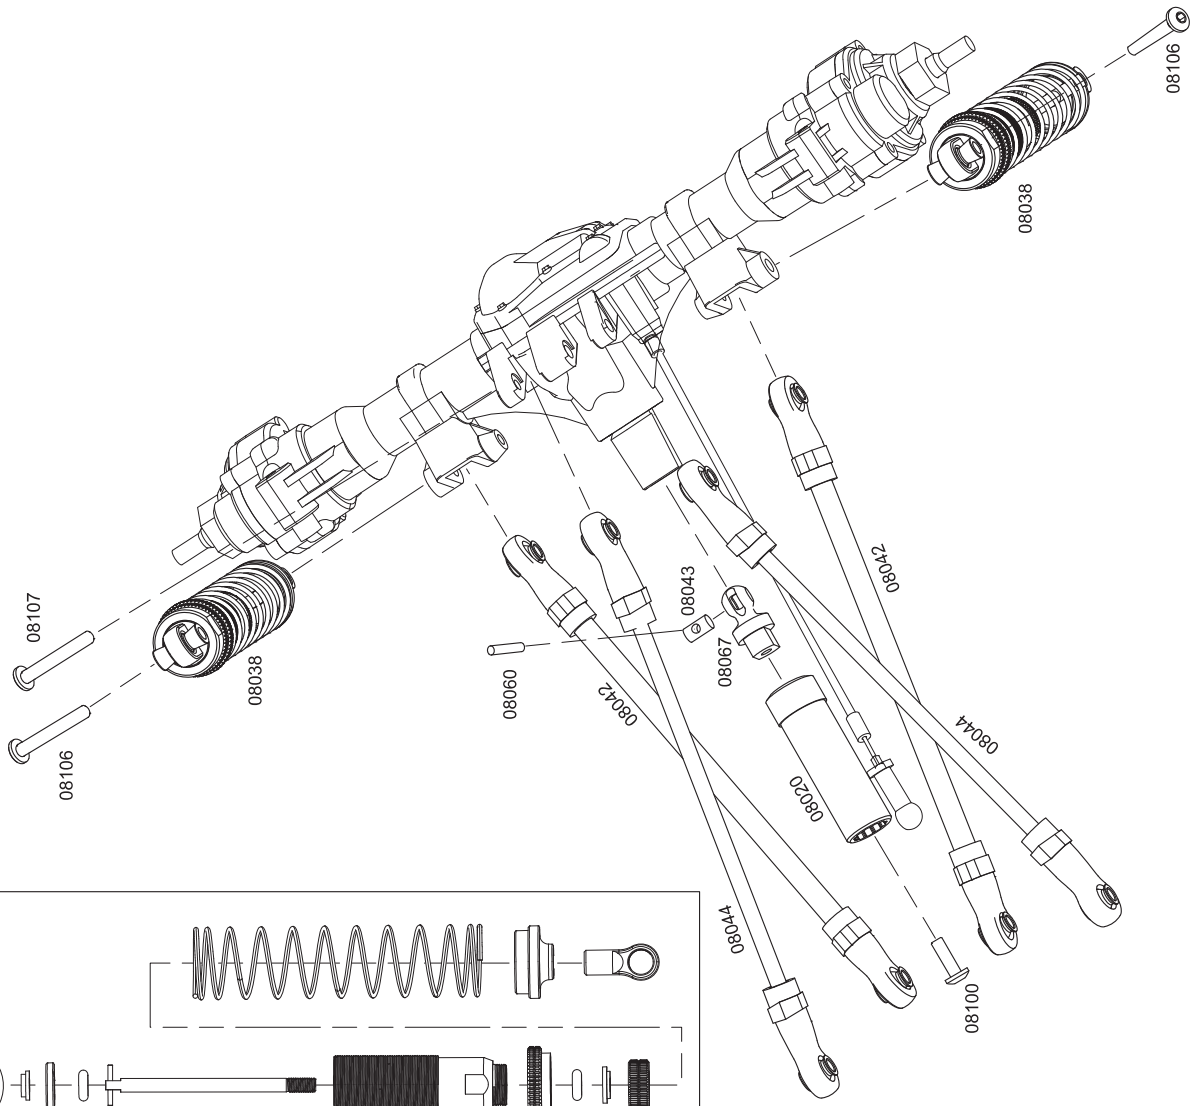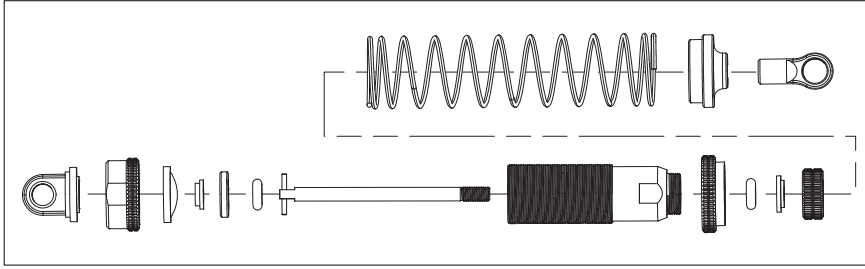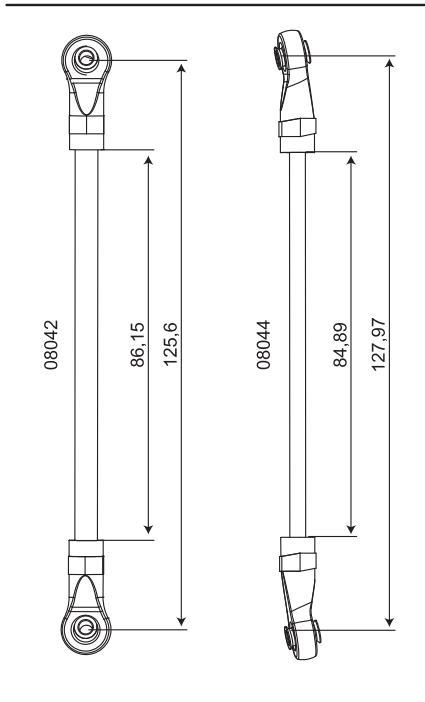    Shock Assembly
避震器

Gearbox Assembly

