 
 



Chassis Assembly

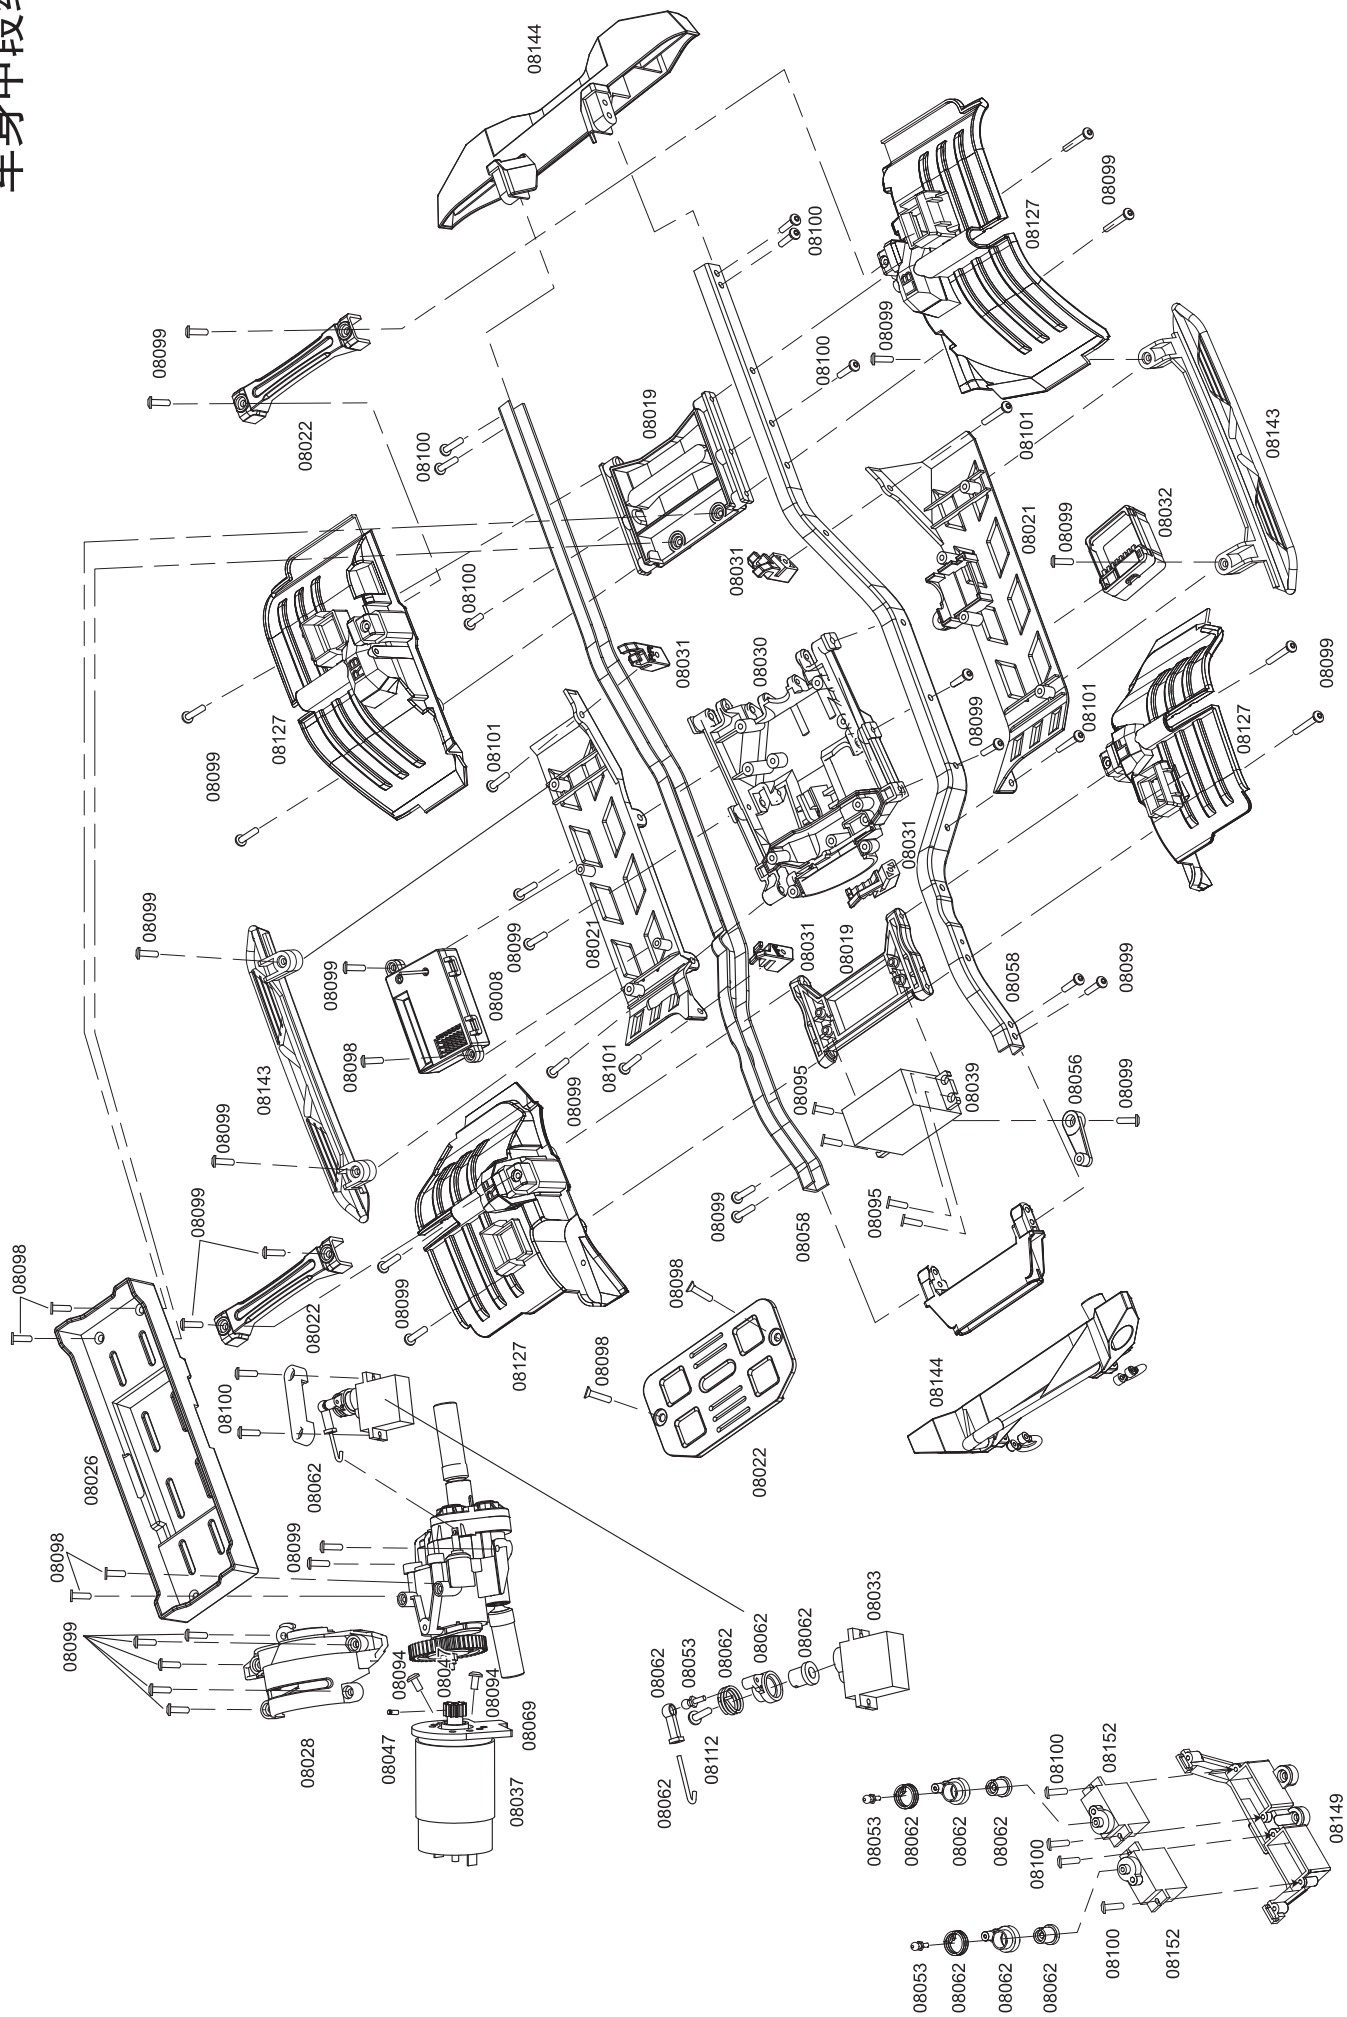


Chassis Assembly
车身中段组

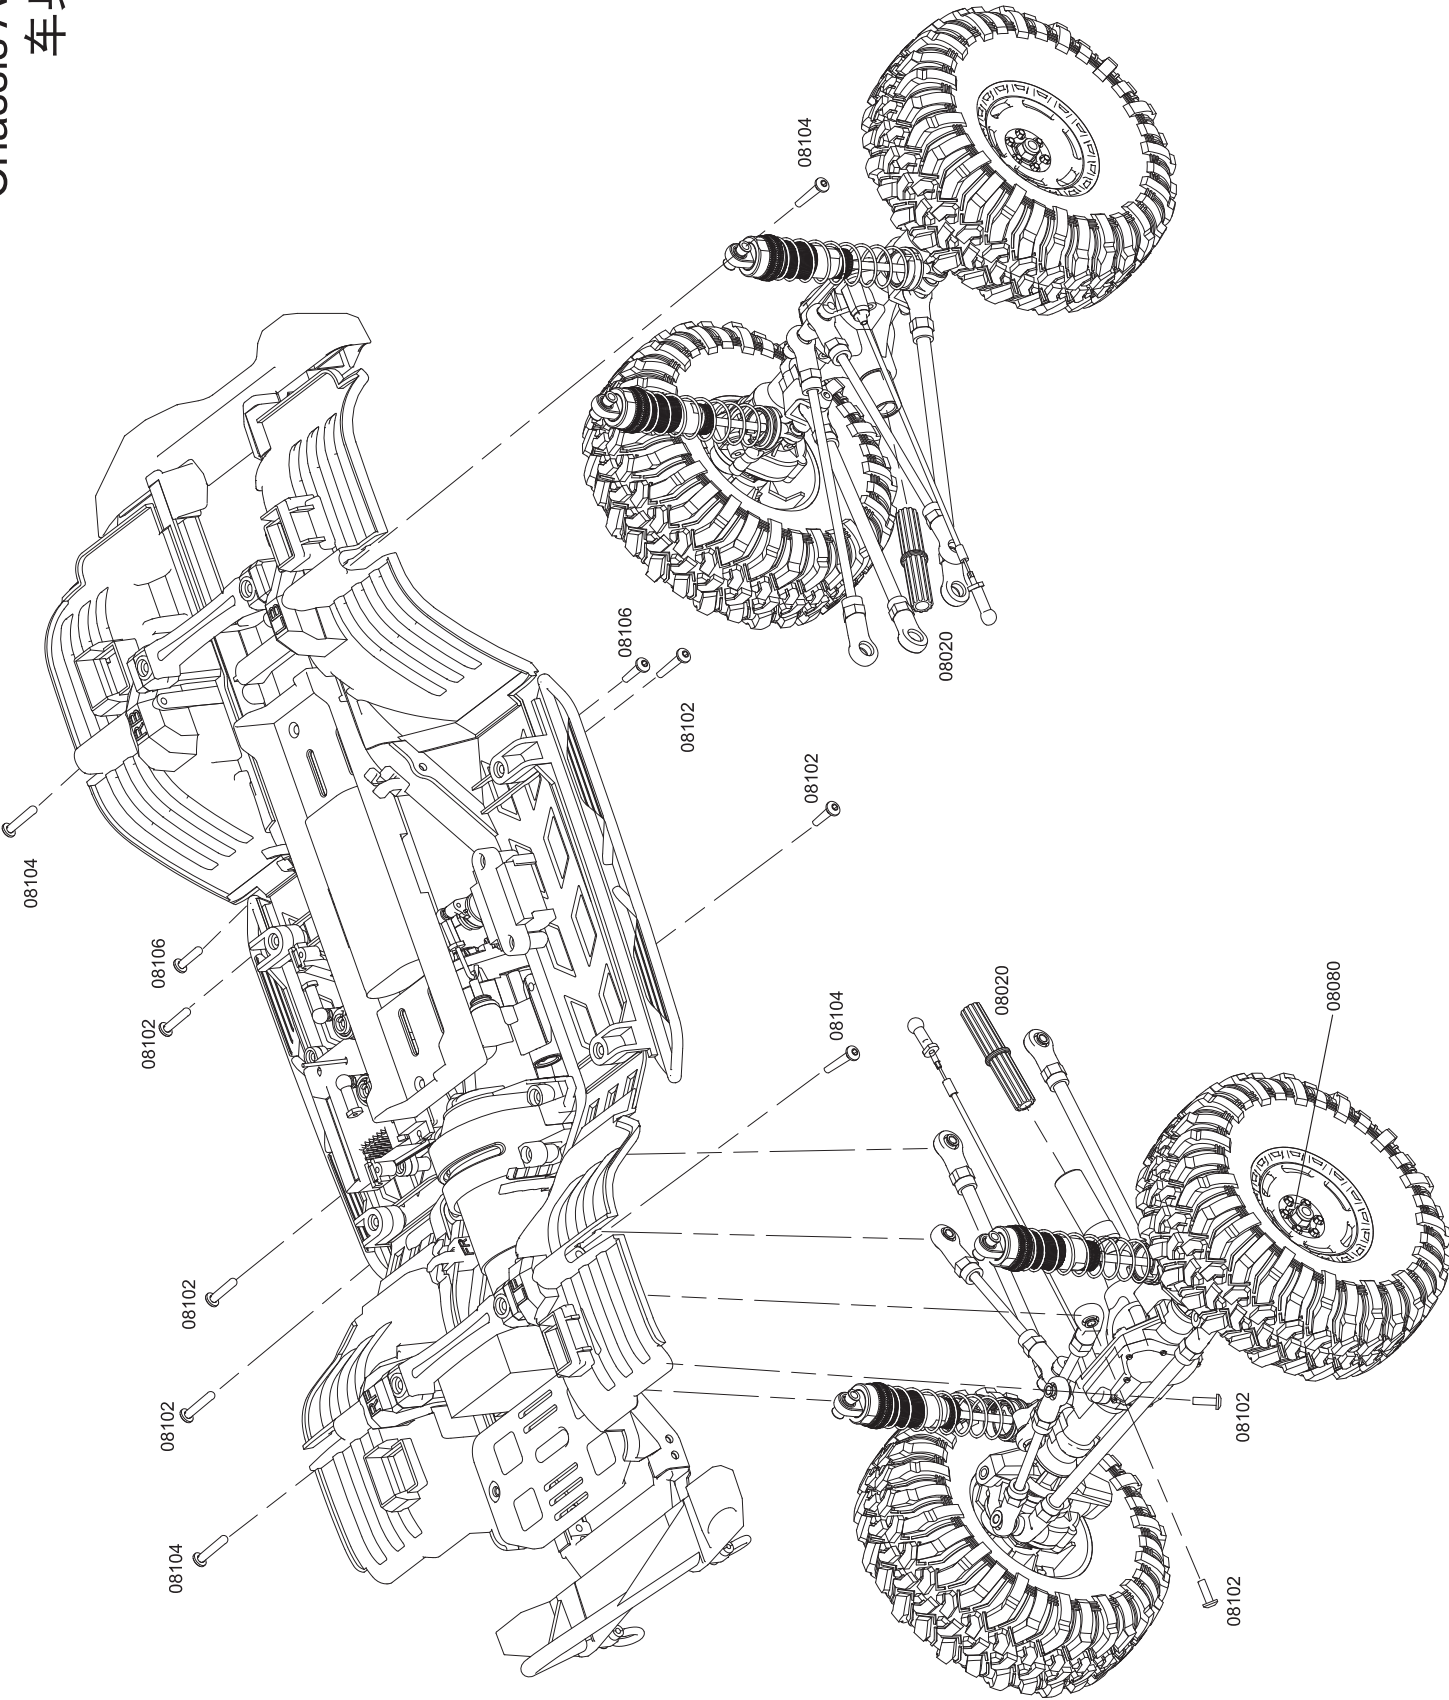

 Body Assembly

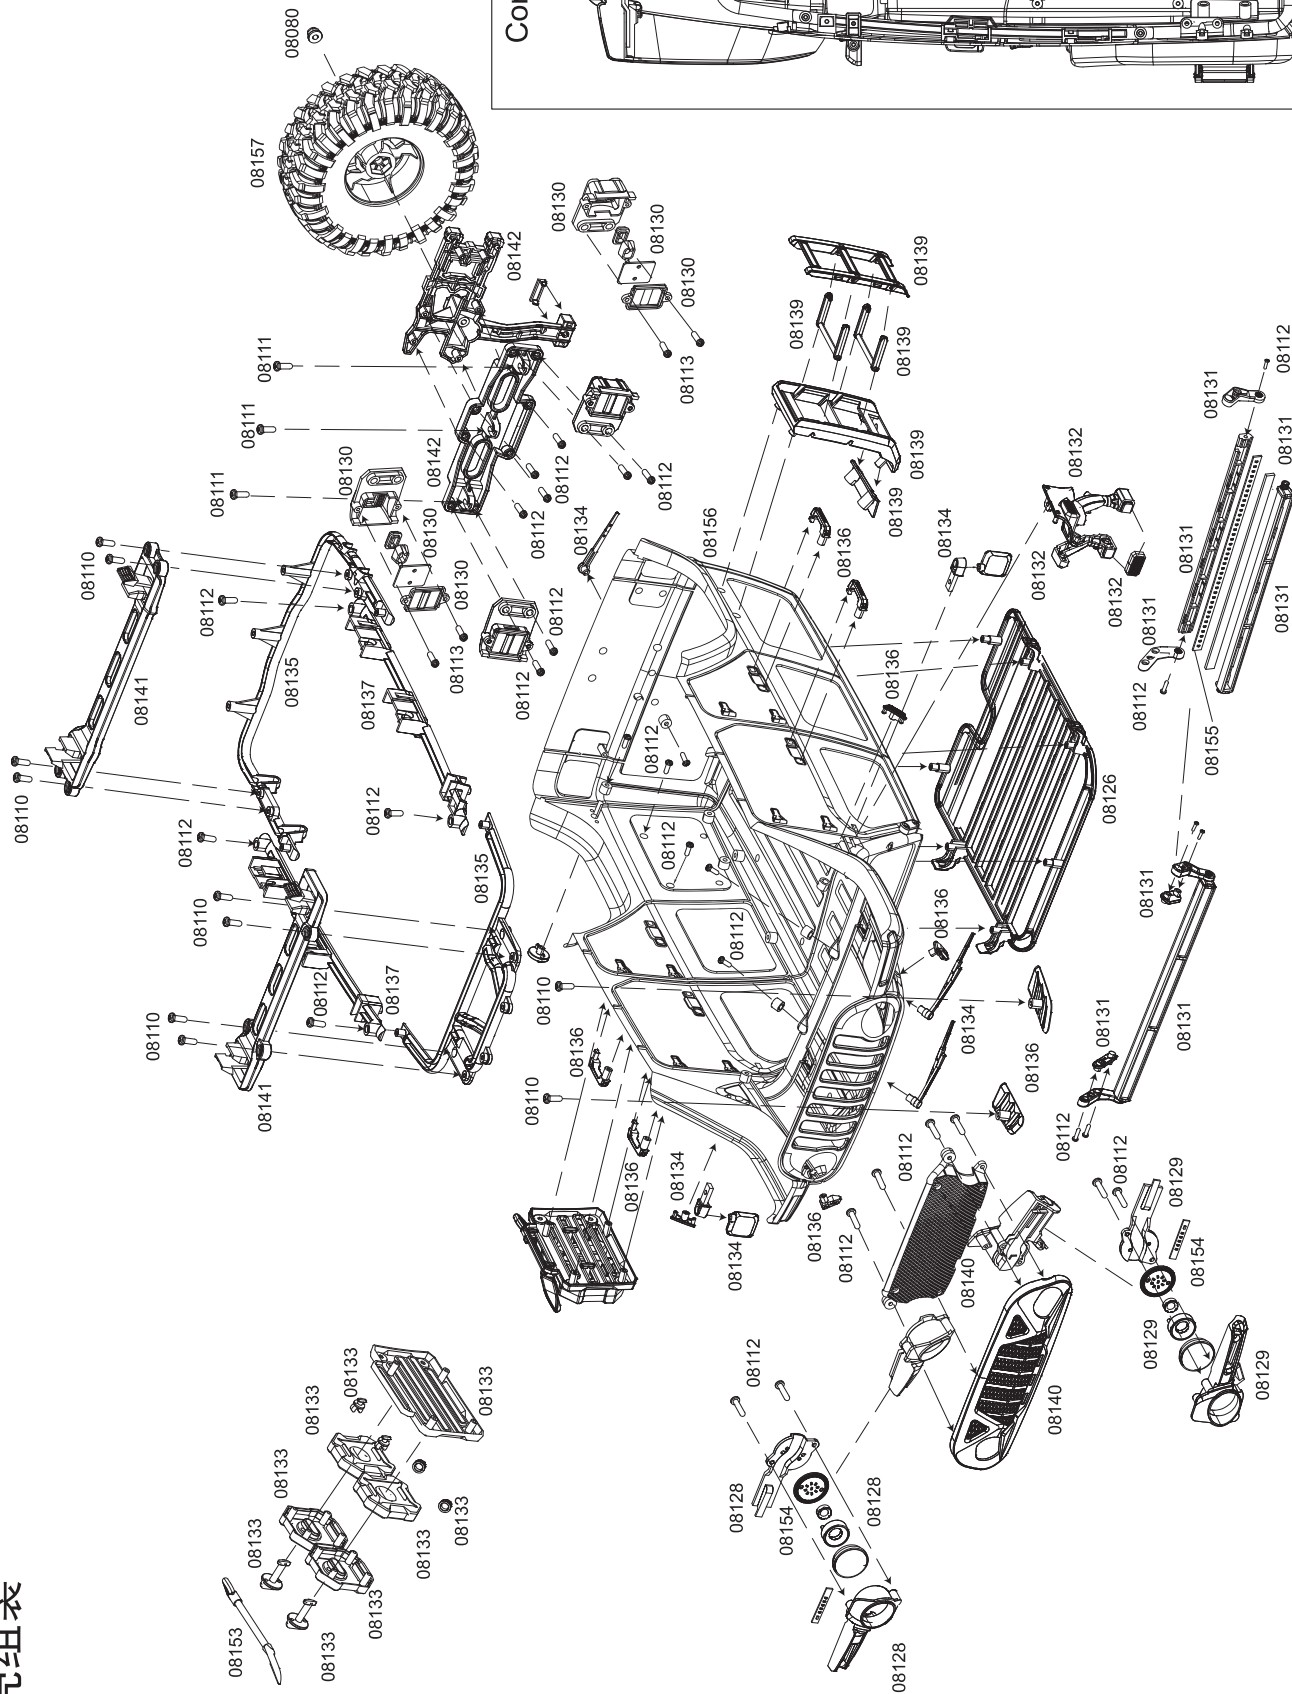


Completed Assembly
组装完成图

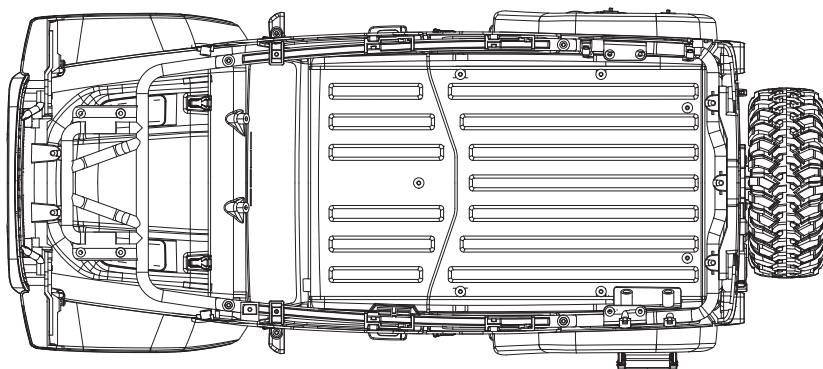 


Parts list 配件表

 08008

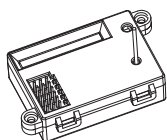


Receiver
接收机

 08019




Girder connector
大梁连接件

 08020

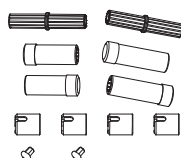


Front and rear trunk
drive rod
前后宝箱传动杆

 08021

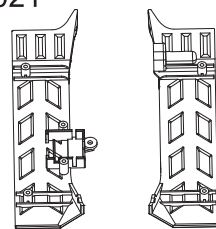


Left and right guard
board
左/右护板

 08022




Wheel pack connector
轮包连接件

 08023

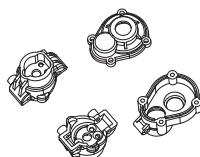


Rear hub
后轮轴座

 08024

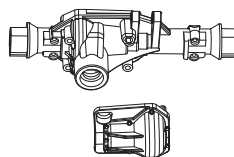


Connectors of left and
right car shell
车壳左右连接件

 08025

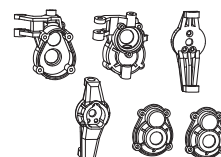


Front portal axle housing
前桥箱

 08026




Battery case
电池仓

 08028

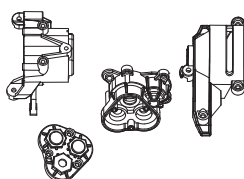


Reduction gearbox
变速箱

 08029

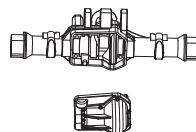

Rear portal axle housing
后桥箱

 08030

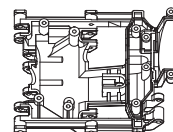


Reduction gearbox
mount
变速箱座

08031




Car bottom clamp
wire piece
车底卡线件

 08032




WP-1060-BRUSHED
SBEC-RTR 电调

 08033

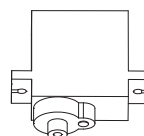


Servo
9g舵机

 08034




Speed conversion
paddles
高低速拨叉

 08036

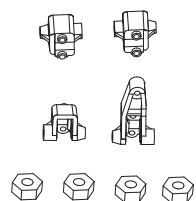


Linkage mount
拉杆固定座

 08037




Brushed motor
550有刷马达

 08038

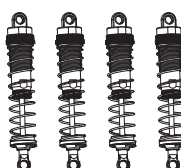


Shock absorber
避震器

 08039




Servo
6kg舵机

 
Parts list 配件表

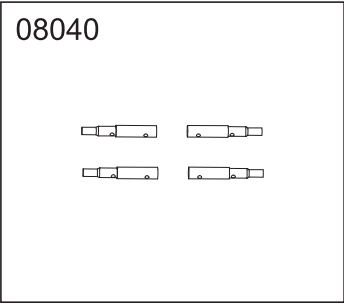


Drive shaft
传动轴5.9*38

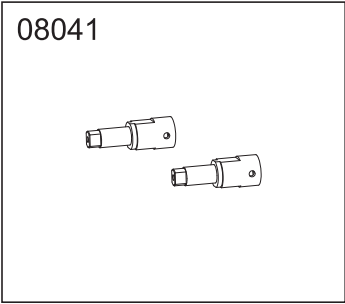 


Cup parts
介杯10*28.2

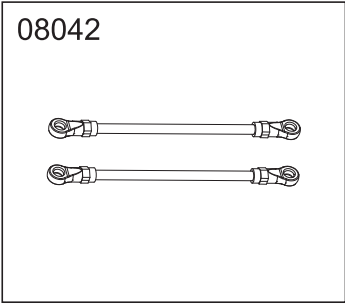 


Rear deck linkage (Low)
后桥拉杆下

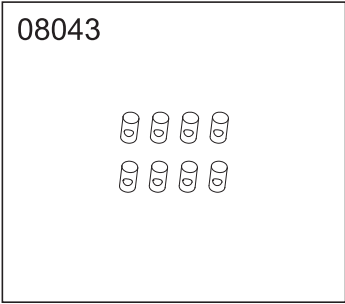 


Universal positioning
axis
万向定位轴 3.4*6

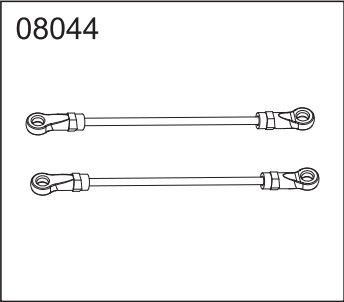 


Rear deck linkage (Up)
后桥拉杆上

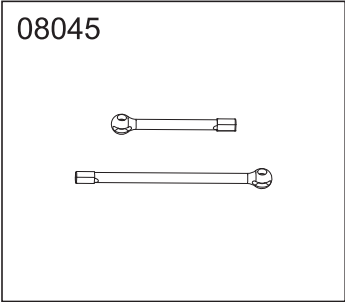 

 
Front universal
transmission lever group
前万向传动杆组

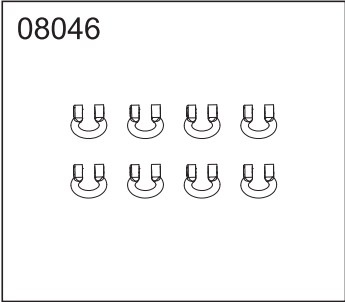


Trailer hook
拖车钩

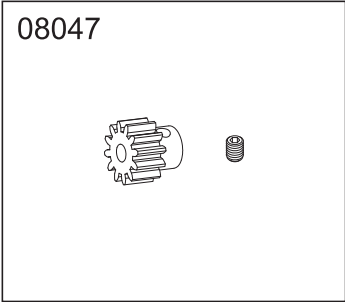 


Motor gear
电机牙

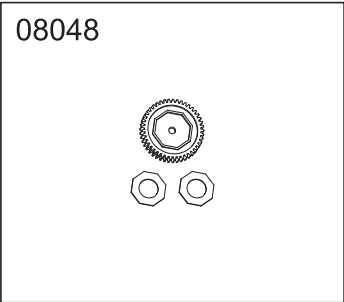 


Super gear
减速大齿

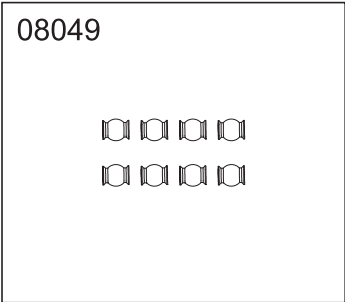 


Hollow ball head
空心球头5.8*7*3

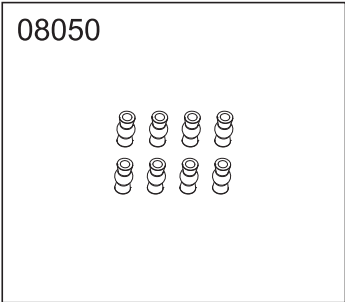 


Hollow ball head
空心球头5.8*11.7*3

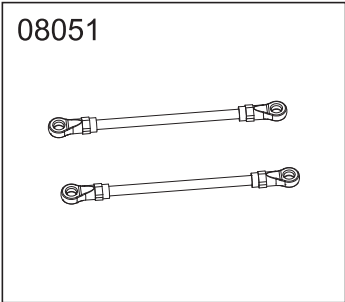 


Front deck linkage (Low)
前桥拉杆下

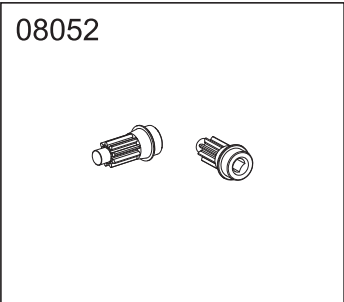 


Rear edge power
input gear
后轮边动力输入齿

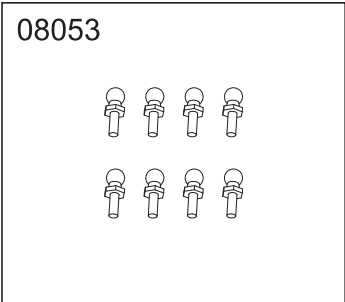 


Ball head screw
H4球头螺丝

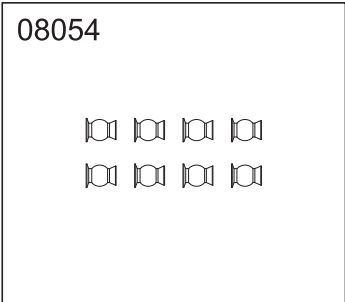 


Hollow ball head
空心球头5.8*8.2*3

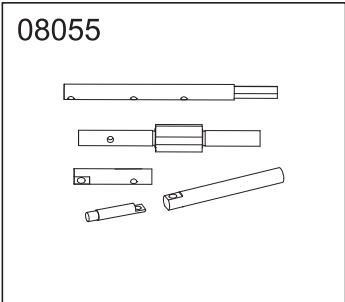 


Speed conversion axle
换速轴组

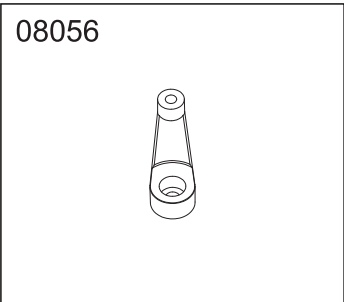 


Steering arm
舵机臂

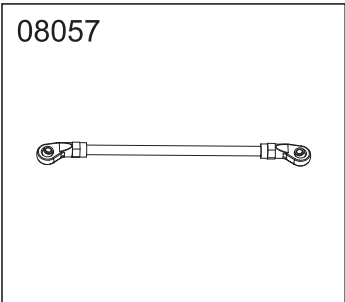 

Steering linkage
转向拉杆












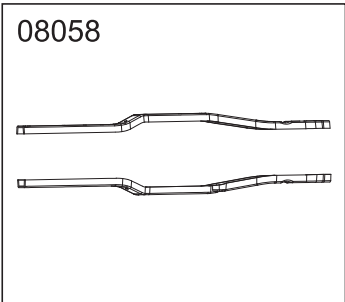 


Chassis frame
大梁








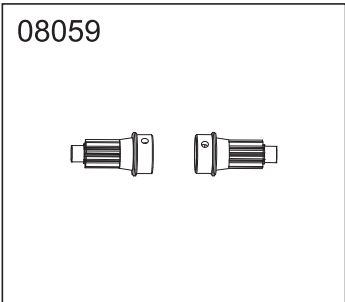 


Front edge power input
gear
前轮边动力输入齿

            
Parts list 配件表

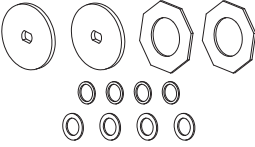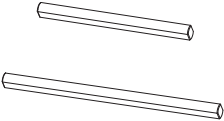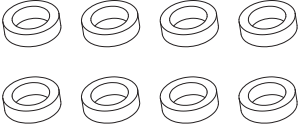08060  Optical axis 光轴2*10	08061  Hollow column 空心柱4.9*3*4.3	08062  Steering gear parts 9g舵机配件组	08063  Anti-toppling tie rod 防倾拉杆
08064  Short turn tie bar 转向短拉杆	08065  Front deck linkage (Up) 前桥拉杆上	08066  Shims 垫片组	08067  Universal ball joint 万向球
08068  Rear drive shaft 后传动轴	08069  Motor mount 电机座	08070  Ball bearing 轴承13*6*5	08071  Ball bearing 轴承18*12*4
08072  Ball bearing 轴承10*5*4	08073  Ball bearing 轴承12*6*4	08074  Ball bearing 轴承14*8*4	08075  Ball bearing 轴承15*10*4
08076  Ball bearing 轴承11*5*4	08077  Ball bearing 轴承8*5*2.5	08078  Optical axis 光轴2*12	08079  Universal cup parts 万向介杯

        
Parts list 配件表

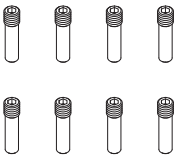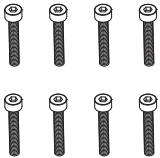08080  Flange lock nuts M4法兰防松螺母	08081  M4 Lock nut M4防松螺母	08082  Two stage input gear 36 teeth 二级输出齿36牙	08083  Power output gear 27 teeth 动力输出齿 27牙
08084  Axle power input gear 车桥动力输入齿	08085  Edge reduction gear 23 teeth 轮边减速齿23牙	08086  One level output gear 24 teeth 一级输出齿24牙	08087  Two stage input gear 18 teeth 二级输入齿18牙
08088  One level output gear 30 teeth 一级输入齿30牙	08089  Flat head screws 平头内六角螺丝M2*10	08090  Cap head screws 杯头内六角螺丝M2*12	08091  Button head screws 盘头内六角螺丝M2.5*5
08092  Hexagon head screw 六角头螺丝M4*10	08093  Headless screw 无头螺丝M2.5*12	08094  Button head screws 盘头内六角螺丝M3*6	08095  Flat head screws 平头内六角螺丝M3*8
08096  Cap head screws 杯头内六角螺丝M2.5*10	08097  Cap head screws 杯头内六角螺丝M2.5*16	08098  Flat head screws 平头内六角螺丝M3*8	08099  Button head screws 盘头内六角螺丝M3*10

 
Parts list 配件表

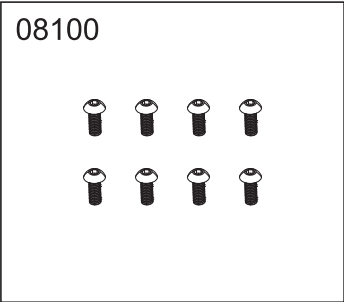


Button head screws
盘头内六角螺丝M3*8

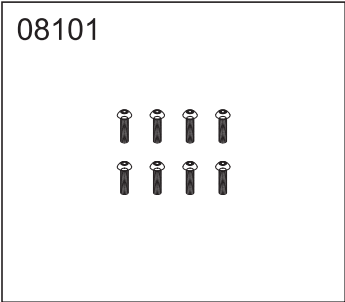 


Button head screws
盘头内六角螺丝M3*12

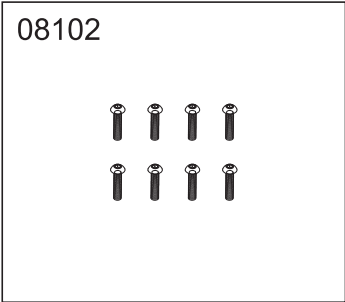 


Button head screws
盘头内六角螺丝M3*14

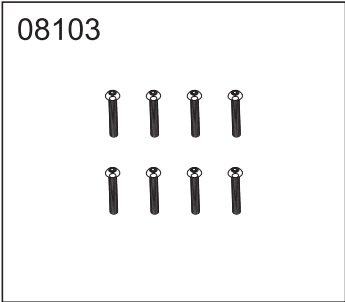 


Button head screws
盘头内六角螺丝M3*20

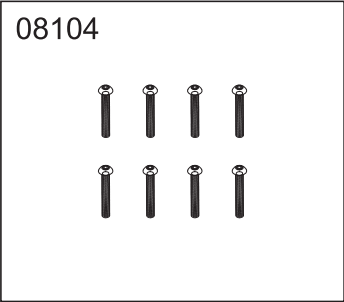 


Button head screws
盘头内六角螺丝M3*22

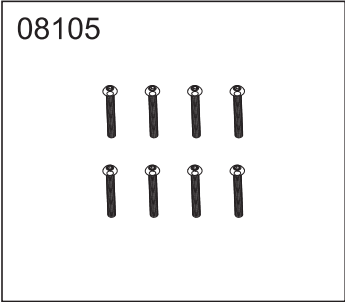 


Button head screws
盘头内六角螺丝M3*24

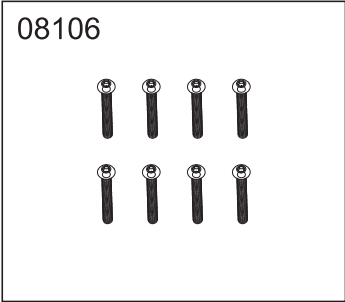 


Button head screws
盘头内六角螺丝M3*25

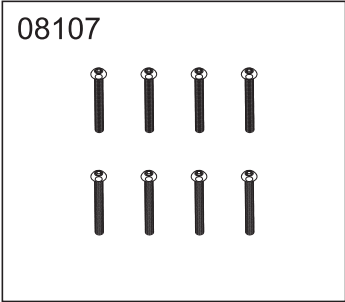 


Button head screws
盘头内六角螺丝M3*28

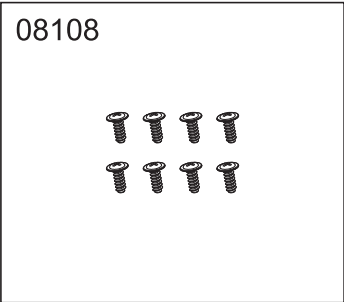 

 
Button head self-tapping
screws
盘头十字自攻螺丝M2.3*6*5

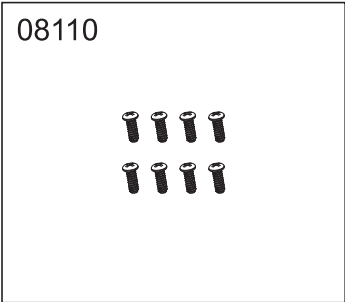

 
Button head self-tapping
screws
盘头十字自攻螺丝M3*8

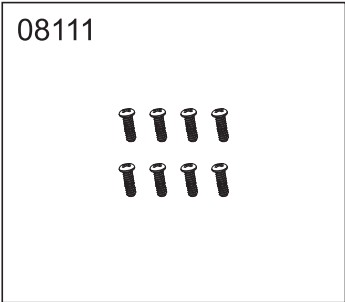

 
Button head self-tapping
screws
盘头十字自攻螺丝M3*10

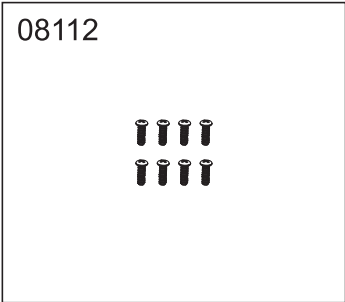

 
Button head self-tapping
screws
盘头十字自攻螺丝M2.6*7

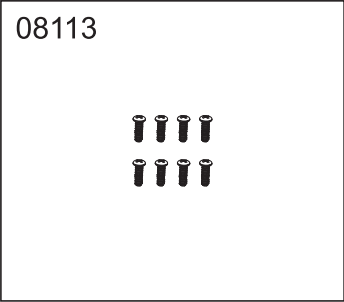

 
Button head self-tapping
screws
盘头十字自攻螺丝M2.3*8

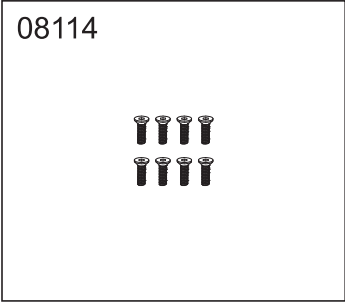


Flat head screws
平头内六角螺丝M2.5*8

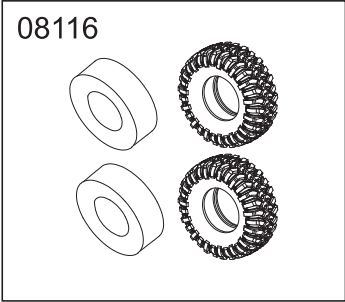 


Tires & foams
轮皮/海绵

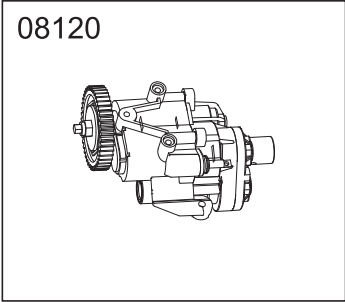 


Reduction gearbox
变速箱

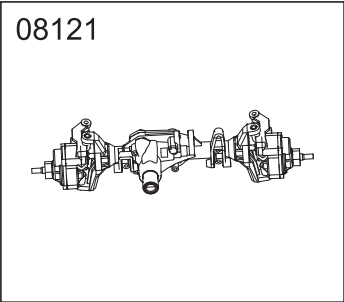 


Front axle assembly
前桥

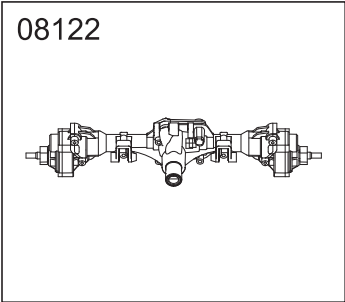 

Rear axle assembly
后桥

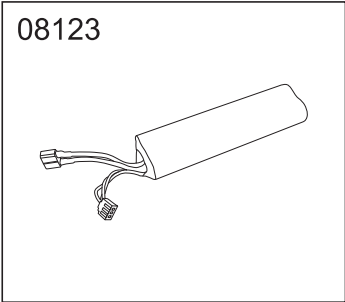 


Battery
7.4V 2S电池

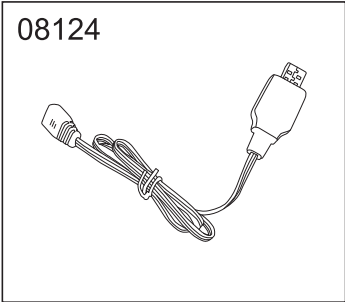 

Charger
USB充电器


Parts list 配件表

 08126

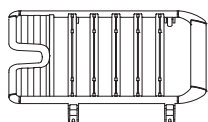


Roof rack
车顶架

 08127

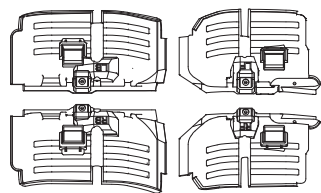


Wheel pack
轮包

 08128




Left front lamp
左前灯组

 08129



Right front lamp
右前灯组

 08130




Rear lamp
后灯组

08131




Roof light bar set
车顶灯组

 08132

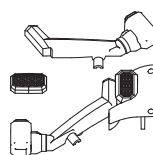


Wading pipe parts
涉水喉件

 08133

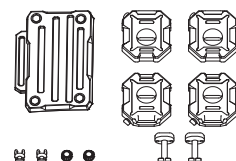


Fuel tank assembly
油箱组件

 08134




Wiper parts/
Reversing mirror set
雨刷件/倒车镜组

 08135

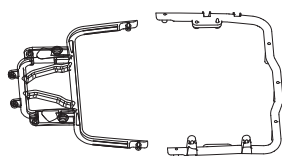


Front and rear body shell
post
车壳前后支架

 08136

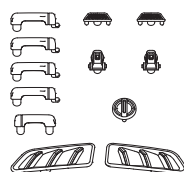


Car shell accessories
车壳小配件

 08137




Connectors of left and
right car shell
车壳左右连接件

 08139




Side ladder
侧爬梯

 08140

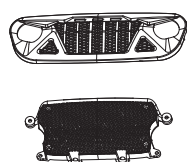


Front air grill
前排气格栅

 08141

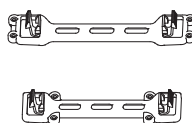


Car shell fastener
车壳卡扣件

 08142

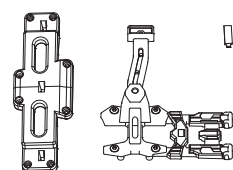


Spare tire rack
备胎组

 08143

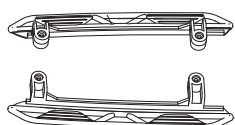


Foot readles
脚踏板

 08144

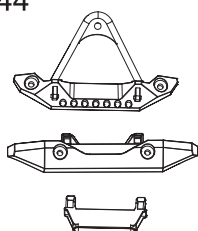

Front and rear bumper
前后护架

 08145











Front and rear
differential lock pull cord
前后差速锁拉绳

08146



Ball bearing
轴承21*15*4

        Parts list 配件表

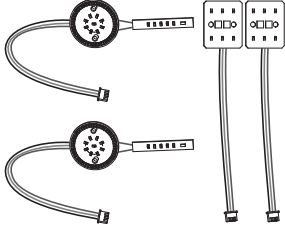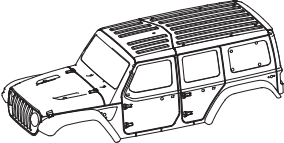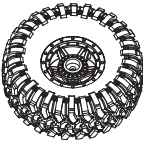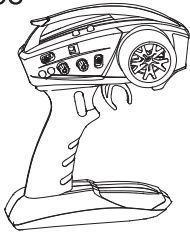08147  Grooved shaft 凹槽轴	08148  Differential gear 差速牙轮	08149  Differential lock accessories 差速锁配件	08150  Optical axis 光轴2.5*11.7
08151  Flat head screws 平头内六角螺丝M2.0*8	08152  Servo 9g舵机(底部出线)	08153  Metal shovel 金属小铁铲	08154  Light pane 灯板座
08155  Roof light bar set 车顶灯组	08156  Body HB-R1011-14车壳	08157  Wheels HB-R1011-14轮子	08158  Transmitter HB-R1011-14遥控器

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference,and (2) this device must accept any interference received,including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications. However,there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

WILDERNESS