

1201479
User's Guide

AM/FM Bluetooth® Radio



Thank you for purchasing your AM/FM Bluetooth Radio from RadioShack. Please read this user's guide before installing, setting up, and using your new radio.

Package Contents

- AM/FM Bluetooth Radio
- AC Adapter
- User's Guide

Features

- Stores 20 preset stations (10 AM, 10 FM)
- Clock with sleep function
- Bluetooth connectivity enables you to wirelessly stream music from your phone, tablet or computer
- Auxiliary input for connecting an MP3 player or other audio source
- Bass enhancement delivers a heightened listening experience


Specifications

Power Input	AC 9V, 1A, or 3 x AA batteries
Output Power	2W RMS
Frequency Range	AM: 520 - 1710kHz; FM: 88 - 108 MHz;
Tuning Step	AM: 10kHz; FM: 200kHz
Bluetooth Connection Range	32.8 ft (10m)
Bluetooth Protocol	V2.1 + EDR Class 2

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Power Your Radio

- Install three AA batteries (not included), matching the polarity symbols (+ and -) marked inside. Or
- Use the AC adapter to connect your radio's **AC 9V** jack to a standard wall outlet.

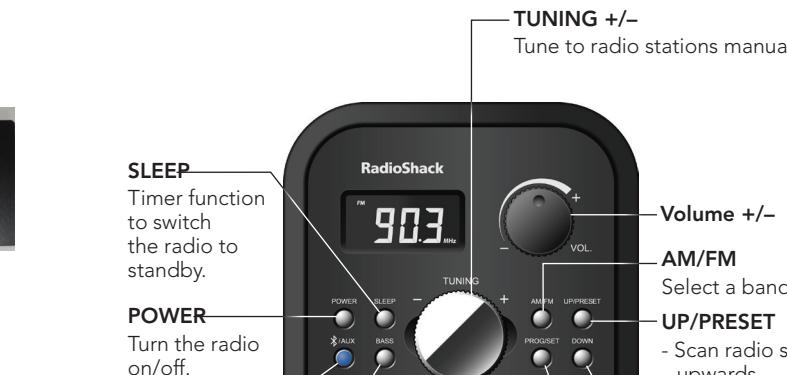

Note:

- Always connect the AC adapter to the radio first, and unplug it from the outlet before unplugging it from the radio.
- Replace the batteries when the sound becomes weak or distorted. Finish within 15 seconds to retain the clock and radio preset settings.

Battery Notes:

- Dispose of batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and type.
- Do not mix old and new batteries, different types of batteries (alkaline, or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the radio for a long time, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

Basic Operation

Listen to Your Radio

- Flip up the antenna and fully extend it.
- Press **POWER** to turn on the radio.
- Press **AM/FM** to select a band.
- Rotate **TUNING +/-** to tune to a specific station, or press and hold **UP/PRESET** or **DOWN** to scan radio stations.
- Press **POWER** to turn off the radio.

Store Preset Stations

You can store 10 FM and 10 AM stations.


- Press **AM/FM** to select a band.
- Tune to your desired station.
- Press **PROG/SET**. **PRESET** flashes on the display.
- Press **UP/PRESET** or **DOWN** to store preset stations 0 to 9. Press **PROG/SET** to confirm.
- Repeat steps 2-4 to store more stations.

To listen to a preset station, turn on the radio, then press **UP/PRESET** or **DOWN** to find the preset location.

Listen to an External Audio Source

Bluetooth

- Turn on the radio and adjust volume.
- Press ***/AUX** once to use the Bluetooth function. The ***** icon flashes as the radio searches for a Bluetooth-enabled device.

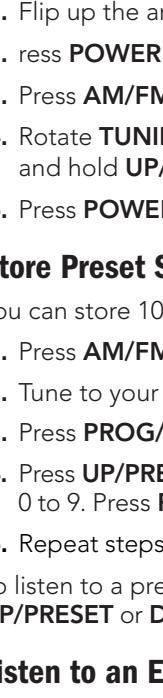

- Activate your device's Bluetooth function (refer to your device's user's guide).
- When **RS1201479** appears in the Bluetooth devices list, pair it to your device.
- You can control your radio through your device or with the radio's buttons:

PROG/SET
UP/PRESET
DOWN

Play/pause
Skip to next track
Skip to previous track

Note:

- After you turn on the radio, it attempts to resume Bluetooth connection with the formerly connected device. If the connection fails again, the radio will start searching for other Bluetooth devices.
- Bluetooth connection breaks when the connected device moves to far away from the radio. You need to reestablish the connection.
- If your device uses Android 2.3 and below, enter the password 0000 for Bluetooth connection.

AUX

- Turn on the radio and adjust volume.
- Press ***/AUX** twice to use the AUX function. **AUX** appears on the display.
- Use an audio cable (not supplied) to connect your radio device to **AUX IN** of the radio.
- Use the controls on your connected device to control playback.

- Activate your device's Bluetooth function (refer to your device's user's guide).
- When **RS1201479** appears in the Bluetooth devices list, pair it to your device.
- You can control your radio through your device or with the radio's buttons:

PROG/SET
UP/PRESET
DOWN

Play/pause
Skip to next track
Skip to previous track

Note:

- After you turn on the radio, it attempts to resume Bluetooth connection with the formerly connected device. If the connection fails again, the radio will start searching for other Bluetooth devices.
- Bluetooth connection breaks when the connected device moves to far away from the radio. You need to reestablish the connection.
- If your device uses Android 2.3 and below, enter the password 0000 for Bluetooth connection.

AUX

- Turn on the radio and adjust volume.
- Press ***/AUX** twice to use the AUX function. **AUX** appears on the display.
- Use an audio cable (not supplied) to connect your radio device to **AUX IN** of the radio.
- Use the controls on your connected device to control playback.

- Activate your device's Bluetooth function (refer to your device's user's guide).
- When **RS1201479** appears in the Bluetooth devices list, pair it to your device.
- You can control your radio through your device or with the radio's buttons:



Advanced Operation

Set the Clock

1. In standby mode, press and hold **PROG/SET** to enter the time setting mode. The hour and minute digits flash.
2. Press **UP/PRESET** to set the hour, and **DOWN** to set the minute.
3. Press **PROG/SET**. **12H** or **24H** flashes.
4. Press **UP/PRESET** or **DOWN** to select 12-hour or 24-hour display. For 12-hour display, **PM** appears for those hours from noon to midnight.
5. Press **PROG/SET** to exit and confirm clock settings. Even if you do not press **PROG/SET**, clock settings are saved as well.

Connect Headphones

For private listening, plug your headphones or earphones into the headphone jack .

Listening Safely

Do not wear headphones, earphones, or earbuds while operating a motor vehicle or riding a bicycle. This can create a traffic hazard and could be illegal in some areas. To protect your hearing, follow these guidelines:

- Do not listen at high volume levels. Extended high-volume listening can lead to permanent hearing loss.
- Set the volume to the lowest setting. Then turn on your audio device and adjust the volume to a comfortable level.

- Avoid increasing the volume. Your ears will adapt to the volume level, so a level that does not cause discomfort could still damage your hearing.

Use the Sleep Function

You can set the radio to switch to standby mode automatically after a set period of time.

1. Turn on the radio, press **SLEEP** repeatedly to toggle and select a sleep period ranging from 15 to 90 minutes: **90, 75, 60, 45, 30, 15**.
2. After you set the timer, press **SLEEP** again to view the remaining sleep time.
- If you wish to cancel the sleep timer, press **SLEEP** repeatedly until **OFF** appears.
3. When the timer period is reached, the radio enters standby mode.

Bass Boost

After turning on the radio, press **BASS** to activate bass boost. Press again to deactivate.

Reset the Radio

If the radio or the display fails to operate properly:

1. Turn off the radio and remove the batteries or unplug the adapter.
2. Use a pointed object (such as a toothpick) to press the **RESET** button at least 1 second. The clock time and preset stations are cleared.
3. Power your radio again.

Important Safety Information

1. Read instructions before operating the product.

2. Retain instructions for future reference.

3. Heed all warnings.

4. Follow all instructions.

5. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Clean only with a dry cloth.

6. Do not use this product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, etc.

7. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings. Never block by placing the product on a bed, sofa, rug, or other similar surface. Do not place this product in a built-in installation such as a bookcase or rack unless you provide proper ventilation or are adhering to the manufacturer's instructions.

8. For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

9. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

10. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

11. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

12. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

SAVE THESE INSTRUCTIONS

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or

FCC Information

This equipment has been tested and found to comply with the limits

for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful

interference in a residential installation. This equipment generates,

uses, and can radiate radio frequency energy and, if not installed

and used in accordance with the instructions, may cause harmful

interference to radio communications. However, there is no guarantee

that interference will not occur in a particular installation.

Should a problem occur that is covered by this warranty, take the

product and the **RadioShack** sales receipt to the purchased date

to any **RadioShack** store in the U.S. **RadioShack** will, at its option,

unless otherwise provided by law: (a) repair the product without

charge for parts and labor; (b) replace the product with the same or a

comparable product; or (c) refund the purchase price. All repaired

and products, and products on which a refund is made, become the

property of **RadioShack**. New or reconditioned parts and products may

be used in the performance of warranty service. Repaired or replaced

parts and products are warranted for the remainder of the original

warranty period. You will be charged for repair or replacement of the

product made after the expiration of the warranty period.

RADIOSHACK EXPRESSLY DISCLAIMS ALL WARRANTIES AND

CONDITIONS NOT STATED IN THIS LIMITED WARRANTY.

ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW,

INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY

AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A

PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE

STATED WARRANTY PERIOD.

This device complies with Part 15 of the FCC rules. Operation is subject

to the following two conditions: (1) This device may not cause harmful

interference, and (2) this device must accept any interference received,

EXCEPT AS DESCRIBED ABOVE, **RADIOSHACK SHALL HAVE**

NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE

PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT

TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR

INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR

ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING,

BUT NOT LIMITED TO, ANY DAMAGE RESULTING FROM

INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY,

REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL,

OR CONSEQUENTIAL DAMAGES, EVEN IF **RADIOSHACK HAS BEEN**

ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

RADIOSHACK warrants this product against defects in materials and

workmanship under normal use by the original purchaser for **ninety (90)**

days after the date of purchase from a **RadioShack**-owned store or an

authorized **RadioShack** franchisee or dealer. **RADIOSHACK MAKES**

NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or

attributable to abuse, misuse, failure to follow instructions, improper

installation or maintenance, alteration, accident, Acts of God (such

as floods or lightning), or excess voltage or current; (b) improper or

Important Legal Information

This warranty gives you specific legal rights, and you may also have

other rights which vary from state to state. You may contact **RadioShack**

Customer Relations,

300 RadioShack Circle, Fort Worth, TX 76102

04/08

www.RadioShack.com

The Bluetooth word mark and logos are registered trademarks owned by

Bluetooth SIG, Inc. and any use of such marks by **RadioShack** is under license.

Other trademarks and trade names are those of their respective owners.

Android is a trademark of Google Inc.

©2013 **RadioShack** Corporation.

All rights reserved. **RadioShack** is a

trademark used by

RadioShack Corporation.

Printed 04/13
in China 10/17