



Radio Alarm Clock with Bluetooth® Speaker

1201682

User's Guide



We hope you enjoy your Radio Alarm Clock with Bluetooth® Speaker from RadioShack. This radio features a 1.2" blue LED display, dual alarm clock, built-in USB charging port, and auxiliary input jack. Bluetooth connectivity enables you to wirelessly stream music from your Bluetooth-enabled device. Please read this user's guide before using your new radio alarm clock.

Package Contents

- Radio Alarm Clock
- AC Adapter
- User's Guide

Specifications

Power Supply DC 5V, 2A adapter
..... 2 x AAA backup batteries (not included)
Output Power > 2W (10% THD)
USB Output DC 5V, 1A
Frequency Range FM 87.5 – 108 MHz
Bluetooth Protocol v4.0
Bluetooth Connection Range > 33 ft. (10.05m)
Dimensions (WHD) 5.6 x 3.4 x 3.2 in
..... (14.2 x 8.6 x 8.1 cm)
Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.


2

Power Your Radio

Install Backup Batteries

Batteries provide backup power during power outages. Settings and data memory will be lost if both AC power and batteries are removed.

1. Open the battery cover.
2. Install two AAA batteries (not included) as indicated by the polarity symbols (+ and –) marked inside.
3. Replace the battery cover.

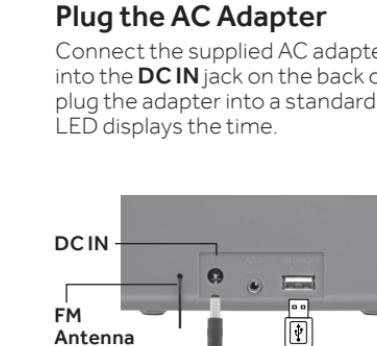

3

- Do not mix old and new batteries, different types of batteries (alkaline or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the radio for a long time, remove the batteries. Batteries can leak chemicals that can damage electronic parts.

Plug the AC Adapter


Connect the supplied AC adapter barrel plug into the **DC IN** jack on the back of the radio, and plug the adapter into a standard AC outlet. The LED displays the time.

4

5

6

7

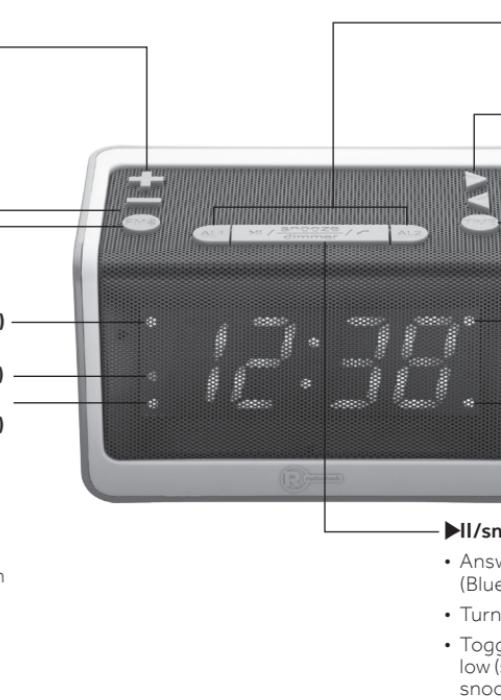

- Volume control.
- Set the time.

- Tune radio stations.
- Previous/next track (Bluetooth only).

TIME

Enter time-setting mode.

FM *

• Press and hold to turn the radio or Bluetooth mode on/off.

• Press to switch between radio and Bluetooth mode.

• Answer/reject a call or play/pause playback (Bluetooth only).

• Turn the alarm snooze on.

• Toggle LED display brightness to high or low (selection disabled in Bluetooth or snooze mode, or when the alarm sounds).

- 1. Press and hold **FM *** for 2 seconds to turn on the radio. The red FM indicator lights.
- 2. Press **◀** or **▶** to tune a station, or press and hold **◀** or **▶** to scan available stations.
- 3. Press **+** or **-** to increase or decrease the volume.

Listen to Bluetooth Device

1. Press **FM *** to switch to Bluetooth mode. The blue Bluetooth indicator flashes.
2. Activate your device's Bluetooth function (refer to your device's user's guide).
3. When your device connects, select it. When paired, the blue indicator light stays on.
4. Turn on the audio source. You can control your radio through your device or with the radio's **◀**, **▶**, **FM ***, **II/snooze_dimmer/**, and **+** / **-** buttons.
- If you receive a call, you can answer the call by pressing **II/snooze_dimmer/** and speaking into the microphone.

7

Listen to Your Radio

Listen to FM Radio

1. Press and hold **FM *** for 2 seconds to turn on the radio. The red FM indicator lights.
2. Press **◀** or **▶** to tune a station, or press and hold **◀** or **▶** to scan available stations.
3. Press **+** or **-** to increase or decrease the volume.

Listen to Bluetooth Device

1. Press **FM *** to switch to Bluetooth mode. The blue Bluetooth indicator flashes.
2. Activate your device's Bluetooth function (refer to your device's user's guide).
3. When your device connects, select it. When paired, the blue indicator light stays on.
4. Turn on the audio source. You can control your radio through your device or with the radio's **◀**, **▶**, **FM ***, **II/snooze_dimmer/**, and **+** / **-** buttons.
- If you receive a call, you can answer the call by pressing **II/snooze_dimmer/** and speaking into the microphone.

7


- Press and hold **▶II/snooze_dimmer/ ↵** for 2 seconds to reject the call.
- When your device receives an incoming call, the Bluetooth connection is suspended and playback will pause.

Note: If the connected device moves too far from the radio, you will lose the Bluetooth connection.

Device Not Pairing?

Many Bluetooth-enabled devices, such as speakers, remember the most recently paired source (music, smartphone, etc.) and automatically reconnect when turned on. This is convenient, but can prevent you from connecting to a new source.

If you can't pair your radio, you may need to disconnect it from its previous source.

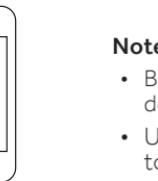

Disconnect Your Device

To disconnect the paired device, press and hold the radio's **▶II/snooze_dimmer/ ↵** for 2 seconds. The radio starts searching for another Bluetooth device.

Listen to an AUX Device

For an audio device without Bluetooth technology, use an $\frac{1}{8}$ in. audio cable (not included) to connect it to the radio's **AUX IN** jack. **AUX** appears on the display.



Notes:

- Bluetooth or FM radio mode is automatically deactivated when **AUX IN** is connected.
- Use the controls on your connected device to control playback.

Set the Clock

In standby mode, the time is shown using a 12-hour clock with green PM indicator.

1. Press and hold **TIME** for 2 seconds to enter time-setting mode. The hour digits flash.
2. Press **+** or **-** to set the hour.

3. Press **TIME**. The minute digits flash.
4. Press **+** or **-** to set the minute.
5. Press **TIME** to confirm and exit.

Set the Alarm

You can set one or two alarms.

1. Press and hold **AL1** (or **AL2**) for 2 seconds to enter alarm-setting mode. The hour digits flash.

2. Press **+** or **-** to set the hour.

3. Press **AL1** (or **AL2**). The minute digits flash.

4. Press **+** or **-** to set the minute.

5. Press **AL1** (or **AL2**), then press **+** or **-** to set the alarm source: **b** (Beep) or **F** (Radio).

6. Press **AL1** (or **AL2**) to confirm and exit. The amber AL indicator lights.

7. Press **AL1** (or **AL2**) once to review the alarm time, press it again to turn the alarm on/off.

When the Alarm Sounds

- The respective Alarm 1 or Alarm 2 indicator flashes. The alarm will sound for 1 hour at the set time, and the volume increases gradually to the maximum level.

- When the alarm time expires, the alarm will sound again the next day at the same time.
- To temporarily pause (snooze) the alarm for 9 minutes, press **▶II/snooze_dimmer/ ↵**. The alarm indicator continues flashing. You can repeat snooze up to 7 times from when the alarm first sounds.

- To stop the alarm, press the respective alarm button (**AL1** or **AL2**).

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

If you cannot eliminate the interference, the FCC requires

that you stop using your radio. Changes or modifications

not expressly approved by the party responsible for

compliance could void the user's authority to operate the

equipment.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and

- (2) this device must accept any interference received,

including interference that may cause undesired

operation.

Limited Warranty

General Wireless Operations Inc., doing business as RadioShack (hereafter "RadioShack") warrants this product against defects in materials and workmanship under normal use by the original purchaser for **ninety (90) Days** after the date of purchase from a RadioShack-owned store or an authorized RadioShack franchisee or dealer. **RADIOSHACK MAKES NO OTHER EXPRESS WARRANTIES.**

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a RadioShack-authorized service facility; (c) consumables

such as fuses or batteries; (d) ordinary wear and tear

or cosmetic damage; (e) transportation, shipping or

insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims

by persons other than the original purchaser.

Should a problem occur that is covered by this warranty,

take the product and the RadioShack sales receipt as

proof of purchase date to any RadioShack store in the U.S.

RadioShack will, at its option, unless otherwise provided by

law (a) replace the product with the same or a comparable

product, or (b) refund the purchase price. All replaced

products, and products on which a refund is made,

become the property of RadioShack.

RADIOSHACK EXPRESSLY DISCLAIMS ALL

WARRANTIES AND CONDITIONS NOT STATED IN

THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES

THAT MAY BE IMPOSED BY LAW, INCLUDING THE

IMPLIED WARRANTY OF MERCHANTABILITY AND, IF

APPLICABLE, THE IMPLIED WARRANTY OF FITNESS

FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE

EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, RADIOSHACK SHALL

HAVE NO LIABILITY OR RESPONSIBILITY TO THE

PURCHASER OF THE PRODUCT OR ANY OTHER

PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY,

LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY

BY USE OR PERFORMANCE OF THE PRODUCT OR

ARISING OUT OF ANY BREACH OF THIS WARRANTY,

INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES

RESULTING FROM INCONVENIENCE AND ANY LOSS OF

TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY

INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL

DAMAGES, EVEN IF RADIOSHACK HAS BEEN ADVISED

OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long implied or statutory warranties or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Contact General Wireless Operations Inc. at: RadioShack Customer Relations, 300 RadioShack Circle, Fort Worth, TX 76120. www.radioshack.com

RoHS Complies with the European Union's Restriction of Hazardous Substances Directive, which protects the environment by restricting specific hazardous materials in products.



The Bluetooth® wordmark and logos are owned by Bluetooth SIG, Inc. and any use of such marks by General Wireless Operations Inc. is under license.

© 2015 General Wireless Operations Inc. All rights reserved. RadioShack is a registered trademark used under license by General Wireless Operations Inc. dba RadioShack.