

Model:75910 Instruction Manual DC: 052214

1

0.9 Inch Bluetooth® Speaker Clock

8 6 8 4 2 0 9

SNOOZE

17:NA

CONTROL LOCATION

- Bluetooth Button
- 2 Volume +Button
- 3 Volume -Button
- 4 Snooze Button
- 6 Time Button
- 6 Alarm1Button
- Alarm2Button
- AL1 ON/OFF
- AL2 ON/OFF PM Indicator
- AL1 Indicator
- AL2 Indicator
- BT Indicator

Get Started

Step 1:Insert the AC cord into a wall outlet.

Step 2:Battery backup.Insert 2 fresh AAAbatteries into the clock

Restart: If there is no reading on the LCD or the reading is distorted, unplug AC cord and remove batteries for 15 minutes. Press any button 20 times;after 15 minutes, start again at step 1.

Bluetooth Operation

- 1.Press the BLUETOOTH® button to enter Bluetooth mode
- 2. The Bluetooth indicator light on the display will blink until there is connection with your mobile device.
- 3. Activate the Bluetooth function on your mobile device to pair with the clock. When connected, your mobile device will show "Equity 75910"
- 4.A tone will sound when pairing is complete. No code is required.
- 5.Use the + or buttons to adjust the volume (8 levels).
- 6.Press the **BLUETOOTH**® button again to disconnect

Note: If the clock is unplugged briefly and is plugged in again,the clock may lose Bluetooth connectivity.

Model: 75910 www.equitybylacrosse.com/supportPage | 1

Time Set

- 1. Hold the TIME button to enter time set mode.
- 2.The Hours will flash.
- 3.Press the +or button to adjust the hours. The PM indicator will light when the hour is advanced into the PM time.
- 4.Press the TIME button to confirm and move to the minutes
- 5.The Minutes will flash.
- 6.Press the + or buttonto adjust the minutes.
- 7.Press the TIME button to confirm and exit.

Note: The clock will return to the time display if no buttons are pressed

Set Alarm 1/Alarm 2

Setting and activating the time alarms are separate actions. Set Alarm 1

ALARM 1

- 1. Hold the ALARM 1 button to enter alarm set mode.
- 2. The Alarm Hours will flash.
- 3.Press the + or buttonto adjust the hours. The PM indicator will light when the hour is advanced into the PM time
- 4. Press the ALARM 1 button to confirm and move to the minutes.
- 5. The Alarm Minutes will flash.
- 6.Press the + or buttonto adjust the minutes.
- 7. Press the ALARM button to return to time mode.

Follow steps 1-8 above and use the ALARM 2 button in place of the ALARM 1 button.

Note: When the alarm sounds the Bluetooth function will be disabled.

Alarm 1/Alarm 2 ON/OFF

- Slide the OFF-AL1-ON button to activate or deactivate alarm 1.
- Slide the ON-AL2-OFF button to activate or deactivate alarm 2.

- When the alarm sounds, press the **SNOOZE** button to silence the alarm for about 9 minutes
- Repeat the snooze feature up to 13 times (about 120 minutes).
- Press any button except snooze to silence the alarm for one day.

The clock has a nightlight below the time that stays on when operating on AC power

Model: 75910 www.equitybylacrosse.com/supportPage | 2

USB Charging Port

Charge a smartphone, camera or other devices when the clock is plugged into a power outlet with the included 5V AC adapter.

Note: This is a power-output charging port. It does not supply power to the

- Connect your external device's USB charging cable (not included) to the USB charging port.
- Charging times will vary
- USB Power Output: 1A maximum current. Charge 1A devices or devices that are self-regulating.

Note: Some USB cables are for data transfer only and cannot be used for charging. Make sure that the USB cable you use will charge your device. Most USB cables included with mobile devices will work for charging.

Battery Backup

- 2-AAA I R3 Alkaline batteries
- Maintains time and alarm function for several hours during power outage.
- · Display will appear blank/dark
- · Time appears when AC power restored.

Specifications

Bluetooth Protocol:	A2DP (V1.2), AVRCP (V1), & HFP (V1.5)
Bluetooth Range:	32 feet, 10 meters (open air, no obstructions)
Bluetooth Frequency:	2.402GHz-2.480GHZ
AC Power Cord:	TPK800500200-02 5V 2A
Backup Batteries:	2 AAA LR3 Alkaline batteries
USB Charging Port:	1 Amp maximum current (charging cable not included)

Care and Maintenanace

- Do Not Mix Old and New Batteries
- Do Not Mix Alkaline, Standard, Lithium or Rechargeable Batteries.
- Do not expose the clock to extreme temperatures, vibration or shock
- · Clean the clock with a soft damp cloth. Do not use solvents or scouring agents.
- The clock is not a toy. Keep it out of reach of children.
- The clock is not to be used for medical purpose or for public information, but is determined for home use only.

 The specifications of this product may change without prior notice.
- Improper use or unauthorized opening of housing will void the warranty Model: 75910 www.equitybylacrosse.com/supportPage | 3

• If the clock does not work properly, change the batteries and/or check the AC cord connection

Warranty Information

This Equity product is warranted for one year from the date of consumer purchase against defects in material and workmanship. During this period such defects will be repaired, or the products will be replaced at Equity's option, without charge This warranty does not cover damage caused by misuse or negligence. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABLITY, ARE LIMITED IN DURATION TO A PERIOD ENDING ONE YEAR FROM THE DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty will last so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

For warranty work, technical support or other information contact: Equity by La Crosse



Attn: Warranty 2830 S. 26th St La Crosse, WI 54601

Contact Support: www.equitybylacrosse.com/support 608-782-1610

FCC Statementon

This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

All rights reserved. This handbook must not be reproduced in any form, even in excerpts or duplicated or processed using electronic, mechanical or chemical procedures without written permission of the publisher.

 
This handbook may contain mistakes and printing errors. The information in this handbook is regularly checked and corrections made in the next issue. We accept no liability for technical mistakes or printing errors, or their consequences.



CAUTION



UTION: TO PREVENT ELECTRIC SHOCK DO IT USE THIS (POLARIZED) PLUG WITH AN TENSION CORD, RECEPTACLE, OR OTHER TLET UNLESS THE BLADES CAN BE FULLY SERTED TO PREVENT BLADE EXPOSURE.



"The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Equity by La Crosse is under license. Other trademarks and trade names are those of their respective owners."

Printed in China

Made in China

Model: 75910 www.equitybylacrosse.com/supportPage | 4

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician for help.